JOHN DEERE HARVESTER WORKS

REPAIR CATALOG No. 45-H

FOR

JOHN DEERE COMBINES

No. 11, No. 11A, No. 12 and No. 12A

AND ATTACHMENTS

EFFECTIVE FEBRUARY 15, 1941

JOHN DEERE HARVESTER WORKS
OF DEERE & COMPANY
EAST MOLINE, ILLINOIS, U. S. A.

Series F157

IMPORTANT

The following Combine and Thresher Catalogs are being printed in 1941. They replace the No. 42 H Repair Catalog dated May 15, 1938 and all Supplements.

No. 45 H REPAIR CATALOG

No. 11-A, No. 12-A, No. 11 and No. 12 Combines and Attachments.

No. 46 H REPAIR CATALOG

No. 9, No. 7, No. 5-A and No. 17 and No. 6 Prairie Type Combines and Attachments, all Windrowers and Pick-Ups (except Pick-Ups used with No. 11, No. 11-A, No. 12 and No. 12-A Combines. Pick-Ups for these machines are listed in the No. 45 H Repair Catalog).

No. 47 H REPAIR CATALOG

No. 33, No. 35, No. 36, No. 36-A and No. 36-B Combines and Attachments.

No. 48 H REPAIR CATALOG

Threshers and Attachments.

Preserve your No. 38 H Repair Catalog dated June 15, 1934, for repair information on the Nos. 1, 2, 3 and 5 Combines.

Repair lists for these machines are not included in the new Catalogs.

IMPORTANT

115359

REPAIR CATALOG No. 45-H

FOR

JOHN DEERE No. 11, No. 11A, No. 12 and No. 12A COMBINES AND ATTACHMENTS

GENERAL INDEX

	PAGE
No. 11A and No. 12A Combines	6
No. 11 and No. 12 Combines	101
Numerical Index	154

John Deere Harvester Works
OF DEERE & COMPANY
East Moline, Illinois, U. S. A.

INSTRUCTIONS

You Will Profit by Giving Your Customers Real Repair Service

READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY

Prices furnished in a separate book, see General Price Lists

Use our **Special Repair Order** Blank and insure quick service.

Do not order Repairs and Complete Goods on the same sheet.

State method by which order is to be shipped.

Order by catalog number.

If unable to secure number, induce customers to bring in old parts for which duplicates are wanted. When not possible to do this, carefully consult descriptions and illustrations in Repair Catalog. Even most commonly used parts should always be ordered by number. If description only is given, the wrong part may be sent.

This is Important. Always watch "Year" column to make sure that number selected for part wanted is for the right machines. Parts shown in "Similar No." column are those working in the same position and are of similar construction, but are not interchangeable **unless so stated under "description"**; i. e., P2855H on page 7 (used '40–) operates in a similar capacity to P2598H on page 7, but will not work for P2598H (used 1940). Closed dates indicate parts have been discontinued; i. e., '40–'41 means part was first used in 1940 and continuously up to and including 1941, when it was discontinued. The year in full, i. e., 1940 means parts were used during the one year only. Open dates indicate parts are current; i. e., '40– means part came into use in 1940 and is still in use. The year shown in the "Year" column must correspond with the year customer's machine was manufactured. Therefore, when ordering repairs, **do not overlook dates** shown in "Year" column.

Dealers may assist purchasers by keeping a record of Combine Serial number. Every Combine carries a Serial number.

All repairs listed in this catalog are Cash.

No credit will be allowed for parts given free unless the customer has the defective part on hand for inspection at settlement time.

The **suffix letter "H"** on repairs following part number is used to distinguish Harvester Repairs from those made by other John Deere factories, which in a few instances carry the same number and prefix letter. Parts having this suffix

letter are interchangeable with Harvester Repairs carrying the same number and prefix letter, but on which this suffix letter is omitted. The suffix "H" shown in our Repair Lists, is the identification mark for John Deere Harvester Works Repairs.

SELECTING REPAIR PARTS FROM ILLUSTRATIONS

These groups are arranged in the same order as the printed repair lists. All Platform parts are included on the platform plate. All Shoe parts are included on the Shoe plate, etc. To find the year parts shown on plates were manufactured, consult "Year" column in repair list.

Orders for repairs on which numbers are not given should carry a careful description of the parts wanted, as well as adjoining parts, to assist the Branch House in determining accurately, proper part required.

DO NOT CONFUSE REPAIR CATALOGS WITH DIRECTION BOOKS]

We supply with each new machine shipped a Direction Book which contains a list of repair parts used on this individual machine. Locating repairs from this book is a quick reference for repairs wanted but the information should be checked back with the Catalog as some later and better part might work for the one wanted.

The Repair Catalogs and Supplements contain complete repair information for the duration of the machine. The "Year" column determines repairs wanted for machines manufactured any certain year.

INDEX IN BOOK

On the first page the General Index locates the various machines.

On the first page of each section a Sectional Index locates the various units of the machine listed in that section.

On the last few pages will be found a Numerical Index of all parts listed in this book.

TELEGRAPHIC CODE

The use of the Numerical Telegraphic Code { "Q U I C K T R A D E" / 1 2 3 4 5 6 7 8 9 0 } for ordering repair parts has been discontinued in the United States and Mexico, although it should still be used in telegrams to and from Canada.

According to the new ruling by the Telegraph Companies, any group **of five or less prefix or suffix letters or five or less numerals** is considered a word. A charge at the rate of two words is made for from six to ten prefix or suffix letters or **six to ten numerals.**

Example:

25- J 625	3 words
625- JA 11638	3 words
625- PAM 3668	3 words
10- OAF 81000 1 K	5 words
10- Y 1440 AAA 2	5 words

When ordering repair parts by telegram, use the hyphen to separate quantities from part numbers. A hyphen is counted as an additional numeral or letter, whichever it may follow.

Example:

10-21560-5-121330 { Counted as 17 numerals. / Counted as 4 words.

Prepay all telegrams.

JOHN DEERE No. 11-A AND No. 12-A COMBINES

SECTIONAL INDEX FOR REPAIR PARTS

Description	Description Page	Illustration Page
Beater behind the Cylinder	16	77–78
Bolts, Capscrews and Nuts	42–43	89–90
Clutch and Reduction Gears Used with John Deere "LU" Motor	60–61	95
Conveyor under Straw Rack	19–20	80
Cooling Fan Used with John Deere "LU" Motor	61	95
Cooling Fan Used with Hercules IXA-3 Motor	68	99
Cylinder and Concaves	13–16	75–77
Drive Belts and Drive Chains	36	.....
Drive Chain and Belt Tightener and Idler Brackets, Sprockets and Sheaves	38–40	89
Drive and Driven Sheaves and Sprockets	36–38	88–89
Fan	22–23	81–82
Feeder Canvas Frame and Rollers	12–13	75
Gasoline Strainer Used with John Deere "LU" Motor	62	96
Governor Used with John Deere "LU" Motor	63	96
Grain Tank and Supports	26–27	83–84
Grain Tank Elevator and Clean Grain Auger	24–26	82–83
Grain Tank Unloading Auger	27–28	84
Handy Governor Used with Hercules IXA-3 Motor	70–71	100
Hart ScourKleen (Model "SJ")	31–34	.....
Hercules IXA-3 Motor and Connection Parts	64–67	97–99
Hook-Up Equipment for:		
John Deere Tractors	45–46	90–91
I.H.C., Massey-Harris and Minneapolis-Moline Tractors	47–48	90–91
Hart-Parr, Allis-Chalmers and Case Tractors	49	90–91
"Caterpillar" Tractors	50	90–91
Imperial Gas Strainer Used with Hercules IXA-3 Motor	69	100
John Deere-Innes Pick-up (Stiff-Tooth)	52–54	92–93
John Deere-Innes Pick-up (Spring-Tooth)	54–56	93
John Deere "LU" Motor and Connecting Parts	57–60	94–95
Kaffir Corn Heading Attachment	51–52	91–92
Parts to Move Main Wheels Out for 42" Spaced Row Crops for Sacking Attachment Machines Only	6–7	.....
Parting Grain Slinger (Special for Stiff-Tooth or Spring-Tooth Pick-up)	56–57	94
Pins and Keys	42	89–90
Platform, Platform Drive Parts, Sickle and Pitman	9–11	73–74
Platform Lifting Lever and Lifting Spring	11–12	74–75
Power Drive	34–36	87–88
Radiator Used with John Deere "LU" Motor	63–64	97
Radiator Used with Hercules IXA-3 Motor	71	100
Reel	7–8	72
Ridge Bursters	52	.....

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	WHEELS, AXLES AND HITCH			
130052 H	Pipe Spacer on Front Bolt for Tractor Hitch Extension	'40–	'40–	
AP11261 H	Bracket, Lower, on Axle Tube for Tractor Hitch Main Side Channel Brace	'40–	'40–	
AP11262 H	Bracket, Lower, on Axle Tube for Tractor Hitch Main Side Channel	'40–	'40–	
AP11552 H	Extension, Complete for Front End of Tractor Hitch (AP13607H will work)	1940	1940	AP13607H
AP11566 H	Brace for Main Side Channel for Tractor Hitch (No Cut)	'40–	'40–	
AP11583 H	Separator Support on Main Axle (2 used)	'40–	.....	
AP11588 H	Separator Support on Main Axle (2 used)	.....	'40–	
AP11696 H	Main Side Channel for Tractor Hitch (No Cut)	'40–	'40–	
AP13607 H	Extension, Complete for Front End of Tractor Hitch (works for AP11552H) (No Cut)	'41–	'40–	AP11552H
JD 1943 H	Strut for Axle Truss Rod (Special) (No Cut)	.....	'41–	
L 105 T	Main Wheel (2 used) (No Cut)	'40–	'40–	
L 106 T	Retainer for Felt Oil Seal in Main Wheels (2 used)	'40–	'40–	
P 2593 H	Felt Oil Seal in Main Wheels (2 used)	'40–	'40–	
°PK 1 H	Main Wheel Axle Bracket (2 used)	'40–	'40–	
°PK 8 H	Bracket for R. H. End of Axle Truss Rod (Special) (No Cut)	.....	'41–	
°PK 14 H	Bracket for L. H. End of Axle Truss Rod and Rear Bracket for Truss Rod from Tractor Hitch to Axle (Special) (No Cut)	.....	'41–	
P 26161 H	Bracket for Front End of Truss Rod from Tractor Hitch to Axle (Special) (No Cut)	.....	'41–	
P 26183 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel Brace	1940	1940	P32920H
P 26237 H	Bracket on Brace for Tractor Hitch Main Side Channel for Square Tube Cross Support	'40–	'40–	
P 26251 H	Cross Brace for Front End of Tractor Hitch Side Channels	'40–	'40–	
P 26413 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel (P33427H will work)	'40–'41	'40–'41	P33427H
P 26789 H	Transport Bracket on Front End of Tractor Hitch Main Side Channel	'40–	'40–	
P 26969 H	Angle Brace from Side of Separator to Main Axle	'40–	'40–	
P 28338 H	Pipe Spacer for Bolt on Tractor Hitch Extension	'40–	'40–	
P 28418 H	Cross Support under Tractor Hitch (Square Tubing) (No Cut)	1940	.....	P32653H
P 28929 H	Cross Support under Tractor Hitch (Square Tubing) (No Cut)	.....	1940	P32640H
P 28981 H	Support Arm for L. H. End of Square Tube under Tractor Hitch	'40–	'40–	
P 28984 H	Axle (Square Tubing) (No Cut)	'40–'41	.....	P33259H
P 29002 H	Stub Axle (2 used)	'40–	'40–	
P 29007 H	Snap Ring in Main Wheel (2 used)	'40–	'40–	
P 29012 H	Gasket for Wheel Hub (2 used)	'40–	'40–	
P 29013 H	Hub Cap for L. H. Wheel	'40–	'40–	
P 29302 H	Axle (Square Tubing) (No Cut)	.....	'40–'41	P33260H
P 32019 H	Flat Stiffener on Axle Tubing for Bolt through L. H. Stub Axle	'40–	'40–	
P 32285 H	Spacer on Axle for Bolt through Stud Axle, L. H.	'40–	'40–	P26878H
P 32640 H	Stiffener Channel for Tractor Hitch Main Side Channel Brace	'40–	'40–	
P 32653 H	Cross Support under Tractor Hitch (Square Tubing) (No Cut)	.....	'41–	P28418H
P 32920 H	Cross Support under Tractor Hitch (Square Tubing) (No Cut)	'41–	.....	P28338H
P 32972 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel Brace, also Bracket for Belt Tightener Arm Adjusting Rods	'41–	'41–	P26161H
P 33259 H	Clamp Bracket for U-Bolt on Cross Support under Tractor Hitch for Truss Rod (Special) (No Cut)	.....	'41–	
P 33260 H	Axle (Square Tubing) (No Cut)	'41–	.....	P28981H
P 33275 H	Axle (Square Tubing) (No Cut)	.....	'41–	P29013H
P 33387 H	Truss Rod for Axle (Special) (No Cut)	.....	'41–	
P 33423 H	Truss Rod from Tractor Hitch to Axle (Special) (No Cut)	.....	'41–	
P 33427 H	U-Bolt on Cross Support under Tractor Hitch for Truss Rod (Special) (No Cut)	.....	'41–	
P 33788 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel (works for P26251H) (No Cut)	'41–	'41–	P26251H
	Clamp Plate for Bracket on Front End of Truss Rod from Tractor Hitch to Axle (Special) (No Cut)	.....	'41–	
	PARTS TO MOVE MAIN WHEELS OUT FOR 42-INCH SPACED ROW CROPS FOR SACKING ATTACHMENT MACHINES ONLY			
AP13684 H	Reel Drive Shaft on Sacking Platform (No Cut)	.....	1940	
AP13689 H	Axle Extension, R. H. (No Cut)	.....	1940	
AP13690 H	Axle Extension, L. H. (No Cut)	.....	1940	
AP13849 H	Reel Drive Chain, Rear (68 Links, No. 45 Steel) (No Cut)	.....	1940	
J 295 H	Idler Sheave for Reel Drive Chain, Rear (2 used) (No Cut)	.....	1940	

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see page 72.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PARTS TO MOVE MAIN WHEELS OUT FOR 42-INCH SPACED ROW CROPS FOR SACKING ATTACHMENT MACHINES ONLY—Continued			
P 32020 H	Washer on Axle Extension for Bolt through Stub Axles (4 used)			
	.....(No Cut)	.....	1940	.....
P 32616 H	Strap for Axle Extension U-Bolt (3 used).....(No Cut)	.....	1940	.....
P 32617 H	U-Bolt for Axle Extension (3 used).....(No Cut)	.....	1940	.....
P 32618 H	Support for R. H. End of Reel Drive Shaft on Sacking Platform			
	.....(No Cut)	.....	1940	.....
P 32621 H	Angle Brace, Front, for Reel Drive Chain Idler Bracket.(No Cut)	.....	1940	.....
P 32622 H	Angle Brace, Rear, for Reel Drive Chain Idler Bracket.(No Cut)	.....	1940	.....
P 32623 H	Idler Bracket for Reel Drive Chain, Rear.....(No Cut)	.....	1940	.....
P 32624 H	Stud for Reel Rear Drive Chain Idler Sheave (2 used)..(No Cut)	.....	1940	.....
P 32636 H	Pipe Trunnion on L. H. Stub Axle Bolt.....(No Cut)	.....	1940	.....
	REEL			
1C2691 H	Pipe Trunnion in Lower End of Reel Support Post.....	1940	1940	P26733H
AP10735 H	Reel Support Post (AP12709H will work).....	1940	1940	AP12709H
AP11757 H	Reel Drive Shaft through Grain Tank.....	1940	1940	AP12809H
AP12089 H	Reel Pipe with Spiders (AP13764H will work).....(No Cut)	1940	.....	AP13764H
AP12090 H	Reel Pipe with Spiders (AP13765H will work).....(No Cut)	.....	1940	AP13765H
AP12091 H	Support for Reel Pipe.....	'40–	'40–	.....
AP12709 H	Reel Support Post (works for AP10735H).....	'40–	'40–	AP10735H
AP12809 H	Reel Drive Shaft through Grain Tank (AP13512H will work)			
	.....(No Cut)	1940	1940	AP11757H–AP13512H
AP13512 H	Reel Drive Shaft through Grain Tank (works for AP12809H)...	'41–	'41–	AP12809H
AP13685 H	Support Pipe for L. H. End of Reel Pipe (Special).....(No Cut)	'40–	'40–	.....
AP13714 H	Clamp Bracket for Outside Reel Support Pipe (Special).(No Cut)	'40–	'41–	.....
AP13764 H	Reel Pipe with Spiders (works for AP12089H).....(No Cut)	'41–	.....	AP12089H
AP13765 H	Reel Pipe with Spiders (works for AP12090H).....(No Cut)	.....	'41–	AP12090H
P 2309 H	Handwheel on Reel Drive Sprocket on R. H. Main Wheel Axle..	'40–	'40–	.....
P 2344 H	Slip Clutch for Sprocket on Reel Pipe.....	'40–	'40–	.....
P 2369 H	Nut for Slip Clutch on Reel Pipe.....	1940	1940	P2983H
P 2400 H	Slide Bracket on Reel Support Post.....	'40–	'40–	.....
P 2405 H	Bearing, L. H., for Reel Drive Shaft through Grain Tank.....	'40–	'40–	.....
P 2409 H	Clamp for Reel Pipe Support on Slide Bracket.....	'40–	'40–	.....
P 2465 H	Bearing, R. H., for Reel Drive Shaft through Grain Tank.....	'40–	'40–	.....
P 2546 H	Stop Clamp on Reel Pipe.....	'40–	'40–	.....
P 2561 H	Lock Bolt Bracket for Reel Tilting Square Pipe.....	'40–	'40–	.....
P 2598 H	Clutch for Reel Drive Sprocket on R. H. Wheel Axle.....	1940	1940	P2855H
P 2855 H	Clutch for Reel Drive Sprocket on R. H. Wheel Axle.....	'40–	'40–	P2598H
P 2982 H	Clamp Block for Outside Reel Support Pipe (Special).....	'40–	'40–	.....
P 2983 H	Nut for Slip Clutch on Reel Pipe.....	'41–	'41–	P2369H
P 16478 H	Pipe Trunnion in Front Drive Chain Tightener Arm.....	'40–	'40–	.....
P 21376 H	Spacer on Pipe Trunnion in Lower End of Reel Support Post			
	(2 used).....	1940	1940	.....
P 26331 H	Pipe Trunnion in Upper End of Reel Tilting Square Pipe.....	'40–'41	'40–'41	.....
P 26473 H	Support on Side of Platform for Reel Slide Bar Bracket.....	'40–	'40–	.....
P 26516 H	Chain Guide for Slip Clutch Sprocket on Reel Pipe (2 used).....	'40–	'40–	.....
P 26719 H	Reel Tilting Square Pipe (P32684H will work).....	'40–'41	'40–'41	P32684H
P 26727 H	Reel Slat (4 used Regular, 6 or 8 used Special).....	'40–	.....	.....
P 26733 H	Pipe Trunnion in Lower End of Reel Support Post.....	'41–	'41–	1C2691H
P 26734 H	Angle Brace from Slide Bracket to Reel Pipe Support.....	'40–	'40–	.....
P 26735 H	Flat Brace from Slide Bracket to Reel Pipe Support.....	'40–	'40–	.....
P 26770 H	Pipe Trunnion in Lower End of Channel Brace from Reel Support			
	Post to Cutter Bar.....	'40–	'40–	.....
P 26774 H	Clamp Block for Reel Post Lock Bolt.....	'40–	'40–	.....
P 26834 H	Reel Slat (4 used Regular, 6 or 8 used Special).....	.....	'40–	.....
P 27246 H	Reinforcing Plate on Reel Tilting Square Pipe for Angle Brace			
	Bolts.....	'40–'41	'40–'41	.....
P 27813 H	Channel Brace from Reel Post to Cutter Bar.....	'40–	'40–	.....
P 28017 H	Bolt Plate on Reel Slat (8 used Regular, 12 or 16 used Special)...	'40–	'40–	.....
P 28996 H	Shaft in R. H. Wheel Axle for Reel Drive Sprocket.....	1940	1940	P31925H
P 29324 H	Clip on Grain Tank for Front Drive Chain Tightener Spring Arm			
	(P31816H will work).....(No Cut)	1940	1940	P31816H
P 29877 H	Brace Plate for Reel Arms (2 used).....	'40–	'40–	.....
P 29878 H	Reel Arm (8 used Regular, 12 or 16 used Special).....	'40–	'40–	.....
P 29882 H	Angle Brace from Reel Tilting Square Pipe to Reel Pipe Support	'40–	'40–	.....
P 31816 H	Clip on Grain Tank for Front Drive Chain Tightener Spring Arm			
	(works for P29324H).....	'40–	'40–	P29324H
P 31925 H	Shaft in R. H. Wheel Axle for Reel Drive Sprocket.....	'40–	'40–	P28996H
P 32384 H	Brace Plate for Reel Arms (2 used with 6 or 8 Reel Slats, Special)	'40–	'40–	.....
P 32385 H	Plate on Reel Pipe for Reel Arms (2 used with 6 or 8 Reel Slats,			
	Special).....(No Cut)	'40–	'40–	.....

For Cuts of Repair Parts, see page 72.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	REEL—Continued			
P 32612 H	Bracket on Platform Bottom Cross Angle for Rear End of Outside Reel Support Pipe (Special) (No Cut)	'40–	'40–	.....
P 32657 H	Flat Slide Bracket on Platform Side Sheet for Outside Reel Support Pipe Clamp Bracket (Special)	'40–	'40–	.....
P 32684 H	Reel Tilting Square Pipe (works for P26719H)	'41–	'41–	P26719H
	ROPE CONTROL FOR REEL WITH OUTSIDE REEL SUPPORT (SPECIAL)			
55S	Spring for Reel Post Latch Bracket	'40–	'40–	.....
130429 H	Washer on Gear Shaft between Gear and Reel Pipe (2 used) (No Cut)	'41–	'41–	.....
AP 11843 H	Reel Support Post	'40–	'40–	.....
AP 12033 H	Upright Post for Reel Tilting Pipe	'40–	'40–	.....
AP 12795 H	Reel Tilting Pipe	'40–	'40–	.....
AP13505 H	Reel Tension Spring, Complete	'40–	'40–	.....
AP13506 H	Latch, Complete with Pin for Reel Support Post (P2674H Complete)	'40–	'40–	.....
AP14143 H	Reel Pipe with Spiders (No Cut)	'41–	.....	.....
AP14144 H	Reel Pipe with Spiders (No Cut)	.....	'41–	.....
AP14148 H	Reel Slide Bracket, L. H. (No Cut)	'41–	'41–	.....
B 4535 H	Connection Link between Rod and Chain on Rear End of Tension Spring	'40–	'40–	.....
J 3419 H	Pivot Pin for Reel Support Post Latch (5/16" x 1-13/16")	'40–	'40–	.....
J 5166 H	Pin for Control Rope Sheave (1/4" x 2") (No Cut)	'41–	'41–	P29411H
JD 14 A	Pulley for Control Rope	'40–	'40–	.....
P 2561 H	Lock Bolt Bracket for Outer Reel Support Square Pipe (No Cut)	'41–	'41–	.....
P 2615 H	Clamp for Reel Pipe Support on Slide Bracket (No Cut)	'40–	'40–	.....
P 2624 H	Slide Bracket on Reel Support Post	'40–	'40–	.....
P 2629 H	Bracket on Reel Support Post for Control Rope Sheave (P33552H will work)	1940	1940	P33552H
P 2630 H	Sheave for Control Rope	'40–	'40–	.....
P 2674 H	Latch for Reel Support Post (Order AP13506H)	'40–	'40–	.....
P 2677 H	Lock Bracket for Reel Tilting Pipe	'40–	'40–	.....
P 2897 H	End Plug for Reel Tension Spring	'40–	'40–	.....
P 2898 H	Support for Reel Pipe	'40–	'40–	.....
P 2924 H	Stop Clamp on Reel Pipe	'40–	'40–	.....
°PK 27 H	Reel Pipe Gear (2 used) (No Cut)	'41–	'41–	.....
°PK 28 H	Slip Clutch for Sprocket on Reel Pipe (No Cut)	'41–	'41–	.....
P 28154 H	Key for Reel Slip Clutch (Woodruff No. 9) (No Cut)	'41–	'41–	.....
P 28709 H	Lock Bolt for Outer Reel Support Square Pipe (No Cut)	'41–	'41–	.....
P 29411 H	Pin for Control Rope Sheave (5/16" x 1-5/8") (No Cut)	1940	1940	J5166H
P 29413 H	Latch Pin in Reel Post Latch Bracket (No Cut)	'40–	'40–	.....
P 29420 H	Eye Hook for Control Rope Pulley	'40–	'40–	.....
P 29856 H	Seat for Reel Post Latch Bracket Spring	'40–	'40–	.....
P 30059 H	Take-Up Bolt for Reel Tension Spring (3/8" x 18-5/16")	'40–	'40–	.....
P 32157 H	Pin for Reel Support Post Slide Pulley (2 used) (No Cut)	'40–	'40–	.....
P 32158 H	Rod for Rear End of Tension Spring	'40–	'40–	.....
P 32159 H	Control Rope (No Cut)	'40–	'40–	.....
P 32160 H	Chain on Rear End of Tension Spring (No Cut)	'40–	'40–	.....
P 32161 H	Flat Brace from Reel Tilting Pipe Upright Post to Grain Tank Support Angle (P33266H will work)	1940	1940	P33266H
P 32162 H	Slide Pulley for Reel Support Post (2 used)	'40–	'40–	.....
P 32163 H	Round Brace from Reel Tilting Pipe Upright Post to Axle	'40–	'40–	.....
P 32165 H	Pivot Pin for Reel Tilting Pipe Lock Bracket (3/8" x 3-1/8")	'40–	'40–	.....
P 32166 H	Bearing for Reel Tension Spring Take-Up Bolt (Nice No. 602)	'40–	'40–	.....
P 32233 H	Flat Brace from Slide Bracket to Reel Pipe Support	'40–	'40–	.....
P 32234 H	Angle Brace from Slide Bracket to Reel Pipe Support	'40–	'40–	.....
P 32279 H	Gear Shaft through Reel Pipe (No Cut)	'41–	.....	.....
P 32280 H	Reel Tilting Square Pipe, Outer (No Cut)	'41–	'41–	.....
P 32530 H	Bracket on Sacking Platform for Reel Tilting Pipe Upright Post Support Angle (Sacking Attachment)	'40–	'40–	.....
P 32531 H	Support Angle for Reel Tilting Pipe Upright Post (Sacking Attachment)	'40–	'40–	.....
P 33266 H	Flat Brace from Reel Tilting Pipe Upright Post to Grain Tank Support Angle (works for P32161H) (No Cut)	'41–	'41–	P32161H
P 33498 H	Reel Slide Bracket, R. H. (No Cut)	'41–	'41–	.....
P 33502 H	Gear Shaft through Reel Pipe (No Cut)	.....	'41–	.....
P 33535 H	Bracket on Combine for Outer Reel Support Square Pipe Lock Bracket (No Cut)	'41–	'41–	.....
P 33536 H	Reel Rack, L. H. (No Cut)	'41–	'41–	.....
P 33537 H	Bracket for L. H. Reel Rack (No Cut)	'41–	'41–	.....
P 33538 H	Reel Rack, R. H. (No Cut)	'41–	'41–	.....
P 33539 H	Bracket for R. H. Reel Rack (No Cut)	'41–	'41–	.....
P 33552 H	Bracket on Reel Support Post for Control Rope Sheave (works for P2629H) (No Cut)	'41–	'41–	P2629H
P 33554 H	Snap Ring on Gear Shaft for Slip Clutch (No Cut)	'41–	'41–	.....
P 33568 H	Drilled Pin for Reel Pipe Gear (2 used) (No Cut)	'41–	'41–	.....

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see pages 72 and 73.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN			
AP 9958 H	Housing for Sickle Drive Eccentric Bearing on Platform Canvas Drive Pulley (P2314H Complete)	'40–	'40–	.....
AP10565 H	Guard, Pointed Lip (P2342H Complete)	'40–	'40–	.....
AP10566 H	Guard, Outer Pointed Lip (P2343H Complete) (2 used)	'40–	'40–	.....
AP10639 H	Guard, Open Lipless (P2345H Complete) (Special)	'40–	'40–	.....
AP10640 H	Guard, Outer Open Lipless (P2304H Complete) (2 used) (Special)	'40–	'40–	.....
AP11134 H	Lifting Guard, Complete (Special)	'40–	'40–	.....
AP11514 H	Truss Frame under Platform Bottom, Complete with Cutter Bar (No Cut)	.....	1940	AP13645H
AP11543 H	Platform Bottom (No Cut)	.....	1940	AP13645H
AP11596 H	Platform Bottom (No Cut)	1940	.....	AP13641H
AP11598 H	Truss Frame under Platform Bottom, Complete with Cutter Bar (No Cut)	1940	.....	AP13641H
AP11623 H	Extension for Front End of Platform Side Plate, R. H.	'40–	'40–	.....
AP11675 H	Extension for Outside Divider	'40–	'40–	.....
AP11738 H	Platform Canvas Idler Roller at Front End of Platform. (No Cut)	'40–	.....	.....
AP11739 H	Platform Canvas Idler Roller at Front End of Platform. (No Cut)	.....	'40–	.....
AP11785 H	Platform Canvas Fastening Slide Bar	.....	'40–	.....
AP11913 H	Sickle, Complete (AP12111H Head) (Z5654H Section) (No Cut)	'40–	.....	.....
AP11914 H	Sickle, Complete (AP12111H Head) (Z5654H Section) (No Cut)	.....	'40–	.....
AP12015 H	Platform Canvas Fastening Slide Bar	'40–	.....	.....
AP12040 H	Platform Canvas, Complete (AP13682H will work) (No Cut)	1940	.....	AP13682H
AP12041 H	Platform Canvas, Complete (AP13683H will work) (No Cut)	.....	1940	AP13683H
AP12048 H	Sickle Drive Pipe, Complete (AP12635H with P31617H, and 2-1/4" x 1/2" Hex. Head Cap Screws will work)	1940	1940	AP12635H
AP12049 H	Support for Front End of Sickle Drive Pipe	'40–	'40–	.....
AP12075 H	Platform Canvas Drive Roller (AP13838H with AP14146H, P32882H and P32949H will work) (No Cut)	1940	.....	AP12785H
AP12077 H	Platform Canvas Drive Roller (AP13839H with AP14146H, P32882H and P32949H will work) (No Cut)	.....	1940	AP12786H
AP12094 H	Bearing Box, Complete, at Front End of Pitman Drive Pipe (P2667H Complete) (Bearing J1063H)	'40–	'40–	.....
AP12107 H	Platform Side Sheet, R. H. (AP14283H will work)	'40–'41	'40–'41	AP14283H
AP12108 H	Platform Side Sheet, L. H. (AP14284H will work)	'40–'41	'40–'41	AP14284H
AP12111 H	Knife Head, Complete	'40–	'40–	.....
AP12168 H	Extension for Inside Divider (No Cut)	'40–	'40–	.....
AP12180 H	Tightener Slide Bracket for Platform Canvas Idler Roller (AP12181H Complete) (2 used)	'40–	'40–	.....
AP12181 H	Tightener Slide Bracket for Platform Canvas Idler Roller (Order AP12180H) (2 used)	'40–	'40–	.....
AP12635 H	Sickle Drive Pipe, Complete (with P31617H and 2—1/4" x 1/2" Hex. Head Cap Screws works for AP12048H)	'40–	'40–	AP12048H
AP12785 H	Platform Canvas Drive Roller (AP13838H with AP14146H, P32882H and P32949H will work) (No Cut)	1940	.....	AP12075H–AP12966H
AP12786 H	Platform Canvas Drive Roller (AP13839H with AP14146H, P32882H and P32949H will work) (No Cut)	.....	1940	AP12077H–AP12967H
AP12966 H	Platform Canvas Drive Roller (AP13838H with AP14146H, P32882H and P32949H will work) (No Cut)	1940	.....	AP12785H–AP13838H
AP12967 H	Platform Canvas Drive Roller (AP13839H with AP14146H, P32882H and P32949H will work) (No Cut)	.....	1940	AP12786H–AP13839H
AP13641 H	Truss Frame, Complete with Platform Bottom and Cutter Bar (No Cut)	'41–	.....	AP11596H–AP11598H
AP13645 H	Truss Frame, Complete with Platform Bottom and Cutter Bar (No Cut)	.....	'41–	AP11514H–AP11543H
AP13682 H	Platform Canvas, Complete with Fastening Slide Bar (works for AP12040H) (No Cut)	'40	.....	AP12040H
AP13683 H	Platform Canvas, Complete with Fastening Slide Bar (works for AP12041H) (No Cut)	.....	'40–	AP12041H
AP13838 H	Platform Canvas Drive Roller (with AP14146H, P32882H and P32949H works for AP12075H, AP12785H or AP12966H) (No Cut)	'41–	.....	AP12966H
AP13839 H	Platform Canvas Drive Roller (with AP14146H, P32882H and P32949H works for AP12077H, AP12786H or AP12967H) (No Cut)	.....	'41–	AP12967H
AP14146 H	Eccentric Hub with Retaining Nut for Sickle Drive on Platform Canvas Driven Pulley (P2978H Complete) (No Cut)	'41–	'41–	.....
AP14233 H	Shield for Cutter Bar (Special) (used with Lifting Guards) (No Cut)	'41–	.....	.....
AP14234 H	Shield for Cutter Bar (Special) (used with Lifting Guards) (No Cut)	.....	'41–	.....
AP14283 H	Platform Side Sheet, R. H. (works for AP12107H) (No Cut)	'41–	'41–	AP12107H
AP14284 H	Platform Side Sheet, L. H. (works for AP12108H) (No Cut)	'41–	'41–	AP12108H
P 1564 H	Cap for Bearing Box Support Bracket at Front End of Pitman Drive Pipe	'40–	'40–	.....

For Cuts of Repair Parts, see page 73.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN—Continued			
P 1858 H	Lifting Guard (Special)	'40–	'40–	.....
P 1860 H	Adjusting Block for Lifting Guard (Special)	'40–	'40–	.....
P 2304 H	Guard, Outer Open Lipless (Order AP10640H) (2 used) (Special)	'40–	'40–	.....
P 2314 H	Housing for Sickle Drive Eccentric Bearing on Platform Canvas Drive Sheave (Order AP9958H)	'40–	'40–	.....
P 2342 H	Guard, Pointed Lip (Order AP10565H)	'40–	'40–	.....
P 2343 H	Guard, Outer Pointed Lip (Order AP10566H) (2 used)	'40–	'40–	.....
P 2345 H	Guard, Open Lipless (Order AP10639H) (Special)	'40–	'40–	.....
P 2506 H	Support Arm on Cutter Bar for Lifting Guard (Special)	'40–	'40–	.....
P 2539 H	Pivot Ring on Upper End of Platform Side Sheet, R. H.	'40–	'40–	.....
P 2540 H	Bearing Box, R. H., for Platform Canvas Drive Roller (Bearing JD7925H) (Sleeve JD8302H)	'40–	'40–	.....
P 2554 H	Bearing Box, L. H., for Platform Canvas Drive Roller (Bearing JD7924H) (Sleeve JD8301H)	'40–	'40–	.....
P 2555 H	Pivot Ring on Upper End of Platform Side Sheet, L. H.	'40–	'40–	.....
P 2577 H	Sickle Holder (4 used)	'40–	'40–	.....
P 2582 H	Spade Handle on End of Platform Lifting Lever	'40–	'40–	.....
P 2663 H	Knife Head Guide	'40–	'40–	.....
P 2666 H	Bracket for Bearing Cup on Rear End of Sickle Drive Pipe	'40–	'40–	.....
P 2667 H	Bearing Box at Front End of Pitman Drive Pipe (Order AP12094H)	'40–	'40–	.....
P 2669 H	Notched Adjusting Plate for Front End of Pitman Drive Pipe	'40–	'40–	.....
P 2670 H	Support Bracket for Bearing Box at Front End of Pitman Drive Pipe	'40–	'40–	.....
P 2671 H	Drive Arm on Front End of Sickle Drive Pipe	'40–	'40–	.....
P 2676 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Pulley (P2941H will work)	1940	1940	P2941H
P 2687 H	Collar on L. H. End of Platform Canvas Drive Roller (when Pick-Up is not used)	'40–	'40–	.....
P 2688 H	Cutter Bar Support, R. H.	'40–	'40–	.....
P 2689 H	Cutter Bar Support, L. H.	'40–	'40–	.....
P 2941 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Pulley (works for P2676H)	1940	1940	P2676H– P2978H
P 2978 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Pulley (order AP14146H)	'41–	'41–	P2941H
°PK 24 H	Sickle Holder (4 used) (Special) (used with Lifting Guard) (No Cut)	'40–	'40–	.....
P 5645 H	Guard Plate Rivets (1 lb.) (13/64" x 1-1/8" Countersunk Head) (No Cut)	'40–	'40–	.....
P 26064 H	Canvas Slat for Platform Canvas (P32982H will work)	1940	.....	P32982H
P 26138 H	Ball for Sickle Drive Arm	'40–	'40–	.....
P 26531 H	Ball Socket, Front, for Sickle Head	'40–	'40–	.....
P 26532 H	Ball Socket, Rear, for Sickle Head	'40–	'40–	.....
P 26610 H	Ledger Plate for Pointed Lip Guard	'40–	'40–	.....
P 26613 H	Ledger Plate for Open Lipless Guard (Special)	'40–	'40–	.....
P 27037 H	Canvas Slat for Platform Canvas (P32983H will work)	.....	1940	P32983H
P 27038 H	Wearing Plate for Sickle	'40–	'40–	.....
P 27161 H	Platform Canvas Guides (2 used) (P32253H will work)	1940	1940	P32253H
P 27254 H	Lock Bracket for Platform Canvas Tightener Spring Rod (2 used)	1940	.....	.....
P 27824 H	Lock Bracket for Platform Canvas Tightener Spring Rod (2 used)	.....	1940	.....
P 28008 H	Bracket for Platform Canvas Tightener Spring Rod (2 used)	1940	1940	.....
P 28101 H	Snap Ring in Housing for Eccentric Bearing on Platform Canvas Drive Sheave (2 used)	'40–	'40–	.....
P 28213 H	Wood Slat for Lock Strip on Ends of Platform Canvas (2 used)	'40–	.....	.....
P 28214 H	Wood Slat for Lock Strip on Ends of Platform Canvas (2 used)	.....	'40–	.....
P 28290 H	Crosstie Angle at Rear End of Platform Bottom Angles	1940	.....	.....
P 28310 H	Crosstie Angle at Rear End of Platform Bottom Angles	.....	1940	.....
P 28599 H	Box End in Platform Canvas Drive Roller Bearing Box, R. H.	'40–	'40–	.....
P 28639 H	Wearing Strip on Platform Bottom for Slats (2 used)	1940	1940	.....
P 28669 H	Box End in Platform Canvas Drive Roller Bearing Box, L. H. (No Cut)	'40–	'40–	.....
P 28932 H	Retainer for L. H. Box on Platform Canvas Drive Roller	'40–	'40–	.....
P 28950 H	Bottom Plate for Front End of Platform Side Sheet, L. H. (P32232H will work)	1940	1940	P32232H
P 28982 H	Rod for Platform Canvas Tightener Spring (2 used)	1940	.....	P32578H
P 28983 H	Rod for Platform Canvas Tightener Spring (2 used)	.....	1940	P32578H
P 29016 H	Cross Angle on Platform Bottom for Side Sheet Stiffener Angles	1940	.....	.....
P 29019 H	Stiffener Angle on Platform Side Sheet, R. H.	'40–	'40–	.....
P 29020 H	Stiffener Angle on Platform Side Sheet, L. H.	'40–	'40–	.....
P 29114 H	Cross Angle on Platform Bottom for Side Sheet Stiffener Angles	.....	1940	.....
P 29189 H	Point on Front End of Platform Side Sheet, R. H.	'40–	'40–	.....
P 29190 H	Point for Front End of Platform Side Sheet, L. H.	'40–	'40–	.....
P 29634 H	Shield for Cutter Bar	.....	'40–	.....
P 29716 H	Lock Strip on Ends of Platform Canvas (2 used)	'40–	.....	.....

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see pages 73 and 74.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN—Continued			
P 29718 H	Lock Strip on Ends of Platform Canvas (2 used)	.....	'40–	.....
P 29752 H	Bottom Plate for Front End of Platform Side Sheet, R. H.	'40–	'40–	.....
P 29841 H	Sidehill Washer on Sickle Drive Eccentric Bearing (P31534H will work)	1940	.....	P31534H
P 29855 H	Bearing Cup for Zerk Fitting in Fork on Rear End of Pitman Drive Pipe	1940	1940	P31620H
P 29881 H	Flat Spring for Sickle Head Ball Socket	'40–	'40–	.....
P 29913 H	Shield for Cutter Bar	'40–	.....	.....
P 30113 H	Support for Front End of Platform Side Plate, L. H.	'40–	'40–	.....
P 30257 H	Shield, R. H., over Edge of Canvas at Front of Platform	'40–	'40–	.....
P 30258 H	Shield, L. H., over Edge of Canvas at Front of Platform	'40–	'40–	
P 30259 H	Wood Filler under Shields for Edge of Canvas at Front of Platform (2 used)	'40–	'40–	.....
P 31349 H	Extension (Divider) Front, for Platform Side Sheet, L. H. (Special) (No Cut)	'40–	'40–	.....
P 31350 H	Extension (Divider) Rear, for Platform Side Sheet, L. H. (Special) (No Cut)	'40–	'40–	.....
P 31351 H	Stiffener Angle for Lower End of Front Extension Divider on Platform Side Sheet, L. H. (Special) (No Cut)	'40–	'40–	.....
P 31352 H	Support Angle for Extension (Divider) for Platform Side Sheet, L. H. (Special) (No Cut)	'40–	'40–	.....
P 31534 H	Sidehill Washer on Sickle Drive Eccentric Bearing (works for P29841H)	1940	1940	P29841H
P 31616 H	Wearing Plate on Bottom of Inside Divider (Lespedeza only)	'40–	'40–	.....
P 31617 H	Retainer Plate on Sickle Drive Pipe Fork for Bearing Cup	'40–	'40–	.....
P 31620 H	Bearing Cup for Zerk Fitting in Fork on Rear End of Pitman Drive Pipe	'40–	'40–	P29855H
P 32232 H	Bottom Plate for Front End of Platform Side Sheet, L. H. (works for P28950H)	'40–	'40–	B8950H
P 32253 H	Platform Canvas Guides (2 used) (works for P27161H)	1940	1940	P27161H–P32601H
P 32559 H	Clip on Rear Extension (Divider) for Platform Side Sheet, L. H. (Special) (No Cut)	'40–	'40–	.....
P 32578 H	Rod for Platform Canvas Tightener Spring (2 used)	'41–	'41–	P28982H–P28983H
P 32601 H	Platform Canvas Guide (2 used)	'41–	'41–	P32253H
P 32882 H	Lock for Cap Screw and Nut on R. H. End of Platform Canvas Drive Roller	'41–	'41–	.....
P 32945 H	Cover for Hole in Platform Side Sheet, L. H. (when Pick-Up is not used) (No Cut)	1941	1941	P33760H
P 32982 H	Canvas Slat for Platform Canvas (works for P26064H)	'41–	.....	P26064H
P 32983 H	Canvas Slat for Platform Canvas (works for P27037H)	.....	'41–	P27037H
P 33484 H	Spacer between Wearing Plate and Cutter Bar (4 used) (Special) (used with Lifting Guard) (No Cut)	'40–	'40–	.....
P 33760 H	Cover for Hole in Platform Side Sheet, L. H. (When Pick-Up is not used) (No Cut)	'41–	'41–	P32945H
Z 5086 H	Section Rivets (1 lb.) (13/64" x 9/16" Oval Head) (No Cut)	'40–	'40–	.....
Z 5654 H	Serrated Section	'40–	'40–	.....
Z 5874 H	Knife Head Rivets (1 lb.) (13/64" x 7/8" Oval Head) (No Cut)	'40–	'40–	.....
	PLATFORM LIFTING LEVER AND LIFTING SPRING			
AP10093 H	Platform Lifting Rod	1940	1940	AP12436H
AP11396 H	Platform Lifting Lever, Rear	1940	1940	AP12433H
AP11563 H	Lifting Lever Ratchet	1940	1940	AP12418H
AP11584 H	Support, L. H., on Tractor Hitch for Platform Lifting Arm (AP13734H will work)	1940	1940	AP13734H
AP11636 H	Support, R. H., on Tractor Hitch for Platform Lifting Arm (AP13733H will work)	1940	1940	AP13733H
AP12305 H	Platform Lifting Arm on Tractor Hitch	1940	1940	AP12985H–AP13954H
AP12418 H	Lifting Lever Ratchet	'40–	'40–	AP11563H
AP12433 H	Platform Lifting Lever, Rear	'40–	'40–	AP11396H
AP12436 H	Platform Lifting Rod	1940	1940	AP10093H–AP13899H
AP12985 H	Platform Lifting Arm on Tractor Hitch	.....	1940	AP12305H–AP13954H
AP13733 H	Support, R. H., on Tractor Hitch for Platform Lifting Arm (works for AP11636H)	'41–	'41–	AP11636H
AP13734 H	Support, L. H., on Tractor Hitch for Platform Lifting Arm (works for AP11584H)	'41–	'41–	AP11584H
AP13899 H	Platform Lifting Rod (No Cut)	'41–	'41–	AP12436H
AP13954 H	Platform Lifting Arm on Tractor Hitch	'41–	'41–	AP12305H–AP12985H

For Cuts of Repair Parts, see pages 74 and 75.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PLATFORM LIFTING LEVER AND LIFTING SPRING—Continued			
HZ 298 H	Hand Latch for Platform Lifting Lever	1940	1940	P2810H
J 6759 H	Clamp for Platform Lifting Lever Detent Rod	'40–	'40–	
P 680 H	Nut for Platform Lifting Spring (2 used)	1940	1940	P2936H–P2966H
P 2810 H	Hand Latch for Platform Lifting Lever (No Cut)	'40–	'40–	HZ298H
P 2936 H	Nut for Platform Lifting Spring (Front and Rear 1940, Rear only '40–)	'41–	'40–	P680H–P2966H
P 2966 H	Nut with Clevis on Front End of Lifting Spring (No Cut)	'41–	'41–	P680H–P2936H
P 20201 H	Detent Rod on Platform Lifting Lever (2 used)	'40–	'40–	
P 26083 H	Pipe Trunnion in Rear End of Platform Lifting Rod	1940	1940	P31586H
P 26095 H	Filler between Platform Lifting Lever Sector and Tractor Hitch Extension (2 used)	'40–	'40–	
P 26218 H	Pivot Pipe for Platform Lifting Arm (P32360H will work)	1940	1940	P32360H
P 26232 H	Pipe Trunnion in Front End of Platform Lifting Rod	1940	1940	P31586H
P 28810 H	Platform Lifting Lever, Front	'40–	'40–	
P 28879 H	Cross Angle on Tractor Hitch for Platform Lifting Arm Supports	'40–	'40–	
P 29998 H	Link from Platform Lifting Arm to Cutter Bar	1940	1940	P32631H
P 30242 H	Rod from Lifting Spring to Arm (P31788H will work)	1940	1940	P31788H
P 30244 H	Stiffener on Platform Lifting Arm Supports on Tractor Hitch (2 used)	1940	1940	
P 30246 H	U-Bolt for Platform Lifting Arm Pivot Pipe (2 used)	'40–	'40–	
P 30248 H	Bracket on Axle for Platform Lifting Spring Adjusting Bolt (P32194H will work)	1940	1940	P32194H
P 31788 H	Rod from Lifting Spring to Arm (works for P30242H)	1940	1940	P30242H–P32339H
P 32194 H	Bracket on Axle for Platform Lifting Spring Adjusting Bolt (works for P30248H)	1940	1940	P30248H–P32350H–P32912H
P 32339 H	Rod from Lifting Spring to Arm		1940	P31788H
P 32350 H	Bracket on Axle for Platform Lifting Spring Adjusting Bolt		1940	P32194H–P32912H
P 32360 H	Pivot Pipe for Platform Lifting Arm (works for P26218H)	'40–	'40–	P26218H
P 32631 H	Link from Platform Lifting Arm to Cutter Bar	'41–	'41–	P29998H
P 32758 H	Brace from Cross Angle on Tractor Hitch for Platform Lifting Arm Supports to Square Tubing Cross Support under Hitch	'41–	'41–	
P 32912 H	Bracket on Axle for Platform Lifting Spring Adjusting Bolt (No Cut)	'41–	'41–	P32194H–P32350H
Y 4619	Platform Lifting Lever Detent (2 used)	'40–	'40–	
Y 4620	Platform Lifting Lever Detent Box	'40–	'40–	
	FEEDER CANVAS FRAME AND ROLLER			
1C2686 H	Pipe Trunnion in Idler Roller Bearing Box (2 used)	'40–	'40–	
AP11752 H	Feeder Canvas Frame, Complete (AP13875H with AP13868H, P32935H, P30437H and 2-P30436H will work) (No Cut)		1940	AP12480H
AP11785 H	Feeder Canvas Fastening Slide Bar		'40–	
AP12015 H	Feeder Canvas Fastening Slide Bar	'40–		
AP12042 H	Feeder Canvas, Complete (AP13963H will work) (No Cut)	1940		AP13680H
AP12043 H	Feeder Canvas, Complete (AP13964H will work) (No Cut)		1940	AP13681H
AP12114 H	Feeder Canvas Frame, Complete (AP13874H with AP13869H, P32936H, P30438H and 2-P30436H will work) (No Cut)	1940		AP12479H
AP12128 H	Bearing Plate and Stop for Feeder Canvas Tightener Crank	'40–	'40–	
AP12131 H	Idler Roller, Complete, for Feeder Canvas (No Cut)	'40–		
AP12133 H	Drive Roller, Complete, for Feeder Canvas (No Cut)	1940		AP12810H
AP12154 H	Drive Roller, Complete, for Feeder Canvas (No Cut)		1940	AP12811H
AP12155 H	Idler Roller, Complete, for Feeder Canvas (No Cut)		'40–	
AP12236 H	Bearing Box for Feeder Canvas Idler Roller (P2683H Complete) (Bearing P22953H) (2 used)	'40–	'40–	
AP12479 H	Feeder Canvas Frame, Complete (AP13874H with AP13869H and P32936H will work) (No Cut)	1940		AP12114H–AP13874H
AP12480 H	Feeder Canvas Frame, Complete (AP13875H with AP13868H and P32935H will work) (No Cut)		1940	AP11752H–AP13875H
AP12810 H	Drive Roller, Complete for Feeder Canvas (No Cut)	'40–		AP12133H
AP12811 H	Drive Roller, Complete for Feeder Canvas (No Cut)		'40–	AP12154H
AP13680 H	Feeder Canvas, Complete with Fastening Slide Bar (AP13963H will work) (No Cut)	1940		AP12042H–AP13963H
AP13681 H	Feeder Canvas, Complete with Fastening Slide Bar (AP13964H will work) (No Cut)		1940	AP12043H–AP13964H
AP13868 H	Spacer Pipe, Complete for Feeder Frame Side Bars		'41–	
AP13869 H	Spacer Pipe, Complete for Feeder Frame Side Bars	'41–		
AP13874 H	Feeder Canvas Frame, Complete (with AP13869H, P32936H, P30438H and 2-P30436H works for AP12114H) (with AP13869H and P32936H works for AP12479H) (No Cut)	'41–		AP12479H

For Cuts of Repair Parts, see page 75.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	FEEDER CANVAS FRAME AND ROLLER—Continued			
AP13875 H	Feeder Canvas Frame, Complete (with AP13868H, P32935H, P30437H and 2-P30436H works for AP11752H) (with AP13868H and P32935H works for AP12480H) (No Cut)	.....	'41–	AP12480H
AP13963 H	Feeder Canvas, Complete with Fastening Slide Bar (works for AP12042H or AP13680H) (No Cut)	'41–	.....	AP13680H
AP13964 H	Feeder Canvas, Complete with Fastening Slide Bar (works for AP12043H or AP13681H) (No Cut)	.....	'41–	AP13681H
P 2608 H	Roller Bearing Box for Feeder Drive Roller (2 used) (Bearing JD7924H) (Sleeve JD8301H)	'40–	'40–	.....
P 2683 H	Bearing Box for Feeder Canvas Idler Roller (Order AP12236H) (2 used)	'40–	'40–	.....
P 13759 H	Leather Washer on Canvas	1940	1940	.....
P 26064 H	Canvas Slat for Feeder Canvas (P32982H will work)	1940	.....	P32982H
P 27037 H	Canvas Slat for Feeder Canvas (P32983H will work)	.....	1940	P32983H
P 28675 H	Retainer for Feeder Canvas Drive Roller Bearing Box (2 used)	'40–	'40–	.....
P 28746 H	Spring Rod in Feeder Canvas Idler Roller Boxes (2 used)	'40–	'40–	.....
P 28778 H	Feeder Canvas Tightener Crank (P30438H with 2-P30436H will work)	1940	.....	P30438H
P 28779 H	Feeder Canvas Tightener Crank (P30437H with 2-P30436H will work)	.....	1940	P30437H
P 29716 H	Lock Strip on Ends of Feeder Canvas (2 used)	'40–	.....	.....
P 29718 H	Lock Strip on Ends of Feeder Canvas (2 used)	.....	'40–	.....
P 29781 H	Wearing Strap on Edge of Canvas (2 used)	1940	1940	.....
P 29782 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (P32980H will work)	1940	.....	P32980H
P 29783 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (P32981H will work)	.....	1940	P32981H
P 29861 H	Snap Spring for Roller Bearing Boxes on Feeder Drive Roller (2 used)	'40–	'40–	.....
P 29970 H	Link for Feeder Canvas Tightener Crank (2 used)	1940	1940	P30436H
P 29982 H	Canvas Guide Plate, R. H., on Feeder Frame	'40–	'40–	.....
P 29983 H	Canvas Guide Plate, L. H., on Feeder Frame	'40–	'40–	.....
P 30045 H	Pipe Spacer between Lower End of Feeder Frame and Separator Side (2 used) (No Cut)	'40–	'40–	.....
P 30436 H	Link for Feeder Canvas Tightener Crank (2 used) (No Cut)	'40–	'40–	P29970H
P 30437 H	Feeder Canvas Tightener Crank (with 2-P30436H works for P28779H) (No Cut)	.....	'40–	P28779H
P 30438 H	Feeder Canvas Tightener Crank (with 2-P30436H works for P28778H) (No Cut)	'40–	.....	P28778H
P 32418 H	Retainer for Bolt Head on Rear End of Feeder Frame to Separator Side Sheet (2 used)	'40–	'40–	.....
P 32737 H	Stiffener Plate on Separator Side Sheet for Feeder Frame Adjusting Bolt (2 used) (Repairs only) (No Cut)	1940	1940	.....
P 32935 H	Tie Rod for Feeder Frame Side Bars	.....	'41–	.....
P 32936 H	Tie Rod for Feeder Frame Side Bars	'41–	.....	.....
P 32980 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (works for P29782H) (No Cut)	'41–	.....	P29782H
P 32981 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (works for P29783H) (No Cut)	.....	'41–	P29783H
P 32982 H	Canvas Slat for Feeder Canvas (works for P26064H)	'41–	.....	P26064H
P 32983 H	Canvas Slat for Feeder Canvas (works for P27037H)	.....	'41–	P27037H
	CYLINDER AND CONCAVES			
AP10444 H	Door over Top of Cylinder	'40–	.....	.....
AP10488 H	Cylinder Head with Hub (2 used 11A, 3 used 12A)	'40–	1940	AP13528H
AP11540 H	Rasp Bar for Cylinder (4 used, see AP11573H) (AP12931H will work)	1940	.....	AP12931H
AP11571 H	Rasp Bar for Cylinder (4 used, see AP11572H) (AP12933H will work)	.....	1940	AP12933H
AP11572 H	Rasp Bar for Cylinder (4 used, see AP11571H) (AP12934H will work)	.....	1940	AP12934H
AP11573 H	Rasp Bar for Cylinder (4 used, see AP11540H) (AP12932H will work)	1940	.....	AP12932H
AP11591 H	Cylinder, Complete (AP12470H will work) (No Cut)	1940	.....	AP12470H
AP11592 H	Cylinder, Complete (AP13511H will work) (No Cut)	.....	1940	AP12471H AP13511H
AP11695 H	Angle Bracket, Lower, for Cylinder Adjusting Bolt (2 used)	'40–	'40–	.....
AP11715 H	Door over Top of Cylinder	.....	'40–	.....
AP11771 H	Cylinder Sheave Wrench	'40–	'40–	.....
AP11784 H	Plate on Rear of Concaves	1940	.....	AP13983H
AP11861 H	Support Angle, R. H., on Separator Side for Grate under Cylinder	'40–	'40–	.....
AP11862 H	Support Angle, L. H., on Separator Side for Grate under Cylinder	'40–	'40–	.....
AP11872 H	Concave Grate under Cylinder (AP13859H will work)	1940	.....	AP12924H

For Cuts of Repair Parts, see pages 75 and 76.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	CYLINDER AND CONCAVES—Continued			
AP11873 H	Concave Grate under Cylinder (AP13860H will work)	.....	1940	AP12925H
AP11888 H	Plate on Rear of Concave	.....	1940	AP13981H
AP12092 H	Removable Side Plate at L. H. End of Cylinder and Beater	1940	1940	AP13744H
AP12115 H	Stiffener Plate for Separator Body Side, R. H., at End of Cylinder (P32465H will work)	1940	1940	P32465H
AP12148 H	Stripper Angle for Cylinder (No Cut)	'40–	.....	.....
AP12149 H	Stripper Angle for Cylinder (No Cut)	.....	'40–	.....
AP12193 H	Hinge for Door over Top of Cylinder	'40–	'40–	.....
AP12470 H	Cylinder, Complete (works for AP11591H) (No Cut)	'40–	.....	AP11591H
AP12471 H	Cylinder, Complete (AP13511H will work) (No Cut)	.....	1940	AP11592H–AP13511H
AP12924 H	Concave Grate under Cylinder, Complete with Rasp Bars (AP13859H will work) (No Cut)	1940	.....	AP11872H–AP13859H
AP12925 H	Concave Grate under Cylinder, Complete with Rasp Bars (AP13860H will work) (No Cut)	.....	1940	AP11873H–AP13860H
AP12926 H	Concave Rasp Bars (P2906H Complete) (works for P2620H)	1940	.....	AP12927H
AP12927 H	Concave Rasp Bars (P2908H Complete)	1940	.....	AP12926H–AP13890H
AP12928 H	Concave Rasp Bars (P2907H Complete) (works for P2621H)	.....	1940	AP12929H
AP12929 H	Concave Rasp Bars (P2909H Complete)	.....	1940	AP12928H–AP13391H
AP12931 H	Rasp Bar, Complete with Bolts for Cylinder (works for AP11540H) (4 used Regular, 8 used Flax) (See AP12932H) (No Cut)	'40–	.....	AP11540H
AP12932 H	Rasp Bar, Complete with Bolts for Cylinder (works for AP11573H) (4 used Regular, 8 used Flax) (See AP12931H)	'40–	.....	AP11573H
AP12933 H	Rasp Bar, Complete with Bolts for Cylinder (works for AP11571H) (4 used Regular, 8 used Flax) (See AP12934H) (No Cut)	.....	'40–	AP11571H
AP12934 H	Rasp Bar, Complete with Bolts for Cylinder (works for AP11572H) (4 used Regular, 8 used Flax) (See AP12933H)	.....	'40–	AP11572H
AP12983 H	Angle Insert on Top of Concave Plate (Rubber Faced) (4 used) (Flax)	1940	.....	P29649H–AP13884H
AP12984 H	Angle Insert on Top of Concave Plate (Rubber Faced) (4 used) (Flax)	.....	1940	P29650H–AP13885H
AP12990 H	Shield on Separator Side at L. H. End of Cylinder	'40–	.....	.....
AP12991 H	Shield on Separator Side (on R. H. End of Cylinder No. 11-A) (on Both Ends of Cylinder No. 12-A) (1 used No. 11-A, 2 used No. 12-A)	'40–	'40–	.....
AP13511 H	Cylinder, Complete (works for AP12471H or AP11592H) (No Cut)	.....	'40–	AP12471H–AP11592H
AP13528 H	Cylinder Head with Hub (3 used) (Order for early machines if Original Complete Cylinder has been replaced by AP13511H with 1-3/4" Cylinder Shaft)	.....	'40–	AP10488H
AP13744 H	Removable Side Plate at L. H. End of Cylinder and Beater (No Cut)	'41–	'41–	AP12092H
AP13859 H	Concave Grate under Cylinder, Complete with Rasp Bars (works for AP11872H or AP12924H) (No Cut)	'41–	.....	AP12924H
AP13860 H	Concave Grate under Cylinder, Complete with Rasp Bars (works for AP11873H or AP12925H) (No Cut)	.....	'41–	AP12925H
AP13880 H	Insert Channel, Complete with Bolts on Top of Concave Plate (Slotted Holes) (3 used) (No Cut)	'41–	.....	P29649H
AP13881 H	Insert Channel, Complete with Bolts on Top of Concave Plate (Slotted Holes) (3 used) (No Cut)	.....	'41–	P29650H
AP13882 H	Insert Channel, Complete with Bolts on Top of Concave Plate (Blank) (3 used) (Special) (No Cut)	'41–	.....	.....
AP13883 H	Insert Channel, Complete with Bolts on Top of Concave Plate (Blank) (3 used) (Special) (No Cut)	.....	'41–	.....
AP13884 H	Angle Insert, Complete with Bolts on Top of Concave Plate (Rubber Faced) (3 used) (Special) (No Cut)	'41–	.....	AP12983H
AP13885 H	Angle Insert, Complete with Bolts on Top of Concave Plate (Rubber Faced) (3 used) (Special) (No Cut)	.....	'41–	AP12984H
AP13886 H	Insert Angle, Complete with Bolts on Top of Concave Plate (Round Holes) (3 used) (Special) (No Cut)	'41–	.....	.....
AP13887 H	Insert Angle, Complete with Bolts on Top of Concave Plate (Round Holes) (3 used) (Special) (No Cut)	.....	'41–	.....
AP13890 H	Concave Rasp Bar, Complete with Bolts (P32409H Complete) (2 used)	'41–	.....	AP12927H
AP13891 H	Concave Rasp Bar, Complete with Bolts (P32410H Complete) (2 used)	.....	'41–	AP12929H
AP13981 H	Plate on Rear of Concaves (No Cut)	.....	'41–	AP11888H
AP13983 H	Plate on Rear of Concaves (No Cut)	'41–	.....	AP11784H

For Cuts of Repair Parts, see page 76.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	CYLINDER AND CONCAVES—Continued			
P 2482 H	Hub for Cylinder Head (2 used 11-A, 3 used 12-A)	'40–	1940	P2940H
P 2620 H	Concave Rasp Bar (3 used) (AP12926H will work)	1940	.....	AP12926H
P 2621 H	Concave Rasp Bar (4 used) (AP12928H will work)	.....	1940	AP12928H
P 2906 H	Concave Rasp Bar (Order AP12926H)	1940	.....	P2620H–P2908H
P 2907 H	Concave Rasp Bar (Order AP12928H)	.....	1940	P2621H–P2909H
P 2908 H	Concave Rasp Bar (Order AP12927H)	1940	.....	P2906H–P32409H
P 2909 H	Concave Rasp Bar (Order AP12929H)	.....	1940	P2907H–P32410H
P 2940 H	Hub for Cylinder Head (3 used) (Order for Early Machines if Original Complete Cylinder has been replaced by AP13511H with 1-3/4" Cylinder Shaft)	.....	'40–	P2482H
P 26281 H	Rubber Collar around Cylinder Shaft Bearing (2 used)	'40–	'40–	.....
P 26389 H	Cover Plate, Inner, for Bearings on Cylinder Shaft (2 used)	'40–	'40–	.....
P 26424 H	Housing for Bearings on Cylinder Shaft (2 used)	'40–	'40–	.....
P 27747 H	Cylinder Head, Middle (2 used)	'40–	1940	P32377H
P 28484 H	Adapter for Cylinder Shaft Bearing	'40–	'40–	.....
P 28485 H	Nut for Adapter on Cylinder Shaft Bearing	'40–	'40–	.....
P 28906 H	Cylinder Shaft (P30322H will work)	1940	.....	P30322H
P 28907 H	Cylinder Shaft (P30323H will work)	.....	1940	P30323H
P 28908 H	Cross Support on Plate at Front of Concaves	'40–	.....	.....
P 28909 H	Cross Support on Plate at Front of Concaves	.....	'40–	.....
P 28997 H	Extension for Door over Top of Cylinder	'40–	.....	.....
P 28998 H	Extension for Door over Top of Cylinder	.....	'40–	.....
P 29211 H	Rubber Seal from Front of Cylinder to Platform	.....	'40–	.....
P 29437 H	Angle Bracket, Upper, for Cylinder Adjusting Bolts (2 used) (P33096H will work)	1940	1940	P33096H
P 29461 H	Plate at Front of Concaves	'40–	.....	.....
P 29465 H	Support, R. H., for Plate on Rear of Concaves	'40–	'40–	.....
P 29466 H	Support, L. H., for Plate on Rear of Concaves	'40–	'40–	.....
P 29482 H	Plate at Front of Concaves	.....	'40–	.....
P 29532 H	Retainer for Rubber Seal from Front of Cylinder to Platform	'40–	.....	.....
P 29533 H	Retainer for Rubber Seal from Front of Cylinder to Platform	.....	'40–	.....
P 29534 H	Rubber Seal from Front of Cylinder to Platform	'40–	.....	.....
P 29629 H	Retainer on Concave Grate for Plate at Front of Concaves	1940	.....	P32456H
P 29630 H	Retainer on Concave Grate for Plate at Front of Concaves	.....	1940	P32457H
P 29645 H	Support for Seal from Front of Cylinder to Platform (P33263H will work)	1940	.....	P33263H
P 29646 H	Support for Seal from Front of Cylinder to Platform (P33264H will work)	.....	1940	P33264H
P 29649 H	Angle Insert on Top of Concave Plate (3 used)	1940	.....	AP12983H–AP13880H
P 29650 H	Angle Insert on Top of Concave Plate (3 used)	.....	1940	AP12984H–AP13881H
P 29892 H	Hinged Extension for Cylinder Top Cover	'40–	.....	.....
P 29906 H	Retainer for Rubber Extension on Cylinder Top Cover Hinged Extension	'40–	.....	.....
P 29907 H	Rubber Extension for Cylinder Top Cover Hinged Extension	'40–	.....	.....
P 29909 H	Stiffener for Cylinder Top Cover Hinged Extension	'40–	.....	.....
P 29930 H	Retainer for Rubber Extension on Cylinder Top Cover Hinged Extension	.....	'40–	.....
P 29932 H	Rubber Extension for Cylinder Top Cover Hinged Extension	.....	'40–	.....
P 29974 H	Hinged Extension for Cylinder Top Cover	.....	'40–	.....
P 30008 H	Rod for Cylinder Top Cover Hinged Extension	'40–	.....	.....
P 30009 H	Rod for Cylinder Top Cover Hinged Extension	.....	'40–	.....
P 30015 H	Rubber Flap on Cylinder Cover Hinged Extension for Tailings (No Cut)	'40–	'40–	.....
P 30018 H	Stiffener for Cylinder Top Cover Hinged Extension	.....	'40–	.....
P 30064 H	Cover on Removable Side Plate over Stripper Angle Bolts (No Cut)	'40–	'40–	.....
P 30096 H	Spacer under Cover on Removable Side Plate over Stripper Angle Bolts	'40–	'40–	.....
P 30171 H	Bracket on Cylinder Top Cover Hinged Extension for Latch Pin (2 used)	'40–	'40–	.....
P 30216 H	Latch Pin for Cylinder Top Cover Hinged Extension (2 used)	'40–	'40–	.....
P 30322 H	Cylinder Shaft (works for P28906H) (No Cut)	'40–	.....	P28906H
P 30323 H	Cylinder Shaft (works for P28907H) (No Cut)	.....	1940	P28907H–P32376H
P 31580 H	Support Bracket for Extension on Door over Top of Cylinder (2 used)	'40–	'40–	.....
P 32146 H	Shim under Cylinder Rasp Bar (Order for Early Machines if Original Complete Cylinder has been replaced by AP13511H with 1-3/4" Cylinder Shaft)	.....	1940	.....

For Cuts of Repair Parts, see pages 76 and 77.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	CYLINDER AND CONCAVES—Continued			
P 32376 H	Cylinder Shaft (Order for Early Machines if Original Complete Cylinder has been replaced by AP13511H with 1-3/4" Cylinder Shaft)	.....	'40–	P30323H
P 32377 H	Cylinder Head, Middle (2 used) (Order for Early Machines if Original Complete Cylinder has been replaced by AP13511H with 1-3/4" Cylinder Shaft)	.....	'40–	P27747H
P 32409 H	Concave Rasp Bar (2 used) (Order AP13890H)	'41–	.....	P2908H
P 32410 H	Concave Rasp Bar (Order AP13891H)	.....	'41–	P2909H
P 32456 H	Retainer on Concave Grate for Plate at Front of Concaves	'41–	.....	P29629H
P 32457 H	Retainer on Concave Grate for Plate at Front of Concaves	.....	'41–	P29630H
P 32465 H	Stiffener Plate on Separator Side, R. H., at End of Cylinder (works for AP12115H)	'41–	'41–	AP12115H
P 32681 H	Cylinder Bar Filler (Wood) (24 used No. 11-A, 32 used No. 12-A) (Special) (No Cut)	'40–'41	'40–'41	.....
P 33096 H	Angle Bracket, Upper, for Cylinder Adjusting Bolts (2 used) (works for P29437H) (No Cut)	'41–	'41–	P29437H
P 33263 H	Support for Seal from Front of Cylinder to Platform (works for P29645H) (No Cut)	'41–	.....	P29645H
P 33264 H	Support for Seal from Front of Cylinder to Platform (works for P29646H) (No Cut)	.....	'41–	P29646H
P 33303 H	Channel Bars for Cylinder (8 used) (Special) (No Cut)	'40–	.....	.....
P 33304 H	Channel Bars for Cylinder (8 used) (Special) (No Cut)	.....	'40–	.....
P 33377 H	Spacer between Cylinder Channel Bar and Cylinder Drum (64 used 11-A, 80 used 12-A) (Special) (No Cut)	'40–	'40–	.....
P 33460 H	Cylinder Bar Filler (Long) (8 used) (Special) (No Cut)	'40–	'40–	.....
P 33461 H	Cylinder Bar Filler (Short) (16 used No. 11-A, 24 used No. 12-A) (Special) (No Cut)	'40–	'40–	.....
P 33462 H	End Clip for Cylinder Bar Filler (48 used 11-A, 64 used 12-A) (Special) (No Cut)	'40–	'40–	.....
	BEATER BEHIND THE CYLINDER			
AP11749 H	Beater Drum, Complete (AP13738H with 4-P32705H, 12-P32611H, and 24-P32987H will work) (No Cut)	.....	1940	AP13738H
AP11804 H	Shaft for Beater (AP13606H will work)	1940	.....	AP13606H
AP11805 H	Shaft for Beater	.....	'40–	.....
AP12138 H	Beater Drum, Complete (AP13737H with 4-P32705H, 12-P32611H and 24-P32987H will work) (No Cut)	1940	.....	AP13737H
AP13606 H	Shaft for Beater (works for AP11804H)	'41–	.....	AP11804H
AP13737 H	Beater Drum, Complete (with 4-P32704H, 12-P32611H and 24-P32987H works for AP12138H) (No Cut)	'41–	.....	AP12138H
AP13738 H	Beater Drum, Complete (with 4-P32705H, 12-P32611H and 24-P32987H works for AP11749H) (No Cut)	.....	'41–	AP11749H
AP13745 H	Retainer for R. H. Roller Bearing Box on Beater Shaft	'41–	'41–	P28625H
P 2610 H	Roller Bearing Box, L. H .,on Beater Shaft (Bearing JD7921H, Sleeve JD7451H)	'40–	'40–	.....
P 2611 H	Roller Bearing Box, R. H., on Beater Shaft (Bearing JD7921H, Sleeve JD7451H)	1940	1940	P2987H
P 2686 H	Head for Beater (2 used)	'40–	'40–	.....
P 2987 H	Roller Bearing Box, R. H., on Beater Shaft (Bearing JD7921H, Sleeve JD7451H)	'41–	'41–	P2611H
P 28570 H	Spacing Collar on Beater Shaft (2 used)	'40–	'40–	.....
P 28625 H	Retainer for R. H. Roller Bearing Box on Beater Shaft	1940	1940	AP13745H
P 29063 H	Retainer for L. H. Roller Bearing Box on Beater Shaft (P31988H will work)	1940	1940	P31988H
P 29904 H	Beater Clean-Out Door on Separator Side	'40–	'40–	.....
P 29981 H	Wood Cover Bar for Beater Teeth (4 used)	1940	.....	P32704H
P 29991 H	Bracket for Beater Tooth Cover Bar (12 used) (No Cut)	1940	1940	P32611H
P 30005 H	Wood Cover Bar for Beater Teeth (with 6-Tooth Holes) (2 used)	.....	1940	P32705H
P 30006 H	Wood Cover Bar for Beater Teeth (with 4-Tooth Holes) (2 used)	.....	1940	P32705H
P 30299 H	Snap Ring for Roller Bearing Box on Beater Shaft (2 used)	'40–	'40–	.....
P 31988 H	Retainer for L. H. Roller Bearing Box on Beater Shaft (works for P29063H)	1940	1940	P29063H–P32715H
P 32611 H	Bracket for Beater Tooth Cover (12 used)	'41–	'41–	P29991H
P 32704 H	Cover for Beater Teeth (4 used)	'41–	.....	P29981H
P 32705 H	Cover for Beater Teeth (4 used)	.....	'41–	P30005H–P30006H
P 32714 H	Bracket or Disk for Boxes on Beater Shaft (2 used)	'41–	'41–	.....
P 32715 H	Retainer for L. H. Roller Bearing Box on Beater Shaft	'41–	'41–	P31988H
P 32779 H	Lock Bracket for Beater Shaft Roller Bearing Box, R. H.	'41–	'41–	.....
	STRAW RACK AND REAR HOOD			
AP10056 H	Canvas Curtain, Rear, over Straw Rack	'40–	.....	.....
AP10249 H	Canvas Curtain, Front, over Straw Rack (AP13762H with P32220H will work)	1940	.....	AP13762H
AP10459 H	Rocker Arm, Rear, Complete (P2364H, Complete) (2 used)	'40–	'40–	.....
AP10487 H	Straw Rack Pitman, R. H., Complete	'40–	'40–	.....

For Cuts of Repair Parts, see pages 77 and 78.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	STRAW RACK AND REAR HOOD—Continued			
AP10672 H	Canvas Curtain, Rear, over Straw Rack	.....	'40–	.....
AP10673 H	Canvas Curtain, Front, over Straw Rack (AP13763H with P32221H will work)	.....	1940	AP13763H
AP11283 H	Rocker Arm, L. H. Front (P2541H, Complete)	'40–	'40–	.....
AP11284 H	Rocker Arm, R. H. Front (P2542H, Complete)	'40–	'40–	.....
AP11547 H	Rocker Arm Stud, Rear, on Rack (2 used)	'40–	'40–	.....
AP11549 H	Rocker Arm Stud, Front, on Rack (2 used)	'40–	'40–	.....
AP11550 H	Straw Rack Pitman, L. H. Complete	'40–	'40–	.....
AP11612 H	Bearing for Rocker Arm Shaft, Front (P2595H, Complete) (2 used)	'40–	'40–	.....
AP11682 H	Chaffer Plate on Front End of Straw Rack	.....	1940	AP13533H
AP11683 H	Chaffer Plate on Front End of Straw Rack	1940	.....	AP13751H
AP11812 H	Shaft for Rear Rocker Arms (P32414H will work)	1940	.....	P32414H
AP11813 H	Shaft for Rear Rocker Arms (P32415H will work)	.....	1940	P32415H
AP11814 H	Shaft for Front Rocker Arms (AP13594H will work)	1940	.....	AP13594H
AP11815 H	Shaft for Front Rocker Arms (AP13595H will work)	.....	1940	AP13595H
AP11892 H	Straw Rack, Complete (AP13677H will work) (No Cut)	1940	.....	AP13677H
AP11893 H	Straw Rack, Complete (AP13660H will work) (No Cut)	.....	1940	AP13660H
AP13533 H	Chaffer Plate on Front End of Straw Rack (No Cut)	.....	1940	AP11682H–AP13750H
AP13594 H	Shaft for Front Rocker Arms (works for AP11814H)	'41–	.....	AP11814H
AP13595 H	Shaft for Front Rocker Arms (works for AP11815H)	.....	'41–	AP11815H
AP13625 H	Front Cross Slat for Rack (16 used) (Metal Covered)	.....	'40–	P27802H
AP13626 H	Front Cross Slat for Rack (16 used) (Metal Covered)	'41–	.....	P27596H
AP13660 H	Straw Rack, Complete (works for AP11893H) (No Cut)	.....	'40–	AP11893H
AP13670 H	Straw Rack Grate, L. H., Complete (No Cut)	.....	'40–	.....
AP13671 H	Straw Rack Grate, R. H., Complete (No Cut)	.....	'40–	.....
AP13675 H	Straw Rack Grate, R. H., Complete (No Cut)	'41–	.....	.....
AP13676 H	Straw Rack Grate, L. H., Complete (No Cut)	'41–	.....	.....
AP13677 H	Straw Rack, Complete (works for AP11892H) (No Cut)	'41–	.....	AP11892H
AP13750 H	Chaffer Plate on Front End of Straw Rack (No Cut)	.....	'41–	AP13533H
AP13751 H	Chaffer Plate on Front End of Straw Rack (No Cut)	'41–	.....	AP11683H
AP13762 H	Canvas Curtain, Front, over Straw Rack (with P32220H works for AP10249H) (No Cut)	'41–	.....	AP10249H
AP13763 H	Canvas Curtain, Front, over Straw Rack (with P32222H works for AP10673H) (No Cut)	.....	'41–	AP10673H
AP14140 H	Straw Deflector on Rear Hood (Long) (Special) (No Cut)	'40–	'40–	.....
P 2352 H	Bracket for Rear Hanger Stud on Rack (2 used)	'40–	'40–	.....
P 2353 H	Bracket, L. H., for Front Hanger Stud on Rack	1940	1940	P2939H
P 2356 H	Bracket, R. H., for Front Hanger Stud on Rack	1940	1940	P2938H
P 2364 H	Rocker Arm, Rear (Order AP10459H) (2 used)	'40–	'40–	.....
P 2541 H	Rocker Arm, L. H. Front (Order AP11283H)	'40–	'40–	.....
P 2542 H	Rocker Arm, R. H. Front (Order AP11284H)	'40–	'40–	.....
P 2545 H	Connecting Bracket from Pitman to Crank (2 used)	'40–	'40–	.....
P 2562 H	Retaining Collar on Rocker Arm Studs on Straw Rack, also on Shaft for Rear Rocker Arms (6 used)	'40–	'40–	.....
P 2584 H	Pitman Crank, L. H.	'40–	'40–	.....
P 2595 H	Bearing Bracket for Rocker Arm Shaft, Front (Order AP11612H) (2 used)	'40–	'40–	.....
P 2640 H	Pitman Crank, R. H., and Hub for Conveyor Drive Sheave	'40–	'40–	.....
P 2938 H	Bracket, R. H., for Front Hanger Stud on Rack	'41–	'40–	P2356H
P 2939 H	Bracket, L. H., for Front Hanger Stud on Rack	'41–	'40–	P2353H
P 26054 H	Stud in Front Rocker Arms for Pitman (2 used)	'40–	'40–	.....
P 26055 H	Pitman (Wood) (2 used)	'40–	'40–	.....
P 26255 H	Corner Bracket for Front R. H. Corner of Rack	1940	1940	P32393H
P 26263 H	Corner Bracket for Front L. H. Corner of Rack	1940	1940	P32394H
P 26282 H	Short Cross Slat for Rack (56 used)	1940	.....	P32542H
P 26328 H	Shim for Front End of Pitman (4 used)	1940	1940	P31474H
P 26357 H	Rod for Canvas Curtains over Straw Rack (Pipe) (2 used) (P32220H will work)	1940	.....	P32220H
P 26411 H	Straw Rack Front Endboard	1940	.....	P32400H
P 26412 H	Straw Rack Rear Endboard	'40–	.....	.....
P 26433 H	Grain Chute on Bottom of Straw Rack at Rear End	1940	.....	P32546H
P 26445 H	Corner Bracket for Middle Sill (4 used) (P32398H will work)	1940	1940	P32398H
P 26446 H	Stiffener Plate on Rack Side for Rear Hanger Bracket (2 used)	'40–	'40–	.....
P 26459 H	Support (Long) on Sill for Cross Slat (4 used)	'40–	'40–	.....
P 26520 H	Tie Rod for Rack (4 used)	1940	.....	P32358H
P 26771 H	Zerk Plate on Pitman (2 used)	'40–	'40–	.....
P 26860 H	Straw Rack Front Endboard	.....	1940	P32399H
P 26864 H	Tie Rod for Rack (4 used)	.....	1940	P32391H
P 26865 H	Short Cross Slat for Rack (56 used)	.....	1940	P32543H
P 27223 H	Stud for L. H. Pitman Crank	'40–	'40–	.....
P 27593 H	Support (Short) on Sill for Cross Slats (4 used)	'40–	'40–	.....
P 27596 H	Front Cross Slat for Rack (2 used)	1940	.....	AP13626H
P 27717 H	Rod for Canvas Curtains over Straw Rack (Pipe) (2 used) (P32222H will work)	.....	1940	P32222H

For Cuts of Repair Parts, see page 78.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	STRAW RACK AND REAR HOOD—Continued			
P 27802 H	Front Cross Slat for Rack (2 used)	.....	1940	AP13625H
P 27864 H	Gasket for Zerk Plate on Pitman (2 used)	'40–	'40–	.....
P 28268 H	Clip on Rack Center Sill for Tie Rods (2 used)	'40–	'40–	.....
P 28294 H	Retainer Strip, Front, on Straw Rack Sill, R. H., for Cross Slats	1940	1940	P32538H
P 28295 H	Retainer Strip, Front, on Straw Rack Sill, L. H., for Cross Slats	1940	1940	P32539H
P 28296 H	Retainer Strip, Rear, on Straw Rack Sill, R. H., for Cross Slats	1940	1940	P32553H
P 28297 H	Retainer Strip, Rear, on Straw Rack Sill, L. H., for Cross Slats	1940	1940	P32553H
P 28298 H	Retainer Strip on Straw Rack Middle Sill for Cross Slats	1940	1940	P32556H
P 28322 H	Straw Rack Sill, R. H.	1940	1940	P32396H–P32698H
P 28323 H	Straw Rack Sill, L. H.	1940	1940	P32397H–P32719H
P 28379 H	Extension Plate on Front End of Straw Rack (P32473H will work)	.....	1940	P32473H
P 28384 H	Extension Plate on Front End of Straw Rack (P32474H will work)	1940	.....	P32474H
P 28399 H	Plate over Opening in R. H. Separator Side Sheet for Rocker Arm, Front (P28400H will work)	1940	1940	P28400H
P 28400 H	Plate over Opening in L. H. Separator Side Sheet for Rocker Arm, Front (works for P28399H)	'40–	'40–	P28399H
P 28670 H	Straw Rack Middle Sill	1940	1940	P32401H–P32742H
P 28671 H	Long Slat for Rack (22 used 11-A, 28 used 12-A) (P32472H will work)	1940	1940	P32472H–P32627H
P 28673 H	Wood Filler Block between Rear Endboard and Slats	'40–	.....	.....
P 28696 H	Corner Brackets for Rear Corners of Rack (2 used)	'40–	'40–	.....
P 28769 H	Retainer Collar on Front Rocker Arm Shaft	'40–	'40–	.....
P 28938 H	Straw Deflector on Rear Hood	1940	1940	P31752H–P31765H
P 28992 H	Rear Hood (No Cut)	'40–	.....	.....
P 28993 H	Rear Hood (No Cut)	.....	'40–	.....
P 29222 H	Grain Chute on Bottom of Straw Rack at Rear End	.....	1940	P32547H
P 29223 H	Straw Rack Rear Endboard	.....	'40–	.....
P 29224 H	Wood Filler Block between Rear Endboard and Slats (2 used)	.....	'40–	.....
P 29386 H	Middle Bracket for Straw Rack Front Curtain	1940	1940	.....
P 29387 H	Middle Bracket for Straw Rack Rear Curtain	1940	1940	.....
P 29491 H	Stiffener Bar for Rear Hood (No Cut)	.....	'40–	.....
P 29883 H	Bolt Plate on Rear End of Straw Rack Pitman (4 used)	'40–	'40–	.....
P 29918 H	Bracket, Front, for Riser on Top of Straw Rack	'40–	'40–	.....
P 29975 H	Bracket, Rear, for Riser on Top of Straw Rack (No Cut)	'40–	'40–	.....
P 29980 H	Riser on Top of Straw Rack (P32408H will work) (No Cut)	1940	1940	P32408H
P 30116 H	Plate on R. H. Pitman Crank Stud for Speed Indicator	'40–	'40–	.....
P 30187 H	Stud of R. H. Pitman Crank	'40–	'40–	.....
P 30191 H	Spacer behind Speed Indicator Plate on R. H. Pitman Crank Stud	'40–	'40–	.....
P 30362 H	Plate on Rack Sill for Tie Rod Tightener Screw (4 used) (No Cut)	'40–	'40–	.....
P 31474 H	Shim for Front End of Pitman (8 used) (No Cut)	'40–	'40–	P26328H
P 31752 H	Straw Deflector on Rear Hood (No Cut)	'40–	.....	P28938H
P 31765 H	Straw Deflector on Rear Hood (No Cut)	.....	'40–	P28938H
P 32220 H	Rod for Canvas Curtain over Straw Rack (2 used) (works for P26357H)	'40–	.....	P26357H
P 32222 H	Rod for Canvas Curtain over Straw Rack (2 used) (works for P27717H)	.....	'40–	P27717H
P 32358 H	Tie Rod for Rack (4 used)	'41–	.....	P26520H
P 32391 H	Tie Rod for Rack (4 used)	.....	'40–	P26864H
P 32393 H	Corner Bracket for Front R. H. Corner of Rack	'41–	'40–	P26255H
P 32394 H	Corner Bracket for Front L. H. Corner of Rack	'41–	'40–	P26263H
P 32396 H	Straw Rack Sill, R. H. (P32698H will work)	.....	1940	P28322H–P32698H
P 32397 H	Straw Rack Sill, L. H. (P32719H will work)	.....	1940	P28323H–P32719H
P 32398 H	Corner Bracket for Middle Sill (4 used) (works for P26445H)	'41–	'40–	P26445H
P 32399 H	Straw Rack Front Endboard	.....	'40–	P26860H
P 32400 H	Straw Rack Front Endboard	'41–	.....	P26411H
P 32401 H	Straw Rack Middle Sill (P32742H will work)	.....	1940	P28670H–P32742H
P 32408 H	Riser on Top of Straw Rack (works for P29980H)	'41–	'40–	P29980H
P 32412 H	Metal Covering for Straw Rack Front Slats (16 used)	'41–	.....	.....
P 32413 H	Metal Covering for Straw Rack Front Slats (16 used)	.....	'40–	.....
P 32414 H	Shaft for Rear Rocker Arms (works for AP11812H)	'41–	.....	AP11812H
P 32415 H	Shaft for Rear Rocker Arms (works for AP11813H)	.....	'41–	AP11813H
P 32472 H	Long Slat for Rack (22 used No. 11-A, 28 used No. 12-A) (works for P28671H)	'41–	'40–	P28671H
P 32473 H	Extension Plate on Front End of Straw Rack (works for P28379H)	.....	'40–	P28379H
P 32474 H	Extension Plate on Front End of Straw Rack (works for P28384H)	'41–	.....	P28384H
P 32538 H	Retainer Strip, Front, on Straw Rack Sill, R. H., for Cross Slats	'41–	'40–	P28294H
P 32539 H	Retainer Strip, Front, on Straw Rack Sill, L. H., for Cross Slats	'41–	'40–	P28295H
P 32542 H	Short Cross Slat for Rack (42 used)	'41–	.....	P26282H

For Cuts of Repair Parts, see pages 78 and 79.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	STRAW RACK AND REAR HOOD—Continued			
P 32543 H	Short Cross Slat for Rack (42 used)	.....	'40–	P26865H
P 32544 H	Stiffener Plate for R. H. Side of Grain Chute on Rear End of Rack	'41–	.....	.....
P 32545 H	Stiffener Plate for R. H. Side of Grain Chute on Rear End of Rack	.....	'40–	.....
P 32546 H	Grain Chute on Bottom of Straw Rack at Rear End	'41–	.....	P26433H
P 32547 H	Grain Chute on Bottom of Straw Rack at Rear End	.....	'40–	P29222H
P 32553 H	Retainer Strip, Rear, on Straw Rack Sill for Cross Slats (2 used)	'41–	'40–	P28296H–P28297H
P 32554 H	Stiffener Plate for L. H. Side of Grain Chute on Rear End of Rack	'41–	.....	.....
P 32555 H	Stiffener Plate for L. H. Side of Grain Chute on Rear End of Rack	.....	'40–	.....
P 32556 H	Retainer Strip on Straw Rack Middle Sill for Cross Slats	'41–	'40–	P28298H
P 32693 H	Extension for Chaffer Plate on Front End of Straw Rack (Rubber) (No Cut)	'41–	.....	.....
P 32695 H	Extension for Chaffer Plate on Front End of Straw Rack (Rubber) (No Cut)	.....	'41–	.....
P 32696 H	Bolt Strip for Extension on Chaffer Plate on Front End of Straw Rack (P33397H will work)	.....	1941	P33397H
P 32698 H	Straw Rack Sill, R. H. (works for P32396H)	'41–	'41–	P28322H–P32396H
P 32719 H	Straw Rack Sill, L. H. (works for P32397H)	'41–	'41–	P28323H–P32397H
P 32742 H	Straw Rack Middle Sill (works for P32401H)	'41–	'41–	P28670H–P32401H
P 33396 H	Bolt Strip for Extension on Chaffer Plate on Front End of Straw Rack (No Cut)	'41–	.....	.....
P 33397 H	Bolt Strip for Extension on Chaffer Plate on Front End of Straw Rack (works for P32696H) (No Cut)	.....	'41–	P32696H
	CONVEYOR UNDER STRAW RACK			
45-U5L	Attachment Link, L. H., for Conveyor Chain Slat (Marked 45-U5R)	'40–	'40–	.....
45-U5R	Attachment Link, R. H., for Conveyor Chain Slat (Marked 45-U5L)	'40–	'40–	.....
AP11137 H	Bearing Bracket, L. H., on Conveyor Chain Drive Shaft (P2522H, Complete)	'40–	'40–	.....
AP11138 H	Bearing Bracket, R. H., on Conveyor Chain Drive Shaft (P2523H, Complete)	'40–	'40–	.....
AP11810 H	Conveyor Chain Idler Shaft (P32357H will work)	.....	1940	P32357H
AP11811 H	Conveyor Chain Idler Shaft (P32356H will work)	1940	.....	P32356H
AP11970 H	Idler Sprocket for Conveyor Chain (P2651H Complete)	'40–	'40–	.....
AP12194 H	Conveyor Chain, Complete, with Slats (No Cut)	'40–	.....	.....
AP12195 H	Conveyor Chain, Complete, with Slats (No Cut)	.....	'40–	.....
AP12196 H	Slat with Link for Conveyor Chain	'40–	.....	.....
AP12197 H	Slat with Link for Conveyor Chain	.....	'40–	.....
P 2522 H	Bearing Bracket, L. H., on Conveyor Chain Drive Shaft (Order AP11137H)	'40–	'40–	.....
P 2523 H	Bearing Bracket, R. H., on Conveyor Chain Drive Shaft (Order AP11138H)	'40–	'40–	.....
P 2562 H	Retaining Collar on Conveyor Chain Idler Shaft (2 used)	'40–	'40–	.....
P 2650 H	Conveyor Chain Drive Sprocket (2 used)	'40–	'40–	.....
P 2651 H	Idler Sprocket for Conveyor Chain (Order AP11970H)	'40–	'40–	.....
P 26206 H	Side Angle, R. H., for Conveyor Chain Bottom Board (P32892H will work)	1940	1940	P32892H
P 26208 H	Shield over Conveyor Chain Drive Shaft	'40–	.....	.....
P 26244 H	Bottom Board for Conveyor (No Cut)	'40–	.....	.....
P 26262 H	Side Angle, L. H., for Conveyor Chain Bottom Board (P32893H will work)	1940	1940	P32893H
P 26325 H	Guide for Conveyor Chain Tightener Brackets (4 used)	'40–	'40–	.....
P 26353 H	Tightener Bracket for Conveyor Chain (2 used)	'40–	'40–	.....
P 26518 H	Wood Side Sill for Conveyor Bottom (2 used)	'40–	'40–	.....
P 26519 H	Wood Cross Supports under Conveyor Bottom, Rear and Nos. 2 and 3 from Rear (3 used)	'40–	.....	.....
P 26559 H	Wood Cross Support under Conveyor Bottom, No. 1 from Rear	'40–	.....	.....
P 26731 H	Tie Rod for Conveyor Bottom (2 used)	1940	.....	P32670H
P 27499 H	Shield over Conveyor Chain Drive Shaft	.....	'40–	.....
P 27505 H	Bottom Board for Conveyor (No Cut)	.....	'40–	.....
P 27508 H	Wood Cross Support under Conveyor Bottom, Rear and Nos. 2 and 3 from Rear (3 used)	.....	'40–	.....
P 27511 H	Wood Cross Support under Conveyor Bottom, No. 1 from Rear	.....	'40–	.....
P 27517 H	Tie Rod for Conveyor Bottom (2 used)	.....	1940	P32671H
P 28314 H	Rubber Belting Strip on Conveyor Chain (2 used) (No Cut)	.....	'40–	.....
P 28538 H	Wood Guide for Conveyor Chain (2 used)	'40–	'40–	.....
P 28769 H	Retaining Collar on L. H. End of Conveyor Drive Shaft	'40–	'40–	.....
P 28801 H	Stud in Separator Side for Conveyor Chain Tightener Spring (2 used)	'40–	'40–	.....

For Cuts of Repair Parts, see pages 79 and 80.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	CONVEYOR UNDER STRAW RACK—Continued			
P 29692 H	Conveyor Chain Drive Shaft	'40–	.....	.....
P 29693 H	Conveyor Chain Drive Shaft	.....	'40–	.....
P 29921 H	Corner Plate, Rear, R. H., on Conveyor Bottom	'40–	'40–	.....
P 29922 H	Spacer Pipe on Conveyor Bottom Tie Rods (2 used)	'40–	.....	.....
P 29923 H	Spacer Pipe on Conveyor Bottom Tie Rods (2 used)	.....	'40–	.....
P 29924 H	Corner Plate, Rear, L. H., on Conveyor Bottom	'40–	'40–	.....
P 30087 H	Wood Cross Support under Conveyor Bottom, Front	'40–	.....	.....
P 30088 H	Wood Cross Support under Conveyor Bottom, Front	.....	'40–	.....
P 31665 H	Washer under Stud in L. H. Separator Side for Conveyor Chain Tightener Spring (No Cut)	'40–	'40–	.....
P 32356 H	Conveyor Chain Idler Shaft (works for AP11811H)	'41–	.....	AP11811H
P 32357 H	Conveyor Chain Idler Shaft (works for AP11810H)	.....	'41–	AP11810H
P 32670 H	Tie Rod for Conveyor Bottom (2 used)	'41–	.....	P26731H
P 32671 H	Tie Rod for Conveyor Bottom (2 used)	.....	'41–	P27517H
P 32892 H	Side Angle, R. H., for Conveyor Chain Bottom Board (works for P26206H)	'41–	'41–	P26206H
P 32893 H	Side Angle, L. H., for Conveyor Chain Bottom Board (works for P26262H)	'41–	'41–	P26262H
	SHOE			
AP10314 H	Adjustable Sieve in Shoe (No Cut)	'40–	.....	.....
AP10315 H	Adjustable Sieve in Shoe (No Cut)	.....	'40–	.....
AP10316 H	Adjustable Chaffer in Shoe (No Cut)	'40–	.....	.....
AP10317 H	Adjustable Chaffer in Shoe (No Cut)	.....	'40–	.....
AP10810 H	Soy Bean Sieve in Shoe (3/8" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP10988 H	Chaffer on Rear of Shoe (No-Choke) (Special) (AP13552H will work) (No Cut)	1940	.....	AP13552H
AP10989 H	Chaffer on Rear of Shoe (No-Choke) (Special) (AP13553H will work) (No Cut)	.....	1940	AP13553H
AP11035 H	Soy Bean Sieve in Shoe (3/8" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11091 H	Timothy Sieve in Shoe (1/12" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11092 H	Clover and Alfalfa Sieve in Shoe (1/10" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11093 H	Lespedeza Sieve in Shoe (9/64" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11094 H	Flax Sieve in Shoe (5/32" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11095 H	Wheat and Milo Maize Sieve in Shoe (9/32" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11096 H	Navy Bean Sieve in Shoe (9/16" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11097 H	Timothy Sieve in Shoe (1/12" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11098 H	Clover and Alfalfa Sieve in Shoe (1/10" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11099 H	Lespedeza Sieve in Shoe (9/64" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11100 H	Flax Sieve in Shoe (5/32" Round Hole) (No Cut)	.....	'40–	.....
AP11101 H	Wheat and Milo Maize Sieve in Shoe (9/32" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11102 H	Navy Bean Sieve in Shoe (9/16" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11293 H	Flax Sieve in Shoe (13/64" Round Hole) (Special) (No Cut)	'40–	.....	.....
AP11294 H	Flax Sieve in Shoe (13/64" Round Hole) (Special) (No Cut)	.....	'40–	.....
AP11510 H	Tailings Finger Bar on Rear of Shoe	'40–	.....	.....
AP11511 H	Tailings Finger Bar on Rear of Shoe	.....	'40–	.....
AP11712 H	Hanger Stud, Front, on Shoe (2 used)	'40–	'40–	.....
AP11835 H	Shoe, Complete (AP13541H with 2-P2848, P2849 and P2850 will work) (No Cut)	1940	.....	AP13541H
AP11836 H	Shoe, Complete (AP13537H with 2-P2848, P2849 and P2850 will work) (No Cut)	.....	1940	AP13537H
AP12045 H	Canvas Curtain at Front of Shoe	'40–	.....	.....
AP12046 H	Canvas Curtain at Front of Shoe	.....	'40–	.....
AP12228 H	Crossbar on Rear End of Shoe	'40–	.....	.....
AP12253 H	Crossbar on Rear End of Shoe	.....	'40–	.....
AP12272 H	Wood Hanger Arm for Rear of Shoe (2 used)	'40–	'40–	.....
AP12282 H	Reinforcing Plate for Top of R. H. Shoe Side	'40–	'40–	.....
AP12283 H	Reinforcing Plate for Top of L. H. Shoe Side	'40–	'40–	.....
AP12420 H	Clover Sieve in Shoe (Red Top) (1/32" x 11/32" Slots) (Special) (No Cut)	'40–	.....	.....
AP12421 H	Clover Sieve in Shoe (Red Top) (1/32" x 11/32" Slots) (Special) (No Cut)	.....	'40–	.....
AP12706 H	Clover Sieve in Shoe (Red Top) (24 x 24 Wire Mesh) (Special) (No Cut)	'40–	.....	.....
AP12707 H	Clover Sieve in Shoe (Red Top) (24 x 24 Wire Mesh) (Special) (No Cut)	.....	'40–	.....
AP12803 H	Bracket for Adjustable Tailboard on Tailings Auger Housing (works for P29081H)	'40–	.....	P29081H
AP12804 H	Bracket for Adjustable Tailboard on Tailings Auger Housing (works for P29136H)	.....	'40–	P29136H

For Cuts of Repair Parts, see page 80.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SHOE—Continued			
AP13537 H	Shoe, Complete (with 2-P2848H, P2849H and P2850H works for AP11836H)....(No Cut)	.....	'41–	AP11836H
AP13541 H	Shoe, Complete (with 2-P2848H, P2849H and P2850H works for AP11835H)....(No Cut)	'41–	.....	AP11835H
AP13552 H	Chaffer on Rear of Shoe (No Choke) (Special) (works for AP10988H)....(No Cut)	'40–	.....	AP10988H
AP13553 H	Chaffer on Rear of Shoe (No Choke) (Special) (works for AP10989H)....(No Cut)	.....	'40–	AP10989H
AP14123 H	Screen for Tailings Finger Bar on Rear of Shoe (Special) (No Cut)	'40–	.....	.....
AP14124 H	Screen for Tailings Finger Bar on Rear of Shoe (Special) (No Cut)	.....	'40–	.....
P 2213 H	Bracket on Shoe for Front Hanger Stud (2 used)....(No Cut)	1940	1940	P2848H
P 2562 H	Retaining Collar on Shoe Front Rocker Studs (2 used).....	'40–	'40–	.....
P 2848 H	Bracket on Shoe for Front Hanger Studs (2 used).....	'41–	'41–	P2213H
P 2849 H	Bracket on Shoe for R. H. Rear Hanger Stud.....	'41–	'41–	.....
P 2850 H	Bracket on Shoe for L. H. Rear Hanger Stud.....	'41–	'41–	.....
°PK 25 H	Filler Block for Adjustable Tailings Finger Bar on Rear of Shoe (5 used) (Special)....(No Cut)	'41–	'41–	.....
°PK 26 H	Tilting Block for Adjustable Tailings Finger Bar on Rear of Shoe (5 used) (Special)....(No Cut)	'41–	'41–	.....
P 10528 H	Latch for Hand Hole Cover on Separator Side Sheet (2 used)....	'40–	'40–	.....
P 26037 H	Crosstie on Bottom of Shoe under Sieve.....	'40–	.....	.....
P 26250 H	Cap for Ends of Wood Hanger Arm Pipe (2 used).....	'40–	'40–	.....
P 26327 H	Hand Hole Cover for Shoe Front Hanger Studs, in Separator Side Sheet (2 used).....	'40–	'40–	.....
P 26623 H	Spacer between Rear Hanger Stud and Shoe (2 used).....	'40–	'40–	.....
P 27535 H	Crosstie on Bottom of Shoe under Sieve.....	.....	'40–	.....
P 28699 H	Grain Deflector Plate on Inside of Shoe (2 used).....	'40–	.....	.....
P 28707 H	Grain Deflector Plate on Inside of Shoe (2 used)....(No Cut)	.....	'40–	.....
P 29080 H	Adjustable Tailboard on Tailings Auger Housing for Tailings Finger Bar.....	'40–	.....	.....
P 29081 H	Bracket for Adjustable Tailboard on Tailings Auger Housing (AP12803H will work).....	1940	.....	AP12803H
P 29107 H	Seal, R. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	1940	.....	P32717H
P 29108 H	Seal, L. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	1940	.....	P32718H
P 29119 H	Seal, R. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	.....	1940	P32632H
P 29120 H	Seal, L. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	.....	1940	P32633H
P 29135 H	Adjustable Tailboard on Tailings Auger Housing for Tailings Finger Bar.....	.....	'40–	.....
P 29136 H	Bracket for Adjustable Tailboard on Tailings Auger Housing (AP12804H will work).....	.....	1940	AP12804H
P 29410 H	Rubber Seal for Side of Shoe (2 used).....	'40–	'40–	.....
P 29509 H	Retainer Strip for Rubber Seal from Front of Shoe to Bottom of Concaves (4 used).....	1940	.....	P32449H– P32780H
P 29510 H	Retainer Strip (Outer '41–) for Rubber Seal from Front of Shoe to Bottom of Concaves (4 used 1940, 2 used '41–).....	.....	'40–	P32450H
P 29511 H	Rubber Seal from Front of Shoe to Bottom of Concaves.....	1940	.....	P32485H
P 29512 H	Rubber Seal from Front of Shoe to Bottom of Concaves.....	.....	1940	P32486H
P 29948 H	Hanger Stud, Rear, on Shoe (2 used)....(No Cut)	'40–	'40–	.....
P 29987 H	Pipe for Shoe Rear Wood Hanger Arms (P32369H will work)....	.....	1940	P32369H
P 29988 H	Pipe for Shoe Rear Wood Hanger Arms (P32368H will work)....	1940	.....	P32368H
P 30123 H	Flat Spacer between Reinforcing Plate on Top of Shoe Side and Pivot Bracket for Shoe Front Hanger Studs (2 used).....	'40–	'40–	.....
P 30188 H	Bolting Strap for Tailings Finger Bar (5 used).....	'40–	'40–	.....
P 31866 H	Strip at Sides of Rubber Seal from Front of Shoe to Bottom of Concaves (2 used).....	1940	1940	P32444H
P 32368 H	Shaft for Shoe Rear Wood Hanger Arms (works for P29988H)...	'41–	.....	P29988H
P 32369 H	Shaft for Shoe Rear Wood Hanger Arms (works for P29987H)...	.....	'41–	P29987H
P 32444 H	Seal on Concave Grate at Ends of Rubber Seal from Front of Shoe to Bottom of Concave (2 used).....	'41–	'41–	P31866H
P 32449 H	Retainer Strip, Outer, for Rubber Seal from Shoe to Concave Grate (2 used).....	'41–	.....	P29509H
P 32450 H	Retainer Strip, Middle, for Rubber Seal from Shoe to Concave Grate (2 used).....	.....	'41–	P29510H
P 32485 H	Rubber Seal from Front of Shoe to Bottom of Concaves.....	'41–	.....	P29511H
P 32486 H	Rubber Seal from Front of Shoe to Bottom of Concaves.....	.....	'41–	P29512H
P 32632 H	Seal, R. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	.....	'41–	P29119H
P 32633 H	Seal, L. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	.....	'41–	P22120H
P 32717 H	Seal, R. H., for Adjustable Tailboard Bracket on Tailings Auger Housing.....	'41–	.....	P29107H

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see pages 80 and 81.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SHOE—Continued			
P 32718 H	Seal, L. H., for Adjustable Tailboard Bracket on Tailings Auger Housing	'41–	.....	P29108H
P 32780 H	Retainer Strip, Inner, for Rubber Seal from Shoe to Concave Grate (2 used)	'41–	.....	P29509H
P 33490 H	Tilting Strap for Adjustable Tailings Finger Bar on Rear of Shoe (Special) (No Cut)	'41–	.....	.....
P 33491 H	Tilting Strap for Adjustable Tailings Finger Bar on Rear of Shoe (Special) (No Cut)	.....	'41–	.....
P 33588 H	Grain Deflector Plate, Front and Rear, on Inside of Shoe (4 used) (Special) (used for Hilly Conditions) (No Cut)	'40–	'40–	.....
P 33589 H	Grain Divider on Adjustable Chaffer (2 used) (Special) (used for Hilly Conditions) (No Cut)	'40–	'40–	.....
P 33590 H	Grain Divider, R. H., on Bottom of Shoe (Special) (used for Hilly Conditions) (No Cut)	'40–	'40–	.....
P 33591 H	Grain Divider, L. H., on Bottom of Shoe (Special) (used for Hilly Conditions) (No Cut)	'40–	'40–	.....
P 33592 H	Bracket for Grain Divider on Bottom of Shoe (2 used) (Special) (used for Hilly Conditions) (No Cut)	'40–	'40–	.....
	FAN			
AP10231 H	Canvas Seal between Upper Side of Fan Housing and Bottom of Step Pan on Front of Shoe	'40–	.....	.....
AP10569 H	Canvas Seal between Upper Side of Fan Housing and Bottom of Step Pan on Front of Shoe	.....	'40–	.....
AP11619 H	Fan Housing, Complete (No Cut)	.....	'40–	.....
AP11678 H	Fan Housing, Complete (No Cut)	'40–	.....	.....
AP11763 H	Fan Shaft, Complete (AP13592H will work)	1940	.....	AP13592H
AP11764 H	Fan Shaft, Complete (AP13593H will work)	.....	1940	AP13593H
AP11949 H	Screen, Complete, for R. H. End of Fan Housing	1940	.....	AP13709H
AP11952 H	Screen, Complete, for L. H. End of Fan Housing	'40–	.....	.....
AP11964 H	Screen, Complete, for R. H. End of Fan Housing	.....	1940	AP13708H
AP11967 H	Screen, Complete, for L. H. End of Fan Housing	.....	'40–	.....
AP12713 H	Bracket for L. H. End of Cross Angle at Upper End of Fan Upright Support Angles (works for P28964H)	'40–	'40–	P28964H
AP13592 H	Fan Shaft, Complete (works for AP11763H)	'41–	.....	.....
AP13593 H	Fan Shaft, Complete (works for AP11764H)	.....	'41–	AP11764H
AP13705 H	Angle Bracket on R. H. End of Cross Angle for Upper End of Fan Upright Support Angles (No Cut)	'41–	'41–	.....
AP13708 H	Screen, Complete for R. H. End of Fan Housing	.....	'41–	AP11964H
AP13709 H	Screen, Complete for R. H. End of Fan Housing	'41–	.....	AP11949H
B 5874 H	Connection for Zerk Fitting on (R. H. and L. H. 1940; L. H. only '41–) Grease Pipe for Fan Bearing Housing (2 used 1940, 1 used '41–)	'40–	'40–	.....
P 2607 H	Roller Bearing Box, R. H., on Fan Shaft	'40–	'40–	.....
P 2619 H	Fan Spider Hub (2 used)	'40–	'40–	.....
P 2657 H	Roller Bearing Box, L. H., on Fan Shaft	'40–	'40–	.....
P 4413 H	Hinge Bracket for Fan Shutter Hinge Rod (2 used)	'40–	'40–	.....
P 26483 H	Fan Blade (5 used)	'40–	.....	.....
P 26710 H	Air Shutter in Fan Throat	'40–	.....	.....
P 26875 H	Hinge, L. H., for Air Shutter in Fan Throat	'40–	'40–	.....
P 27583 H	Fan Blade (5 used)	.....	'40–	.....
P 27589 H	Air Shutter in Fan Throat	.....	'40–	.....
P 27652 H	Fan Side Shutter Hinge Rod	'40–	.....	.....
P 27744 H	Trunnion in Rear End of Fan Shutter Adjusting Lever (No Cut)	'40–'41	'40–'41	P33746H
P 27804 H	Fan Side Shutter Hinge Rod	.....	'40–	.....
P 28573 H	Retainer Plate, Inner, for Fan Shaft Roller Bearing Box (2 used)	'40–	'40–	.....
P 28577 H	Spacing Collar on Fan Shaft (2 used)	'40–	'40–	.....
P 28884 H	Hand Lever for Side Shutter on Ends of Fan Housing	'40–	'40–	.....
P 28922 H	Hinge R. H. for Air Shutter in Fan Throat	'40–	'40–	.....
P 28923 H	Arm on Air Shutter Shaft for Adjusting Lever	'40–	'40–	.....
P 28933 H	Retainer Plate Outer, for Fan Shaft Roller Bearing Box, L. H.	'40–	'40–	.....
P 28964 H	Bracket for L. H. End of Cross Angle at Upper End of Fan Upright Support Angles (AP12713H will work)	1940	1940	AP12713H
P 28965 H	Stiffener Bracket for Lower End of Fan Housing Upright Angle, R. H.	'40–	'40–	.....
P 28986 H	Cross Angle for Upper End of Fan Upright Support Angles	'40–	.....	.....
P 29026 H	Bearing Retainer Washer for Boxes on Fan Shaft (2 used)	'40–	'40–	.....
P 29074 H	Cross Angle for Upper End of Fan Upright Support Angles	.....	'40–	.....
P 29132 H	Support Bracket on Front of Fan Housing (2 used No. 11-A, 3 used No. 12-A)	'40–	'40–	.....
P 29160 H	Support Angle for Roller Bearing Box on R. H. End of Fan Shaft	1940	1940	P32642H
P 29231 H	Side Shutter for R. H. End of Fan Housing	'40–	'40–	.....
P 29232 H	Side Shutter for L. H. End of Fan Housing	'40–	'40–	.....
P 29266 H	Support Angle for Roller Bearing Box on L. H. End of Fan Shaft	'40–	'40–	.....

For Cuts of Repair Parts, see pages 81 and 82.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	FAN—Continued			
P 29291 H	Spoke for Fan Blade (10 used)	'40–	'40–	.....
P 29580 H	Spacer between Screen and R. H. End of Fan Housing	'40–	'40–	.....
P 29587 H	Spacer, Rear, between Screen and L. H. End of Fan Housing	'40–	'40–	.....
P 29588 H	Spacer, Front, between Screen and L. H. End of Fan Housing	'40–	'40–	.....
P 29683 H	Angle Bracket for Fan Shutter Adjusting Lever	'40–	'40–	.....
P 29758 H	Retainer Plate, Outer, for Fan Shaft Roller Bearing Box, R. H.	'40–	'40–	.....
P 29759 H	Grease Pipe for R. H. Fan Shaft Bearing Box	1940	1940	.....
P 29916 H	Upright Angle, R. H., for Front Side of Fan Housing	1940	1940	P32641H
P 29917 H	Upright Angle, L. H., for Front Side of Fan Housing	'40–	'40–	.....
P 29929 H	Hand Lever for Air Shutter in Fan Throat (No Cut)	'40–	'40–	.....
P 30225 H	Flat Brace for R. H. Roller Bearing Box Support Angle	1940	1940	P32644H
P 30298 H	Snap Ring in Roller Bearing Boxes on Fan Shaft (2 used)	'40–	'40–	.....
P 31478 H	Grease Pipe for L. H. Fan Shaft Bearing Box (P31747H will work) (No Cut)	1940	1940	P31747H
P 31747 H	Grease Pipe for L. H. Fan Shaft Bearing Box (works for P31478H)	'40–	'40–	P31478H
P 32641 H	Upright Angle, R. H., for Front Side of Fan Housing	'41–	'41–	P29916H
P 32642 H	Support Angle for Roller Bearing Box on R. H. End of Fan Shaft	'41–	'41–	P29160H
P 32644 H	Flat Brace for R. H. Roller Bearing Box Support Angle	'41–	'41–	P30225H
P 33746 H	Trunnion in Rear End of Fan Shutter Adjusting Lever (No Cut)	'41–	'41–	P27744H
	TAILINGS ELEVATOR AND TAILINGS AUGER			
32 W	Conveyor Chain Link	'40–	'40–	.....
32WSD	Attachment Link for Conveyor Chain	'40–	'40–	.....
AP10065 H	Bearing Boxes on Upper and Lower Tailings Auger (4 used) (P2347H Complete)	'40–	'40–	.....
AP10208 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (P2313H Complete)	'40–	'40–	.....
AP10591 H	Conveyor Chain Paddle with Attachment Link	'40–	'40–	.....
AP10592 H	Conveyor Chain, Complete with 19 Paddles (No Cut)	'40–	'40–	.....
AP11624 H	Lower End Plate, R. H.	'40–	'40–	.....
AP11728 H	Support Angle for Elevator Upper Upright Angles	'40–	'40–	.....
AP11792 H	Tailings Auger Lower, Complete, with Pipe and Spiral (AP13591H will work)	.....	1940	AP13591H
AP11793 H	Tailings Auger Lower, Complete, with Pipe and Spiral (AP13590H will work)	1940	.....	AP13590H
AP11826 H	Lower Support for Elevator	.....	'40–	.....
AP11910 H	Bearing Plate on R. H. End of Upper Tailings Auger Housing	1940	1940	.....
AP11911 H	Spout from Tailings Elevator to Upper Auger	1940	1940	AP12636H
AP11939 H	Tailings Auger, Upper, Complete, with Pipe and Spiral (AP13586H will work)	1940	.....	AP13586H
AP11940 H	Tailings Auger, Upper, Complete, with Pipe and Spiral (AP13587H will work)	.....	1940	AP13587H
AP11971 H	Hood at Upper End of Elevator	1940	1940	AP12620H
AP11990 H	Auger Housing, Upper, Complete (No Cut)	1940	.....	AP12438H
AP11991 H	Auger Housing, Upper, Complete (No Cut)	.....	1940	AP12437H
AP12273 H	Lower Support for Elevator	'40–	.....	.....
AP12274 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (P2697H Complete)	'40–	'40–	.....
AP12434 H	Spout from Tailings Elevator to Upper Auger (No Cut)	'40–	'40–	AP12636H
AP12437 H	Auger Housing, Upper, Complete (No Cut)	.....	'40–	AP11991H
AP12438 H	Auger Housing, Upper, Complete (No Cut)	'40–	.....	AP11990H
AP12620 H	Hood at Upper End of Elevator	'40–	'40–	AP11971H
AP12636 H	Spout from Tailings Elevator to Upper Auger (No Cut)	1940	1940	AP11911H–AP12434H
AP13586 H	Tailings Auger, Upper, Complete with Pipe and Spiral (works for AP11939H) (No Cut)	'41–	.....	AP11939H
AP13587 H	Tailings Auger, Upper, Complete with Pipe and Spiral (works for AP11940H) (No Cut)	.....	'41–	AP11940H
AP13590 H	Tailings Auger, Lower, Complete with Pipe and Spiral (works for AP11793H) (No Cut)	'41–	.....	AP11793H
AP13591 H	Tailings Auger, Lower, Complete with Pipe and Spiral (works for AP11792H) (No Cut)	.....	'41–	AP11792H
AP13633 H	Repair Plate for Tailings Auger Housing (Repairs only) (No Cut)	'40–	.....	.....
AP13635 H	Repair Plate for Tailings Auger Housing (Repairs only) (No Cut)	.....	'40–	.....
AP14057 H	Bottom Plate, Complete with Hinge, on Lower End of Elevator (No Cut)	'41–	'41–	P31541H
P 2262 H	Latch Bracket for Door on Lower End of Elevator	'40–	'40–	.....
P 2263 H	Bracket on Lower End of Elevator for Door Lock Lever	'40–	'40–	.....
P 2264 H	Lock Lever for Door on Lower End of Elevator	'40–	'40–	.....
P 2313 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (Order AP10208H)	'40–	'40–	.....
P 2324 H	Drive Sprocket for Auger in Lower End of Elevator (7 Teeth)	'40–	'40–	.....
P 2325 H	Conveyor Chain Drive Sprocket in Upper End of Elevator (7 Teeth)	'40–	'40–	.....

For Cuts of Repair Parts, see page 82.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	TAILINGS ELEVATOR AND TAILINGS AUGER —Continued			
P 2347 H	Bearing Boxes on Upper and Lower Tailings Auger (4 used) (Order AP10065H)	'40–	'40–	.....
P 2383 H	Collar on L. H. End of Upper and Lower Tailings Auger (2 used)	'40–	'40–	.....
P 2550 H	Slip Clutch, R. H., for Driven Sheave at Upper End of Elevator	'40–	'40–	.....
P 2551 H	Slip Clutch Nut on Drive Shaft in Upper End of Elevator	1940	1940	P2961H
P 2697 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (Order AP12274H)	'40–	'40–	.....
P 2961 H	Slip Clutch Nut on Drive Shaft in Upper End of Tailings Elevator	'41–	'41–	P2551H
P 4616 H	Hinge for Door on Lower End of Elevator	'40–	'40–	.....
P 25535 H	Lock Hook Bolt for Door on Lower End of Elevator	'40–	'40–	.....
P 26107 H	Top and Bottom Plate on Lower End of Elevator (2 used) (P31541H will work)	1940	1940	P31541H
P 26239 H	Clean-Out Door on Lower End of Elevator (P32375H will work)	1940	1940	P32375H
P 26364 H	Elevator Center Board	'40–	'40–	.....
P 28990 H	Lower End Plate, L. H.	'40–	'40–	.....
P 29061 H	Elevator Housing, Upper (No Cut)	'40–	'40–	.....
P 29240 H	Angle Brace from R. H. Upper Upright Angle for Elevator to Support Angle	'40–	'40–	.....
P 29241 H	Upper Upright Angle, L. H. for Elevator	'40–	'40–	.....
P 29246 H	Upper Upright Angle, R. H. for Elevator	'40–	'40–	.....
P 29312 H	Hand Hole Cover on Spout to Upper Auger	1940	1940	P32068H
P 29314 H	Guide for Hand Hole Cover on L. H. Side of Spout from Tailings Elevator to Auger	1940	1940	.....
P 29458 H	Brace for Elevator Lower Support	'40–	'40–	.....
P 29772 H	Wire Loop Lock for Door on Lower End of Elevator (P32229H will work)	1940	1940	P32229H
P 29860 H	Elevator Housing, Lower (No Cut)	'40–	'40–	.....
P 30014 H	Rubber Seal on Cylinder Top Cover for Upper Tailings Auger Housing Opening (No Cut)	'40–	'40–	.....
P 30049 H	Shim between Elevator Hood and Upper Tailings Spout (2 used) (No Cut)	1940	1940	.....
P 30168 H	Connection from Auger Housing to Elevator	'40–	.....	.....
P 30173 H	Wood Spacer between Elevator Lower Support and Separator	1940	.....	.....
P 30174 H	Connection from Auger Housing to Elevator	.....	'40–	.....
P 30180 H	Drive Shaft in Upper End of Elevator	1940	1940	P32700H
P 30186 H	Crosstie for Adjusting Bolts at Upper End of Elevator	'40–	'40–	.....
P 30310 H	Connection from Auger Housing to Elevator (Special) (1/16" x 1" Slots) (No Cut)	'40–	.....	.....
P 30311 H	Connection from Auger Housing to Elevator (Special) (3/32" x 3/4" Slots) (No Cut)	'40–	.....	.....
P 30312 H	Connection from Auger Housing to Elevator (Special) (5/32" x 3/4" Slots) (No Cut)	'40–	.....	.....
P 30313 H	Connection from Auger Housing to Elevator (Special) (1/16" x 1" Slots) (No Cut)	.....	'40–	.....
P 30314 H	Connection from Auger Housing to Elevator (Special) (3/32" x 3/4" Slots) (No Cut)	.....	'40–	.....
P 30315 H	Connection from Auger Housing to Elevator (Special) (5/32" x 3/4" Slots) (No Cut)	.....	'40–	.....
P 31541 H	Top (and Bottom 1940) Plate on Lower End of Elevator (2 used) (works for P26107H)	'40–	'40–	P26107H–AP14057H
P 32068 H	Hand Hole Cover on Spout to Upper Auger	'40–	'40–	P29312H
P 32229 H	Wire Loop Lock for Door on Lower End of Elevator (works for P29772H)	'40–	'40–	P29772H
P 32273 H	Shim between Tailings Elevator Support and Grain Tank	'40–	'40–	.....
P 32375 H	Clean-Out Door on Lower End of Elevator (works for P26239H)	'40–	'40–	P26239H
P 32700 H	Drive Shaft in Upper End of Elevator	'41–	'41–	P30180H
	GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER			
32 W	Chain Link for Conveyor Chain	'40–	'40–	.....
32WSD	Attachment Link for Conveyor Chain Bucket	'40–	'40–	.....
AP10065 H	Bearing Boxes on Clean Grain Auger (2 used) (P2347H Complete)	'40–	'40–	.....
AP10082 H	Hood at Upper End of Elevator	'40–	'40–	.....
AP10086 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (P2414H Complete)	'40–	'40–	.....
AP10087 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (P2305H Complete)	'40–	'40–	.....
AP11624 H	Lower End Plate, R. H.	'40–	'40–	.....
AP11663 H	Upper Support for Elevator (AP13688H will work)	1940	1940	AP13688H
AP11701 H	Spout for Grain Tank Elevator (P31717H with P31729H will work)	1940	1940	AP12753H
AP11794 H	Clean Grain Auger, Complete, with Pipe and Spiral (AP13583H will work)	.....	1940	AP13583H

For Cuts of Repair Parts, see pages 82 and 83.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER—Continued			
AP11795 H	Clean Grain Auger, Complete, with Pipe and Spiral (AP13582H will work)	1940	.....	AP13582H
AP11839 H	Elevator Conveyor Chain, Complete, with 23 Buckets..(No Cut)	'40–	'40–	.....
AP11840 H	Elevator Conveyor Chain Bucket, Complete with Link.....	'40–	'40–	.....
AP12753 H	Spout for Grain Tank Elevator (few used) (P31717H with P31729H will work).....(No Cut)	1940	1940	AP11701H
AP13582 H	Clean Grain Auger, Complete with Pipe and Spiral (works for AP11795H).....(No Cut)	'41–	.....	AP11795H
AP13583 H	Clean Grain Auger, Complete with Pipe and Spiral (works for AP11794H).....(No Cut)	.....	'41–	AP11794H
AP13632 H	Repair Plate for Clean Grain Auger Housing (Repairs only) .....(No Cut)	'40–	.....	.....
AP13634 H	Repair Plate for Clean Grain Auger Housing (Repairs only) .....(No Cut)	.....	'40–	.....
AP13688 H	Upper Support with Step for Elevator (works for AP11663H or P28987H)	'41–	'41–	AP11663H–P28987H
AP14057 H	Bottom Plate, Complete with Hinge, on Lower End of Elevator .....(No Cut)	'41–	'41–	P31541H
P 2262 H	Latch Bracket for Door on Lower End of Elevator.....	'40–	'40–	.....
P 2263 H	Bracket on Lower End of Elevator for Door Lock Lever.....	'40–	'40–	.....
P 2264 H	Lock Lever for Door on Lower End of Elevator.....	'40–	'40–	.....
P 2305 H	Conveyor Chain Tightener Bracket, L. H. at Upper End of Elevator (Order AP10087H).....	'40–	'40–	.....
P 2324 H	Drive Sprocket for Auger in Lower End of Elevator (7 Teeth)...	'40–	'40–	.....
P 2325 H	Conveyor Chain Drive Sprocket in Upper End of Elevator (7 Teeth).....	'40–	'40–	.....
P 2347 H	Bearing Boxes on Clean Grain Auger (2 used) (Order AP10065H)	'40–	'40–	.....
P 2383 H	Collar on L. H. End of Clean Grain Auger.....	'40–	'40–	.....
P 2414 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (Order AP10086H).....	'40–	'40–	.....
P 4616 H	Hinge for Door on Lower End of Elevator.....	'40–	'40–	.....
P 25535 H	Lock Hook Bolt for Door on Lower End of Elevator.....	'40–	'40–	.....
P 26104 H	Crosstie for Adjusting Bolts at Upper End of Elevator.....	'40–	'40–	.....
P 26107 H	Top and Bottom Plate on Lower End of Elevator (2 used) (P31541H will work).....	1940	1940	P31541H
P 26239 H	Clean-Out Door on Lower End of Elevator (P32375H will work)	1940	1940	P32375H
P 26630 H	Connection from Clean Grain Auger to Elevator (P30339H will work).....	1940	.....	P30339H
P 27207 H	Connection from Clean Grain Auger to Elevator (P30340H will work).....	.....	1940	P30340H
P 27902 H	Clip for Adjusting Bolt for Lower End of Elevator.....	'40–	'40–	.....
P 27903 H	Lower Support Bracket on Grain Tank for Elevator.....	'40–	'40–	.....
P 28509 H	Conveyor Chain Drive Shaft in Upper End of Elevator.....	'40–	'40–	.....
P 28987 H	Step on Elevator Upper Support (AP13688H will work).....	1940	1940	AP13688H
P 28990 H	Lower End Plate, L. H.....	'40–	'40–	.....
P 29029 H	Elevator Housing, Rear.....	'40–	'40–	.....
P 29046 H	Elevator Housing, Front.....	'40–	'40–	.....
P 29125 H	Elevator Center Board.....	'40–	'40–	.....
P 29126 H	Extension Plate for Lower End of Center Board in Elevator....	'40–	'40–	.....
P 29772 H	Wire Loop Lock for Door on Lower End of Elevator (P3229H will work).....	1940	1940	P32229H
P 29896 H	Middle Support Bracket on Grain Tank for Elevator.....	'40–	.....	.....
P 29897 H	Middle Support Bracket on Grain Tank for Elevator.....	.....	'40–	.....
P 30339 H	Connection from Clean Grain Auger to Elevator (works for P26630H).....(No Cut)	'40–	.....	P26630H
P 30340 H	Connection from Clean Grain Auger to Elevator (works for P27207H).....(No Cut)	.....	'40–	P27207H
P 30341 H	Connection from Auger Housing to Elevator (Special) (1/16" x 1" Slots).....(No Cut)	'40–	.....	.....
P 30342 H	Connection from Auger Housing to Elevator (Special) (3/32" x 3/4" Slots).....(No Cut)	'40–	.....	.....
P 30343 H	Connection from Auger Housing to Elevator (Special) (5/32" x 3/4" Slots).....(No Cut)	'40–	.....	.....
P 30344 H	Connection from Auger Housing to Elevator (Special) (1/16" x 1" Slots).....(No Cut)	.....	'40–	.....
P 30345 H	Connection from Auger Housing to Elevator (Special) (3/32" x 3/4" Slots).....(No Cut)	.....	'40–	.....
P 30346 H	Connection from Auger Housing to Elevator (Special) (5/32" x 3/4" Slots).....(No Cut)	.....	'40–	.....
P 30434 H	Stiffener Angle on Grain Tank Auger Housing.....(No Cut)	'40–	.....	.....
P 30435 H	Stiffener Angle on Grain Tank Auger Housing.....(No Cut)	.....	'40–	.....
P 31541 H	Top (and Bottom 1940) Plate on Lower End of Elevator (2 used) (works for P26107H).....	'40–	'40–	P26107H–AP14057H

For Cuts of Repair Parts, see page 83.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER—Continued			
P 31717 H	Spout for Grain Tank Elevator (with P31729H works for AP11701H or AP12753H)	'40–	'40–	AP12753H
P 31729 H	Seal for Upper End of Grain Tank Elevator Spout....(No Cut)	'40–	'40–	.....
P 31839 H	Adjustable Round Brace from Elevator to (Grain Tank Support Angle, R. H., Rear, for L. H. Side of Tank 1940) (Bracket on Axle for Lifting Spring '41–)	'40–	'40–	.....
P 32229 H	Wire Loop Lock for Door on Lower End of Elevator (works for P29772H)	'40–	'40–	P29772H
P 32375 H	Clean-Out Door on Lower End of Elevator (works for P26239H)	'40–	'40–	P26239H
	GRAIN TANK AND SUPPORTS			
AP11643 H	Grain Tank, Complete.....(No Cut)	1940	.....	AP13865H
AP11697 H	Grain Tank, Complete.....(No Cut)	.....	1940	AP13866H
AP13864 H	Upright Support Angle, Front, for R. H. Side of Tank (works for P29138H)	'41–	'41–	P29138H
AP13865 H	Grain Tank, Complete.....(No Cut)	'41–	.....	AP11643H
AP13866 H	Grain Tank, Complete.....(No Cut)	.....	'41–	AP11697H
AP13867 H	Upright Support Angle, L. H., Front, for L. H. Side of Tank	'41–	'41–	P29139H
K 350 H	Turnbuckle for (Adjustable Brace from Tank L. H. Side Front Upright Support Angle, L. H., to Tractor Hitch 1940) (Adjustable Tie Rod inside of Tank '41–)	'40– '40–	'40– '40–	....
P 27488 H	Support Angle on Front of Tank			
P 27908 H	Adjustable Brace, Lower, from Tank L. H. Side Front Upright Support Angle, L. H., to Tractor Hitch	1940 '40–	1940 '40–	P32905H .....
P 29102 H	Support Angle on Rear of Tank	1940	.....	P32916H
P 29103 H	Support Angle, R. H., on Side of Tank	1940	.....	P32917H
P 29104 H	Support Angle, L. H., on Side of Tank	1940	1940	.....
P 29111 H	Reinforcement Inside of Tank for R. H. Front Corner	1940	1940	.....
P 29112 H	Reinforcement Inside of Tank for L. H. Front Corner	1940	1940	P31836H
P 29137 H	Upright Support Angle, L. H. Middle for L. H. Side of Tank			
P 29138 H	Upright Support Angle, Front, for R. H. Side of Tank (AP13864H will work)	1940 1940	1940 1940	AP13864H AP13867H
P 29139 H	Upright Support Angle, L. H. Front for L. H. Side of Tank			
P 29140 H	Angle Brace from Tank R. H. Side Front Upright Support Angle to Tractor Hitch (P31634H will work)	1940	1940	P31634H
P 29141 H	Upright Support Angle, Rear, for R. H. Side of Tank (P32228H will work)	1940	1940	P32228H
P 29142 H	Adjustable Brace, Upper, from Tank L. H. Side Front Upright Support Angle L. H. to Tractor Hitch	1940	1940	P32905H
P 29143 H	Upright Support Angle, R. H. Middle for L. H. Side of Tank	1940	1940	P31843H
P 29144 H	Upright Support Angle, L. H. Rear, for L. H. Side of Tank	1940	1940	P32639H
P 29145 H	Upright Support Angle, R. H. Rear, for L. H. Side of Tank	1940	1940	P31871H
P 29200 H	Support Angle, R. H., on Side of Tank	.....	1940	P32918H
P 29201 H	Support Angle, L. H., on Side of Tank	.....	1940	P32919H
P 29331 H	Upright Support Angle, R. H. Front, for L. H. Side of Tank	1940	1940	P32993H
P 31634 H	Angle Brace from Tank R. H. Side Front Upright Angle to Tractor Hitch (works for P29140H)	1940	1940	P29140H–P32948H
P 31836 H	Upright Support Angle, L. H., Middle, for L. H. Side of Tank	1940	1940	P29137H–P32992H
P 31843 H	Upright Support Angle, R. H., Middle, for L. H. Side of Tank	1940	1940	P29143H–P32913H
P 31871 H	Upright Support Angle, R. H., Rear, for L. H. Side of Tank	1940	1940	P29145H–P32911H
P 32228 H	Upright Support Angle, Rear, for R. H. Side of Tank (works for P29141H)	1940	1940	P29141H–P32906H
P 32382 H	Reinforcing Plate Inside of Tank for Bolts in Upright Support Angle, R. H., Rear, for L. H. Side of Tank	1940	1940	.....
P 32639 H	Upright Support Angle, L. H., Rear, for L. H. Side of Tank	'41–	'41–	P29144H
P 32896 H	Gusset on Tank for R. H. Rear Upright Support Angle	41–	41–	.....
P 32902 H	Gusset on Tank for L. H. Middle Upright Angle for L. H. Side of Tank	'41–	'41–	.....
P 32903 H	Adjustable Tie Rod, R. H., Inside of Tank	'41–	'41–	.....
P 32904 H	Adjustable Tie Rod, L. H., Inside of Tank	'41–	'41–	.....
P 32905 H	Channel Brace from Tank L. H. Side Front Upright Angle, L. H., to Tractor Hitch	'41–	'41–	P27908H–P29142H
P 32906 H	Upright Support Angle, Rear, for R. H. Side of Tank	'41–	'41–	P32228H
P 32907 H	Gusset, Lower, for Channel Brace from L. H. Front Side of Grain Tank to Tractor Hitch	'41–	'41–	.....
P 32908 H	Gusset, Upper, for Channel Brace from L. H. Front Side of Grain Tank to Tractor Hitch	'41–	'41–	.....
P 32909 H	Gusset on Tank for L. H. Rear Upright Angle for L. H. Side of Tank	'41–	'41–	.....
P 32911 H	Upright Support Angle, R. H., Rear, for L. H. Side of Tank	'41–	'41–	P31871H
P 32913 H	Upright Support Angle, R. H., Middle, for L. H. Side of Tank	'41–	'41–	P31843H
P 32914 H	Tie Gusset for Upper End of Middle Upright Support Angle for L. H. Side of Tank	'41–	'41–	.....

For Cuts of Repair Parts, see page 83.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	GRAIN TANK AND SUPPORTS—Continued			
P 32915 H	Gusset on Tank for R. H. Front Upright Support Angle and Channel Brace on R. H. Side of Tank	'41–	'41–	
P 32916 H	Support Angle, R. H., on Side of Tank	'41–		P29103H
P 32917 H	Support Angle, L. H., on Side of Tank	'41–		P29104H
P 32918 H	Support Angle, R. H., on Side of Tank		'41–	P29200H
P 32919 H	Support Angle, L. H., on Side of Tank		'41–	P29201H
P 32929 H	Gusset on Grain Tank for Front Upright Angle on L. H. Side of Tank	'41–	'41–	
P 32948 H	Channel Brace from Tank R. H. Side Front Upright Support Angle to Tractor Hitch	'41–	'41–	P31634H
P 32991 H	Tie Gusset for Upper End of Front Upright Support Angle for L. H. Side of Tank	'41–	'41–	
P 32992 H	Upright Support Angle, L. H., Middle, for L. H. Side of Tank	'41–	'41–	P31836H
P 32993 H	Upright Support Angle, R. H., Front, for L. H. Side of Tank	'41–	'41–	P29331H
P 33065 H	Gusset on Tank for R. H. Rear Upright Angle for L. H. Side of Tank	'41–	'41–	
	GRAIN TANK UNLOADING AUGER			
AP10460 H	Bearing Bracket, Complete in Upper End of Unloading Auger (P2406H, Complete)	'40–		
AP10464 H	Bearing Bracket, Complete on Front End of Grain Tank for Auger (P2421H, Complete)	'40–	'40–	
AP10642 H	Gear Housing on Boot at Lower End of Auger Housing (P2424H, Complete)	'40–'41	'40–'41	
AP10875 H	Bearing Bracket, Complete in Upper End of Unloading Auger (P2467H, Complete)		'40–	
AP11315 H	Spout for Grain Tank Unloading Auger (P28488H will work)	1940		P28488H
AP11316 H	Spout for Grain Tank Unloading Auger (P28489H will work)		1940	P28489H
AP11604 H	Boot on Lower End of Auger Housing (P2591H and P2592H, Complete)	'40–'41		AP13910H
AP11606 H	Boot on Lower End of Auger Housing (P2605H and P2606H, Complete)		'40–'41	AP13974H
AP11797 H	Grain Tank Unloading Auger, Complete (AP13597H will work) (No Cut)	1940		AP13597H
AP11808 H	Unloading Auger in Grain Tank (AP13601H will work)	1940		AP13601H
AP11809 H	Unloading Auger in Grain Tank (AP13602H will work)		1940	AP13602H
AP11857 H	Grain Tank Unloading Auger, Complete (AP13598H will work) (No Cut)		1940	AP13598H
AP12999 H	Latch Lever, Complete with Bracket on Grain Tank for Unloading Auger Housing	'41–	'41–	
AP13597 H	Grain Tank Unloading Auger, Complete (works for AP11797H) (No Cut)	'41–		AP11797H
AP13598 H	Grain Tank Unloading Auger, Complete (works for AP11857H) (No Cut)		'41–	AP11857H
AP13601 H	Unloading Auger in Grain Tank (works for AP11808H). (No Cut)	'41–		AP11808H
AP13602 H	Unloading Auger in Grain Tank (works for AP11809H). (No Cut)		'41–	AP11809H
AP13863 H	Shield for Grain Tank Unloading Auger Drive Chain...(No Cut)		'41–	P33075H
AP13904 H	Shield for Grain Tank Unloading Auger Drive Chain...(No Cut)	'41–		P33075H
AP13910 H	Boot on Lower End of Auger Housing (P2995H and P2996H, Complete) (No Cut)	'41–		AP11604H
AP13974 H	Boot on Lower End of Auger Housing (P2925H and P2926H, Complete) (No Cut)		'41–	AP11606H
HZ 6040 H	Lock Ball for Auger Throw-Out Fork Shaft	'40–	'40–	
J 10544 H	Grease Seal on Rear End of Auger Drive Shaft in Gear Housing on Tractor Hitch	'40–	'40–	
P 2381 H	Drive Knuckle, Male, on Grain Tank Auger Shaft	'40–	'40–	
P 2406 H	Bearing Bracket in Upper End of Unloading Auger (Order AP10460H)	'40–		
P 2421 H	Bearing Bracket on Front End of Grain Tank for Auger (Order AP10464H)	'40–	'40–	
P 2424 H	Gear Housing on Boot at Lower End of Auger Housing (Order AP10642H)	'40–'41	'40–'41	
P 2430 H	Miter Gear for Shaft on Bottom of Unloading Auger	'40–	'40–	
P 2431 H	Miter Gear on Unloading Auger	'40–	'40–	
P 2463 H	Drive Knuckle, Male, on Grain Tank Auger Drive Shaft in Main Drive Gear Housing	'40–	'40–	
P 2467 H	Bearing Bracket in Upper End of Unloading Auger (Order AP10375H)		'40–	
P 2558 H	Rear Drive Knuckle, Female, on Grain Tank Auger Drive Shaft	'40–	'40–	
P 2559 H	Front Drive Knuckle, Female, on Grain Tank Auger Drive Shaft	'40–	'40–	
P 2560 H	Slip Clutch, Front, on Grain Tank Auger Drive Shaft	'40–	'40–	
P 2591 H	Boot (Front Half) on Bottom of Auger Housing (Order AP11604H)	'40–'41		P2995H
P 2592 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP11604H)	'40–'41		P2996H
P 2605 H	Boot (Front Half) on Bottom of Auger Housing (Order AP11606H)		'40–'41	P2926H

For Cuts of Repair Parts, see page 84.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	GRAIN TANK UNLOADING AUGER—Continued			
P 2606 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP11606H)	.....	'40-'41	P2925H
P 2639 H	Slip Clutch, Rear, on Grain Tank Auger Drive Shaft	'40-	'40-	.....
P 2925 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP13974H) (No Cut)	.....	'41-	P2606H
P 2926 H	Boot (Front Half) on Bottom of Auger Housing (Order AP13974H) (No Cut)	.....	'41-	P2605H
P 2995 H	Boot (Front Half) on Bottom of Auger Housing (Order AP13910H) (No Cut)	'41-	.....	P2591H
P 2996 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP13910H) (No Cut)	'41-	.....	P2592H
P 7877 H	Pipe Trunnion for Auger Throw-Out Fork Shifter Lever	1940	1940	.....
P 26166 H	Retainer on Grain Tank for Unloading Auger Gear Housing	'40-	.....	.....
P 26788 H	Stop Clamp on Unloading Auger Housing	'40-	.....	.....
P 27148 H	Shaft in Gear Housing on Boot at Lower End of Housing	'40-	'40-	.....
P 27292 H	Auger Drive Gear in Gear Housing on Tractor Hitch	1940	1940	P32378H
P 27423 H	Shaft for Clutch Shifter Fork (P33033H will work)	1940	1940	P33033H
P 27424 H	Clutch Shifter Fork	'40-	'40-	.....
P 27452 H	Retainer on Grain Tank for Unloading Auger Gear Housing	.....	'40-	.....
P 27594 H	Stop Clamp on Unloading Auger Housing	.....	'40-	.....
P 28488 H	Spout for Grain Tank Unloading Auger (works for AP11315H)	'41-	.....	AP11315H
P 28489 H	Spout for Grain Tank Unloading Auger (works for AP11316H)	.....	'41-	AP11316H
P 28580 H	Unloading Auger Housing (No Cut)	.....	'40-	.....
P 28585 H	Gasket for Clean-Out Door in Boot on Lower End of Auger Housing	.....	'40-	.....
P 28586 H	Clean-Out Door in Boot on Lower End of Auger Housing	.....	'40-	.....
P 28604 H	Unloading Auger Housing (No Cut)	'40-	.....	.....
P 28667 H	Clean-Out Door in Boot on Lower End of Auger Housing	'40-	.....	.....
P 28668 H	Gasket for Clean-Out Door in Boot on Lower End of Auger Housing	'40-	.....	.....
P 28691 H	Grain Tank Auger Drive Slip Clutch Shaft	'40-	'40-	.....
P 28954 H	Collar on Auger Driven Shaft in Gear Housing	'40-	'40-	.....
P 28962 H	Shaft in Gear Housing on Tractor Hitch for Auger Driven Gear	'40-	'40-	.....
P 29030 H	Auger Driven Gear in Gear Housing on Tractor Hitch	'40-	'40-	.....
P 29064 H	Shifter Lever for Auger Throw-Out Fork	1940	1940	P32579H
P 29133 H	Cover for Auger in Grain Tank	'40-	.....	.....
P 29186 H	Cover for Auger in Grain Tank	.....	'40-	.....
P 29277 H	Pivot Link between Auger Throw-Out Fork Shifter Lever and Gear Housing	1940	1940	.....
P 29304 H	Shield on Front of Grain Tank over Auger Drive Shaft	'40-	'40-	.....
P 29305 H	Support for Front End of Shield on Front of Grain Tank over Power Shaft	'40-	'40-	.....
P 29342 H	Support Bracket on Bottom of Grain Tank for Boot on Lower End of Elevator	'40-	'40-	.....
P 29453 H	Latch Lever on Grain Tank for Unloading Auger Housing	1940	1940	P32072H
P 30200 H	Latch Collar, Front Half, around Unloading Auger Housing	1940	.....	P32073H
P 30201 H	Latch Collar, Rear Half, around Unloading Auger Housing	1940	.....	P32071H
P 30202 H	Latch Collar, Front Half, around Unloading Auger Housing	.....	1940	P32074H
P 30203 H	Latch Collar, Rear Half, around Unloading Auger Housing	.....	1940	P32075H
P 32071 H	Latch Collar, Rear Half, around Unloading Auger Housing	'40-	.....	P30201H
P 32072 H	Latch Lever on Grain Tank for Unloading Auger Housing	'40-	'40-	P29453H
P 32073 H	Latch Collar, Front Half, around Unloading Auger Housing	'40-	.....	P30200H
P 32074 H	Latch Collar, Front Half, around Unloading Auger Housing	.....	'40-	P30202H
P 32075 H	Latch Collar, Rear Half, around Unloading Auger Housing	.....	'40-	P30203H
P 32296 H	Reinforcement on Unloading Auger Housing for Wagon Box	'40-	.....	.....
P 32297 H	Reinforcement on Unloading Auger Housing for Wagon Box	.....	'40-	.....
P 32378 H	Auger Drive Gear in Gear Housing on Tractor Hitch	'41-	'41-	P27292H
P 32579 H	Shifter Lever for Auger Throw-Out Fork	'41-	'41-	P29064H
P 33033 H	Shaft for Clutch Shifter Fork (works for P27423H)	'41-	'41-	P27423H
P 33073 H	Stud, Short, in Unloading Auger Boot for Drive Chain Shield	1941	1941	.....
P 33074 H	Support Bracket for Unloading Auger Drive Chain Shield	1941	1941	.....
P 33075 H	Shield for Grain Tank Unloading Auger Drive Chain (No Cut)	1941	1941	AP13863H–AP13904H
P 33095 H	Stud, Long, in Unloading Auger Boot for Drive Chain Shield	1941	1941	.....
	SACKING ATTACHMENT			
45	Steel Chain Link	'40-	'40-	.....
AP10065 H	Bearing Box on Auger Shaft (P2347H, Complete) (2 used)	'40-	'40-	.....
AP10180 H	Driven Sheave on L. H. End of Sacking Auger Shaft	'40-	'40-	.....
AP10406 H	Hub, Complete for Sacking Auger Drive Belt Tightener Sheave (P2437H, Complete)	'40-	'40-	.....
AP10662 H	Tightener Sheave, Complete, for Sacking Auger Drive Belt (No Cut)	'41-	'41-	AP10707H
AP10707 H	Tightener Sheave, Complete for Sacking Auger Drive Belt	1940	1940	AP10662H
AP11744 H	Drive Sheave on Upper End of Clean Grain Elevator	'40-	'40-	.....

For Cuts of Repair Parts, see page 84.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SACKING ATTACHMENT—Continued			
AP12553 H	Brace Pipe for Sack Chute	1940	1940	.....
AP12554 H	Stiffener Plate, Upper, on Bottom of Sack Chute	1940	1940	.....
AP12555 H	Stiffener Plate, Lower, on Bottom of Sack Chute	1940	1940	.....
AP12567 H	Sacking Auger, Complete (No Cut)	1940	1940	AP12953H
AP12568 H	Sack Spout, Complete (2 used)	'40–	'40–	.....
AP12570 H	Housing, Complete for Sacking Auger	1940	1940	AP14070H–AP13962H
AP12572 H	Support Angle on Sacking Platform Bottom for Clean Grain Elevator	1940	1940	.....
AP12577 H	Grain Door, Complete in Sacking Auger Housing	'40–	'40–	.....
AP12578 H	Support Angle, Complete for Tailings Elevator Upper Upright Angle	1940	1940	AP13925H
AP12579 H	End Plug for R. H. End of Sacking Auger Housing	1940	1940	P33053H
AP12581 H	Chain for Sack Holder (2 used)	1940	1940	AP14071H
AP12588 H	Reel Drive Chain, Rear (55 Links, No. 45 Steel) (No Cut)	'40–	'40–	.....
AP12608 H	Removable Side Plate for Sacking Platform (No Cut)	1940	1940	AP14120H
AP12615 H	Sack Chute	1940	1940	AP14079H
AP12782 H	Guard for Drive Belt (No Cut)	1940	1940	AP14081H
AP12884 H	Reel Drive Chain, Front (138 Links, No. 32 Steel) (No Cut)	'40–	'40–	.....
AP12953 H	Sacking Auger, Complete (No Cut)	'41–	'41–	AP12567H
AP13536 H	Shield on R. H. End of Sacking Auger Housing	1940	1940	.....
AP13923 H	Floor Board Angle, L. H.	'41–	'41–	P30477H
AP13925 H	Support Angle, Complete for Tailings Elevator Upper Upright Angle	'41–	'41–	AP12578H
AP13926 H	Front Support Pipe for Sack Chute	'41–	'41–	.....
AP13962 H	Spout, Complete from Grain Tank Elevator to Sacking Auger Housing	'41–	'41–	AP12570H
AP14021 H	Shield for Reel Countershaft Drive Chain	'41–	'41–	P31533H
AP14070 H	Housing, Complete for Sacking Auger	'41–	'41–	AP12570H
AP14071 H	Chain for Sack Holder (2 used)	'41–	'41–	AP12581H
AP14077 H	Door for Sack Chute (No Cut)	'41–	'41–	.....
AP14079 H	Sack Chute (No Cut)	'41–	'41–	AP12615H
AP14081 H	Guard for Drive Belt	'41–	'41–	AP12782H
AP14120 H	Removable Side Plate for Sacking Platform	'41–	'41–	AP12608H
AP14199 H	Rear Support Pipe for Sack Chute (No Cut)	'41–	'41–	AP12553H
E 150 H	Bronze Bearing in Bearing Box on Auger Shaft (2 used)	'40–	'40–	.....
H 1748 H	Spring for Removable Side Plate Latch (2 used)	1940	1940	.....
HZ 5222 H	Spring for Hand Grip (2 used)	'40–	'40–	.....
J 7645 H	Pin, Drive Sheave to Elevator Shaft	'40–	'40–	.....
J 8030 H	Pin, Driven Pulley to Auger Shaft	'40–	'40–	.....
J 10396 H	Trunnion in Rear End of Sack Chute Door Trip Arm	'41–	'41–	.....
P 1221 H	Hand Grip for Sack Holder (2 used)	'40–	'40–	.....
P 2347 H	Bearing Box on Auger Shaft (Order AP10065H) (2 used)	'40–	'40–	.....
P 2383 H	Retaining Collar on Auger Shaft and Reel Countershaft (3 used)	'40–	'40–	.....
P 2437 H	Hub for Sacking Auger Drive Belt Tightener Sheave (Order AP10406H)	'40–	'40–	.....
P 6767 H	Sack Hook, R. H. (2 used)	'40–	'40–	.....
P 11131 H	Sack Holder Frame, Inner (2 used)	'40–	'40–	.....
P 13083 H	Bracket, R. H., for Sack Holder (2 used)	'40–	'40–	.....
P 13084 H	Bracket, L. H., for Sack Holder (2 used)	'40–	'40–	.....
P 13635 H	Sack Holder Frame, Outer (2 used)	'40–	'40–	.....
P 13651 H	Stud for Sack Holder Hand Grip (2 used)	'40–	'40–	.....
P 17241 H	Sack Hook, L. H. (2 used)	'40–	'40–	.....
P 26512 H	Bronze Bearing in Hub for Sacking Auger Drive Belt Tightener Sheave	'40–	'40–	.....
P 27081 H	Stud for Sacking Auger Drive Belt Tightener Sheave	'40–	'40–	.....
P 30474 H	Floor Board Angle, Front	1940	1940	P32994H
P 30475 H	Floor Board Angle, Rear	1940	1940	P32996H
P 30476 H	Floor Board Angle, R. H.	1940	1940	P32995H
P 30477 H	Floor Board Angle, L. H.	1940	1940	AP13923H
P 30478 H	Floor Board Angle, Middle	1940	1940	P32999H
P 30479 H	Support Frame, R. H., for Sacking Auger Housing	1940	1940	P33001H–P33023H–P33024H
P 30480 H	Sacking Frame, L. H., for Sacking Auger Housing	1940	1940	P33002H–P33026H
P 30481 H	Support Angle, R. H., for Sack Sewer's Seat	1940	1940	P32984H
P 31382 H	Support Angle, L. H., Front, for Sacking Platform	1940	1940	P32531H
P 31383 H	Support Angle, R. H., Rear, for Sacking Platform	1940	1940	P33027H
P 31384 H	Support Angle, L. H., Rear, for Sacking Platform	'40–	'40–	.....
P 31385 H	Platform Floor Board (6 used)	1940	1940	P33015H
P 31387 H	Platform Floor Board, Rear	1940	1940	P33016H
P 31388 H	Diagonal Flat Brace (Front and R. H., 1940) (R. H. and Rear Long '41–) for Sacking Platform Support Angle (2 used)	'40–	'40–	.....

For Cuts of Repair Parts, see pages 84 and 85.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SACKING ATTACHMENT—Continued			
P 31389 H	Diagonal Flat Brace (Rear, 1940) (Short '41-) for Sacking Platform Support Angle	'40-1940	'40-1940	..... P33317H
P 31391 H	Angle Brace for Sacking Platform Upright Angle, R. H., Rear	1940	1940	P33030H
P 31392 H	Side Plate, Rear, for Sacking Platform	1940	1940	P33021H
P 31393 H	Side Plate, L. H., Rear, for Sacking Platform			
P 31394 H	Flat Diagonal Brace at Rear of Sacking Auger Housing Support Frames	1940	1940	.....
P 31395 H	Flat Diagonal Brace for Sacking Auger Housing Support Frames, R. and L. H. (2 used)	1940	1940	P33029H
P 31396 H	Upright Support Angle, Rear, for L. H. Handrail	1940	1940	P33002H
P 31400 H	Upright Support Angle, Front, for L. H. Handrail	1940	1940	P33036H
P 31401 H	Handrail, L. H., for Sacking Platform	1940	1940	P33005H
P 31402 H	Angle Brace for Sacking Platform Upright Angle, L. H., Rear	1940	1940	.....
P 31403 H	Angle Brace from R. H. Reel Countershaft Support Angle to Seat Upright Angle	1940	1940	.....
P 31404 H	Diagonal Flat Brace, L. H., for Sacking Platform Support Angles	1940	1940	.....
P 31405 H	Seat Angle (2 used)	1940	1940	P33020H
P 31406 H	Tightener Bracket for Sacking Auger Drive Belt Tightener Sheave	1940	1940	P33506H
P 31407 H	Hinge Bracket, R. H., for Seat	1940	1940	.....
P 31408 H	Seat Board (2 used)	1940	1940	P33017H
P 31409 H	Seat Back Board	1940	1940	P33017H
P 31410 H	Flat Diagonal Brace, Short, for Seat Upright Support Angles	1940	1940	P33006H
P 31411 H	Flat Diagonal Brace, Long, for Seat Upright Support Angles	1940	1940	P33006H
P 31439 H	Angle on Bottom of Sack Chute (2 used)	1940	1940	.....
P 31492 H	Spacer on Floor Board Angle, Middle	1940	1940	.....
P 31503 H	Latch Clip for Removable Side Plate, Front Latch	1940	1940	P33022H
P 31508 H	Guide for Grain Door in Sacking Auger Housing (2 used)	'40-	'40-	.....
P 31509 H	Spacer for Grain Door Guide on Sacking Auger Housing (2 used)	'40-	'40-	.....
P 31510 H	Support Angle for Reel Countershaft Bearing Support Bracket, R. H.	1940	1940	P32984H
P 31511 H	Bracket for Reel Countershaft Bearing Box (2 used)	1940	1940	P33040H
P 31518 H	Hinge Bracket, L. H., for Seat	1940	1940	.....
P 31519 H	Stop Bracket for L. H. Side of Seat	1940	1940	.....
P 31520 H	Stop Clip for Seat on R. H. Upright Support Angle	1940	1940	.....
P 31521 H	Spacer for Seat Stop Clip	1940	1940	.....
P 31522 H	Sack Holder Support Angle	1940	1940	P33097H
P 31523 H	Clamp for Sacking Auger Housing (2 used)	1940	1940	.....
P 31524 H	Rest for Sacking Auger Housing (Wood) (2 used)	1940	1940	.....
P 31526 H	Support Plate for Wood Rest on L. H. End of Sacking Auger Housing	1940	1940	.....
P 31527 H	Flat Spacer under Sacking Auger Housing R. H. Wood Rest	1940	1940	.....
P 31532 H	Grain Shield, R. H., Rear, for Sacking Platform	1940	1940	P33003H
P 31533 H	Grain Shield, R. H., Front, and Shield for Reel Countershaft Drive Chain	1940	1940	AP14021H
P 31587 H	Flat Brace from Clean Grain Elevator to Sacking Auger Housing Support Frame, L. H. (No Cut)	1940	1940	.....
P 31986 H	Bracket on Axle Channel for Grain Tank Elevator Brace	1940	1940	.....
P 31996 H	Angle Support for Drive Belt Guard	1940	1940	.....
P 32531 H	Support Angle, L. H., Front, for Sacking Platform	'41-	'41-	P31382H
P 32984 H	Support Angle, R. H., for Sack Sewer's Seat and Reel Countershaft Bearing Bracket	'41-	'41-	P30481H-P31510H
P 32994 H	Floor Board Angle, Front (No Cut)	'41-	'41-	P30474H
P 32995 H	Floor Board Angle, R. H.	'41-	'41-	P30476H
P 32996 H	Floor Board Angle, Rear	'41-	'41-	P30475H
P 32999 H	Floor Board Angle, Middle	'41-	'41-	P30478H
P 33001 H	Top Cross Angle for R. H. Upright Support Angles for Sacking Auger Housing	'41-	'41-	P30479H
P 33002 H	Upright Support Angle, Rear, for L. H. Handrail	'41-	'41-	P30480H-P31396H
P 33003 H	Grain Shield, R. H., Rear, for Sacking Platform	'41-	'41-	P31532H
P 33005 H	Handrail, L. H., for Sacking Platform	'41-	'41-	P31401H
P 33006 H	Flat Diagonal Brace for Seat Upright Support Angles (2 used)	'41-	'41-	P31410H-P32411H
P 33007 H	Brace Angle for Seat (2 used)	'41-	'41-	.....
P 33008 H	Upright Support Angle for Front End of R. H. Support Angle for Platform (No Cut)	'41-	'41-	.....
P 33013 H	Angle on Platform Bottom for Angle Braces to Main Axle (No Cut)	'41-	'41-	.....
P 33015 H	Platform Floor Board (8 used)	'41-	'41-	P31385H
P 33016 H	Platform Floor Board, Rear	'41-	'41-	P31387H
P 33017 H	Seat Board and Back Board (3 used)	'41-	'41-	P31408H-P31409H
P 33018 H	Tie Board for Platform Bottom (3 used)	'41-	'41-	.....
P 33019 H	Angle Bracket, Sacking Auger Housing to R. H. Support	'41-	'41-	.....
P 33020 H	Seat Angle (2 used)	'41-	'41-	P31405H

For Cuts of Repair Parts, see pages 85 and 86.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SACKING ATTACHMENT—Continued			
P 33021 H	Side Plate, L. H., Rear, for Sacking Platform	'41–	'41–	P31393H
P 33022 H	Latch Clip for Removable Side Plate (2 used)	'41–	'41–	P31503H
P 33023 H	Upright Support Angle, R. H., Front, for Sacking Auger Housing	'41–	'41–	P30479H
P 33024 H	Upright Support Angle, R. H., Rear, for Sacking Auger Housing	'41–	'41–	P30479H
P 33025 H	Upright Support Angle, No. 2 from Rear for L. H. Handrail	'41–	'41–	.....
P 33026 H	Upright Support Angle, No. 1 from Rear for L. H. Handrail	'41–	'41–	P30480H
P 33027 H	Support Angle, R. H., Rear, for Sacking Platform	'41–	'41–	P31383H
P 33029 H	Flat Diagonal Brace for Sacking Auger Housing Upright Support Angle, R. H.	'41–	'41–	P31395H
P 33030 H	Side Plate, Rear, for Sacking Platform	'41–	'41–	P31392H
P 33031 H	Empty Sack Holder Pipe	'41–	'41–	.....
P 33036 H	Upright Support Angle, Front, for L. H. Handrail	'41–	'41–	P31400H
P 33039 H	Pivot Bracket for Sack Chute Rear Support Pipe (2 used)	'41–	'41–	.....
P 33040 H	Bracket for Reel Countershaft Bearing Box (2 used)	'41–	'41–	P31511H
P 33053 H	End and Support for R. H. End of Sacking Auger Housing	'41–	'41–	AP12579H
P 33097 H	Sack Holder Support Angle	'41–	'41–	P31522H
P 33228 H	Support Bracket for R. H. End of Tailings Elevator Upper Support Angle	'41–	'41–	.....
P 33239 H	Angle Brace from Main Axle to R. H. Platform Support Angle	'41–	'41–	.....
P 33258 H	Support for L. H. End of Sacking Auger Housing	'41–	'41–	.....
P 33291 H	Trip Arm for Sack Chute Door	'41–	'41–	.....
P 33295 H	Hinge Pin for Sack Chute Door	'41–	'41–	.....
P 33299 H	Eyebolt for Sack Chute Door Control Rope (2 used)	'41–	'41–	.....
P 33315 H	Gusset Plate on R. H. End of Sack Holder Support Angle	'41–	'41–	.....
P 33317 H	Angle Brace for Sacking Platform Upright Angle, R. H., Rear	'41–	'41–	P31391H
P 33330 H	Sack Chute Door Control Rope (96" Long) (No Cut)	'41–	'41–	.....
P 33389 H	Spring for Sack Chute Door (No Cut)	'41–	'41–	.....
P 33406 H	Gusset Plate for Upper End of Support Angle, L. H., Front, for Platform (No Cut)	'41–	'41–	.....
P 33412 H	Flat Brace from Platform Front Upright Angle to Middle Upright Angle (No Cut)	'41–	'41–	.....
P 33478 H	Tightener Arm for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave (works for P29405H or P32098H) (No Cut)	'41–	'41–	P32098H
P 33506 H	Tightener Bracket for Sacking Auger Drive Belt Tightener Sheave (No Cut)	'41–	'41–	P31406H
S 7805 H	Slide Bracket for Removable Side Plate Latch (2 used)	1940	1940	.....
S 8104 H	Latch, Rear, for Removable Side Plate on Sacking Platform	1940	1940	.....
S 8107 H	Latch, Front, for Removable Side Plate on Sacking Platform	1940	1940	.....
S 9245 H	Drive Belt for Sacking Auger (No Cut)	'40–	'40–	.....

Cat. No.	Description	Grain Tank	Sacking Attachment	Similar No.
	HART SCOURKLEEN (MODEL "SJ") (R. AND L. H. IS DETERMINED FACING THE INTAKE END OF SCOURKLEEN)			
0J	Screen, Triangular Perforation, .171" Hole (Recommended for Large Grain and Sunflower Seed) (No Cut)	'40–	'40–	.....
1J	Screen, Triangular Perforation, .165" Hole, Regular (Recommended for Wheat, Barley, Oats, Rice, Rye, etc.) (No Cut)	'40–	'40–	.....
2J	Screen, Triangular Perforation, .140" Hole (Recommended for Medium Wheat) (No Cut)	'40–	'40–	.....
3J	Screen, Triangular Perforation, 1/8" Hole (Recommended for Small Wheat) (No Cut)	'40–	'40–	.....
4J	Screen, Round Perforation, 4-1/2/64" Hole (Recommended for Flax and Small Seed Crops) (No Cut)	'40–	'40–	.....
4-1/4J	Screen, Slotted Perforation, 5/64" x 1" Hole (Recommended for Small Beans and Lettuce Seed) (No Cut)	'40–	'40–	.....
4-1/2J	Screen, Slotted Perforation, 3/32" x 3/4" Hole (Recommended for Small Beans, Pop Corn and Peas) (No Cut)	'40–	'40–	.....
5J	Screen, Slotted Perforation, 1/8" x 3/4" Hole (Recommended for Soy Beans) (No Cut)	'40–	'40–	.....
5-1/2J	Screen, Slotted Perforation, 9/64" x 3/4" Hole (Recommended for Peas and Vetch) (No Cut)	'40–	'40–	.....
6J	Screen, Slotted Perforation, 5/32" x 3/4" Hole (Recommended for Large Soy Beans and Dockage) (No Cut)	'40–	'40–	.....
7J	Screen, Slotted Perforation, 11/64" x 3/4" Hole (Recommended for Large Beans or Peas with Unusually Large Dockage) (No Cut)	'40–	'40–	.....
8J	Screen, Round Perforation, 5/32" Hole (Recommended for Beans or Small Grain Crops) (No Cut)	'40–	'40–	.....

For Cuts of Repair Parts, see pages 86 and 87.

Cat. No	Description	Grain Tank	Sacking Attachment	Similar No.
	HART SCOURKLEEN (MODEL "SJ") (R. AND L. H. IS DETERMINED FACING THE INTAKE END OF SCOURKLEEN)—Continued			
9J	Screen, Round Perforation, 1/20" Hole (Recommended for Alfalfa, Carrot, Clover, Grass, Lespedeza, Onion and Timothy) ....(No Cut)	'40–	'40–	.....
10J	Screen, Round Perforation, 1/25" Hole (Recommended for Very Small Seed Crop)....(No Cut)	'40–	'40–	.....
11J	Screen, Round Perforation, 1/2" Hole (Recommended for Flax and Small Seed Crops)....(No Cut)	'40–	'40–	.....
12J	Screen, Round Perforation, 3/16" Hole (Recommended for Beans)....(No Cut)	'40–	'40–	.....
13J	Screen, Round Perforation, 7/32" Hole (Recommended for Beans)....(No Cut)	'40–	'40–	.....
9	Key, 3205 Sheave to 11203 Rotor Shaft (Woodruff, 3/16" x 5/16" x 3/4")....(No Cut)	'40–	'40–	.....
1410	Pin to Attach 3186 Collar, Rotor Blade Assembly and Discharge Fan Assembly to Rotor Shaft (3/16" x 1-3/8") (4 used) (No Cut)	'40–	'40–	.....
3155	Clamp Collar on Belt Tightener Arm....(No Cut)	'40–	'40–	.....
3181	Frame Ring, Intake End....(No Cut)	'40–	'40–	.....
3182	Frame Ring, Discharge End....(No Cut)	'40–	'40–	.....
3184C	Bearing with 11087 Brass Bushing for Rotor Shaft (2 used) ....(No Cut)	'40–	'40–	.....
3186	Square Collar on Rotor Drive Shafts, 3/4" Bore, 3/16" Pin Hole (2 used in Rotor Assembly and 2 used in Discharge Fan Assembly (4 used)....(No Cut)	'40–	'40–	.....
3205	Sheave on 11203 Rotor Shaft (3-11/16", 3/4" Bore, 3/16" x 3/32" Keyway)....(No Cut)	1940	1940	3263
3208	Sheave on Elevator Headshaft, Outside (6", 3/4" Bore and 21/64" Pin Hole)....(No Cut)	1940	1940	3264
3214	Roller for Belt Tightener with A1107 Bushing....(No Cut)	'40–	'40–	.....
3263	Sheave on 11203 Rotor Shaft, 3-11/16", 3/4" Bore, 3/32" Keyway....(No Cut)	'41–	'41–	3205
3264	Sheave on Elevator Head Shaft (6", 3/4" Bore and 21/64" Pin Hole)....(No Cut)	'41–	'41–	3208
9396	Hook to Hold Bags (2 used on Grain Tank, 3 used on Sacking Attachment on 10986 or 15309C Dockage Chute Assembly) ....(No Cut)	'40–	'40–	.....
10449	Cover Sheet at End of Intake Drum Assembly 10893C, 9/16" Diameter....(No Cut)	'40–	'40–	.....
10450	Cover Sheet at End of Discharge Drum Assembly 10485C, 9-3/16" Diameter....(No Cut)	'40–	'40–	.....
10451	Blade Sheet in Discharge Fan Assembly 10451C (4-1/2" x 4-7/8") (4 used)....(No Cut)	'40–	'40–	.....
10451C	Fan Assembly at Discharge End of ScourKleen (Includes: 4-10451 Blades)....(No Cut)	'40–	'40–	.....
10466C	Elbow Assembly at Discharge End of ScourKleen, 4-9/16" x 7-3/4" Size of Cover Sheet (Includes: 1-10466 Cover Sheet, 2-10472 Side Sheets and 1-10474 Throat Side).....(No Cut)	'40–	'40–	.....
10480	Blade Sheet with Notch in Rotor Assembly (Retarder Type Right Hand) (4-17/32" x 16-1/2")....(No Cut)	'40–	'40–	.....
10482	Blade Sheet in Rotor Assembly (Propellor Type Right Hand) (4-17/32" x 16-1/2") (2 used)....(No Cut)	'40–	'40–	.....
10482C	Blade Assembly, R. H., in Rotor (Includes: 1-10480 Blade, 2-10482 Blade and 1-10510 Blade)....(No Cut)	'40–	'40–	.....
10485C	Drum Assembly at Discharge End of ScourKleen, 5-3/8" x 26-1/4" Size of Drum (Includes: 1-10454 Discharge Spout Sheet, 1-10457 Discharge Spout Throat Sheet, 1-10485 Drum Sheet, 3-10500 Long Bolt Loop, 1-10507 Short Bolt Loop and 1-12020 Band)....(No Cut)	'40–	'40–	.....
10490	Gate in Inlet End of Bagger "Y" Assembly, 2" x 4-1/2".(No Cut)	.....	'40–	.....
10497C	Cover Sheet Assembly, Main Section, Size of Sheet 17" x 28-15/16" (Includes: 1-10497 Sheet and 8-10501 Bolt Loops)....(No Cut)	'40–	'40–	.....
10510	Blade Sheet, without Notch in Rotor Assembly (Retarder Type Right Hand) (4-17/32" x 16-1/2")....(No Cut)	'40–	'40–	.....
10532C	Weed Seed Box Assembly, 12-1/8" x 15-1/8" across the Bottom (Includes: 1-10532 Box and 1-10880 Bracket. Note: Specify Box with 10880 Bracket)....(No Cut)	'40–	.....	.....
10893C	Drum Assembly at Intake End of ScourKleen, 4-3/16" x 13-7/8" Size of Spout Sheet (Includes: 1-10468 Drum Sheet, 1-10893 Spout Sheet and 1-10894 Throat Sheet)....(No Cut)	'40–	'40–	.....
10895C	Spout Assembly at Discharge End of Elevator, 3-9/16" x 13-9/16" Size of Main Sheet (Includes: 1-10895 Main Sheet, 1-10896 Throat Sheet and 2-10911 Filler Pieces)....(No Cut)	.....	'40–	.....

Cat. No.	Description	Grain Tank	Sacking Attachment	Similar No.
	HART SCOURKLEEN (MODEL "SJ") (R. AND L. H. IS DETERMINED FACING THE INTAKE END OF SCOURKLEEN)—Continued			
10917C	Chute Assembly for Dockage, 21-3/8" x 24-5/8" Size of Main Sheet (Includes: 2-9396 Bag Hooks, 1-10917 Main Sheet, 1-10919 Top Sheet, 1-10918 Cover Sheet, 1-10934 Keeper) .....(No Cut)	'40–	.....	.....
10933	Valve Sheet in Bagger "Y" Assembly, 4-3/8" x 4-11/16", used with 12242C Valve Handle with 12243 Attaching Plate(No Cut)	.....	1940	15319
10937	Grain Chute at Discharge End of ScourKleen (12-7/8" x 16-3/4") .....(No Cut)	'40–	.....	.....
10986C	Chute Assembly for Dockage, 16-7/8" x 21-3/4" Size of Main Sheet (Includes: 3-9396 Bag Hook, 1-10986 Main Sheet, 2-10987 Top Sections, 1-10988 Top Cover, 1-10989 Lower Cover, 1-10990 Keeper and 1-10991 Bracket).....(No Cut)	.....	1940	15309-C
10992	Weed Seed Box, 12-1/8" x 15-1/8" across the Bottom..(No Cut)	.....	1940	15307
10993C	Bagger "Y" Assembly (Includes: 1-10490 Gate, 1-10933 Valve Sheet, 1-10993 Main Tube Sheet, 1-10994 Bottom Sheet, 1-10995 Short Tube, 1-10996 Throat Sheet, 1-12014 Valve Plate, 1-12242C Valve Handle with 12243 Attaching Plate and 1-1/4" x 4" M.B. with Wing Nut).....(No Cut)	.....	1940	15314-C
10997	Bar to Attach Bagger "Y" Assembly to ScourKleen, 5-15/16" x 11-7/8".....(No Cut)	.....	'40–	.....
11078C	Auger Assembly, R. H., on 11203 Rotor Shaft in Intake Drum Assembly (7" O.D. x 4-7/8" Long x 1-1/16" Hole Size of Auger, and Size of Tube 1-1/16" O.D. x 5") (Includes: 1-11077 Tube and Washer and 1-11078 Auger).....(No Cut)	'40–	'40–	.....
11084	Ferrule for A1108A Roller Guide (9/16" x 3/8" x 1-3/8" Long) .....(No Cut)	'40–	'40–	.....
11087	Brass Bushing for 3184C Rotor Shaft Bearings (1" O. D. x 3/4" I. D. x 1-1/2" Long) (2 used).....(No Cut)	'40–	'40–	.....
11088	Pin to Attach 11078C Auger Assembly to 11203 Rotor Shaft (3/16" x 1-1/8").....(No Cut)	'40–	'40–	.....
11093	Clamp Bolt with 1/4" Wing Nut and 3/32" x 1/2" Cotter in Discharge Drum Assemblies (1/4" x 6" Long) (3 used)...(No Cut)	'40–	'40–	.....
11193	Arm for Belt Tightener Roller (1/2" x 9-5/8").....(No Cut)	'40–	'40–	.....
11203	Shaft for Rotor (3/4" x 33-3/8") (1 No. 9 Woodruff Keyway-4-3/16" Pin Hole for 1410 Pins and 1-3/16" Pin Hole for 11088 Pin).....(No Cut)	'40–	'40–	.....
11219	"V" Belt for ScourKleen Drive (Length, 35").....(No Cut)	1940	1940	11275
11275	"V" Belt for ScourKleen Drive (Length, 32").....(No Cut)	'41–	'41–	11219
12127	Bar with 2 Nails to Hold Bags on 10993C Bagger "Y" Assembly, 3/4" x 1/8" x 11" (2 used).....(No Cut)	.....	1940	12467
12208	Hook to Hold Bags on 12248 and 12249 Bag Holder Braces .....(No Cut)	'40–	.....	.....
12227C	Diagonal Brace Assembly at Intake End of ScourKleen (3/4" x 1/8" x 14-5/16") (Includes: 2-12227 Braces and 1-3/16" x 7/16" F. H. Rivet).....(No Cut)	'40–	.....	.....
12228	Leg Angle (Front Right and Rear Left) (1-1/4" x 1-1/4" x 1/8" x 13-1/4") (2 used).....(No Cut)	'40–	.....	.....
12229	Leg Angle (Front Left and Rear Right) (1-1/4" x 1-1/4" x 1/8" x 13-1/4") (2 used).....(No Cut)	'40–	.....	.....
12242C	Handle with Attaching Plate for Shut-Off Valve in Bagger "Y" Assembly, 3/8 Round x 8" Size of Handle (Includes: 1-12242 Handle and 1-12243 Attaching Plate).....(No Cut)	.....	1940	12470-C
12246	Sill Angle, R. H. (1-1/4" x 1-1/4" x 1/8" x 26-3/4").....(No Cut)	'40–	.....	.....
12247	Sill Angle, L. H. (1-1/4" x 1-1/4" x 1/8" x 26-3/4").....(No Cut)	'40–	.....	.....
12248	Bag Holder Brace, Short, at Rear of ScourKleen (3/4" x 3/4" x 1/8 x 44-1/2").....(No Cut)	'40–	.....	.....
12249	Bag Holder Brace, Long, at Front of ScourKleen (3/4" x 3/4" x 1/8" x 45-1/2").....(No Cut)	'40–	.....	.....
12250	Support for Dockage Chute 10917C (3/4" x 1/8" x 17-1/8") .....(No Cut)	'40–	.....	.....
12266	Sill Angle, R. H., 1-1/4" x 1-1/4" x 1/8" x 35-3/16".....(No Cut)	.....	1940	12462
12267	Sill Angle, L. H., 1-1/4" x 1-1/4" x 1/8" x 35-3/16".....(No Cut)	.....	1940	12463
12268	Support Angle for 10992 Weed Seed Box, 2" x 1-1/2" x 1/8" x 20-5/8".....(No Cut)	.....	1940	12465–12466
12270	Leg Angle (Front Right and Rear Left), 1-1/4" x 1-1/4" x 1/8" x 5-1/8" (2 used).....(No Cut)	.....	1940	12468–12469
12271	Leg Angle (Front Left and Rear Right), 1-1/4" x 1-1/4" x 1/8" x 5-1/8" (2 used).....(No Cut)	.....	1940	12468–11471
12462	Sill Angle, R. H., 1-1/4" x 1-1/4" x 1/8" x 33".....(No Cut)	.....	'41–	12266
12463	Sill Angle, L. H., 1-1/4" x 1-1/4" x 1/8" x 33".....(No Cut)	.....	'41–	12267
12465	Support Angle for 15307 Weed Seed Box, 1-1/4" x 1-1/4" x 1/8" x 19-3/16".....(No Cut)	'41–	'41–	12268

Cat. No.	Description	Grain Tank	Sacking Attachment	Similar No.
	HART SCOURKLEEN (MODEL "SJ") (R. AND L. H. IS DETERMINED FACING THE INTAKE END OF SCOURKLEEN)—Continued			
12466	Support Angle for 15307 Weed Seed Box, 1-1/4" x 1-1/4" x 1/8" x 18" (No Cut)	'41–	'41–	12268
12467	Bar to Hold Bags on 15314C Bagger "Y" Assembly, 3/4" x 1/8" x 10" (2 used) (No Cut)	'41–	'41–	12127
12468	Leg Angle (R. H. Front and Rear), 1-1/4" x 1/8" x 5-1/4" (2 used) (No Cut)	'41–	'41–	12270–12271
12469	Leg Angle (Left Rear) 1-1/4" x 1-1/4" x 1/8" x 6-1/2" (No Cut)	'41–	'41–	12270
12470C	Handle with Attaching Plate for Shut-off Valve in Bagger "Y" Assembly, 3/8" Round x 9-1/4" Size of Handle (Includes: 12470 Handle and 12472 Attaching Plate) (No Cut)	'41–	'41–	12242C
12471	Leg Angle (Left Front), 1-1/4" x 1-1/4" x 1/8" x 5-1/4" (No Cut)	'41–	'41–	12271
15305C	Spout Assembly at Discharge End of ScourKleen to Bagger "Y" Assembly, 6" x 12-1/4" Size of Main Sheet (Includes: 1–15305 Main Sheet and 1–15306 Bottom Sheet) (No Cut)	'41–	'41–	.....
15307	Weed Seed Box, 12" x 21" Across the Bottom (No Cut)	'41–	'41–	10992
15309C	Chute Assembly for Dockage, 23-1/4" x 22-3/4" Size of Main Sheet (Includes: 3–9396 Bag Hooks, 1–15308 Bracket, 1–15309 Main Sheet, 1–15310 Cover Sheet, 1–15311 Keeper and 1–15312 Cover Sheet) (No Cut)	'41–	'41–	10986C
15314C	Bagger "Y" Assembly (Includes: 1–12014 Valve Plate, 1–15313 Throat Sheet, 1–15314 Leg Sheet, 1–15315 Leg Sheet, 1–15316 Top Band, 1–15317 Valve Stop, 1–15318 Support Plate, 1–15319 Valve Sheet and 1–12470C Handle with 12472 Attaching Plate) (No Cut)	'41–	'41–	10993C
15319	Valve Sheet in Bagger "Y" Assembly, 3-3/8" x 5-5/16" used with 12470C Valve Handle with 12472 Attaching Plate (No Cut)	'41–	'41–	10933
A 1107	Wood Bushing in 3214 Roller (1" x 1-1/4" x 17/32" Hole) (No Cut)	'40–	'40–	.....
A 1108A	Wood Roller Guide on ScourKleen Grooved for "V" Belt Drive (3" x 9/16" Bore) (No Cut)	'40–	'40–	.....
H 51	Handle Clamp, Holding Sacks on 10993C and 15314C Bagger "Y" Assembly (works for H99) (2 used) (No Cut)	.....	'40–	.....
H 99	Bracket and Sack Holder on 10993C and 15314C Bagger "Y" Assembly (works for H51) (2 used) (No Cut)	.....	'40–	.....
JD 7760	Grease Gun Fitting, 1/8" Pipe Thread, Elbow 67-1/2° (used in 3184C Rotor Shaft Bearings) (2 used) (Zerk No. 1612) (No Cut)	'40–	'40–	.....
Y 1111	Washer used on 11203 Rotor Shaft (1-7/16" x 25/32") (2 used) (No Cut)	'40–	'40–	.....
Y 1125	Washer on 11193 Belt Tightener Arm (1-1/16" x 41/64" Hole) (No Cut)	'40–	'40–	.....
	POWER DRIVE	USED ON 11-A	USED ON 12-A	
AP10579 H	Universal Joint End (with Slip Clutch Jaws) (Blood Bros. No. X4505A)	1940	1940	AP12597H
AP10580 H	Telescoping Shaft for Power Drive on Tractor Hitch (Blood Bros. No. G3632M)	1940	1940	AP12596H
AP11570 H	Rear Power Shaft in Gear Housing (Splined)	1940	1940	P32380H
AP11607 H	Telescoping Pipe for Power Drive on Tractor Hitch (Blood Bros. No. X4504)	1940	1940	AP12585H
AP11610 H	Main Drive Gear Housing (P2603H Complete)	'40–	'40–	.....
AP12585 H	Telescoping Pipe for Power Drive on Tractor Hitch (Blood Bros. No. X5461) (No Cut)	'40–	'40–	AP11607H
AP12596 H	Telescoping Shaft for Power Drive on Tractor Hitch (Blood Bros. No. X5462A) (No Cut)	'40–	'40–	AP10580H
AP12597 H	Universal Joint End (with Slip Clutch Jaws) (Blood Bros. No. X5148A)	'40–	'40–	AP10579H
AP13741 H	Hinge Bracket, Upper, for Bearing on Front End of Power Shaft (works for P29270H)	'41–	'41–	P29270H
E 2627 H	Shim for Rear Cap on Main Drive Gear Housing (.010")	'40–	'40–	.....
E 2628 H	Shim for Bearing on Front End of Drive Shaft in Main Drive Gear Housing (.010")	'40–	'40–	.....
E 3222 H	Universal Joint Connection (Blood Bros. No. 3D1)	1940	1940	P31572H
E 3223 H	Bushing for Universal Joint Connection (Blood Bros. No. 3D4)	1940	1940	P31571H
E 3224 H	Grease Washer for Universal Joints (Cork) (Blood Bros. No. 3D3)	1940	1940	P31574H
E 3225 H	Retainer for Universal Joint Grease Washer (Blood Bros. No. 3D2)	1940	1940	P31573H
E 3226 H	Splined Universal Joint End on Shaft in Gear Housing (1-1/8" Splined) (2 used) (Blood Bros. No. 3DSY18-1)	1940	1940	P31577H
E 3229 H	Pin for Universal Joint Connection Bushing (Blood Bros. No. 3D5)	1940	1940	.....
E 3371 H	Shim for Rear Cap on Main Drive Gear Housing (.005")	'40–	'40–	.....
E 3376 H	Shim for Bearing on Front End of Drive Shaft in Main Drive Gear Housing (.005")	'40–	'40–	.....

For Cuts of Repair Parts, see page 87.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	POWER DRIVE—Continued			
P 2363 H	Retaining Collar on L. H. End of Driven Shaft in Main Drive Gear Housing	'40–	'40–	.....
P 2474 H	Box for Roller Bearing on Front of Power Shaft (Bearing JD7160)	1940	1940	P2992H
P 2597 H	Cap, Front, on Main Drive Gear Housing	'40–	'40–	.....
P 2603 H	Main Drive Gear Housing (Order AP11610H)	'40–	'40–	.....
P 2604 H	Cover for Main Drive Gear Housing	1940	1940	P2960H
P 2960 H	Cover for Main Drive Gear Housing	'41–	'41–	P2604H
P 2992 H	Box for Roller Bearing on Front of Power Shaft (Bearing JD7160H)	'41–	'41–	P2474H
P 10940 H	Shim between Bearing and Gear on Driven Shaft in Main Drive Gear Housing (.005")	'40–	'40–	.....
P 10941 H	Shim between Bearing and Gear on Driven Shaft in Main Drive Gear Housing (.010")	'40–	'40–	.....
P 24149 H	Grease Seal on Driven Shaft in Main Drive Gear Housing	'40–	'40–	.....
P 26097 H	Snap Ring for New Departure Bearing on Front End of Power Shaft (2 used)	'40–	'40–	.....
P 26499 H	Snap Ring on Driven Shaft in Main Drive Gear Housing	'40–	'40–	.....
P 27247 H	Pivot Shaft for Power Shaft Front Bearing Box	'40–	'40–	.....
P 27296 H	Driven Pinion on Driven Shaft in Gear Housing	'40-	'40–	.....
P 27299 H	Main Drive Gear on Rear Power Shaft in Gear Housing (P31543H will work)	1940	1940	P31543H
P 27530 H	Support, R. H., on Tractor Hitch for Main Drive Gear Housing Brace Angle	'40–	'40–	.....
P 27531 H	Support, L. H., on Tractor Hitch for Main Drive Gear Housing Brace Angle	'40–	'40–	.....
P 27576 H	Slip Clutch on Power Shaft (Splined) (Blood Bros. No. G3635M)	'40–	'40–	.....
P 27713 H	Support Strap for Power Shaft Front Bearing Box Hinge Bracket (2 used) (P32734H will work)	1940	1940	P32734H
P 27714 H	Hinge Bracket, Lower, for Bearing on Front End of Power Shaft (P32733H will work)	1940	1940	P32733H
P 28616 H	Pivot Shaft for Power Shaft Front Bearing Box Lower Hinge Bracket	'40–	'40–	.....
P 28985 H	Gasket for Main Drive Gear Housing	'40–	'40–	.....
P 29024 H	Driven Shaft in Main Drive Gear Housing (P30324H will work)	1940	1940	P30324H
P 29161 H	Brace Angle for Main Drive Gear Housing	'40–	'40–	.....
P 29165 H	Support on Tractor Hitch for L. H. End of Main Drive Gear Housing	1940	1940	P32286H
P 29270 H	Hinge Bracket, Upper, for Bearing on Front End of Power Shaft (AP13741H will work)	1940	1940	AP13741H
P 29316 H	Shield over Power Shaft in Front of Gear Housing	'40–	'40–	.....
P 29317 H	Bracket, L. H., Front, for Shield over Power Shaft in Front of Gear Housing	'40–	'40–	.....
P 29319 H	Bracket, L. H., Rear, for Shield over Power Shaft in Front of Gear Housing	'40–	'40–	.....
P 29320 H	Bracket, R. H., Front, for Shield over Power Shaft in Front of Gear Housing	'40–	'40–	.....
P 29353 H	Stiffener on Shield over Power Shaft at Front of Gear Housing	'40–	'40–	.....
P 29464 H	Bracket, R. H., Rear, for Shield over Power Shaft in Front of Gear Housing	'40–	'40–	.....
P 30072 H	Adjusting Bracket on Rear Shield over Telescoping Pipe on Tractor Hitch	'40–	'40–	.....
P 30133 H	Shield, Front, over Telescoping Pipe for Power Drive on Tractor Hitch	'40–	'40–	.....
P 30136 H	Support Bracket on Tractor Hitch for Rear Shield over Telescoping Pipe on Tractor Hitch	'40–	'40–	.....
P 30137 H	Flat Support Bracket on Front Shield over Telescoping Pipe for Power Drive on Tractor Hitch (P31715H will work)	1940	1940	P31715H
P 30139 H	Shield, Rear, over Telescoping Pipe for Power Drive on Tractor Hitch (No Cut)	'40–	'40–	.....
P 30324 H	Driven Shaft in Main Drive Gear Housing (works for P29024H) (No Cut)	'40–	'40–	P29024H
P 31543 H	Main Drive Gear on Rear Power Shaft in Gear Housing (works for P27299H)	'40–	'40–	P27299H
P 31568 H	Lock Plate for Cover Plate Capscrews in Universal Joint (Blood Bros. No. 3DS9)	'40–	'40–	.....
P 31570 H	Cover Plate for Universal Joint on Power Shaft (Blood Bros. No. 3DS8)	'40–	'40–	.....
P 31571 H	Bushing for Universal Joint Connection (Blood Bros. No. 3DS4)	'40–	'40–	E3223H
P 31572 H	Universal Joint Connection (Blood Bros. No. 3DS1)	'40–	'40–	E3222H
P 31573 H	Retainer for Universal Joint Grease Washer (Blood Bros. No. 3DS2)	'40–	'40–	E3225H
P 31574 H	Grease Washer for Universal Joints (Cork) (Blood Bros. No. 3DS3)	'40–	'40–	E3224H
P 31577 H	Splined Universal Joint End on Shaft in Gear Housing (1-1/8" Splined) (Blood Bros. No. 3DSYS18-3)	'40–	'40–	E3226H

For Cuts of Repair Parts, see pages 87 and 88.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	POWER DRIVE—Continued			
P 31579 H	Bushing in Universal Joint End with Slip Clutch Jaws (Blood Bros. No. 502777)	'40–	'40–	.....
P 31715 H	Flat Support Bracket on Front Shield over Telescoping Pipe for Power Drive on Tractor Hitch (works for P30137H) (No Cut)	1940	1940	P30137H–P32829H
P 32175 H	Lock Plate for Capscrew in Power Shaft Front Bearing Box Pivot Shaft (2 used) (No Cut)	'40–	'40–	.....
P 32286 H	Support on Tractor Hitch for L. H. End of Main Drive Gear Housing	'40–	'40–	P29165H
P 32380 H	Rear Power Shaft in Gear Housing (Splined) (No Cut)	'41–	'41–	AP11570H
P 32395 H	Collar on Rear Power Shaft in Gear Housing (No Cut)	'41–	'41–	.....
P 32733 H	Hinge Bracket, Lower, for Bearing on Front End of Power Shaft (works for P27714H)	'41–	'41–	P27714H
P 32734 H	Support Strap for Power Shaft Front Bearing Box Hinge Bracket (2 used) (works for P27713H)	'41–	'41–	P27713H
P 32829 H	Flat Support Bracket on Front Shield over Telescoping Pipe for Power Drive on Tractor Hitch	'41–	'41–	P31715H
P 32937 H	Lock Washer for Capscrew in Universal Joint on Front End of Tubular Shaft (with P32938H works for P27577H)	'41–	'41–	P27577H
P 32938 H	Washer on Capscrew for Universal Joint on Front End of Tubular Drive Shaft (with P32937H works for P27577H)	'41–	'41–	P27577H
P 33599 H	Shim for Bearing on Front End of Drive Shaft in Main Drive Gear Housing (.048") (No Cut)	'40–	'40–	.....
Z 976 H	Cap, Rear, on Main Drive Gear Housing	'40–	'40–	.....
Z 6572 H	Grease Seal for Front End of Drive Shaft in Main Drive Gear Housing	'40–	'40–	.....
Z 7716 H	Shim (Thick) for Rear Cap on Main Drive Gear Housing (Z8349H will work)	1940	1940	Z8349H
Z 8349 H	Shim (Thick) for Rear Cap on Main Drive Gear Housing (works for Z7716H)	'41–	'41–	Z7716H
	DRIVE BELTS AND DRIVE CHAINS			
32	Steel Chain Link (No Cut)	'40–	'40–	.....
45	Steel Chain Link (No Cut)	'40–	'40–	.....
AP10396 H	Reel Drive Chain, Rear (44 Links, No. 45 Steel) (No Cut)	'40–	'40–	.....
AP10397 H	Reel Drive Chain, Front (155 Links, No. 32 Steel) (No Cut)	'40–	'40–	.....
AP10447 H	Drive Chain for Grain Tank Unloading Auger (21 Links, No. 32 Steel) (No Cut)	'40–	.....	.....
AP12600 H	Drive Chain for Grain Tank Unloading Auger (24 Links, No. 32 Steel) (No Cut)	.....	'40–	.....
P 27108 H	Drive Belt for Conveyor under Straw Rack ("V" Type) (No Cut)	'40–	'40–	.....
P 27312 H	Cylinder Drive Belt ("V" Type) (No Cut)	'40–	'40–	.....
P 29286 H	Grain Tank Elevator Drive Belt ("V" Type) (No Cut)	'40–	'40–	.....
P 29287 H	Tailings Elevator Drive Belt ("V" Type) (No Cut)	'40–	'40–	.....
P 30120 H	Drive Belt for Feeder and Platform Canvas, Rear Beater and Fan (Double "V" Belt) (No Cut)	'40–	'40–	.....
S 9245 H	Drive Belt for Upper Tailings Auger (No Cut)	'40–	'40–	.....
	DRIVE AND DRIVEN SHEAVES AND SPROCKETS			
AP10069 H	Drive and Driven Sheaves for Upper Tailings Auger (5" Dia.) (2 used)	'40–	'40–	.....
AP10709 H	Sheave Half, Complete with Nut, for Driven Sheave on Cylinder Shaft (Nut, P2349H) (12-1/8" Dia.)	'40–	'40–	.....
AP10715 H	Sheave Half, Complete with Nut, for Cylinder Drive on Shaft in Gear Housing (Nut, P2348H)	'40–	'40–	.....
AP11281 H	Driven Sheave on Fan Shaft (Regular) (9-5/8" Dia.) (AP13678H will work)	1940	1940	AP13678H
AP11399 H	Driven Sheave, Complete with Slip Clutch on Upper End of Tailings Elevator (10-1/2" Dia.) (AP12380H will work)	1940	1940	AP12380H
AP11609 H	Reel Drive Sprocket on R. H. Wheel Axle (7 Teeth) (P2602H, Complete)	1940	1940	AP12417H
AP11615 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing (7-7/8" Dia.) (AP12762H will work)	1940	1940	AP12762H
AP11709 H	Driven Sheave on Fan Shaft (Special) (8-11/16" Dia.) (AP13679H will work)	1940	1940	AP13679H
AP11710 H	Driven Sheave on Fan Shaft (Special) (10-3/4" Dia.) (AP13715H will work)	1940	1940	AP13715H
AP11711 H	Driven Sheave on Fan Shaft (Special) (Flax) (11-3/4" Dia.) (AP-13716H will work)	1940	1940	AP13716H
AP11734 H	Driven Sheave for Feeder Canvas Drive Roller (12-1/4" Dia.) (AP13655H will work)	1940	1940	AP12808H
AP11744 H	Driven Sheave on Upper End of Grain Tank Elevator (7-1/2" Dia.)	'40–	'40–	.....

For Cuts of Repair Parts, see page 88.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	DRIVE AND DRIVEN SHEAVES AND SPROCKETS —Continued			
AP11745 H	Drive Sheave on Upper End of Tailings Elevator for Grain Tank Elevator (6-1/4" Dia.)	'40–	'40–	.....
AP11847 H	Driven Sheave, Complete, with Hub for Conveyor Chain Drive Belt (Hub, P2640H) (14" Dia.)	'40–	'40–	.....
AP11868 H	Sheave Half, Complete with Hub for Driven Sheave on Cylinder Shaft (Hub, P2600H) (12-1/8" Dia.) (AP12374H will work)	1940	1940	AP12374H
AP11870 H	Sheave Half, Complete with Hub for Cylinder Drive on Shaft in Gear Housing (Hub, P2601H) (AP12376H will work)	1940	1940	AP12376H
AP12184 H	Double Drive Sheave on Beater behind the Cylinder Shaft (Adjustable) (AP13652H will work) (6-3/4" and 10-3/8" Dia.	1940	1940	AP13652H
AP12247 H	Driven Sheave on Platform Canvas Drive Roller (14" Dia.)	1940	1940	AP14147H
AP12374 H	Sheave Half, Complete with Hub for Driven Sheave on Cylinder Shaft (Hub, P2807H) (12-1/8" Dia.) (works for AP11868H) (No Cut)	'40–	'40–	AP11868H
AP12376 H	Sheave Half, Complete with Hub for Cylinder Drive on Shaft in Gear Housing (Hub, P2808H) (works for AP11870H) (No Cut)	'40–	'40–	AP11870H
AP12380 H	Driven Sheave, Complete with Slip Clutch on Upper End of Tailings Elevator (10-1/2" Dia.) (works for AP11399H)	'40–	'40–	AP11399H
AP12417 H	Reel Drive Sprocket on R. H. Wheel Axle (7 Teeth) (P2854H, Complete)	'40–	'40–	AP11609H
AP12762 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan on Drive Shaft in Power Drive Gear Housing (7-1/8" Dia.) (works for AP11615H)	'40–	'40–	AP11615H
AP12808 H	Driven Sheave on Feeder Canvas Drive Roller (6-7/8" and 12-1/4" Dias.) (AP13655H will work)	1940	1940	AP11734H–AP13655H
AP13574 H	Driven Sheave on Fan Shaft (Regular) (9-5/8" Dia.)	'41–	'41–	AP13678H
AP13575 H	Driven Sheave on Fan Shaft (Special) (8-11/16" Dia.) (No Cut)	'41–	'41–	AP13679H
AP13576 H	Driven Sheave on Fan Shaft (Special) (10-3/4" Dia.) (No Cut)	'41–	'41–	AP13715H
AP13610 H	Driven Sheave on Fan Shaft (Special) (11-3/4" Dia.) (No Cut)	'41–	'41–	AP13716H
AP13652 H	Double Drive Sheave on Beater behind the Cylinder Shaft (Adjustable) (6-3/4" and 10-3/8" Dias.) (works for AP12184H)	'41–	'41–	AP12184H
AP13655 H	Driven Sheave for Feeder Canvas Drive Roller (6-7/16" and 12-1/4" Dias.) (works for AP11734H or AP12808H)	'41–	'41–	AP12808H
AP13678 H	Driven Sheave on Fan Shaft (Regular) (9-5/8" Dia.) (works for AP11281H) (Repairs only) (No Cut)	1940	1940	AP11281H–AP13574H
AP13679 H	Driven Sheave on Fan Shaft (Special) (8-11/16" Dia.) (works for AP11709H) (Repairs only)	1940	1940	AP11709H–AP13575H
AP13715 H	Driven Sheave on Fan Shaft (Special) (10-3/4" Dia.) (works for AP11710H) (Repairs only) (No Cut)	1940	1940	AP11710H–AP13576H
AP13716 H	Driven Sheave on Fan Shaft (Special) (11-3/4" Dia.) (works for AP11711H) (Repairs only) (No Cut)	1940	1940	AP11711H–AP13610H
AP14014 H	Driven Sheave on Fan Shaft (Special) (7-3/8" Dia.) (No Cut)	'41–	'41–	.....
AP14015 H	Driven Sheave on Fan Shaft (Special) (6-1/16" Dia.) (No Cut)	'41–	'41–	.....
AP14147 H	Driven Sheave on Platform Canvas Drive Roller (14" Dia.) (No Cut)	'41–	'41–	AP12247H
B 4325 H	Pipe Spacer for Cylinder Drive Sheave Bolts (3 used)	'40–	'40–	.....
P 2323 H	Reel Driven Sprocket on R. H. End of Shaft through Grain Tank (9 Teeth)	1940	1940	P2912H
P 2335 H	Reel Driven Slip Clutch Sprocket on Reel Pipe (18 Teeth)	'40–	'40–	.....
P 2341 H	Reel Drive Sprocket on L. H. End of Shaft through Grain Tank (18 Teeth)	1940	1940	P2913H
P 2348 H	Nut for Cylinder Drive Sheave on Shaft in Gear Housing	'40–	'40–	.....
P 2349 H	Nut for Driven Sheave on Cylinder Shaft	'40–	'40–	.....
P 2517 H	Reel Driven Sprocket on R. H. End of Shaft through Grain Tank (12 Teeth) (Special) (PK2H will work)	1940	1940	PK2H
P 2600 H	Hub for Drive Sheave on Cylinder Shaft	1940	1940	P2807H
P 2601 H	Hub for Cylinder Drive Sheave on Shaft in Gear Housing	1940	1940	P2808H
P 2602 H	Reel Drive Sprocket on R. H. Wheel Axle (Order AP11609H) (7 Teeth)	1940	1940	P2854H
P 2631 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan, on Driven Shaft in Power Drive Gear Housing (used with I.H.C. F20 Tractors only)	1940	1940	P2867H
P 2659 H	Drive Sprocket for Grain Tank Unloading Auger (9 Teeth)	'40–	'40–	.....
P 2660 H	Driven Sprocket for Grain Tank Unloading Auger (6 Teeth)	'40–	'40–	.....
P 2807 H	Hub for Drive Sheave on Cylinder Shaft	'40–	'40–	P2600H
P 2808 H	Hub for Cylinder Drive Sheave on Shaft in Gear Housing	'40–	'40–	P2601H
P 2854 H	Reel Drive Sprocket on R. H. Wheel Axle (Order AP12417H) (7 Teeth)	'40–	'40–	P2602H
P 2867 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing (used with I.H.C. F20 Tractors only) (8-7/16" Dia.)	'40–	'40–	P2631H

For Cuts of Repair Parts, see pages 88 and 89.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	DRIVE AND DRIVEN SHEAVES AND SPROCKETS —Continued			
P 2912 H	Reel Driven Sprocket on R. H. End of Shaft through Grain Tank (9 Teeth)	'40–	'40–	P2323H
P 2913 H	Reel Drive Sprocket on L. H. End of Shaft through Grain Tank (18 Teeth)	'40–	'40–	P2341H
P 2943 H	Reel Driven Sprocket on R. H. End of Shaft through Grain Tank (7 Teeth) (Special) (No Cut)	'40–	'40–	.....
P 2945 H	Hub for Driven Sheave on Fan Shaft (Repairs only 1940)	'41–	'41–	.....
°PK 2 H	Reel Driven Sprocket on R. H. End of Shaft through Grain Tank (12 Teeth) (Special) (works for P2517H) (No Cut)	'41–	'41–	P2517H
P 26139 H	Slip Clutch, L. H., on Driven Sheave at Upper End of Tailings Elevator	'40–	'40–	.....
P 30317 H	Shim for Small Adjustable Sheave on Beater behind the Cylinder Shaft	'40–	'40–	.....
P 30318 H	Shim for Large Adjustable Sheave on Beater behind the Cylinder Shaft	'40–	'40–	.....
P 30319 H	Sheave Half for Small Adjustable Sheave on Beater behind the Cylinder Shaft (6-3/4" Dia.)	'40–	'40–	.....
	DRIVE CHAIN AND BELT TIGHTENER AND IDLER BRACKETS, SPROCKETS, STUDS, AND SHEAVES			
AP10406 H	Hub, Complete, for Grain Tank and Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave and Tightener Pulley for Upper Auger Drive Belt (P2437H, Complete) (3 used)	'40–	'40–	.....
AP10452 H	Tightener Sprocket, Complete for Grain Tank Unloading Auger Drive Chain (6 Teeth) (P2429H, Complete)	'40–	'40–	.....
AP10662 H	Tightener Sheave, Complete with Hub, for Grain Tank Elevator Conveyor Chain Drive Belt (4-1/4" Dia.)	'40–	'40–	.....
AP10707 H	Tightener Sheave, Complete with Hub, for Tailings Elevator Conveyor Chain Drive Belt (3-1/2" Dia.)	'40–	'40–	.....
AP11444 H	Upper Idler and (Tightener Sheaves 1940 on 11-A, '40–'41 on 12-A) Complete with Hub, for Feeder, Platform, Rear Beater and Fan Drive Belt and Tightener Sheave for Conveyor under Straw Rack Drive Belt (3 used '40–'41, 2 used '41–) (5-1/8" Dia.)	'40–	'40–	AP14018H
AP11671 H	Arm for Cylinder Drive Belt Tightener Sheave	1940	1940	AP12998H
AP11717 H	Arm for Tightener Sheave on Reel Front Drive Chain	'40–	'40–	.....
AP12312 H	Arm for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave	1940	1940	AP12998H
AP12313 H	U-Bracket for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave	1940	'40–'41	AP12998H
AP12362 H	Lower Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt (5-1/8" Dia.)	1940	'40–'41	AP14024H
AP12369 H	Tightener Sheave, Complete with Hub for Upper Tailings Auger Drive Belt (3-1/2" Dia.) (No Cut)	'40–	'40–	.....
AP12998 H	Arm for Cylinder Drive Belt Tightener Sheave also for Feeder Platform, Beater and Fan Drive Belt Tightener Sheave (2 used)	'41–	'40–	AP11671H–AP12312H–AP12313H
AP13815 H	Tightener Sheave for Cylinder Drive Belt (6-1/4" Dia.) (No Cut)	'41–	'41–	P2490H
AP14018 H	Tightener Sheave, Complete with Hub for Feeder, Platform, Beater and Fan Drive Belt (7-1/8" Dia.) (No Cut)	'41–	'41–	AP11444H
AP14024 H	Lower Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt (7-1/8" Dia.) (No Cut)	'41–	'41–	AP12362H
J 295 H	Tightener Pulley for Reel Drive Chain, Front	'40–	'40–	.....
P 2429 H	Tightener Sprocket for Grain Tank Unloading Auger Drive Chain (6 Teeth) (Order AP10452H)	'40–	'40–	.....
P 2437 H	Hub for Grain Tank and Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave also Tightener Pulley for Upper Auger Drive Belt (Order AP10406H) (3 used)	'40–	'40–	.....
P 2490 H	Tightener Sheave for Cylinder Drive Belt (4-1/8" Dia.)	1940	'40–'41	AP13815H
P 2531 H	Hub for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler and (Tightener Sheave 1940 on 11-A, '40–'41 on 12-A) and Conveyor under Straw Rack Drive Belt Tightener Sheave (3 used '40–'41, 2 used '41–) (Bearing JD7923H) (Sleeve JD8300H)	'40–	'40–	P2918H–P2994H
P 2613 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (PK3H will work)	1940	1949	P2905H–PK3H
P 2680 H	Hub for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave (Bearing JD7161H)	1940	'40–'41	P2977H
P 2805 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm	1940	'40–'41	P2922H
P 2905 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (PK3H will work)	.....	'40–'41	P2613H–PK3H
P 2918 H	Hub for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave (Bearing JD7923H) (Sleeve JD8300H) (No Cut)	'41–	'41–	P2531H

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see page 89.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	DRIVE CHAIN AND BELT TIGHTENER AND IDLER BRACKETS, SPROCKETS, STUDS, AND SHEAVES —Continued			
P 2922 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm.....(No Cut)	'41–	'41–	P2805H
P 2977 H	Hub for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave (Bearing JD7161H).....(No Cut)	'41–	'41–	P2680H
P 2994 H	Hub for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler Sheave (few used) (Order AP11444H).....	1941	1941	P2531H
°PK 3 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (works for P2613H or P2905H).....(No Cut)	'41–	'41–	P2905H–P2613H
P 20073 H	Pipe Trunnion in Tightener Sheave Arm on Grain Tank Elevator Conveyor Chain Drive Belt.....	'40–	'40–	.....
P 27081 H	Stud for Tailings Elevator Conveyor Chain Drive Belt and Upper Auger Drive Belt Tightener Sheave (2 used).....	'40–	'40–	.....
P 27231 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave (P31716H will work).....	1940	1940	P31716H
P 27615 H	Snap Ring for New Departure Bearing in Tightener Sheave for Cylinder Drive Belt (2 used).....	1940	'40–'41	.....
P 27818 H	Stud for Grain Tank Unloading Auger Drive Chain Tightener Sprocket.....	.....	'40–	.....
P 27849 H	Adjusting Rod for Cylinder Drive Belt Tightener Arm.....	1940	1940	P32293H
P 27924 H	Stud for Cylinder Drive Belt Tightener Sheave.....	'40–	'40–	.....
P 27925 H	Retaining Collar for Bearing in Cylinder Drive Belt Tightener Sheave.....	'40–	'40–	.....
P 28070 H	Stud for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave.....	'40–	'40–	.....
P 28539 H	Stud for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler Sheave and Conveyor under Straw Rack Drive Belt Tightener Sheave (2 used).....	'40–	'40–	.....
P 28542 H	Bearing Retainer Washer for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler Sheave and Conveyor under Straw Rack Drive Belt Tightener Sheave (2 used).....	'40–	'40–	.....
P 28718 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Upper Idler Sheave.....	'40–	'40–	.....
P 29208 H	Bracket for Tailings Elevator Upper Auger Drive Belt Tightener Sheave.....	'40–	'40–	.....
P 29253 H	Bracket on Axle for Cylinder Drive Belt Tightener Sheave Adjusting Rod.....	1940	1940	.....
P 29267 H	Stud for Grain Tank Unloading Auger Drive Chain Tightener Sprocket.....	'40–'41	'40–'41	P32926H
P 29404 H	Adjusting Rod for TightenerSheave Arm on Grain Tank Elevator Conveyor Chain Drive Belt.....	'40–	'40–	.....
P 29405 H	Tightener Arm for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave (P33478H will work).....	1940	1940	P32098H
P 29689 H	Chain Tightener Bracket for Unloading Auger Drive Chain (No Cut)	'40–'41	'40–'41	P32925H
P 30059 H	Adjusting Rod for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm.....	1940	'40–'41	P32293H
P 30081 H	Bracket on Axle for Feeder, Platform, Beater and Fan Belt Tightener Sheave Adjusting Rod.....	1940	1940	.....
P 30122 H	Bracket for Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave.....	'40–	'40–	.....
P 30128 H	Snap Ring in Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave.....	'40–	'40–	.....
P 30190 H	Stiffener Plate on Separator Side Sheet for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave Stud.....	'40–	'40–	.....
P 30213 H	Stud for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave.....	1940	'40–'41	P32299H
P 30223 H	Retainer Washer on Stud for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave.....	1940	'40–'41	.....
P 30245 H	Stud for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave.....	'40–	'40–	.....
P 30247 H	Pivot Pin for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm.....	1940	'40–'41	.....
P 31716 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave (works for P27231H).....	'40–	1940	P27231H–P32308H
P 32098 H	Tightener Arm for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave (P33478H will work).....	'40–'41	'40–'41	P29405H–P33478H
P 32289 H	Flat Spacer for Conveyor Chain Drive Belt Tightener Bracket.....(No Cut)	1940	.....	.....
P 32293 H	Adjusting Rod for Cylinder Drive Belt Tightener Arm also Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm (2 used).....	'41–	'40–	P27849H–P30059H
P 32299 H	Stud for Feeder, Platform, Beater and Fan Drive Chain Tightener Sheave.....(No Cut)	'41–	'41–	P30213H
P 32308 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave.....	.....	'40–	P31716H

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see page 89.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	DRIVE CHAIN AND BELT TIGHTENER AND IDLER BRACKETS, SPROCKETS, STUDS, AND SHEAVES —Continued			
P 32925 H	Chain Tightener Bracket for Unloading Auger Drive Chain....(No Cut)	'41–	'41–	P29689H
P 32926 H	Stud for Grain Tank Unloading Auger Drive Chain Tightener Sprocket....(No Cut)	'41–	'41–	P29267H
	ROLLER BEARINGS AND BRONZE BEARINGS			
E 124 H	Bronze Bearing in Bracket on Front End of Grain Tank for Auger	'40–	'40–	.....
E 150 H	Bronze Bearing (8 used), Straw Rack Front Rocker Arm Shaft Brackets (2 used), Boxes on Upper and Lower Tailings Auger Shaft (4 used), Boxes on Grain Tank Auger Shaft (2 used).....	'40–	'40–	.....
J 1063 H	Bronze Bearing in Box at Front End of Pitman Drive Pipe.....	'40–	'40–	.....
JD 7158 H	Ball Bearing in Tightener Sheave for Cylinder Drive Belt (New Departure No. 88505).....	'40–	'40–	.....
JD 7160 H	Ball Bearing on Front End of Power Shaft (New Departure No. 88506).....	'40–	'40–	.....
JD 7161 H	Ball Bearing (New Departure No. 88503) (3 used), Straw Rack Pitman Connecting Bracket to Crank (2 used), Lower Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt.....	'40–	'40–	.....
JD 7163 H	Ball Bearing for Pitman Drive Eccentric (New Departure No. 88508).....	'40–	'40–	.....
JD 7165 H	Ball Bearing on Cylinder Shaft (2 used) (New Departure 88A for 1-3/16" Shaft).....	'40–	'40–	.....
JD 7207 H	Timken Roller Bearing, Inner, Complete in Main Wheels (2 used) (less Cup) (Cup JD7262H) (Timken No. 14137A).....	'40–	'40–	.....
JD 7259 H	Cup for JD7388H and JD8104H Timken Roller Bearings (3 used) (Timken No. 15250).....	'40–	'40–	.....
JD 7262 H	Cup for JD7207H Timken Roller Bearing (2 used) (Timken No. 14274).....	'40–	'40–	.....
JD 7388 H	Timken Roller Bearing, Complete (2 used) (Cup JD7259H) (Timken No. 15113), Front End of Drive Shaft in Main Drive Gear Housing, R. H. End of Driven Shaft in Main Drive Gear Housing.....	'40–	'40–	.....
JD 7428 R	Cup for JD8106R Timken Roller Bearing (3 used) (Timken No. 12520)....(No Cut)	'40–	'40–	.....
JD 7451 H	Outer Sleeve for JD7921H Hyatt Roller Bearing (2 used) (Hyatt No. 4811).....	'40–	'40–	.....
JD 7452 H	Outer Sleeve for JD7922H Hyatt Roller Bearing (2 used) (Hyatt No. 4548).....	'40–	'40–	.....
JD 7921 H	Hyatt Roller Bearing, Complete, on Beater Shaft (2 used) (less Sleeve) (Sleeve JD7451H) (Hyatt No. 94524).....	'40–	'40–	.....
JD 7922 H	Hyatt Roller Bearing, Complete, on Fan Shaft (2 used) (less Sleeve) (Sleeve JD7452H) (Hyatt No. 94628).....	'40–	'40–	.....
JD 7923 H	Hyatt Roller Bearing, Complete (3 used) (less Sleeve) (Sleeve JD8300H) (Hyatt No. 93224), Hub for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler and Tightener Sheave (2 used), Conveyor under Straw Rack Drive Belt Tightener Sheave.....	'40–	'40–	.....
JD 7924 H	Hyatt Roller Bearing, Complete (3 used) (less Sleeve) (Sleeve JD8301H) (Hyatt No. 93320), Boxes on Feeder Canvas Drive Roller (2 used), Box, L. H., on Platform Canvas Drive Roller.	'40–	'40–	.....
JD 7925 H	Hyatt Roller Bearing, Complete, in Platform Canvas Drive Roller Bearing Box, L. H. (less Sleeve) (Sleeve JD8302H) (Hyatt No. 95724).....	'40–	'40–	.....
JD 8104 H	Timken Roller Bearing, Complete on L. H. End of Driven Shaft in Main Drive Gear Housing (Cup JD7259H) (Timken No. 15116).....	'40–	'40–	.....
JD 8106 R	Timken Roller Bearing, Complete (3 used) (less Cup) (Cup JD7428R) (Timken No. 12580), Outer Bearing for Main Wheels (2 used) Rear End of Drive Shaft in Main Drive Gear Housing....(No Cut)	'40–	'40–	.....
JD 8300 H	Outer Sleeve for JD7923H Hyatt Roller Bearing (3 used) (Hyatt No. 4814).....	'40–	'40–	.....
JD 8301 H	Outer Sleeve for JD7924H Hyatt Roller Bearing (Hyatt No. 4820)	'40–	'40–	.....
JD 8302 H	Outer Sleeve for JD7925H Hyatt Roller Bearing (Hyatt No. 4829)	'40–	'40–	.....
P 21490 H	Bronze Bearing (3 used), in Lower End of Grain Tank Unloading Auger Housing; in Gear Housing on Auger Shaft; Bearing Bracket in Upper End of Unloading Auger.....	'40–	'40–	.....
P 22953 H	Bronze Bearing (10 used 1940, 9 used '40–), Bearing Boxes on Feeder Canvas Idler Roller (2 used), Straw Rack Front Rocker Arm Lower Bearing (2 used), Conveyor Chain Idler Sprocket (2 used), Tailings Elevator Conveyor Chain Tightener Bracket (R. H. and L. H. 1940, L. H. only '40–), Grain Tank Elevator Conveyor Chain Tightener Bracket (2 used).....	'40–	'40–	P28623H

For Cuts of Repair Parts, see page 89.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	ROLLER BEARINGS AND BRONZE BEARINGS —Continued			
P 26460 H	Bronze Bearing in Reel Drive Sprocket on R. H. Wheel Axle	'40–	'40–	.....
P 26512 H	Bronze Bearing (8 used), Straw Rack Rocker Arm, Rear (2 used), Drive Shaft in Gear Housing on Lower End of Unloading Auger (2 used), Tightener Sprocket for Unloading Auger Drive Chain, 1940, Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave, Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave, Upper Tailings Auger Drive Belt Tightener Sheave	'40–	'40–	P26682H
P 26682 H	Bronze Bearing (5 used), Tightener Slide Bracket for Platform Canvas Idler Roller (2 used), Straw Rack Rear Rocker Arm Shaft in Bearing Bracket on Conveyor Chain Drive Shaft (2 used), Unloading Auger Drive Chain Tightener Sprocket	'40–	'40–	P26512H
P 27298 H	Bronze Bearing, Rear, in Main Drive Gear Housing	'40–	'40–	.....
P 27411 H	Bronze Bearing, Front, in Main Drive Gear Housing	'40–	'40–	.....
P 28452 H	Bronze Bearing for Straw Rack Conveyor Chain Drive Shaft (2 used)	'40–	'40–	.....
P 28623 H	Bronze Bearing (3 used), Front Rocker Arms, Upper (2 used) Tightener Bracket, R. H., at Upper End of Tailings Elevator	'40–	'40–	P22953H

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Size
	WASHERS			
B 5843 H	Spacing Washer for Gears on Shaft in Gear Housing on Boot at Lower End of Unloading Auger Housing (No Cut)	'40–	'40–	25/32 x 1-1/2
J 3531 H	Washer at Front End of Slip Clutch Spring on Power Shaft	'40–	'40–	1-5/32 x 2-1/2
P 5698 H	Lock Washer on Bolt for Cylinder Bar Filler (48 used 11-A, 64 used 12-A) (Special) (No Cut)	'40–	'40–	3/16
P 18467 H	Thrust Washer between Collar and Lower End of Unloading Auger and Housing	'40–	'40–	29/32 x 1-1/2
P 26212 H	Washer on Wood Hanger Arm Pipe between Arm and Separator Sides (2 used)	'40–	'40–	25/32 x 1-1/2
P 26332 H	Washer at End of Spring on Unloading Auger Drive Slip Clutch Shaft	'40–	'40–	7/8 x 2
P 26878 H	Washer on Axle for Bolt through Stub Axle, L. H.	1940	1940	17/32 x 2-7/8
P 27465 H	Washer at Front End of Slip Clutch Spring on Power Shaft	'40–	'40–	1-5/32 x 2-1/2 x 1/8
P 27573 H	Washer at Front End of Slip Clutch Spring on Power Shaft (Blood Bros. No. 504264)	'40–	'40–	1-5/32 x 2-1/2
P 27575 H	Washer on Rear End of Slip Clutch Shaft on Power Shaft (Blood Bros. No. 504266)	'40–	'40–	41/64 x 1-1/2
P 27577 H	Washer on Capscrew for Universal Joint on Front End of Tubular Drive Shaft on Tractor Hitch (Blood Bros. No. G3497M) (P32937H with P32938H will work)	1940	1940	15/32 x 1-1/2
P 28311 H	Lock Washer (Everlock), Bolts on Platform Canvas Lock Strip, Bolts on Feeder Canvas Lock Strip (No Cut)	'40–	'40–	3/16
P 28439 H	L. H. Lock Washer on L. H. End of Drive Shaft in Gear Housing on Boot at Lower End of Housing (No Cut)	'40–	'40–	5/16
P 28440 H	L. H. Lock Washer on L. H. End of Platform Canvas Drive Roller (No Cut)	1940	1940	3/8
P 28463 H	L. H. Lock Washer on R. H. End of Clean Grain Auger (No Cut)	'40–	'40–	1/2
P 28692 H	Thrust Washer on Grain Tank Auger Drive Shaft	'40–	'40–	17/32 x 1
P 28814 H	Thrust Washer (2 used), L. H. End of Platform Canvas Drive Roller, Front End of Grain Tank Unloading Auger Drive Sprocket	'40–	'40–	13/16 x 1-11/16
P 28815 H	Thrust Washer on L. H. End of Platform Canvas Drive Roller	'40–	'40–	13/32 x 1-1/2
P 28953 H	Washer between Main Drive Gear and Bearing on Rear End of Rear Power Shaft in Gear Housing	1940	1940	1-9/64 x 1-5/16
P 29028 H	Bearing Retainer Washer for Boxes on Feeder Drive Roller (2 used)	'40–	'40–	25/32 x 1-11/16
P 29050 H	Bearing Retainer Washer for Box on Beater Shaft (2 used)	'40–	'40–	1-1/32 x 1-35/64
P 29303 H	Washer on R. H. End of Drive Shaft in Power Drive Gear Housing (P33274H will work)	1940	1940	7/8 x 1-3/16
P 29367 H	Washer between Rear Rocker Arm and Separator Body (2 used)	'40–	'40–	25/32 x 1-1/8
P 30007 H	Eccentric Washer for Beater Clean-Out Door on Separator Side (2 used)	'40–	'40–	11/32 x 1-1/2

For Cuts of Repair Parts, see pages 89 and 90.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Size
	WASHERS—Continued			
P 30140 H	Cup Washer on Feeder Drive Roller Gudgeon between Roller and Bearing Box (2 used)	'40–	'40–	7/8 x 1-21/32
P 30309 H	L. H. Lock Washer on R. H. End of Platform Canvas Drive Roller (No Cut)	'40–	'40–	5/8
P 31621 H	Lock Washer for Cylinder and Concave Rasp Bar Bolts (No Cut)	'40–	'40–	3/8
P 31767 H	Washer on Bolt in Hinge Bracket, Upper, for Bearing on Front End of Tractor Hitch (No Cut)	'40–	'40–	21/32 x 1-1/2
P 32070 H	Thrust Washer, Grain Tank Auger Shaft, Tailings Auger Shaft (No Cut)	'40–	'40–	9/16 x 1-1/2
P 32173 H	Square Washer for Bolt on Rear End of Feeder Frame to Separator Side Sheet (2 used)	1940	1940	11/32 x 1 x 1-1/2
P 32186 H	Washer on Bolt for Concave Insert Angle	1940	1940	7/16 x 13/16
P 32379 H	Washer between Main Drive Gear and Bearing on Rear End End of Rear Power Shaft in Gear Housing (No Cut)	'41–	'41–	19/64 x 1-15/16
P 33274 H	Washer on R. H. End of Drive Shaft in Gear Housing (No Cut)	'41–	'41–	13/16 x 1-3/16
S 5571 H	Bell Washer on Grain Tank Unloading Auger Housing for Spout (2 used)	'41–	'41–	9/32 x 7/8
S 7163 H	Thrust Washer between Boot and Grain Tank Unloading Auger Drive Sprocket	'40–	'40–	15/16 x 1-25/32
	PINS AND KEYS			
B 4835 H	Key, Drive Sheave for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing	'40–	'40–	5/16 x 5/16 x 2
B 5755 H	Key, Front Drive Knuckle on Grain Tank Auger Shaft to Shaft (No Cut)	'40–	'40–	1/4 x 1/4 x 1-3/8
E 2835 H	Key for Universal Joint on Front End of Tubular Drive Shaft on Tractor Hitch (No Cut)	'40–	'40–	3/8 x 5/16 x 1-3/8
H 1350 H	Pin, Drive Knuckle to Unloading Auger in Grain Tank	'40–	'40–	5/16 x 1-3/8
H 1745 H	Pivot Pin in Upper End of Reel Tilting Square Pipe (Drilled)	'41–	'41–	3/8 x 1-7/8
H 4211 H	Pin (2 used) (Drilled), Adjusting Rod for Cylinder Drive Belt Tightener Arm, Adjusting Rod for Feeder, Platform, Beater and Fan Drive Belt Tightener Arm	'41–	'40–	3/8 x 1-1/8
		'40–	'40–	1/4 x 1-3/4
HZ 5446 H	Key for Straw Rack Conveyor Chain Drive Sprocket (2 used)	'40–	'40–	1/4 x 1/4 x 2
HZ 6549 H	Key, Front Rocker Arms to Shaft (2 used) (No Cut)			
J 8030 H	Pin (4 used), Drive and Driven Sheaves for Upper Tailings Auger (2 used), Driven Sheave, Complete with Slip Clutch on Upper End of Tailings Elevator, Slip Clutch, R. H. for Driven Sheave at Upper End of Tailings Elevator	'40–	'40–	5/16 x 1-7/8
		'40–	'40–	5/16 x 2-1/2
J 9052 H	Drilled Pin for Slip Clutch on Reel Pipe	'41–	'41–	1/2 x 1-1/2
P 7402 H	Pin in Front End of Platform Lifting Rod	'41–	'41–	1/2 x 1-1/4
P 16486 H	Pin in Rear End of Platform Lifting Rod (No Cut)	'40–	'40–	1/4 x 1/4 x 1-1/4
P 21247 H	Key for Sheave on Fan Shaft	'40–	'40–	1/4 x 1/4 x 1-7/8
*P 26319 H	Gib Key for Cylinder Head (2 used)			
P 27262 H	Key in Auger Drive Shaft in Main Drive Gear Housing on Tractor Hitch (Woodruff No. 91) (No Cut)	'40–	'40–	.....
P 27297 H	Pin, Driven Gear and Collar to Shaft in Gear Housing (2 used)	'40–	'40–	1/4 x 1-7/8
P 28154 H	Woodruff Key (No. 9) (8 used), Beater Drive Sheave to Shaft, Straw Rack Rocker Arms to Shaft (2 used), Straw Rack Conveyor Chain Drive Belt Pulley and Crank to Shaft (2 used), Reel Drive and Driven Sprockets to Countershaft (2 used), Feeder Canvas Driven Sheave to Roller (No Cut)	'40–	'40–	.....
P 28500 H	Key for Collar on L. H. End of Platform Canvas Drive Roller also Sprocket and Gears on Auger Shafts (No Cut)	'40–	'40–	3/16 x 3/16 x 1
P 28663 H	Pin in Fork on Pitman Drive for Bearing Cup (No Cut)	1940	1940	1/4 x 1-5/8
*P 29203 H	Key, Cylinder Drive Sheave to Driven Shaft in Gear Housing	'40–	'40–	5/16 x 5/16 x 5
P 30347 H	Gib Key, Cylinder Drive and Driven Sheaves to Shaft (2 used) (No Cut)	'40–	'40–	5/16 x 5/16 x 2-29/32
P 32230 H	Pin, Stub Axle to Axle Bracket (2 used) (No Cut)	'40–	'40–	1/4 x 3
P 32778 H	Pin for Clevis on Front of Lifting Spring (Drilled)	'41–	'41–	1/2 x 2
	BOLTS, CAPSCREWS AND NUTS			
AP12922 H	Bolt, Complete, for Concave Rasp Bars (No Cut)	1940	1940	3/8 x 1-1/4
AP12923 H	Bolt, Complete, for Concave Rasp Bars (No Cut)	'40–	'40–	3/8 x 1-1/4
AP12930 H	Bolt, Complete, for Cylinder Rasp Bars (No Cut)	'40–	'40–	3/8 x 1
AP13776 H	Bolt for Metal Insert Angles and Channels (No Cut)	'41–	'41–	3/8 x 3/4
AP13777 H	Bolt for Rubber Insert Angles (No Cut)	'41–	'41–	3/8 x 3/4
P 204 H	Wing Nut for Adjustable Tailboard Bolt (2 used)	'40–	'40–	1/4
P 205 H	Wing Nut on Bolt for Beater Clean-Out Door on Separator Side (2 used)	'40–	'40–	5/16
P 4081 H	Hitch Bolt on Front End of Tractor Hitch	'40–	'40–	3/4 x 3-3/4

For Cuts of Repair Parts, see pages 89 and 90.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Size
	BOLTS, CAPSCREWS AND NUTS—Continued			
P 26049 H	Pivot Bolt for Platform Lifting Lever	1940	1940	
P 26511 H	Tightener Screw for Rack Tie Rod (8 used)	1940	1940	3/8 x 1-9/32
P 26744 H	Lock Bolt for Reel Post	'40–	'40–	
P 27347 H	Capscrew (6 used), Nut for Cylinder Drive Sheaves (3 used), Nut for Cylinder Driven Sheaves (3 used)	'40–	'40–	7/16 x 3
P 27348 H	Tightener Bolt (4 used), Tailings Elevator Conveyor Chain Tightener Bolt (2 used), Grain Tank Elevator Conveyor Chain Tightener Bolt (2 used)	'40–	'40–	1/4 x 19/32
P 27712 H	Set Screw (4 used), Platform Canvas Fastening Slide Bar (2 used), Feeder Canvas Fastening Slide Bar (2 used)	'40–	'40–	1/4 x 19/32
P 27901 H	Adjusting Bolt for Lower End of Grain Tank Elevator	'40–	'40–	3/8 x 12
P 28462 H	Capscrew for Universal Joint on Front End of Power Shaft on Tractor Hitch (No Cut)	'40–	'40–	7/16 x 1
P 28709 H	Lock Bolt for Reel Tilting Square Pipe	'40–	'40–	
P 29172 H	Capscrew for L. H. End of Platform Canvas Drive Roller (L. H. Threads)	1940	1940	3/8 x 1
P 29174 H	Adjusting Bolt for Cylinder (2 used)	'40–	'40–	3/8 x 3-3/4
P 29544 H	Clamp Bolt for Drive Arm on Front End of Sickle Drive Pipe	'40–	'40–	7/16 x 2-1/4
P 29925 H	Nut on Bolt in Cylinder Removable End Plate (7 used)	'40–	'40–	3/8
P 30243 H	Adjusting Bolt for Rear End of Platform Lifting Spring	1940	1940	1/2 x 19-1/2
P 30251 H	Horned Nut on Rear End of Slip Clutch on Power Shaft (Blood Bros. No. G-4059M)	1940	1940	5/8
P 30295 H	Castellated Nut on Stub Axle (2 used)	'40–	'40–	3/4
P 30348 H	Set Screw for Cylinder Drive and Driven Sheave Keys (No Cut)	'40–	'40–	7/16 x 3/4
P 31562 H	Horned Nut on Rear End of Slip Clutch on Power Shaft (Blood Bros. No. G-4061M)	'40–	'40–	5/8
P 31569 H	Capscrew for Power Drive Universal Joint Cover Plate (Blood Bros. No. 3DS6-3) (No Cut)	'40–	'40–	
P 31586 H	Shoulder Bolt for Platform Lifting Rod (2 used)	1940	1940	
P 31766 H	Bolt in Hinge Bracket, Upper, for Bearing on Front End of Tractor Hitch (P32840H will work) (No Cut)	1940	1940	
P 31846 H	Tightener Screw for Straw Rack Tie Rod (8 used) (No Cut)	'41–	'40–	7/16 x 1
P 31999 H	Pivot Bolt for Platform Lifting Lever (No Cut)	'40–	'40–	
P 32000 H	Shoulder Bolt for Platform Lifting Rod (2 used)	1940	1940	
P 32140 H	Clamp Bolt for Latch Collar around Unloading Auger Housing (No Cut)	'40–	'40–	1/2 x 1-1/2
P 32188 H	Hex. Nut for Cylinder and Concave Rasp Bar Bolts (No Cut)	'40–	'40–	3/8
P 32282 H	Hex. Nut on R. H. End of Platform Canvas Drive Roller (L. H. Thread)	1940	1940	5/8
P 32283 H	Capscrew on R. H. End of Clean Grain Auger (L. H. Thread) (No Cut)	40–	'40–	1/2 x 1
P 32284 H	Capscrew in Rear End of Drive Shaft in Gear Housing on Boot at Lower End of Housing (L. H. Thread) (No Cut)	'40–	'40–	5/16 x 1
P 32340 H	Adjusting Bolt for Rear End of Platform Lifting Spring (P32773H will work)	1940	1940	5/8 x 19-1/2
P 32386 H	Castellated Nut on R. H. End of Platform Canvas Drive Roller	1940	1940	5/8
P 32682 H	Bolt for Cylinder Bar Filler (48 used 11-A, 64 used 12-A) (Special)	1940	1940	3/16 x 1-3/4
P 32773 H	Adjusting Bolt for Rear End of Platform Lifting Spring (works for P32340H)	'41–	'41–	5/8 x 27
P 32840 H	Bolt in Hinge Bracket, Upper, for Bearing on Front End of Tractor Hitch (works for P31766H)	'41–	'41–	
P 32880 H	Retaining Nut for Bearing on Eccentric Hub	'41–	'41–	1-1/2
P 32949 H	Capscrew on R. H. End of Platform Canvas Drive Roller	'41–	'41–	1/2 x 3-1/4
P 32987 H	Capscrew for (Middle Bracket 1940) Middle and Outer Brackets '41– for Beater Tooth Cover (8 used 1940, 24 used '41–) (No Cut)	'40–	'40–	5/16 x 3/4
P 33305 H	Bolt for Channel Cylinder Bars (32 used No. 11-A, 40 used No. 12-A) (Special) (No Cut)	'40–	'40–	3/8 x 7/8
Z 7168 H	Nut on Clutch Shifter Fork Shaft	'40–	'40–	7/16

For Cuts of Repair Parts, see pages 89 and 90.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Size	Coils
	SPRINGS				
AP13561 H	Platform Lifting Spring	1940	1940	1-3/4 x 32-1/2	98
AP13897 H	Platform Lifting Spring	'41–	'41–	1-3/4 x 32-1/2	98
B 4620 H	Slip Clutch Spring on Drive Shaft in Upper End of Tailings Elevator	'40–	'40–	1-13/16 x 1-15/16	4
B 5665 H	Tightener Spring for Platform Canvas (2 used)	'40–	'40–	3/4 x 6-5/8	23
B 5996 H	Spring for Lifting Guard (Special)	'40–	'40–	15/32 x 2-5/8	12
H 1154 H	Spring under Pressure Screw for Lock Ball on Auger Throw-Out Fork Shaft	'40–	'40–	1/2 x 1-1/8	5-1/2
HZ 5198 H	Latch Spring for Fan Side Shutter Adjusting Lever	'40–	'40–	5/8 x 1-7/8	8
HZ 7008 H	Spring for Cylinder Top Cover Hinged Extension Latch Pin (2 used)	'40–	'40–	7/16 x 2	10
P 8337 H	Spring for Unloading Auger Latch Lever on Grain Tank	1940	1940	5/16 x 2-1/2	22-1/2
P 9886 H	Platform Lifting Spring	1940	1940	1-3/4 x 32-1/2	98
P 26286 H	Spring for Reel Front Drive Chain Tightener Arm	'40–	'40–	3/4 x 8	86
P 26323 H	Spring for Reel Drive Sprocket on Main Wheel Axle	'40–	'40–	1-5/8 x 1-1/8	5
P 27527 H	Spring for Slip Clutch on Reel Pipe	'40–	'40–	2-1/4 x 4	6
P 27572 H	Slip Clutch Spring on Power Shaft (Blood Bros. No. 504265)	'40–	'40–	2-1/2 x 3-5/8	6
P 27808 H	Slip Clutch Spring on Grain Tank Auger Drive Shaft	'40–	'40–	2-1/8 x 2-1/2	5
P 28584 H	Tightener Spring for Feeder Canvas (2 used)	'40–	'40–	11/16 x 3-1/4	16-1/2
P 31529 H	Tightener Spring for Straw Rack Conveyor Chain (2 used)	'40–	'40–	3/4 x 2-13/16	29-1/2
P 31827 H	Spring for Unloading Auger Latch Lever on Grain Tank	'40–	'40–	7/16 x 2-1/2	17
S 6179 H	Spring (3 used) Conveyor, under Straw Rack Chain Tightener Bracket 1940 (2 used), Grain Tank Elevator Conveyor Chain Drive Belt Tightener Arm	'40–	'40–	3/4 x 4-5/16	45
Y 3082 B	Platform Lifting Lever Detent Spring (2 used)	'40–	'40–		

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	ZERK FITTINGS			
JD 7759	Zerk Fitting, 1/8" Pipe Thread, Straight (Zerk No. 1610)	'40–	'40–	
JD 7760	Zerk Fitting, 1/8" Pipe Thread, Elbow 67-1/2° (Zerk No. 1612)	'40–	'40–	
JD 7771	Zerk Fitting, 1/8" Pipe Thread, Straight (1-1/4" Long) (Zerk No. 1607)	'40–	'40–	
JD 7778	Zerk Fitting, 1/8" Pipe Thread, Elbow 30° (1-3/32" Long) (Zerk No. 1611)	'40–	'40–	
JD 7779	Zerk Fitting, 1/8" Pipe Thread, Straight (2-5/8" Long) (Zerk No. 1684)	'40–	'40–	
JD 7781	Zerk Fitting, 1/8" Pipe Thread, Elbow 90° (Zerk No. 1613)	'40–	'40–	
JD 7783	Zerk Fitting, 1/8" Pipe Thread, Elbow 30° (2-1/8" Long) (Zerk No. 1638)	'40–	'40–	
JD 7788	Zerk Fitting, 1/4" Pipe Thread, Elbow 45° (Zerk No. 1637) (No Cut)	'40–	'40–	
JD 7797	Zerk Fitting, 1/4" Pipe Thread, Straight (Zerk No. 1641) (No Cut)	'40–	'40–	

For Cuts of Repair Parts, see pages 89 and 90.

Cat. No.	Description	A and B	G	D and Styled D	G. P. Std.	G. P. Wide Tread	AR, BR, BO, and AO121	AO128	Similar No.
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1940	1940	1940	1940	1940	1940	1940	AP12624H
AP10906 H	Shield over Front End of Power Shaft	1940	1940	1940	'40–	'40–	'40–	'40–	AP12127H
AP12018 H	Connecting Shield from Tractor to Shield on Tractor Hitch	'40–	'40–	'40–					
AP12127 H	Shield over Front End of Power Shaft	'40–	'40–	'40–					AP10906H
AP12624 H	Tubular Shaft, Tractor to Tractor Hitch	'40–	'40–	'40–	'40–	'40–	'40–	'40–	AP10578H
B 471 H	Roller Bearing Box for Take-Off Shaft Extension				'40–	'40–			
B 478 H	Box Ends for Take-Off Bearing Box (2 used)				'40–	'40–			
B 4300 H	Lock Washer for 5/8" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	'40–	
B 5479 H	Retainer for Take-Off Shaft Extension Roller Bearing Box				'40–	'40–			
B 5838 H	Lock Washer for 3/4" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	'40–	
B 8046 H	Pivot Plate on Front End of Power Shaft Shield on Front of Tractor Hitch	'40–	'40–	'40–					
B 8050 H	Attaching Bracket on Connecting Shield from Tractor to Shield on Tractor Hitch (2 used)	'40–	'40–	'40–					
B 8054 H	Pivot Bolt on Connecting Shield (3/8" x 3-1/2") (2 used)	'40–	'40–	'40–					
B 8069 H	Extension for Shield on Tractor over Power Take-Off Shaft (No Cut)	'40–	'40–	'40–					
B 8070 H	Reinforcing Plate for Power Take-Off Shield Extension (No Cut)	'40–	'40–	'40–					
B 8742 H	Felt Washer for Take-Off Shaft Extension Roller Bearing Box Ends (2 used)				'40–	'40–			
E 2666 H	Spring on Connecting Shield Pivot Bolt (2 used)	'40–	'40–	'40–					
E 3222 H	Universal Joint Connection (2 used)	1940	1940	1940	1940	1940	1940	1940	P31572H
E 3223 H	Bushings for Universal Joint Connection (8 used)	1940	1940	1940	1940	1940	1940	1940	P31571H
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1940	1940	1940	1940	1940	1940	1940	P31574H
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1940	1940	1940	1940	1940	1940	1940	P31573H
E 3226 H	Universal Joint End (1-1/8" Splined) (not used on "A" Tractors) (used on AO Tractors up to Serial No. 260,000)	1940			1940	1940	1940	1940	P31577H
E 3227 H	Universal Joint End (1-3/8" Splined) (not used on "B" Tractors) (used on AO Tractors after Serial No. 260,000)	1940		1940				1940	P31576H
E 3228 H	Universal Joint End (1-3/4" Splined)		1940						P31578H
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1940	1940	1940	1940	1940	1940	1940	
HZ 6363 H	Lock Washer for 3/8" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	'40–	
JD 7462 R	Outer Sleeve for JD7512R Bearing (Hyatt No. 4450)				'40–	'40–			
JD 7512 R	Hyatt Bearing, Complete for Power Shaft Extension (less Sleeve) (Sleeve JD7462R) (Hyatt No. 16845)				'40–	'40–			
P 24203 H	Clamp for Extension Drawbar	'40–	'40–						
P 24517 H	Extension Drawbar (Model "A" 410,000 to 460,000) (Model "B" 1000 to 42,200)	'40–							
P 24590 H	Extension Drawbar (Model "D" only)			'40–					
P 24591 H	Plate, R. H., for Extension Drawbar			'40–					
P 24592 H	Plate, L. H., for Extension Drawbar			'40–					
P 24651 H	Support, Rear, for Shield on Tractor					'40–			
P 24664 H	Extension Drawbar (Channel)						'40–		
P 24665 H	Bracket for Front End of Extension Drawbar						'40–		
P 24666 H	Plate on Rear End of Extension Drawbar						'40–		
P 24667 H	Bracket for Front End of Extension Drawbar							'40–	
P 24668 H	Extension Drawbar							'40–	
P 24673 H	Extension Drawbar (2 used)				'40–				
P 24676 H	Shield on Tractor				'40–				

For Cuts of Repair Parts, see pages 90 and 91.

HOOK-UP EQUIPMENT FOR JOHN DEERE TRACTORS—Continued

Cat. No.	Description	A and B	G	D and Styled D	G. P. Std.	G. P. Wide Tread	AR, BR, BO, and AO121	AO128	Similar No.
P 24678 H	Bearing Box Support Bracket	.....	.....	.....	'40–	.....	.....	.....	.....
P 24679 H	Extension Drawbar	.....	.....	.....	.....	'40–	.....	.....	.....
P 24680 H	Bearing Box Support Bracket	.....	.....	.....	'40–	.....	.....	.....	.....
P 24681 H	Plate for Drawbar on Tractor (2 used)	.....	.....	.....	.....	'40–	.....	.....	.....
P 24682 H	Support, Front, for Shield on Tractor	.....	.....	'40–	.....	.....	.....	.....	.....
P 26659 H	Extension Drawbar (Styled "D" only)	1940	1940	1940	1940	1940	'40–	'40–	P31575H
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1940	1940	1940	'40–	'40–	'40–	'40–	P29711H
P 27805 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	.....	.....	.....	.....	.....	'40–	'40–	.....
P 27816 H	Adjusting Plate for Platform Lifting Lever	.....	.....	.....	'40–	.....	.....	.....	.....
P 28118 H	Extension for Take-Off Shaft on Tractor	.....	.....	.....	.....	'40–	.....	.....	.....
P 28119 H	Extension for Take-Off Shaft on Tractor	'40–	'40–	'40–	.....	.....	.....	.....	P27805H
P 29711 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	.....	.....	.....	.....	'40–	.....	.....	.....
P 29747 H	Shield on Tractor	'40–	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31568 H	Lock Plate for Cover Plate Cap Screw on Universal Joint	'40–	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31569 H	Cap Screw for Universal Joint Cover Plate (No Cut)	'40–	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31570 H	Cover Plate for Universal Joint	'40–	'40–	'40–	'40–	'40–	'40–	'40–	E3223H
P 31571 H	Bushing for Universal Joint Connection (8 used)	'40–	'40–	'40–	'40–	'40–	'40–	'40–	E3222H
P 31572 H	Universal Joint Connection (2 used)	'40–	'40–	'40–	'40–	'40–	'40–	'40–	E3225H
P 31573 H	Retainer for Universal Joint Grease Washer (8 used)	'40–	'40–	'40–	'40–	'40–	'40–	'40–	E3224H
P 31574 H	Grease Washer for Universal Joints (Cork) (8 used)	1940	1940	1940	1940	1940	1940	1940	P27579H–P32876H
P 31575 H	Universal Joint on Front End of Shaft on Tractor Hitch (P32876H will work)	'40–	.....	'40–	.....	.....	.....	'40–	E3227H
P 31576 H	Universal Joint End (1-3/8" Splined) (not used on "B" Tractor) (used on "AO" Tractor after Serial No. 260,000)	'40–	.....	.....	'40–	'40–	'40–	'40–	E3226H E3228H
P 31577 H	Universal Joint End (1-1/8" Splined) (not used on "A" Tractors after Serial No. 488,001) (not used on "AO" Tractors after Serial No. 260,000)	.....	'40–	.....	.....	.....	.....	.....	.....
P 31578 H	Universal Joint End (1-3/4" Splined)	'41–	'41–	'41–	'41–	'41–	'41–	'41–	P31575H
P 32876 H	Universal Joint on Front End of Shaft on Tractor Hitch (works for P31575H) (No Cut)	'40–	'40–	'40–	'40–	'40–	'40–	'40–	.....
Z 5314 H	Lock Washer for 1/2" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	'40–	.....
Z 5578 H	Lock Washer for 7/16" Bolt								

For Cuts of Repair Parts, see page 91.

HOOK-UP EQUIPMENT FOR I.H.C., MASSEY-HARRIS AND MINNEAPOLIS-MOLINE TRACTORS

Cat. No.	Description	Massey-Harris	Mpls.-Moline	I. H. C. TRACTORS				Similar No.
		101S Jr. 101R Jr. 101S Sr. 101R Sr.	KT, KTA, MT and MTA	F20 and F30	W30, 10-20, and 15-30	F12 and F14	M	
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1940	1940	1940	1940	1940	.....	AP12624H
AP10906 H	Shield over Front End of Power Shaft	.....	.....	'40–	'40–	1940	.....	AP12127H
AP12018 H	Connecting Shield from Tractor to Shield on Tractor Hitch	'40–	'40–	.....	.....	'40–	'40–	.....
AP12127 H	Shield over Front End of Power Shaft	'40–	'40–	.....	.....	'40–	'40–	AP10906H
AP12624 H	Tubular Shaft, Tractor to Tractor Hitch	'40–	'40–	'40–	'40–	'40–	'40–	AP10578H
AP12717 H	Extension Drawbar (Special on F12 and F14) (works for P24655H) (No Cut)	.....	.....	'40–	'40–	'40–	.....	P24655H
AZ 2189 H	Shield, Complete on Tractor	.....	.....	.....	.....	1940	.....	.....
B 478 H	Box Ends for Take-Off Shaft Bearing Box (2 used)	.....	.....	'40–	.....	.....	.....	.....
B 488 H	Roller Bearing Box for Take-Off Shaft Extension	.....	.....	'40–	.....	.....	.....	.....
B 4300 H	Lock Washer for 5/8" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	.....
B 5838 H	Lock Washer for 3/4" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	.....
B 8046 H	Pivot Plate on Front End of Power Shaft Shield on Front End of Tractor Hitch	'40–	'40–	.....	.....	'40–	'40–	.....
B 8050 H	Attaching Bracket on Connecting Shield from Tractor to Shield on Tractor Hitch (2 used)	'40–	'40–	.....	.....	'40–	'40–	.....
B 8054 H	Pivot Bolt on Connecting Shield (3/8" x 3-1/2") (2 used)	'40–	'40–	.....	.....	'40–	'40–	.....
B 8742 H	Felt Washer for Take-Off Shaft Extension Box Ends (2 used)	.....	.....	'40–	.....	.....	.....	.....
E 2666 H	Spring on Connecting Shield Pivot Bolt (2 used)	'40–	'40–	.....	.....	'40–	'40–	.....
E 3222 H	Universal Joint Connection (2 used)	1940	1940	1940	1940	1940	.....	P31572H
E 3223 H	Bushing for Universal Joint Connection (8 used)	1940	1940	1940	1940	1940	.....	P31571H
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1940	1940	1940	1940	1940	.....	P31574H
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1940	1940	1940	1940	1940	.....	P31573H
E 3226 H	Universal Joint End (1-1/8" Splined) (2 used on F20 only)	.....	.....	1940	.....	1940	.....	P31577H
E 3227 H	Universal Joint End (1-3/8" Splined) (not used on F20)	1940	1940	1940	1940	.....	.....	P31576H
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1940	1940	1940	1940	1940	.....	.....
HZ 6363 H	Lock Washer for 3/8" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	.....
J 290 H	Drive Sleeve on Tractor Take-Off Shaft	.....	.....	.....	.....	'40–	.....	.....
JD 7462 R	Outer Sleeve for JD7512R Bearing (Hyatt No. 4450)	.....	.....	'40–	.....	.....	.....	.....
JD 7512 R	Hyatt Bearing, Complete for Power Shaft Extension (less Sleeve) (Sleeve JD7462R) (Hyatt No. 16845)	.....	.....	'40–	.....	.....	.....	.....
P 2631 H	Drive Pulley for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing (F20 only)	.....	.....	1940	.....	.....	.....	P2867H
P 2867 H	Drive Pulley for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing (F20 only)	.....	.....	'40–	.....	.....	.....	P2631H
P 15579 H	Extension for Take-Off Shaft on Tractor	.....	.....	.....	'40–	.....	.....	.....
P 22530 H	Shield on Tractor	.....	.....	.....	'40–	.....	.....	.....
P 22531 H	Support, Front, for Shield on Tractor (2 used)	.....	.....	.....	'40–	.....	.....	.....
P 22532 H	Support, Rear, for Shield on Tractor	.....	.....	.....	'40–	.....	.....	.....
P 24650 H	Support, Front, for Shield on Tractor (2 used)	.....	.....	'40–	.....	.....	.....	.....
P 24653 H	Shield on Tractor	.....	.....	'40–	.....	.....	.....	.....
P 24655 H	Extension Drawbar (Special on F12 and F14) (AP12717H will work)	.....	.....	1940	1940	1940	.....	AP12717H
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1940	1940	1940	1940	1940	.....	P31575H
P 27805 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	.....	.....	'40–	'40–	1940	.....	.....
P 27869 H	Extension for Take-Off Shaft on Tractor	.....	.....	'40–	.....	.....	.....	.....
P 27956 H	Extension for Take-Off Shaft on Tractor	.....	.....	.....	.....	'40–	.....	.....
P 28502 H	Round Brace, R. H., from Bearing Box Bracket to Tractor Axle Housing	.....	.....	'40–	.....	.....	.....	.....

For Cuts of Repair Parts, see pages 90 and 91.

HOOK-UP EQUIPMENT FOR I.H.C., MASSEY-HARRIS AND MINNEAPOLIS-MOLINE TRACTORS—Continued

Cat. No.	Description	Massey-Harris	Mpls.-Moline	I. H. C. TRACTORS				Similar No.
		101S Jr. 101R Jr. 101S Sr. 101R Sr.	KT, KTA, MT and MTA	F20 and F30	W30, 10-20, and 15-30	F12 and F14	M	
P 28503 H	Round Brace, L. H., from Bearing Box Bracket to Tractor Axle Housing	.....	.....	'40–	.....	.....	.....	.....
P 29552 H	Flat Bracket on Bearing Box Support Bracket for Round Braces	.....	.....	'40–	.....	.....	.....	.....
P 29553 H	Support, Rear, for Shield on Tractor	.....	.....	'40–	.....	.....	.....	.....
P 29554 H	Support Strap for Bearing Box (2 used)	.....	.....	'40–	.....	.....	.....	.....
P 29711 H	Adjusting Plate for Shield over Front End of Power Drive Shaft (No Cut)	'40–	'40–	.....	.....	'40–	'40–	.....
P 29735 H	Bearing Box Support Bracket on Tractor Drawbar	.....	.....	'40–	.....	.....	.....	.....
P 30232 H	Extension Drawbar	.....	.....	.....	.....	.....	'40–	.....
P 30470 H	Extension Drawbar (No Cut)	'40–	.....	.....	.....	.....	.....	.....
P 31568 H	Lock Plate for Cover Plate Cap Screw on Universal Joint	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31569 H	Cap Screw for Universal Joint Cover Plate (No Cut)	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31570 H	Cover Plate for Universal Joint	'40–	'40–	'40–	'40–	'40–	'40–	.....
P 31571 H	Bushing for Universal Joint Connection (8 used)	'40–	'40–	'40–	'40–	'40–	'40–	E3223H
P 31572 H	Universal Joint Connection (2 used)	'40–	'40–	'40–	'40–	'40–	'40–	E3222H
P 31573 H	Retainer for Universal Joint Grease Washer (8 used)	'40–	'40–	'40–	'40–	'40–	'40 -	E3225H
P 31574 H	Grease Washer for Universal Joints (Cork) (8 used)	'40–	'40–	'40–	'40–	'40–	'40–	E3224H
P 31575 H	Universal Joint on Front End of Shaft on Tractor Hitch (P32876H will work)	1940	1940	1940	1940	1940	1940	P27579H–P32876H
P 31576 H	Universal Joint End (1-3/8" Splined) (not used on F20)	'40–	'40–	'40–	'40–	.....	'40–	E3227H
P 31577 H	Universal Joint End (1-1/8" Splined) (2 used on F20 only)	.....	.....	'40–	.....	'40–	.....	E3226H
P 31643 H	Extension Drawbar (No Cut)	.....	'40–	.....	.....	.....	.....	.....
P 32876 H	Universal Joint on Front End of Shaft on Tractor Hitch (works for P31575H) (No Cut)	'41–	'41–	'41–	'41–	'41–	'41–	P31575H
Z 5314 H	Lock Washer for 1/2" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	.....
Z 5578 H	Lock Washer for 7/16" Bolt	'40–	'40–	'40–	'40–	'40–	'40–	.....
Z 7254 H	Stiffener Angle for Shield on Tractor	.....	.....	.....	.....	'40–	.....	.....
Z 7414 H	Support Angle for Shield on Tractor	.....	.....	.....	.....	'40–	.....	.....

For Cuts of Repair Parts, see page 91.

HOOK-UP EQUIPMENT FOR HART-PARR, ALLIS-CHALMERS AND CASE TRACTORS

Cat. No.	Description	HART-PARR		Allis-Chalmers WC and RC	CASE		Similar No.
		Oliver 70	Oliver Row-Crop		RC and DC	C and CC	
AP10578 H	Tubular Shaft Tractor to Tractor Hitch	1940	1940	1940	1940	1940	AP12624H
AP10906 H	Shield over Front End of Power Shaft	'40–	'40–	1940	1940	1940	AP12127H
AP12018 H	Connecting Shield from Tractor to Shield on Tractor Hitch	.....	.....	'40–	'40–	'40–	.....
AP12127 H	Shield over Front End of Power Shaft	.....	.....	'40–	'40–	'40–	.....
AP12624 H	Tubular Shaft, Tractor to Tractor Hitch	'40–	'40–	'40–	'40–	'40–	AP10578H
B 4300 H	Lock Washer for 5/8" Bolt	'40–	'40–	'40–	'40–	'40–	.....
B 5838 H	Lock Washer for 3/4" Bolt	'40–	'40–	'40–	'40–	'40–	.....
B 6338 H	Clamp for Extension Drawbar	.....	.....	.....	'40–	'40–	.....
B 8046 H	Pivot Plate on Front End of Power Shaft Shield on Front End of Tractor Hitch	.....	.....	'40–	'40–	'40–	.....
B 8050 H	Attaching Bracket on Connecting Shield from Tractor to Shield on Tractor Hitch (2 used)	.....	.....	'40–	'40–	'40–	.....
B 8054 H	Pivot Bolt on Connecting Shield (3/8" x 3-1/2") (2 used)	.....	.....	'40–	'40–	'40–	.....
E 196 H	Drive Sleeve on Power Take-Off Shaft (Case C and CC with Power Lift)	'40–	'40–	.....	.....	1940	.....
E 2666 H	Spring on Connecting Shield Pivot Bolt (2 used)	.....	.....	'40–	'40–	'40–	.....
E 3222 H	Universal Joint Connection (2 used)	1940	1940	1940	1940	1940	P31572H
E 3223 H	Bushing for Universal Joint Connection (8 used)	1940	1940	1940	1940	1940	P31571H
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1940	1940	1940	1940	1940	P31574H
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1940	1940	1940	1940	1940	P31573H
E 3226 H	Universal Joint End (1-1/8" Splined) (Case C and CC without Power Lift 1940)	1940	1940	.....	1940	1940	P31577H
E 3227 H	Universal Joint End (1-3/8" Splined) (Case C and CC with Power Lift)	.....	.....	1940	.....	1940	P31576H
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1940	1940	1940	1940	1940	.....
HZ 6363 H	Lock Washer for 3/8" Bolt	'40–	'40–	'40–	'40–	'40–	.....
J 290 H	Drive Sleeve on Power Take-Off Shaft (Case Tractors without Power Lift 1940)	.....	.....	.....	'40–	'40–	.....
P 24672 H	Extension Drawbar	'40–	.....	.....	.....	.....	.....
P 24725 H	Extension Drawbar	1940	1940	1940	1940	1940	P31575H
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	'40–	'40–	1940	1940	1940	P29711H
P 27805 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	'40–	'40–	.....	'40–	'40–	.....
P 27956 H	Extension for Take-Off Shaft on Tractor (Case Tractors without Power Lift 1940)	.....	'40–	.....	.....	.....	.....
P 28137 H	Extension Drawbar	.....	'40–	.....	.....	.....	.....
P 28138 H	Power Shaft Front Bearing Box Support Straps (2 used)	.....	'40–	.....	.....	.....	.....
P 28139 H	Diagonal Brace for Bearing Box Support Straps (2 used)	.....	'40–	.....	.....	.....	.....
P 29711 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	.....	.....	'40–	'40–	'40–	.....
P 31544 H	Flat Extension on Adjusting Bracket for Rear Shield over Telescoping Pipe on Tractor Hitch	.....	'40–	.....	.....	.....	.....
P 31568 H	Lock Plate for Cover Plate Cap Screw on Universal Joint	'40–	'40–	'40–	'40–	'40–	.....
P 31569 H	Cap Screw for Universal Joint Cover Plate (No Cut)	'40–	'40–	'40–	'40–	'40–	.....
P 31570 H	Cover Plate for Universal Joint	'40–	'40–	'40–	'40–	'40–	.....
P 31571 H	Bushing for Universal Joint Connection (8 used)	'40–	'40–	'40–	'40–	'40–	E3223H
P 31572 H	Universal Joint Connection (2 used)	'40–	'40–	'40–	'40–	'40–	E3222H
P 31573 H	Retainer for Universal Joint Washer (8 used)	'40–	'40–	'40–	'40–	'40–	E3225H
P 31574 H	Grease Washer for Universal Joint (8 used)	'40–	'40–	'40–	'40–	'40–	E3224H
P 31575 H	Universal Joint on Front End of Shaft on Tractor Hitch (P32876H will work)	1940	1940	1940	1940	1940	P27579H–P32876H
P 31576 H	Universal Joint End (1-3/8" Splined) (Case C and CC with Power Lift)	.....	.....	'40–	.....	1940	E3227H
P 31577 H	Universal Joint End (1-1/8" Splined) (Case C and CC without Power Lift 1940)	'40–	'40–	.....	'40–	'40–	E3226H
P 32876 H	Universal Joint on Front End of Shaft on Tractor Hitch (works for P31575H) (No Cut)	'41–	'41–	'41–	'41–	'41–	P31575H
Z 5314 H	Lock Washer for 1/2" Bolt	'40–	'40–	'40–	'40–	'40–	.....
Z 5578 H	Lock Washer for 7/16" Bolt	'40–	'40–	'40–	'40–	'40–	.....

For Cuts of Repair Parts, see pages 90 and 91.

HOOK-UP EQUIPMENT FOR "CATERPILLAR" TRACTORS

Cat. No.	Description	22	D2 or R2	28	Similar No.
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1940	1940	1940	AP12624H
AP10906 H	Shield over Front End of Power Shaft	'40–	'40–	'40–	.....
AP12624 H	Tubular Shaft, Tractor to Tractor Hitch	'40–	'40–	'40–	AP10578H
E 3222 H	Universal Joint Connection	1940	1940	1940	P31572H
E 3223 H	Bushing for Universal Joint Connection	1940	1940	1940	P31571H
E 3224 H	Grease Washer for Universal Joint (Cork)	1940	1940	1940	P31574H
E 3225 H	Retainer for Universal Joint Grease Washer	1940	1940	1940	P31573H
E 3227 H	Universal Joint End (1-3/8" Splined)	1940	1940	1940	P31576H
E 3229 H	Pin for Universal Joint Connection Bushings	1940	1940	1940	.....
P 6118 H	Lock Washer for 1" Bolt	'40–	'40–	'40–	.....
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1940	1940	1940	P31575H
P 27805 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	'40–	'40–	'40–	.....
P 28413 H	Extension Drawbar	.....	'40–	.....	.....
P 28414 H	Clamp for Extension Drawbar	.....	'40–	.....	.....
P 28436 H	Extension Drawbar	.....	.....	'40–	.....
P 31568 H	Lock Plate for Cover Plate Cap Screw on Universal Joint	'40–	'40–	'40–	.....
P 31569 H	Cap Screw for Universal Joint Cover Plate (No Cut)	'40–	'40–	'40–	.....
P 31570 H	Cover Plate for Universal Joint	'40–	'40–	'40–	.....
P 31571 H	Bushing for Universal Joint Connection	'40–	'40–	'40–	E3223H
P 31572 H	Universal Joint Connection	'40–	'40–	'40–	E3222H
P 31573 H	Retainer for Universal Joint Grease Washer	'40–	'40–	'40–	E3225H
P 31574 H	Grease Washer for Universal Joint (Cork)	'40–	'40–	'40–	E3224H
P 31575 H	Universal Joint on Front End of Shaft on Tractor Hitch (P32876H will work)	1940	1940	1940	P27579H–P32876H
P 31576 H	Universal Joint End (1-3/8" Splined)	'40–	'40–	'40–	E3227H
P 32876 H	Universal Joint on Front End of Shaft on Tractor Hitch (works for P31575H) (No Cut)	'41–	'41–	'41–	P31575H

For Cuts of Repair Parts, see pages 90 and 91.

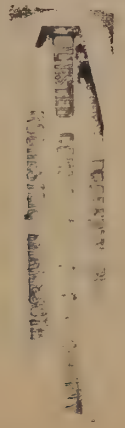

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SLOW SPEED ATTACHMENT (TO PROVIDE CYLINDER SPEEDS OF 175, 250 AND 350 R. P. M.)			
AP12432 H	Tightener Arm for Cylinder Drive Chain.....(No Cut)	1940	1940	.....
AP12574 H	Drive Chain for Cylinder (118 Links, 5/8" Pitch Roller Chain) (Order 2-AP6093H, 1-AP6095H, 4-P20351H and 4-P20352H) (350 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
AP12575 H	Drive Chain for Cylinder (135 Links, 5/8" Pitch Roller Chain) (Order 2-AP6093H, 1-AP6094H and 1-AP6095H) (175 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
AP12576 H	Drive Chain for Cylinder (125 Links, 5/8" Pitch Roller Chain) (Order 2-AP6093H and 1-AP6094H) (250 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
B 4835 H	Key for Cylinder Drive Sprocket on Driven Shaft in Power Drive Gear Housing (5/16" x 5/16" x 2").....(No Cut)	'40–	'40–	.....
E 2784 H	Washer on Cylinder Drive Chain Tightener Stud (1-1/32" x 1-7/8").....(No Cut)	'40–	'40–	.....
JD 7455 H	Outer Sleeve for JD7911H Hyatt Roller Bearing (Hyatt No. 4831).....(No Cut)	1940	1940	JD8305
JD 7911 H	Hyatt Roller Bearing, Complete in Cylinder Drive Chain Tightener Sprocket (less Sleeve) (Sleeve JD7455H) (Hyatt No. 94540).....(No Cut)	1940	1940	JD7929
JD 7929 H	Hyatt Roller Bearing, Complete in Cylinder Drive Chain Tightener Sprocket (less Sleeve) (Sleeve JD8305H) (Hyatt No. 93528).....(No Cut)	'41–	'41–	JD7911H
JD 8305 H	Outer Sleeve for JD7929H Hyatt Roller Bearing (Hyatt No. 4547).....(No Cut)	'41–	'41–	JD7455H
P 1870 H	Stud for Cylinder Drive Chain Tightener Sprocket.....(No Cut)	1940	1940	P33297H
P 2001 H	Tightener Sprocket for Cylinder Drive Chain.....(No Cut)	1940	1940	P2998H
P 2809 H	Hub for Driven Sprocket on Cylinder Shaft.....(No Cut)	'40–	'40–	P2893H
P 2893 H	Hub for Driven Sprocket on Cylinder Shaft.....(No Cut)	1940	1940	P2809H
P 2998 H	Tightener Sprocket for Cylinder Drive Chain.....(No Cut)	'41–	'41–	P2001H
P 30300 H	Drive Sprocket for Cylinder on Driven Shaft in Power Drive Gear Housing (14 Teeth).....(No Cut)	'40–	'40–	P32055H
P 30306 H	Driven Sprocket on Cylinder Shaft (66 Teeth) (175 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
P 30307 H	Driven Sprocket on Cylinder Shaft (33 Teeth) (350 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
P 30308 H	Driven Sprocket on Cylinder Shaft (46 Teeth) (250 R. P. M. Cylinder Speed).....(No Cut)	'40–	'40–	.....
P 30347 H	Gib Key for Cylinder Drive and Driven Sprocket (2 used) (5/16" x 5/16" x 2-1/2").....(No Cut)	'40–	'40–	.....
P 30360 H	Sand Collar for Cylinder Drive Chain Tightener Sprocket(No Cut)	'40–	'40–	.....
P 32055 H	Drive Sprocket for Cylinder on Driven Shaft in Power Drive Gear Housing (14 Teeth).....(No Cut)	1940	1940	P30300H
P 32979 H	Bearing Retainer Washer for Cylinder Drive Chain Tightener Sprocket.....(No Cut)	'41–	'41–	.....
P 33297 H	Stud for Cylinder Drive Chain Tightener Sprocket.....(No Cut)	'41–	'41–	.....
	KAFFIR CORN HEADING ATTACHMENT			
AP10565 H	Guard, Pointed Lip (P2342H Complete).....	1940	1940	.....
AP10566 H	End Guard, Pointed Lip (P2342H Complete) (2 used).....	.....	1940	.....
AP11506 H	Shield, Complete over Guards on Platform.....	1940	.....	.....
AP11534 H	Support Bracket, Middle, for Cutter Bar Angle.....	1940	1940	.....
AP11578 H	Sickle, Complete with Drive Plates.....	1940	.....	.....
AP11725 H	Grain Shield between Cutter Bars.....	1940	.....	.....
AP11750 H	Grain Shield between Cutter Bars.....	.....	1940	.....
AP11751 H	Shield, Complete over Guards on Platform.....	.....	1940	.....
AP12728 H	Sickle, Complete with Drive Plates.....	.....	1940	.....
AP13608 H	Shield under Separator for Fan Housing and Screens...(No Cut)	1940	.....	.....
AP13609 H	Shield under Separator for Fan Housing and Screens...(No Cut)	.....	1940	.....
P 2342 H	Guard, Pointed Lip (Order AP10565H).....	1940	1940	.....
P 2343 H	End Guard, Pointed Lip (Order AP10566H) (2 used).....	.....	1940	.....
P 2577 H	Sickle Holder (3 used).....	1940	1940	.....
P 21976 H	Cutter Bar Angle.....(No Cut)	1940	.....	.....
P 26610 H	Ledger Plate.....	1940	1940	.....
P 27038 H	Wearing Plate for Sickle.....	1940	1940	.....
P 28864 H	Sickle Drive Plate (2 used).....(No Cut)	1940	1940	.....
P 28866 H	Shim under Sickle Holder (3 used).....	1940	1940	.....
P 29175 H	Support Bracket, R. H., for Cutter Bar Angle.....	1940	1940	.....
P 29325 H	Cutter Bar Angle.....	.....	1940	.....
P 31302 H	U-Bolt for Shields under Separator (3 used).....	1940	1940	.....
P 31303 H	Clamp Strap on U-Bolts for Shield under Separator (3 used)....	1940	1940	.....
P 31599 H	Support Bracket, L. H., for Cutter Bar Angle.....	1940	1940	.....
P 32488 H	Support Angle, R. H., for Shield under Separator.....	1940	1940	.....

For Cuts of Repair Parts, see pages 91 and 92.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	KAFFIR CORN HEADING ATTACHMENT—Continued			
P 32489 H	Support Angle, L. H. and Middle for Shield under Separator (2 used)	1940	1940	.....
P 32492 H	Shield under Separator for Clean Grain Auger Housing.(No Cut)	1940	.....	.....
P 32493 H	Shield under Separator for Clean Grain Auger Housing.(No Cut)	.....	1940	.....
P 32494 H	Shield for Fan Drive Belt	1940	1940	.....
P 32496 H	Connection from Clean Grain Auger Housing to Elevator	1940	.....	.....
P 32497 H	Connection from Clean Grain Auger Housing to Elevator	.....	1940	.....
P 32498 H	Connection from Tailings Auger Housing to Elevator	1940	.....	.....
P 32499 H	Connection from Tailings Auger Housing to Elevator	.....	1940	.....
Z 5654 H	Serrated Section	1940	1940	.....
	RIDGE BURSTERS (SPECIAL) (USED TO PROTECT FAN AND AUGER HOUSINGS)			
P 31298 H	Plate, Front, for Fan and Auger Housing.....(No Cut)	'40–	.....	.....
P 31299 H	Plate, Rear, for Fan and Auger Housing.....(No Cut)	'40–	.....	.....
P 31300 H	Plate, Front, for Fan and Auger Housing.....(No Cut)	.....	'40–	.....
P 31301 H	Plate, Rear, for Fan and Auger Housing.....(No Cut)	.....	'40–	.....
P 31302 H	U-Bolt for Fan and Auger Housing Plate Support Angle (3 used).....(No Cut)	'40–	1940	P33474H
P 31303 H	Clamp Strap for Front End of Support Angle (3 used)..(No Cut)	'40–	'40–	.....
P 32005 H	Support Angle (R. H., Middle and L. H. on No. 12-A 1940, Middle and L. H. only '41–) for Fan and Auger Housing Plates (3 used).....(No Cut)	'40–	'40–	P33432H
P 33432 H	Support Angle, R. H., for Fan and Auger Housing Plate..(No Cut)	.....	'41–	P32005H
P 33474 H	U-Bolt for Fan and Auger Housing Plate Support Angle (3 used).....(No Cut)	.....	'41–	P31302H
	JOHN DEERE-INNES PICK-UP (STIFF TOOTH)			
AP11067 H	Tightener Bracket on Ends of Platform Lifting Springs (2 used)	1940	1940	AP12992H–P2965H
AP12992 H	Tightener Bracket on Ends of Platform Lifting Springs (Front and Rear 1940, Rear only '41–)	'40–	'40–	AP11067H–P2965H
AP13561 H	Platform Lifting Spring (2 used)	.....	1940	P9886H–AP13898H
AP13898 H	Platform Lifting Spring (2 used).....(No Cut)	'41–	'41–	P9886H–AP13561H
P 680 H	Nut for Platform Lifting Springs (4 used)	1940	1940	P2936H
P 2936 H	Nut for Platform Lifting Spring (Front and Rear 1940, Rear only '41–)	'41–	'40–	P680H–P2965H
P 2965 H	Tightener Bracket on Front End of Platform Lifting Spring.....(No Cut)	'41–	'41–	AP11067H–AP12992H–P680H–P2936H
P 9886 H	Platform Lifting Spring (2 used)	1940	1940	AP13561H–AP13898H
P 28500 H	Key for Pick-Up Drive Chain Drive and Driven Sprockets (3/16" x 3/16" x 1") (2 used).....(No Cut)	'40–	'40–	.....
P 28534 H	Roller Chain Link, 1/2" Pitch.....(No Cut)	'40–	'40–	.....
P 28535 H	Roller Chain Connecting Link for 1/2" Pitch Roller Chain.....(No Cut)	'40–	'40–	.....
P 28536 H	Roller Chain End Link for 1/2" Pitch Roller Chain....(No Cut)	'40–	'40–	.....
P 28537 H	Snap Spring Washer for 1/2" Pitch Steel Roller Connecting Link.....(No Cut)	'40–	'40–	.....
P 29362 H	Pin for 1/2" Pitch Roller Chain Offset End Link.....(No Cut)	'40–	'40–	.....
P 30243 H	Adjusting Bolt, Rear, for Platform Lifting Springs	1940	1940	P32340H–P32773H
P 30336 H	Adjusting Shoe (2 used)	1940	1940	W921-W922
P 30358 H	Bracket for Adjusting Shoe (2 used)	1940	1940	W923-W924
P 31788 H	Adjusting Rod Front for Platform Lifting Springs	1940	1940	P32339H
P 32339 H	Adjusting Rod, Front, for Platform Lifting Springs	.....	1940	P31788H
P 32340 H	Adjusting Bolt, Rear, for Platform Lifting Springs (P32773H will work)	.....	1940	P30243H–P32773H
P 32361 H	Main Drive Belt (works for W493).....(No Cut)	'40–	'40–	W493
P 32773 H	Adjusting Bolt, Rear, for Platform Lifting Springs (works for P32340H)	'41–	'41–	P30243H–P32340H
P 32778 H	Pin for Clevis on Front of Platform Lifting Springs (1/2" x 2") (Drilled)	'41–	'41–	.....
P 16NE	Box, Complete on Grain Slinger Shaft (3 used)	'40–	'40–	.....
P 117NE	Washer on Finger Stub Shaft and L. H. End of Grain Slinger Shaft	'40–	'40–	.....
W 8	Pick-Up Finger only	'40–	'40–	.....
W 14	Box for Drive Shaft on L. H. End of Pick-Up Housing.(No Cut)	'40–	'40–	.....
W 29	Anchor Pin for Finger Stub Shaft (2 used)	'40–	'40–	.....
W 30	Drive Sprocket for Pick-Up Housing (15Teeth)	'40–	'40–	.....

For Cuts of Repair Parts, see page 92.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE-INNES PICK-UP (STIFF TOOTH)—Continued			
W 31	Driven Sprocket for Pick-Up Housing (32 Teeth)	'40–	'40–	.....
W 32	Bronze Bearing in Hollow Drive Shaft for Pick-Up Housing (2 used)	'40–	'40–	.....
W 130	Wearing Wire in Pick-Up Housing for Fingers (2 used 11-A, 12 used 12-A) (Long) (No Cut)	'41–	'41–	.....
W 131	Wearing Wire in Pick-Up Housing for Fingers (10 used) (Short) (No Cut)	'41–	.....	.....
W 140	Bracket for Pick-Up Finger (28 used)	'40–	'40–	.....
W 160	Tightener Sprocket for Pick-Up Housing Drive Chain	1940	1940	W915
W 165	Main Drive Sheave Half on L. H. End of Platform Canvas Drive Roller (2 used) (6")	'40–	'40–	.....
W 169	Pick-Up Housing End, R. H.	'40–	'40–	.....
W 170	Hub on Pick-Up Housing End, R. H.	'40–	'40–	.....
W 188	Pick-Up Finger, Complete	'40–	'40–	.....
W 189	Drive Sprocket for Pick-Up Housing (10 Teeth) (Special)	'40–	'40–	.....
W 190	Drive Sprocket for Pick-Up Housing (12 Teeth) (Special)	'40–	'40–	.....
W 193	Threaded Hub for L. H. Slip Clutch on Driven Sheave on Grain Slinger Shaft	'40–	'40–	.....
W 194	Slip Clutch, L. H., for Main Driven Sheave on Grain Slinger Shaft	'40–	'40–	.....
W 195	Slip Clutch, R. H., for Main Driven Sheave on Grain Slinger Shaft	'40–	'40–	.....
W 251	Sheave Half for Driven Sheave on Grain Slinger Shaft (2 used)	'40–	'40–	.....
W 281	Key, Main Drive Sheave to Platform Canvas Drive Roller (3/16" x 3/16" x 1-1/2") (No Cut)	'40–	'40–	.....
W 361	Tightener Sheave for Main Drive Belt	'40–	'40–	.....
W 367	Hub for Grain Slinger (2 used)	'40–	'40–	.....
W 428	Slip Clutch Spring for Driven Sheave on Grain Slinger Shaft	'40–	'40–	.....
W 430	Pick-Up Housing End, L. H.	'40–	'40–	.....
W 433	Bracket on Cutter Bar for Pick-Up Support Plate, L. H.	'40–	'40–	.....
W 434	Bracket on Cutter Bar for Pick-Up Support Plate, R. H.	'40–	'40–	.....
W 435	Finger Stub Shaft, R. H.	'40–	'40–	.....
W 436	Finger Stub Shaft, L. H.	'40–	'40–	.....
W 437	Shaft for Fingers	'40–	.....	.....
W 441	Slip Clutch Nut for Drive Sheave on Grain Slinger Shaft	'40–	'40–	.....
W 454	Bronze Bearing for Box on Grain Slinger Shaft (3 used)	'40–	'40–	.....
W 457	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 2-5/8" from L. H. End) (not Marked)	1940	.....	.....
W 458	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 3-3/4" from L. H. End) (Marked No. 2)	1940	.....	.....
W 461	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 2-5/8" from L. H. End) (not Marked)	.....	1940	.....
W 462	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 3-3/4" from L. H. End) (Marked No. 2)	.....	1940	.....
W 463	Shaft for Fingers	.....	'40–	.....
W 464	Pipe Spacer on R. H. End of Finger Shaft	.....	'40–	.....
W 466	Support Plate, R. H., for Pick-Up on Platform Side Sheet	1940	1940	W930
W 467	Support Plate, L. H., for Pick-Up on Platform Side Sheet	1940	1940	W931
W 468	Shield for Cutter Bar	'40–	.....	.....
W 469	Shield for Cutter Bar	.....	'40–	.....
W 471	Shield over R. H. End of Pick-Up Housing	1940	1940	W927
W 472	Shield over L. H. End of Pick-Up Housing	1940	1940	W928
W 473	Bracket for Box on L. H. End of Pick-Up Drive Housing (No Cut)	'40–	'40–	.....
W 474	Pick-Up Drive Chain (55 Links, 1/2" Pitch Roller Chain) (RC41 Type Link) (No Cut)	'40–	'40–	.....
W 476	Hollow Drive Shaft, Complete with Bushing on L. H. End of Housing	'40–	'40–	.....
W 486	Box Bracket for Middle Box on Grain Slinger Shaft	'40–	'40–	.....
W 489	Shaft for Grain Slinger	'40–	.....	.....
W 490	Shaft for Grain Slinger	.....	'40–	.....
W 491	Grain Slinger Housing	'40–	.....	.....
W 492	Grain Slinger Housing	.....	'40–	.....
W 493	Main Drive Belt (P32361H will work) (No Cut)	1940	1940	P32361H
W 524	Tightener Bracket for Main Belt Tightener Sheave	'40–	'40–	.....
W 527	Hub for Main Drive Sheave on Platform Canvas Drive Roller	'40–	'40–	.....
W 532	Key, Slip Clutch, R. H. to Grain Slinger Shaft (3/16" x 3/16" x 1/2") (No Cut)	'40–	'40–	.....
W 578	Pipe Spacer between Pick-Up Support Plate L. H., and Platform Side Sheet	'40–	'40–	.....
W 579	Stud for Pick-Up Drive Chain Tightener Sprocket	1940	1940	W920
W 581	Angle Brace for Main Drive Belt Tightener Bracket	'40–	'40–	.....
W 584	Pipe Spacer on Grain Slinger Shaft between R. H. Slip Clutch and Middle Bearing Box (No Cut)	'40–	'40–	.....
W 585	Threaded Sleeve on Grain Slinger Shaft for Slip Clutch Nut	'40–	'40–	.....

For Cuts of Repair Parts, see pages 92 and 93.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE-INNES PICK-UP (STIFF TOOTH)—Continued			
W 586	Front Support for Pick-Up Support Plate, R. H.	'40–	'40–	.....
W 587	Front Support for Pick-Up Support Plate, L. H.	'40–	'40–	.....
W 589	Bracket for Box on L. H. End of Grain Slinger Shaft	'40–	'40–	.....
W 591	Brace for Outside Divider	'40–	'40–	.....
W 592	Brace for Inside Divider	'40–	'40–	.....
W 620	Flat Brace for Box Bracket on L. H. End of Grain Slinger Shaft	'40–	'40–	.....
W 624	Main Drive Sheave, Complete on L. H. End of Platform Canvas Drive Roller (Sheave Half W165) (Hub W527) (No Cut)	'40–	'40–	.....
W 625	Support for Box Bracket on L. H. End of Grain Slinger Shaft	'40–	'40–	.....
W 676	Pipe Spacer in Hub of Drive Pulley on L. H. End of Platform Canvas Drive Roller	'40–	'40–	.....
W 677	Cap Screw in L. H. End of Platform Canvas Drive Roller (L. H. Thread) (No Cut)	1940	1940	.....
W 679	Washer for Cap Screw on L. H. End of Platform Canvas Drive Roller (No Cut)	'40–	'40–	.....
W 900	Driven Sheave, Complete on Grain Slinger Shaft (Sheave Half W251) (Hub W193) (No Cut)	'40–	'40–	.....
W 915	Tightener Roller for Pick-Up Housing Drive Chain (No Cut)	'41–	'41–	W160
W 920	Stud for Pick-Up Drive Chain Tightener Roller (No Cut)	'41–	'41–	W579
W 921	Adjusting Shoe, R. H. (No Cut)	'41–	'41–	P30336H
W 922	Adjusting Shoe, L. H. (No Cut)	'41–	'41–	P30336H
W 923	Bracket for R. H. Adjusting Shoe (No Cut)	'41–	'41–	P30358H
W 924	Bracket for L. H. Adjusting Shoe (No Cut)	'40–	'41–	P30358H
W 925	Hardened Sole for Adjusting Shoe (2 used) (No Cut)	'41–	'41–	.....
W 927	Shield over R. H. End of Pick-Up Housing (No Cut)	'41–	'41–	W471
W 928	Shield over L. H. End of Pick-Up Housing (No Cut)	'41–	'41–	W472
W 930	Support Plate, R. H., for Pick-Up on Platform Side Sheet (No Cut)	'41–	'41–	W466
W 931	Support Plate, L. H., for Pick-Up on Platform Side Sheet (No Cut)	'41–	'41–	W467
W 934	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 2-5/8" from L. H. End) (not Marked) (No Cut)	'41–	.....	.....
W 935	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 3-3/4" from L. H. End) (Marked No. 2) (No Cut)	'41–	.....	.....
W 936	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 2-5/8" from L. H. End) (not Marked) (No Cut)	.....	'41–	.....
W 937	Pick-Up Housing Half, Complete with Finger Guide (with First Finger Hole 3-3/4" from L. H. End) (Marked No. 2) (No Cut)	.....	'41–	.....
	JOHN DEERE-INNES PICK-UP (SPRING TOOTH)			
AP11067 H	Tightener Bracket on Ends of Platform Lifting Springs (2 used)	1940	1940	AP12992H
AP12992 H	Tightener Bracket on Ends of Platform Lifting Springs (Front and Rear)	1940	1940	AP11067H–P2965H
AP13561 H	Platform Lifting Spring (2 used)	1940	1940	P9886H–AP13898H
AP13898 H	Platform Lifting Spring (2 used) (No Cut)	1940	1940	AP13561H
P 680 H	Nut for Platform Lifting Springs	1940	1940	P2936H
P 2936 H	Nut for Platform Lifting Spring	1940	1940	P680H–P2965H
P 2965 H	Tightener Bracket on Front End of Platform Lifting Spring (No Cut)	1940	1940	AP12992H–P2936H
P 9886 H	Platform Lifting Spring (2 used)	1940	1940	AP13561H
P 28500 H	Key for Pick-Up Drive Chain Drive and Driven Sprockets (3/16" x 3/16" x 1") (2 used) (No Cut)	1940	1940	.....
P 28534 H	Roller Chain Link, 1/2" Pitch (RC40 Type Link) (No Cut)	1940	1940	.....
P 28535 H	Roller Chain Connecting Link, 1/2" Pitch (RC40 Type Link) (No Cut)	1940	1940	.....
P 28536 H	Roller Chain End Link, 1/2" Pitch (RC40 Type Link) (No Cut)	1940	1940	.....
P 28537 H	Snap Ring Washer for 1/2" Pitch Steel Roller Connecting Link (RC40 Type Link) (No Cut)	1940	1940	.....
P 29362 H	Pin for 1/2" Pitch Roller Chain Offset End Link (No Cut)	1940	1940	.....
P 30243 H	Adjusting Bolt, Rear, for Platform Lifting Springs	1940	1940	P32340H
P 30336 H	Adjusting Shoe (2 used)	1940	1940	.....
P 30358 H	Bracket for Adjusting Shoe (2 used)	1940	1940	.....
P 31788 H	Adjusting Rod, Front, for Platform Lifting Springs	1940	1940	P32339H
P 32339 H	Adjusting Rod, Front, for Platform Lifting Spring	1940	1940	P31788H
P 32340 H	Adjusting Bolt, Rear, for Platform Lifting Springs (P32773H will work)	1940	1940	P30243H–P32773H
P 32361 H	Main Drive Belt (works for W493) (No Cut)	1940	1940	W493
P 32773 H	Adjusting Bolt, Rear, for Platform Lifting Springs (works for P32340H)	1940	1940	P32340H

For Cuts of Repair Parts, see page 93.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE-INNES PICK-UP (SPRING TOOTH)—Continued			
P 32778 H	Pin for Clevis on Front End of Platform Lifting Spring (1/2" x 2") (Drilled)	1940	1940	
P 33540 H	Roller Chain Link, 1/2" Pitch (RC41 Type Link (No Cut)	1940	1940	
P 33541 H	Roller Chain Connecting Link for 1/2" Pitch (RC41 Type Link) (No Cut)	1940	1940	
P 33542 H	Roller Chain End Link, 1/2" Pitch (RC41 Type Link) (No Cut)	1940	1940	
P 33543 H	Snap Spring Washer for 1/2" Pitch Steel Roller Connecting Link (RC41 Type Link) (No Cut)	1940	1940	
P 33544 H	Pin for 1/2" Pitch Roller Chain Offset End Link (RC41 Type Link) (No Cut)	1940	1940	
P 16NE	Box, Complete on Grain Slinger Shaft (3 used)	1940	1940	
P 117NE	Washer on Finger Stub Shaft on L. H. End of Grain Slinger Shaft	1940	1940	
SP 42	Spring Finger (No Cut)	1940	1940	
SP 44	Finger Stub Shaft, R. H.	1940	1940	
SP 45	Bearing, Complete for Finger Shaft (2 used)	1940	1940	
SP 46	Shaft for Fingers	1940	.....	
SP 51	Pin for Finger Spool	1940	1940	
SP 52	Finger Driven Sprocket (10 Teeth)	1940	1940	
SP 54	Finger Stub Shaft, L. H.	1940	1940	
SP 55	Spacer on R. H. Finger Stub Shaft	1940	1940	
SP 57	Drive Shaft, Complete with Bushing, on L. H. End of Housing	1940	1940	
SP 60	Shaft for Fingers	.....	1940	
SP 70	Finger Spool (Wood)	1940	1940	
SP 71	Pin for Finger Spool Pin (No Cut)	1940	1940	
SP 72	Finger Shaft Drive Chain (18 Links, 1/2" Pitch Roller Chain) (RC4 1 Type Link) (No Cut)	1940	1940	
SP 73	Bronze Bearing for Finger Shaft Bearing Box (2 used) (No Cut)	1940	1940	
SP 74	Finger Holder Tube on Finger Shaft (No Cut)	1940	.....	
SP 75	Finger Holder Tube on Finger Shaft (No Cut)	.....	1940	
SP 76	Pick-Up Housing (with First Finger Hole 4-9/32" from L. H. End) (not Marked) (No Cut)	1940	.....	
SP 77	Pick-Up Housing (with First Finger Hole 3-19/32" from L. H. End) (Marked No. 2) (No Cut)	1940	.....	
SP 78	Pick-Up Housing (with First Finger Hole 4-9/32" from L. H. End) (not Marked) (No Cut)	.....	1940	
SP 79	Pick-Up Housing (with First Finger Hole 3-19/32" from L. H. End) (Marked No. 2) (No Cut)	.....	1940	
W 14	Box for Drive Shaft on L. H. End of Pick-Up Housing (No Cut)	1940	1940	
W 29	Anchor Pin for Finger Stub Shaft (2 used)	1940	1940	
W 30	Drive Sprocket for Pick-Up Housing (15 Teeth)	1940	1940	
W 31	Driven Sprocket for Pick-Up Housing (32 Teeth)	1940	1940	
W 32	Bronze Bearing in Hollow Drive Shaft for Pick-Up (2 used) (No Cut)	1940	1940	
W 160	Tightener Sprocket for Pick-Up Housing Drive Chain	1940	1940	
W 165	Main Drive Sheave Half on L. H. End of Platform Canvas Drive Roller (2 used) (6") (No Cut)	1940	1940	
W 169	Pick-Up Housing End, R. H.	1940	1940	
W 170	Hub on Pick-Up Housing End, R. H.	1940	1940	
W 189	Drive Sprocket for Pick-Up Housing (10 Teeth) (Special)	1940	1940	
W 190	Drive Sprocket for Pick-Up Housing (12 Teeth) (Special)	1940	1940	
W 193	Threaded Hub for L. H. Slip Clutch on Driven Sheave on Grain Slinger Shaft	1940	1940	
W 194	Slip Clutch, L. H., for Main Driven Sheave on Grain Slinger Shaft	1940	1940	
W 195	Slip Clutch, R. H., for Main Driven Sheave on Grain Slinger Shaft	1940	1940	
W 251	Sheave Half for Main Driven Sheave on Grain Slinger Shaft (2 used)	1940	1940	
W 281	Key, Main Drive Sheave to Platform Canvas Drive Roller (3/16" x 3/16" x 1-1/2") (No Cut)	1940	1940	
W 361	Tightener Sheave for Main Drive Belt	1940	1940	
W 367	Hub for Grain Slinger (2 used)	1940	1940	
W 428	Slip Clutch Spring for Driven Sheave on Grain Slinger Shaft	1940	1940	
W 430	Pick-Up Housing End, L. H.	1940	1940	
W 433	Bracket on Cutter Bar for Pick-Up Support Plate, L. H.	1940	1940	
W 434	Bracket on Cutter Bar for Pick-Up Support Plate, R. H.	1940	1940	
W 441	Slip Clutch Nut for Driven Sheave on Grain Slinger Shaft	1940	1940	
W 454	Bronze Bearing for Box on Grain Slinger Shaft (3 used)	1940	1940	
W 466	Support Plate, R. H., for Pick-Up on Platform Side Sheet	1940	1940	
W 467	Support Plate, L. H., for Pick-Up on Platform Side Sheet	1940	1940	
W 468	Shield for Cutter Bar	1940	.....	
W 469	Shield for Cutter Bar	.....	1940	
W 471	Shield over R. H. End of Pick-Up Housing	1940	1940	
W 472	Shield over L. H. End of Pick-Up Housing	1940	1940	

For Cuts of Repair Parts, see page 93.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE-INNES PICK-UP (SPRING TOOTH)—Continued			
W 473	Bracket for Box on L. H. End of Pick-Up Drive Housing (No Cut)	1940	1940	.....
W 474	Pick-Up Drive Chain (55 Links, 1/2" Pitch Roller Chain) (RC40 Type Link).....(No Cut)	1940	1940	.....
W 486	Box Bracket for Middle Box on Grain Slinger Shaft.....	1940	1940	.....
W 489	Shaft for Grain Slinger.....	1940	.....	.....
W 490	Shaft for Grain Slinger.....	.....	1940	.....
W 491	Grain Slinger Housing.....	1940	.....	.....
W 492	Grain Slinger Housing.....	.....	1940	.....
W 493	Main Drive Belt (P32361H will work).....(No Cut)	1940	1940	P32361H
W 524	Tightener Bracket for Main Drive Belt Tightener Sheave.....	1940	1940	.....
W 527	Hub for Main Drive Sheave on Platform Canvas Drive Roller .....(No Cut)	1940	1940	.....
W 532	Key, Slip Clutch, R. H., to Grain Slinger Shaft (3/16" x 3/16" x 1/2").....(No Cut)	1940	1940	.....
W 578	Pipe Spacer between Pick-Up Support Plate, L. H. and Platform Side Sheet.....	1940	1940	.....
W 579	Pipe Stud for Pick-Up Drive Chain Tightener Sprocket.....	1940	1940	.....
W 581	Angle Brace for Main Drive Belt Tightener Bracket.....	1940	1940	.....
W 584	Pipe Spacer on Grain Slinger Shaft between R. H. Slip Clutch and Middle Bearing Box.....(No Cut)	1940	1940	.....
W 585	Threaded Sheave on Grain Slinger Shaft for Slip Clutch Nut....	1940	1940	.....
W 586	Front Support for Pick-Up Support Plate, R. H.....	1940	1940	.....
W 587	Front Support for Pick-Up Support Plate, L. H.....	1940	1940	.....
W 589	Bracket for Box on L. H. End of Grain Slinger Shaft.....	1940	1940	.....
W 591	Brace for Outside Divider.....	1940	1940	.....
W 592	Brace for Inside Divider.....	1940	1940	.....
W 620	Flat Brace for Box Bracket on L. H. End of Grain Slinger Shaft.	1940	1940	.....
W 624	Main Drive Sheave, Complete on L. H. End of Platform Canvas Drive Roller (Sheave Half W165) (Hub W527).....(No Cut)	1940	1940	.....
W 625	Support for Box Bracket on L. H. End of Grain Slinger Shaft...	1940	1940	.....
W 676	Pipe Spacer in Hub of Driven Pulley on L. H. End of Platform Canvas Drive Roller.....	1940	1940	.....
W 677	Cap Screw in L. H. End of Platform Canvas Drive Roller (L. H. Thread).....(No Cut)	1940	1940	.....
W 679	Washer for Cap Screw on L. H. End of Platform Canvas Drive Roller.....(No Cut)	1940	1940	.....
W 900	Driven Sheave, Complete on Grain Slinger Shaft (Sheave Half W251) (Hub W193).....(No Cut)	1940	1940	.....
	PARTING GRAIN SLINGER (SPECIAL FOR STIFF TOOTH OR SPRING TOOTH PICK-UP)			
P 28500 H	Key, for Pick-Up Drive Chain, Drive and Driven Sprockets (3/16" x 3/16" x 1").....(No Cut)	1940	1940	.....
W 14	Box for Hollow Drive Shaft on L. H. End of Grain Slinger.....	1940	1940	.....
W 29	Anchor Pin for Grain Slinger Housing Shaft (2 used).....	1940	1940	.....
W 32	Bronze Bearing in Hollow Drive Shaft for Grain Slinger (2 used)	1940	1940	.....
W 165	Main Drive Sheave Half on Platform Canvas Drive Roller (2 used) (6").....(No Cut)	1940	1940	.....
W 194	Slip Clutch, L. H., for Main Drive Sheave on Grain Slinger Shaft	1940	1940	.....
W 251	Sheave Half for Main Drive Sheave on Grain Slinger Shaft (2 used)	1940	1940	.....
W 429	Drive Sprocket for Pick-Up Housing (15 Teeth).....	1940	1940	.....
W 438	Outer End Plate for Slinger Housing (2 used).....(No Cut)	1940	1940	.....
W 439	Collar on Grain Slinger Housing Shafts for End Plate Hubs (4 used).....	1940	1940	.....
W 440	Coupling for Grain Slinger Housing Shafts (2 used).....	1940	1940	.....
W 442	Hub for Inner End Plate on Grain Slinger Housing (2 used) (W891 will work).....	1940	1940	W891H
W 443	Hub for Outer End Plate on Grain Slinger Housing (2 used) (W892 will work).....(No Cut)	1940	1940	W892H
W 444	End Plate, R. H. Middle, for Grain Slinger Housing.....	1940	1940	.....
W 445	End Plate, L. H. Middle, for Grain Slinger Housing....(No Cut)	1940	1940	.....
W 447	Grain Slinger Housing Shaft, R. H.....(No Cut)	1940	.....	.....
W 448	Grain Slinger Housing Shaft, Middle.....(No Cut)	1940	.....	.....
W 449	Grain Slinger Housing Shaft, L. H.....(No Cut)	1940	.....	.....
W 450	Hollow Drive Shaft for Grain Slinger.....(No Cut)	1940	1940	.....
W 452	Grain Slinger Housing, L. H.....(No Cut)	1940	.....	.....
W 453	Grain Slinger Housing, R. H.....(No Cut)	1940	.....	.....
W 477	Grain Slinger Housing Shaft, R. H.....	.....	1940	.....
W 478	Grain Slinger Housing Shaft, Middle.....	.....	1940	.....
W 479	Grain Slinger Housing Shaft, L. H.....	.....	1940	.....
W 480	Grain Slinger Housing, L. H.....(No Cut)	.....	1940	.....
W 481	Grain Slinger Housing, R. H.....(No Cut)	.....	1940	.....
W 483	Bracket for R. H. End of Grain Slinger Housing Shaft..(No Cut)	1940	1940	.....
W 485	Bracket for L. H. End of Grain Slinger Housing Shaft.....	1940	1940	.....
W 527	Hub for Main Drive Sheave on Platform Canvas Drive Roller...	1940	1940	.....
W 528	Threaded Hub for L. H. Slip Clutch for Grain Slinger Drive Sheave.....	1940	1940	.....

For Cuts of Repair Parts, see pages 93 and 94.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	PARTING GRAIN SLINGER (SPECIAL FOR STIFF TOOTH OR SPRING TOOTH PICK-UP)—Continued			
W 529	Slip Clutch, R. H., for Main Driven Sheave on Grain Slinger Shaft	1940	1940	.....
W 532	Key, Slip Clutch, R. H., to Grain Slinger Shaft (3/16" x 3/16" x 1/2") (No Cut)	1940	1940	.....
W 572	Zerk Pipe in R. H. Hub for Inner End Plate on Grain Slinger (1-5/8") (No Cut)	1940	1940	.....
W 573	Zerk Pipe in L. H. Hub for Inner End Plate on Grain Slinger (2")	1940	1940	.....
W 574	Zerk Pipe on Hub for Outer End Plate on Grain Slinger (2 used) (1-3/4")	1940	1940	.....
W 575	Pipe Coupling for Zerk Pipe on Grain Slinger End Plate Hubs (2 used) (No Cut)	1940	1940	.....
W 624	Main Drive Sheave, Complete on L. H. End of Platform Canvas Drive Roller (Sheave Half W165) (Hub W527) (No Cut)	1940	1940	.....
W 627	Drive Sheave for Grain Slinger on L. H. End of Platform Canvas Drive Roller (3") (Special)	1940	1940	.....
W 678	Extension for Main Drive Belt Tightener Bracket	1940	1940	.....
W 891	Hub for Inner End Plate on Grain Slinger Housing (2 used) (works for W442)	1940	1940	W442
W 892	Hub for Outer End Plate on Grain Slinger Housing (2 used) (works for W443)	1940	1940	W443
W 901	Driven Sheave, Complete on Grain Slinger Shaft (Sheave Half W251) (Hub W528) (No Cut)	1940	1940	.....
	JOHN DEERE "LU" MOTOR AND CONNECTING PARTS			
AL 2090 T	Hose Clamp for Air Cleaner Hose Connection (4 used)	'41–	'41–	.....
AL 2136 T	Oil Strainer Assembly	'41–	'41–	.....
AL 2137 T	Breather Cap Assembly	'41–	'41–	.....
AL 2349 T	Water Inlet Pipe with Plug	'41–	'41–	.....
AL 2421 T	Bracket for Starting Crank	'41–	'41–	.....
AL 2428 T	Cup on Bottom of Air Cleaner (No Cut)	'41–	'41–	.....
AL 2442 T	Weather Cap (No Cut)	'41–	'41–	.....
AL 2443 T	Latch, Complete for Cup on Bottom of Air Cleaner (No Cut)	'41–	'41–	.....
AL 2444 T	Baffle Plate in Air Cleaner (No Cut)	'41–	'41–	.....
AL 2446 T	Clamp, Weather Cap to Intake Pipe (No Cut)	'41–	'41–	.....
AL 2652 T	Cylinder Head Gasket	'41–	'41–	.....
AL 2653 T	Crankshaft Oil Seal, Front (No Cut)	'41–	'41–	.....
AL 2654 T	Crankshaft Oil Seal, Rear	'41–	'41–	.....
AL 2657 T	Oil Pan	'41–	'41–	.....
AL 2660 T	Gear Cover Thrust Screw (2 used)	'41–	'41–	.....
AL 2663 T	Gear Cover Assembly	'41–	'41–	.....
AL 2668 T	Oil Pump Idler Shaft with Pumping Gear (No Cut)	'41–	'41–	.....
AL 2669 T	Oil Pump Drive Shaft with Pumping Gear	'41–	'41–	.....
AL 2675 T	Valve Tappet with Adjusting Screw (4 used)	'41–	'41–	.....
AL 2677 T	Idler Shaft with Gear and Thrust Plug	'41–	'41–	.....
AL 2693 T	Pan for Flywheel Housing	'41–	'41–	.....
AL 2699 T	Crankshaft with Timing Gear (No Cut)	'41–	'41–	.....
AL 2722 T	Bayonet Oil Gauge for Oil Pan	'41–	'41–	.....
AL 2728 T	Oil Pump Elbow with Nut and Ferrule	'41–	'41–	.....
AL 2729 T	Oil Line Connection with Nut and Ferrule (2 used)	'41–	'41–	.....
AL 2735 T	Piston with Rings, Pins and Bushings (2 used) (Standard)	'41–	'41–	.....
AL 2736 T	Piston with Rings, Pins and Bushings (2 used) (.020" Oversize) (2 used) (No Cut)	'41–	'41–	.....
AL 2743 T	Crankshaft Oil Seal Plate, Rear, with Oil Seal	'41–	'41–	.....
AL 2750 T	Oil Pump, Complete less Strainer	'41–	'41–	.....
AL 2752 T	Oil Line with Ferrules	'41–	'41–	.....
AL 2756 T	Camshaft with Thrust Plug (No Cut)	'41–	'41–	.....
AL 2759 T	Connecting Rod, Complete (2 used)	'41–	'41–	.....
AL 2760 T	Clamp Screw with Lock for Piston Pin (2 used)	'41–	'41–	.....
AL 2811 T	Oil Pressure Gauge (No Cut)	'41–	'41–	.....
AL 2812 T	Exhaust Muffler	'41–	'41–	.....
AL 2826 T	Flywheel with Ring Gear	'41–	'41–	.....
AL 2827 T	Oil Pump Cover with Intake Pipe	'41–	'41–	.....
AL 2841 T	Intake and Exhaust Manifold	'41–	'41–	.....
AL 2869 T	Connecting Rod Bolt and Nut Assembly (4 used)	'41–	'41–	.....
AL 2870 T	Cylinder Block with Camshaft Bearings, Idler Gear Bearing and Set of Gaskets	'41–	'41–	.....
AL 2881 T	Front Main Bearing Insert (Standard) (2 Halves)	'41–	'41–	.....
AL 2882 T	Rear Main Bearing Insert (Standard) (2 Halves)	'41–	'41–	.....
AL 2883 T	Front Main Bearing Insert (.003" Undersize) (2 Halves)	'41–	'41–	.....
AL 2884 T	Rear Main Bearing Insert (.003" Undersize) (2 Halves)	'41–	'41–	.....
AL 2885 T	Front Main Bearing Insert (.005" Undersize) (2 Halves)	'41–	'41–	.....
AL 2886 T	Rear Main Bearing Insert (.005" Undersize) (2 Halves)	'41–	'41–	.....

For Cuts of Repair Parts, see page 94.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE "LU" MOTOR AND CONNECTING PARTS—Continued			
AL 2892 T	Piston Ring, Set of 6 (Standard)	'41–	'41–	.....
AL 2893 T	Piston Ring, Set of 6 (.020" Oversize) (No Cut)	'41–	'41–	.....
AL 2937 T	Breather Tube (No Cut)	'41–	'41–	.....
AL 2938 T	Motor House Base, Complete (No Cut)	'41–	'41–	.....
AL 2939 T	Motor House Top and Sides, Complete (No Cut)	'41–	'41–	.....
AL 2941 T	Starting Crank, Complete (No Cut)	'41–	'41–	.....
AL 2951 T	Brace for Motor House (No Cut)	'41–	'41–	.....
AL 2952 T	Air Cleaner, Complete (No Cut)	'41–	'41–	.....
AP14017 H	Power Drive Shaft, Complete with Slip Clutch and Universal Joints from Motor to Gear Housing (No Cut)	'41–	'41–	.....
AP14033 H	Anchor Bracket for Rear End of Tractor Hitch R. H. Truss Rod	'41–	'41–	.....
AP14034 H	Anchor Bracket for Rear End of Tractor Hitch L. H. Truss Rod	'41–	'41–	.....
AP14035 H	Upper Air Cleaner Screen (No Cut)	'41–	'41–	.....
AP14036 H	Truss Rod, R. H., for Tractor Hitch	'41–	'41–	.....
AP14037 H	Stiffener Angle on L. H. Tractor Hitch Side Channel (No Cut)	'41–	'41–	.....
AP14073 H	Universal Joint End (with Slip Clutch Jaws) for Power Shaft from Motor to Gear Housing (No Cut)	'41–	'41–	.....
AP14160 H	Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	.....
L 333 T	Hose Connections for Air Cleaner (2 used)	'41–	'41–	.....
L 344 T	Pin for Starting Crank (No Cut)	'41–	'41–	.....
L 689 T	Timing Hole Cover	'41–	'41–	.....
L 752 T	Pressure Regulating Spring for Oil Pump	'41–	'41–	.....
L 754 T	Pressure Regulating Plug Gasket	'41–	'41–	.....
L 766 T	Timing Gear on Crankshaft	'41–	'41–	.....
L 768 T	Crankshaft Oil Thrower	'41–	'41–	.....
L 779 T	Connecting Rod Shim (.003")	'41–	'41–	.....
L 780 T	Connecting Rod Shim (.002")	'41–	'41–	.....
L 787 T	Timing Gear on Camshaft	'41–	'41–	.....
L 789 T	Camshaft Thrust Washer	'41–	'41–	.....
L 803 T	Idler Shaft Thrust Washer	'41–	'41–	.....
L 820 T	Gear, Oil Pump Drive	'41–	'41–	.....
L 821 T	Intake Valve (2 used)	'41–	'41–	.....
L 822 T	Exhaust Valve (2 used)	'41–	'41–	.....
L 823 T	Valve Spring (4 used)	'41–	'41–	.....
L 824 T	Valve Spring Seat (4 used)	'41–	'41–	.....
L 825 T	Valve Spring Seat Pin (4 used)	'41–	'41–	.....
L 826 T	Valve Guide (4 used)	'41–	'41–	.....
L 830 T	Valve Cover	'41–	'41–	.....
L 831 T	Valve Cover Gasket	'41–	'41–	.....
L 836 T	Ferrule for Oil Line (3 used)	'41–	'41–	.....
L 837 T	Nut for Oil Line (3 used)	'41–	'41–	.....
L 851 T	Attaching Stud (Short) Manifold to Cylinder Block and Muffler to Manifold (4 used)	'41–	'41–	.....
L 852 T	Nut (Brass) Manifold and Muffler Attaching Stud (6 used)	'41–	'41–	.....
L 853 T	Washer on Manifold and Muffler Attaching Stud (6 used)	'41–	'41–	.....
L 876 T	Gasket for Water Inlet Pipe	'41–	'41–	.....
L 995 T	Retaining Ring for Baffle Plate (No Cut)	'41–	'41–	.....
L 997 T	Gasket for Cup on Bottom of Air Cleaner (No Cut)	'41–	'41–	.....
L 1066 T	Attaching Screw for Crankshaft Rear Oil Seal Plate (5 used) (No Cut)	'41–	'41–	.....
L 1128 T	Jam Nut for Gear Cover Thrust Screw (2 used) (No Cut)	'41–	'41–	.....
L 1129 T	Jam Nut for Oil Pump Attaching Screw (No Cut)	'41–	'41–	.....
L 1155 T	Key, Timing Gear to Crankshaft and Camshaft (Woodruff) (2 used) (No Cut)	'41–	'41–	.....
L 1156 T	Key for Oil Pump Drive Gear (No Cut)	'41–	'41–	.....
L 1158 T	Oil Drain Plug (No Cut)	'41–	'41–	.....
L 1159 T	Plug in Water Inlet Pipe (No Cut)	'41–	'41–	.....
L 1189 T	Street Ell for Oil Pressure Gauge (No Cut)	'41–	'41–	.....
L 1190 T	Grooved Pin for Oil Pump Drive Gear (No Cut)	'41–	'41–	.....
L 1200 T	Elbow for Oil Pressure Gauge (No Cut)	'41–	'41–	.....
L 1204 T	Pipe Nipple (Short) for Oil Pressure Gauge (No Cut)	'41–	'41–	.....
L 1207 T	Pipe Coupling for Oil Pressure Gauge (No Cut)	'41–	'41–	.....
L 1210 T	Pipe Nipple (Long) for Oil Pressure Gauge (No Cut)	'41–	'41–	.....
L 4115 T	Crankshaft Oil Seal Plate, Front	'41–	'41–	.....
L 4116 T	Water Outlet Pipe	'41–	'41–	.....
L 4117 T	Gasket for Water Outlet Pipe	'41–	'41–	.....
L 4121 T	Oil Pump Attaching Screw	'41–	'41–	.....
L 4122 T	Pressure Regulating Plug	'41–	'41–	.....
L 4126 T	Dowel Pin, Rear Oil Seal Plate to Cylinder Block (2 used) (No Cut)	'41–	'41–	.....
L 4127 T	Crankshaft to Flywheel Dowel Pin	'41–	'41–	.....
L 4128 T	Dowel Pin, Short, Gear Cover to Cylinder Block (2 used)	'41–	'41–	.....
L 4129 T	Dowel Pin, Long, Gear Cover to Cylinder Block and Governor	'41–	'41–	.....
L 4132 T	Gasket for Crankshaft Rear Oil Seal Plate	'41–	'41–	.....
L 4133 T	Oil Pan Gasket	'41–	'41–	.....

For Cuts of Repair Parts, see pages 94 and 95.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE "LU" MOTOR AND CONNECTING PARTS—Continued			
L 4134 T	Gear Cover Gasket	'41–	'41–	
L 4135 T	Manifold Gasket	'41–	'41–	
L 4136 T	Cylinder Head Cap Screw (10 used)	'41–	'41–	
L 4139 T	Lock for Flywheel Cap Screw (2 used)	'41–	'41–	
L 4140 T	Camshaft Rear Bearing Seal	'41–	'41–	
L 4151 T	Flywheel Cap Screw (4 used)	'41–	'41–	
L 4152 T	Gasket for Crankshaft Front Oil Seal Plate	'41–	'41–	
L 4161 T	Attaching Screw for Crankshaft Front Oil Seal Plate (3 used)	'41–	'41–	
L 4173 T	Oil Pump Body	'41–	'41–	
L 4179 T	Idler Shaft Bearing	'41–	'41–	
L 4187 T	Lock for Crankshaft Rear Oil Seal Plate Screw (5 used)	'41–	'41–	
L 4208 T	Lock for Piston Pin Clamp Screw (2 used)	'41–	'41–	
L 4212 T	Piston Pin (2 used)	'41–	'41–	
L 4214 T	Piston Ring, Compression (Standard) (4 used)	'41–	'41–	
L 4215 T	Piston Ring, Oil Regulating (Standard) (2 used)	'41–	'41–	
L 4225 T	Starter Opening Cover	'41–	'41–	
L 4232 T	Oil Pressure Regulating Washer	'41–	'41–	
L 4233 T	Pressure Regulating Piston for Oil Pump	'41–	'41–	
L 4234 T	Cylinder Head	'41–	'41–	
L 4241 T	Main Bearing Cap Screw (4 used)	'41–	'41–	
L 4256 T	Felt Washer for Bayonet Oil Gauge (No Cut)	'41–	'41–	
L 4257 T	Piston Ring, Compression (.020" Oversize) (4 used)	'41–	'41–	
L 4258 T	Piston Ring, Oil Regulating (.020" Oversize) (2 used)	'41–	'41–	
L 4263 T	Bayonet Oil Gauge Bushing	'41–	'41–	
L 4277 T	Camshaft Front Bearing	'41–	'41–	
L 4278 T	Camshaft Rear Bearing	'41–	'41–	
L 4289 T	Expansion Plugs in Cylinder Block (2 used)	'41–	'41–	
L 4291 T	Attaching Stud (Long) Manifold to Cylinder Block	'41–	'41–	
L 4400 T	Stud, Cylinder Block to Gear Case (No Cut)	'41–	'41–	
L 4408 T	Pipe, Air Cleaner to Carburetor (No Cut)	'41–	'41–	
L 4415 T	Plate on Starting Crank (No Cut)	'41–	'41–	
L 4416 T	Hair Pin Cotter on Starting Crank (No Cut)	'41–	'41–	
L 4417 T	Spring for Starting Crank (No Cut)	'41–	'41–	
L 4427 T	Support for Oil Pressure Gauge Pipe (No Cut)	'41–	'41–	
°PK 19 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (No Cut)	'41–	'41–	
P 20436 H	Upper Air Cleaner Sack (No Cut)	'41–	'41–	
P 27572 H	Slip Clutch Spring on Power Drive Shaft from Motor to Gear Housing (Blood Bros. G4271M)	'41–	'41–	
P 27576 H	Slip Clutch Jaw on Power Drive Shaft from Motor to Gear Housing (Blood Bros. No. G3635M)	'41–	'41–	
P 29317 H	Bracket, L. H., Front, for Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	
P 29319 H	Bracket, L. H., Rear, for Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	
P 29320 H	Bracket, R. H., Front, for Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	
P 29353 H	Stiffener on Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	
P 29464 H	Bracket, R. H., Rear, for Shield over Power Shaft in Front of Power Drive Gear Housing	'41–	'41–	
P 31562 H	Horned Nut on Power Shaft from Motor to Gear Housing (Blood Bros. No. G4061M)	'41–	'41–	
P 31568 H	Lock Plate for Cover Plate Cap Screws in Universal Joint (Blood Bros. No. 3DS9)	'41–	'41–	
P 31569 H	Cap Screw for Universal Joint Cover Plate (Blood Bros. No. 3DS6-3) (No Cut)	'41–	'41–	
P 31570 H	Cover Plate for Universal Joint on Power Shaft (Blood Bros. No. 3DS8)	'41–	'41–	
P 31571 H	Bushing for Universal Joint Connection (Blood Bros. No. 3DS4)	'41–	'41–	
P 31572 H	Universal Joint Connection (Blood Bros. No. 3DS1)	'41–	'41–	
P 31573 H	Retainer for Universal Joint Grease Washer (Blood Bros. No. 3DS2)	'41–	'41–	
P 31574 H	Grease Washer for Universal Joint (Cork) (Blood Bros. No. 3DS3)	'41–	'41–	
P 32953 H	Tie Plate for Tractor Hitch Truss Rod Anchor Brackets	'41–	'41–	
P 32956 H	Spacer on Front End of Tractor Hitch R. H. Truss Rod	'41–	'41–	
P 32957 H	Pipe Spacer between L. H. Tractor Hitch Stiffener Angle and Cross Support	'41–	'41–	
P 32961 H	Strut for Tractor Hitch Truss Rods	'41–	'41–	
P 32962 H	U-Bolt for R. H. Tractor Hitch Side Channel Stiffener Angles	'41–	'41–	
P 32966 H	Clamp for Upper Air Cleaner Screen Support	'41–	'41–	
P 32967 H	Cross Angle on Tractor Hitch for Platform Lifting Arm Support	'41–	'41–	
P 32970 H	Clip for Shield on L. H. Side of Motor (2 used) (No Cut)	'41–	'41–	
P 32971 H	Spacer on Tractor Hitch Side Channels for Rear Motor Supports (2 used)	'41–	'41–	

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see page 95.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	JOHN DEERE "LU" MOTOR AND CONNECTING PARTS—Continued			
P 32972 H	Clamp Plate for Tractor Hitch Side Channel Stiffener Angle U-Bolts (2 used)	'41–	'41–	
P 32974 H	Stiffener Angle on R. H. Tractor Hitch Side Channel	'41–	'41–	
P 32975 H	Motor Support, R. H., Rear	'41–	'41–	
P 33042 H	Shield on L. H. Side of Motor	'41–	'41–	
P 33044 H	Motor Support, L. H., Rear	'41–	'41–	
P 33045 H	Truss Rod, L. H., for Tractor Hitch	'41–	'41–	
P 33049 H	Motor Support, Front	'41–	'41–	
P 33051 H	Support Bracket for Lower Air Cleaner	'41–	'41–	
P 33052 H	Stiffener Plate on Motor Cover for Air Cleaner Bolts...(No Cut)	'41–	'41–	
P 33243 H	Support for Upper Air Cleaner Screen	'41–	'41–	
P 33245 H	Tie Plate for Motor Rear Support Bracket Clamp Bolts (2 used)	'41–	'41–	
P 33352 H	Pipe Spacer between Motor and R. H. Rear Support	'41–	'41–	
P 33513 H	Clamp Splined Universal End Joint for Power Shaft from Motor to Gear Housing (1-1/8")...(No Cut)	'41–	'41–	
P 33514 H	Universal Joint End for Power Shaft from Motor to Gear Housing...(No Cut)	'41–	'41–	
P 33515 H	Clamp Splined Universal Joint End for Power Shaft from Motor to Gear Housing (1-3/8")...(No Cut)	'41–	'41–	
P 33516 H	Washer at End of Slip Clutch Spring on Power Shaft from Motor to Gear Housing...(No Cut)	'41–	'41–	
P 33517 H	Splined Power Shaft from Motor to Gear Housing (Blood Bros. No. G4707M)...(No Cut)	'41–	'41–	
P 33785 H	U-Bolt for L. H. Tractor Hitch Side Channel Stiffener Angle...(No Cut)	'41–	'41–	
	CLUTCH AND REDUCTION GEARS USED WITH "LU" JOHN DEERE MOTOR			
AL 2094 T	Oil Seal on Drive and Driven Shafts in Gear Reduction Housing (2 used)	'41–	'41–	
AL 2116 T	Bearing for Clutch Throw-Out	'41–	'41–	
AL 2834 T	Clutch Pressure Plate Assembly...(No Cut)	'41–	'41–	
AL 2835 T	Driven Clutch Disk with Lining...(No Cut)	'41–	'41–	
AL 2836 T	Lining with Rivets for Clutch Driven Disk...(No Cut)	'41–	'41–	
AL 2917 T	Clutch Lever, Complete	'41–	'41–	
AL 2932 T	Lower Shaft with Bearing in Reduction Gear Case	'41–	'41–	
AL 2934 T	Bearing Retainer with Oil Seal on Lower Shaft in Reduction Gear Case	'41–	'41–	
AP14039 H	Clutch Lever Ratchet Sliding Bracket	'41–	'41–	
JD 14 A	Pulley for Clutch Control Rope	'41–	'41–	
JD 7203 R	Timken Roller Bearing, Complete on Rear End of Upper Shaft and Front End of Lower Shaft in Reduction Gear Case (less Cup) (Cup JD7250R) (Timken No. 09074) (2 used)	'41–	'41–	
JD 7207 H	Timken Roller Bearing, Complete on Rear End of Lower Shaft in Reduction Gear Case (less Cup) (Cup JD7262H) (Timken No. 14137A)	'41–	'41–	
JD 7250 R	Cup for JD7203R Timken Roller Bearing (Timken No. 09194) (2 used)	'41–	'41–	
JD 7262 H	Cup for JD7207H and JD8114T Timken Roller Bearing (Timken No. 14274) (2 used)	'41–	'41–	
JD 8114 T	Timken Roller Bearing, Complete on Front End of Upper Shaft in Reduction Gear Case (less Cup) (Cup JD7262H) (Timken No. 14124)...(No Cut)	'41–	'41–	
L 372 T	Cap Screw, Clutch Pressure Plate to Flywheel (6 used)	'41–	'41–	
L 542 T	Shim, Carrier Sleeve to Gear Case (.002")	'41–	'41–	
L 543 T	Shim, Carrier Sleeve to Gear Case (.005")	'41–	'41–	
L 544 T	Shim, Carrier Sleeve to Gear Case (.010")	'41–	'41–	
L 611 T	Bearing for Clutch Pilot (Mounted in Flywheel)	'41–	'41–	
L 1151 T	Oil Drain and Filler Plug (2 used)...(No Cut)	'41–	'41–	
L 1153 T	Woodruff Key, Gear to Upper Shaft in Reduction Gear Case	'41–	'41–	
L 1159 T	Pipe Plug in Reduction Gear Case at Front of Lower Shaft...(No Cut)	'41–	'41–	
L 1160 T	Welsh Plug in Reduction Gear Case...(No Cut)	'41–	'41–	
L 1202 T	Washer on Clutch Lever Swivel...(No Cut)	'41–	'41–	
L 1204 T	Reduction Gear Case Vent Pipe	'41–	'41–	
L 4030 T	Hex. Nut on Upper Shaft in Reduction Gear Case	'41–	'41–	
L 4126 T	Dowel Pin, Gear Case to Cylinder Block...(No Cut)	'41–	'41–	
L 4145 T	Bearing Carrier for Clutch Throw-Out...(No Cut)	'41–	'41–	
L 4150 T	Sleeve for Clutch Throw-Out Bearing Carrier...(No Cut)	'41–	'41–	
L 4182 T	Clutch Throw-Out Fork	'41–	'41–	
L 4186 T	Retainer for Clutch Fork Spring	'41–	'41–	
L 4230 T	Clutch Fork Spring	'41–	'41–	
L 4374 T	Gear on Lower Shaft in Reduction Gear Case...(No Cut)	'41–	'41–	
L 4377 T	Cap on Lower Side of Reduction Gear Case	'41–	'41–	

For Cuts of Repair Parts, see page 95.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	CLUTCH AND REDUCTION GEARS USED WITH "LU" JOHN DEERE MOTOR—Continued			
L 4379 T	Gear on Upper Shaft in Reduction Gear Case (No Cut)			
L 4381 T	Shim for Lower Bearing Retainer on Reduction Gear Case (.003")	'41–	'41–	
	(No Cut)	'41–	'41–	
L 4382 T	Shim for Lower Bearing Retainer on Reduction Gear Case (.005")			
	(No Cut)	'41–	'41–	
L 4383 T	Shim for Lower Bearing Retainer on Reduction Gear Case (.010")			
	(No Cut)	'41–	'41–	
L 4386 T	Spacer for Gear on Lower Shaft in Reduction Gear Case	'41–	'41–	
L 4387 T	Upper Shaft in Reduction Gear Case	'41–	'41–	
L 4388 T	Plain Washer on Lower Shaft in Reduction Gear Case	'41–	'41–	
L 4390 T	Gasket for Cap on Lower Side of Reduction Gear Case (No Cut)	'41–	'41–	
L 4391 T	Reduction Gear Case	'41–	'41–	
L 4392 T	Clutch Lever Spring (No Cut)	'41–	'41–	
L 4395 T	Pivot for Clutch Lever	'41–	'41–	
L 4396 T	Plain Washer on Clutch Lever Pivot	'41–	'41–	
L 4399 T	Plain Washer on Upper Shaft in Reduction Gear Case	'41–	'41–	
L 4401 T	Clutch Lever Yoke	'41–	'41–	
L 4405 T	Clutch Lever Swivel	'41–	'41–	
L 4406 T	Pin for Clutch Lever Yoke	'41–	'41–	
L 4407 T	Clip for Clutch Lever Spring (No Cut)	'41–	'41–	
L 4411 T	Cap for Pipe Vent	'41–	'41–	
°PK 16 H	Bracket on Clutch Lever for Lever Ratchet	'41–	'41–	
P 29420 H	Eye Hook for Clutch Control Rope Pulley	'41–	'41–	
P 32159 H	Clutch Control Rope (No Cut)	'41–	'41–	
P 33249 H	Shifter Clip for Clutch Lever Ratchet	'41–	'41–	
P 33326 H	Bracket on Motor for Clutch Lever Sliding Bracket Adjusting Rod	'41–	'41–	
P 33422 H	Clutch Lever Ratchet	'41–	'41–	
P 33566 H	Adjusting Rod for Clutch Lever Sliding Bracket	'41–	'41–	
P 33593 H	Hook for Clutch Control Rope (No Cut)	'41–	'41–	
	COOLING FAN USED WITH "LU" JOHN DEERE MOTOR			
AL 2688 T	Fan, Complete	'41–	'41–	
AL 2861 T	Fan Spindle and Thrust Nut	'41–	'41–	
AL 2862 T	Hub Assembly	'41–	'41–	
AL 2864 T	Blade Assembly	'41–	'41–	
AL 2876 T	Fan Drive Pulley with Pin	'41–	'41–	
L 908 T	Bronze Thrust Washer	'41–	'41–	
L 1134 T	Hex. Nut on Fan Shaft	'41–	'41–	
L 1147 T	Washer on Fan Shaft (2 used)	'41–	'41–	
L 1165 T	Fan Blade Attaching Bolt (8 used)	'41–	'41–	
L 1166 T	Nut for Fan Blade Attaching Bolt (8 used)	'41–	'41–	
L 4264 T	Fan Belt	'41–	'41–	
L 4367 T	Gasket, Fan Blade to Hub	'41–	'41–	
L 4368 T	Oil Plug	'41–	'41–	
	WICO MAGNETO C909 WITH IMPULSE STARTER USED WITH "LU" JOHN DEERE MOTOR			
15-186	Drive Spring	'41–	'41–	
16-X477B	Distributor Arm with Spring	'41–	'41–	
16-583	Drive Cup Spacing Washer	'41–	'41–	
16-738	Screw for Breaker Point and Breaker Arm Spring (2 used)	'41–	'41–	
1118	Washer for Cover Screw and Distributor Cap Screw (Leather) (6 used) (No Cut)	'41–	'41–	
1152	Oil Scraper (No Cut)	'41–	'41–	
1153	Oil Scraper Spring (No Cut)	'41–	'41–	
1194	Cam Oil Pad (No Cut)	'41–	'41–	
1197	Breaker Arm Spacing Washer	'41–	'41–	
1197T	Breaker Arm Spacing Shim	'41–	'41–	
1207	Breaker Arm Clamp Washer	'41–	'41–	
1379	Main Oil Pad	'41–	'41–	
1383	Condenser Screw (2 used)	'41–	'41–	
1397	Secondary Interlead Coil Contact	'41–	'41–	
1404	Screw for Secondary Interlead Contact	'41–	'41–	
1418	Breaker Arm Bushing	'41–	'41–	
1533	Condenser Case Gasket	'41–	'41–	
1760	Coil Protecting Shield (2 used)	'41–	'41–	
2040	Drive Cup	'41–	'41–	
2076	Impulse Lock Nut (No Cut)	'41–	'41–	
2121	Impulse Spacer	'41–	'41–	
2122	Driven Flange Spacer	'41–	'41–	
2288	Drive Spring Retainer	'41–	'41–	
2495	Rotor Bushing (2 used)	'41–	'41–	
2496	Impulse Stop Ring Gasket	'41–	'41–	

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see pages 95 and 96.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	WICO MAGNETO C909 WITH IMPULSE STARTER USED WITH "LU" JOHN DEERE MOTOR—Continued			
2497	Distributor Cap Gasket	'41–	'41–	
2503	Coil Core Clamp (2 used)	'41–	'41–	
2504	Cover Gasket	'41–	'41–	
2505	Oil Pad Spring Plate	'41–	'41–	
2537	Distributor Cap Screw (2 used)	'41–	'41–	
2538	Cover Screw (4 used)	'41–	'41–	
2641	Impulse Stop Ring Screw (4 used)	'41–	'41–	
3497A	Coil Wedge (2 used) (No Cut)	'41–	'41–	
4140	Gear Spacing Washer	'41–	'41–	
A 140	Stop Button Assembly	'41–	'41–	
A 705 R	Fixed Contact Screw (No Cut)	'41–	'41–	
AL 2785 T	Spark Plug (2 used)	'41–	'41–	
AL 2908 T	Magneto, Complete (Type C909) less Drive Gear (No Cut)	'41–	'41–	
AL 2923 T	Spark Plug Cable (2 used)	'41–	'41–	
C 1350 R	Lock Washer for Secondary Interlead Contact Screw, Breaker Arm Clamp Screw, Fixed Contact Screw and Coil Core Clamp Screw (5 used) (No Cut)	'41–	'41–	
D 2003 R	Condenser Screw Lock Washer (2 used) (No Cut)	'41–	'41–	
H 665 R	Lock Washer for Breaker Arm Spring Screw	'41–	'41–	
H 666 R	Lock Washer for Impulse Stop Ring Screw (4 used) (No Cut)	'41–	'41–	
IVA 583	Drive Cup Spacing Washer (Steel)	'41–	'41–	
IXA 256	Washer for Distributor Cap, Cover Screw and Fixed Contact Screw (7 used)	'41–	'41–	
IXA 345	Oil Plug (2 used)	'41–	'41–	
L 348 T	Attaching Gasket (No Cut)	'41–	'41–	
L 872 T	Attaching Stud (No Cut)	'41–	'41–	
L 1001 T	Impulse Lock Nut Cotter Pin (No Cut)	'41–	'41–	
L 1148 T	Plain Washer on Attaching Stud (No Cut)	'41–	'41–	
L 4290 T	Bracket for Spark Plug Cable	'41–	'41–	
L 4380 T	Drive Gear	'41–	'41–	
M 42 XA	Drive Cup Washer	'41–	'41–	
M 126 XB	Screw for Coil Core Clamp (2 used)	'41–	'41–	
X 1413	Condenser	'41–	'41–	
X 2706	Coil Core	'41–	'41–	
X 2719	Impulse Stop Assembly	'41–	'41–	
X 2721A	Stop Button Lead Wire	'41–	'41–	
X 2723	High Tension Lead Wire	'41–	'41–	
X 2747	Oiling Disk	'41–	'41–	
X 2766	Coil Unit	'41–	'41–	
X 2785	Distributor Cap	'41–	'41–	
X 2919	Rotor Assembly	'41–	'41–	
X 3168	Cover with Breaker Plate	'41–	'41–	
X 3192	Driven Flange with Trip Arms	'41–	'41–	
X 3343	Breaker Point Assembly	'41–	'41–	
X 3872	Main Housing Assembly	'41–	'41–	
	GASOLINE STRAINER USED WITH "LU" JOHN DEERE MOTOR			
AL 2087 T	Gasoline Strainer, Complete	'41–	'41–	
AL 2730 T	Elbow Assembly on Gasoline Strainer	'41–	'41–	
L 884 T	Glass Bowl	'41–	'41–	
L 885 T	Screen for Strainer	'41–	'41–	
L 886 T	Gasket for Strainer	'41–	'41–	
L 1172 T	Pipe Nipple, Gasoline Strainer to Tank (No Cut)	'41–	'41–	
	SCHEBLER CARBURETOR (TSX-60) AND GASOLINE TANK USED WITH "LU" JOHN DEERE MOTOR (ORDER FROM MOLINE TRACTOR DIVISION, MOLINE, ILLINOIS)			
10-2182	Fuel Bowl	'41–	'41–	
13-719	Throttle Shaft Assembly	'41–	'41–	
14-175	Throttle Fly	'41–	'41–	
15-8	Screw for Choke Fly and Throttle (4 used)	'41–	'41–	
15-42	Throttle Stop Screw	'41–	'41–	
15-223	Upper Body Plug Screw	'41–	'41–	
15-397	Choke Lever Stop Screw	'41–	'41–	
15-443	Upper Body to Fuel Bowl Screw (4 used)	'41–	'41–	
16-80	Bowl to Body Gasket	'41–	'41–	
16-449	Main Nozzle Gasket	'41–	'41–	
24-262	Throttle Stop Screw Spring	'41–	'41–	
24-340	Spring for Idler Adjusting Screw	'41–	'41–	
24-425	Choke Fly Flapper Spring	'41–	'41–	

For Cuts of Repair Parts, see page 96.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	SCHEBLER CARBURETOR (TSX-60) AND GASOLINE TANK USED WITH "LU" JOHN DEERE MOTOR (ORDER FROM MOLINE TRACTOR DIVISION, MOLINE, ILLINOIS)—Continued			
24-480	Choke Lever Stop Screw Spring	'41–	'41–	
26-657	Choke Shaft Assembly	'41–	'41–	
27-144	Valve for Choke Fly Flapper	'41–	'41–	
27-154	Choke Fly	'41–	'41–	
27-539	Choke Fly Assembly	'41–	'41–	
30-600	Float Assembly	'41–	'41–	
32-27	Float Shaft	'41–	'41–	
43-94	Idling Adjusting Screw	'41–	'41–	
44-38	Throttle Shaft Packing	'41–	'41–	
44-39	Choke Shaft Packing (2 used)	'41–	'41–	
46-457	Venturi (No Cut)	'41–	'41–	
47-608	Main Nozzle	'41–	'41–	
49-101L	Idling Jet	'41–	'41–	
49-196	Main Jet	'41–	'41–	
55-231	Retainer for Throttle Shaft Packing (No Cut)	'41–	'41–	
62-167	Throttle Stop Pin (No Cut)	'41–	'41–	
67-523	Fuel Strainer in Carburetor	'41–	'41–	
78-154	Lock Washer for Bowl to Body Screw (4 used)	'41–	'41–	
78-184	Washer for Choke Stop Screw	'41–	'41–	
78-322	Lock Washer for Choke and Throttle Fly Screw (4 used)	'41–	'41–	
99-7	Drain Plug	'41–	'41–	
227-738	Upper Body with Throttle Shaft and Fly	'41–	'41–	
233-536	Fuel Valve with Matched Fuel Valve Seat and Gasket	'41–	'41–	
AL 2272 T	Gas Tank Support, Rear, with Lining	'41–	'41–	
AL 2275 T	Cap for Gasoline Tank	'41–	'41–	
AL 2757 T	Gasoline Line, Complete	'41–	'41–	
AL 2764 T	Gasoline Tank	'41–	'41–	
AL 2768 T	Gas Tank Support, Front, with Lining	'41–	'41–	
AL 2848 T	Carburetor, Complete	'41–	'41–	
L 681 T	Gasket between Carburetor and Manifold	'41–	'41–	
	GOVERNOR USED WITH "LU" JOHN DEERE MOTOR			
AL 2096 T	Governor Connecting Rod Ball Joint Assembly	'41–	'41–	
AL 2667 T	Governor Operating Lever and Shaft Assembly	'41–	'41–	
AL 2691 T	Thrust Bearing with Bushings	'41–	'41–	
AL 2692 T	Governor Lever	'41–	'41–	
AL 2718 T	Governor Shaft Assembly, Complete with Weights and Gear	'41–	'41–	
AL 2720 T	Governor, Complete	'41–	'41–	
AL 2753 T	Case with Bushing, Welsh Plug and Seal Assembly (No Cut)	'41–	'41–	
L 1136 T	Jam Nut for Governor Lever Stop Screw (No Cut)	'41–	'41–	
L 1169 T	Welsh Plug in Governor Cover (No Cut)	'41–	'41–	
L 1197 T	Grooved Pin for Governor Fork (No Cut)	'41–	'41–	
L 4129 T	Dowel Pin, Governor Case to Cylinder Block (Long) (No Cut)	'41–	'41–	
L 4158 T	Governor Operating Fork	'41–	'41–	
L 4176 T	Operating Shaft Sealing Washer	'41–	'41–	
L 4177 T	Governor Gear Thrust Washer	'41–	'41–	
L 4181 T	Operating Weight (2 used)	'41–	'41–	
L 4183 T	Operating Shaft Seal Retainer	'41–	'41–	
L 4188 T	Pin for Operating Weight (2 used)	'41–	'41–	
L 4197 T	Operating Spring	'41–	'41–	
L 4231 T	Governor Gasket	'41–	'41–	
L 4238 T	Operating Lever Stop Screw	'41–	'41–	
L 4244 T	Connecting Rod for Governor	'41–	'41–	
L 4265 T	Governor Shaft Front Bearing	'41–	'41–	
L 4266 T	Governor Shaft Rear Bearing	'41–	'41–	
L 4299 T	Bushing for Governor Thrust Bearing (2 used) (No Cut)	'41–	'41–	
L 4404 T	Control Rod	'41–	'41–	
L 4409 T	Bracket for Governor Control Rod	'41–	'41–	
	RADIATOR USED WITH "LU" JOHN DEERE MOTOR			
AL 2083 T	Hose Clamp for Upper Hose Connection (2 used)	'41–	'41–	
AL 2090 T	Hose Clamp for Lower Hose Connection (4 used)	'41–	'41–	
AL 2268 T	Radiator Grill	'41–	'41–	
AL 2275 T	Radiator Cap (No Cut)	'41–	'41–	
AL 2686 T	Radiator, Complete	'41–	'41–	
AP14032 H	Radiator Screen (No Cut)	'41–	'41–	
L 333 T	Lower Hose Connection to Motor (2 used)	'41–	'41–	
L 338 T	Upper Hose Connection to Motor	'41–	'41–	
L 365 T	Water Pipe from Motor to Radiator	'41–	'41–	
P 32973 H	Latch for Radiator Screen (2 used)	'41–	'41–	

For Cuts of Repair Parts, see pages 96 and 97.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	RADIATOR USED WITH "LU" JOHN DEERE MOTOR—Continued			
P 33046 H	Radiator Support, R. H.	'41–	'41–	
P 33047 H	Radiator Support, L. H.	'41–	'41–	
P 33320 H	Radiator Screen Latch Spring (2 used)	'41–	'41–	
	HERCULES IXA-3 MOTOR AND CONNECTING PARTS			
6677	Lock Washer for Oil Pan Baffle Plate Screw	1940	1940	
9858	Key for Oil Pump Gears (Woodruff No. 2) (No Cut)	1940	1940	
21182	Snap Ring for Oil Pump (No Cut)	1940	1940	
59A	Pipe Plug for Idler Shaft and Oil Tube, 1-1/8"	1940	1940	
60A	Oil Tube Pipe Plug, 1/4" (No Cut)	1940	1940	
267A	Cap Screw Lock Wire on Connecting Rod, Flywheel Bolt	1940	1940	
301A	Cotter Pin for Connecting Rod Bolt	1940	1940	
303A	Attaching Screw for Oil Pump Body and Oil Filterator Pad Cover Plate	1940	1940	
312A	Lock Washer for Inlet Pipe Cap Screw	1940	1940	
315A	Screw, Motor to Flywheel Housing and Water Outlet Pipe (5 used) (3/8—16" x 7/8")	1940	1940	
342A	Lock Washer for Gear Cover, Flywheel Housing and Water Outlet Pipe Screw	1940	1940	
615A	Lock Washer for Oil Pump Body, Oil Pan and Oil Filterator Pad Cover Screw	1940	1940	
620A	Pipe Plug for Water Inlet Pipe	1940	1940	
665A	5/8" Expansion Plug for Flywheel	1940	1940	
752A	Gear Cover Screw Nut (3/8—24)	1940	1940	
848A	Nut for Manifold Stud	1940	1940	
1075A	Pipe Plug for Cylinder Head, 1/2"	1940	1940	
1435A	Strainer Pipe Plug for Oil Pan	1940	1940	
1707A	Dowel for Flywheel	1940	1940	
1729A	Cover Screw for Oil Pump	1940	1940	
1779A	Baffle Plate Screw for Oil Pan (No Cut)	1940	1940	
1865A	Screw for Valve Cover (3/4—16" x 1-1/2") (No Cut)	1940	1940	
2100A	Inlet Pipe Cap Screw (1/2—13" x 1")	1940	1940	
2169A	Cover for Starter Opening	1940	1940	
3277A	Expansion Plug (1-1/4" Diameter) (No Cut)	1940	1940	
3278A	Expansion Plug (1" Diameter) (No Cut)	1940	1940	
3332A	Felt Washer for Bayonet Oil Gauge (No Cut)	1940	1940	
3592A	Gear Cover Screw (3/8—24" x 5")	1940	1940	
3673A	Hollow Dowel for Gear Cover (2 used) (No Cut)	1940	1940	
3689A	Gear Cover Oil Seal Sleeve (No Cut)	1940	1940	
3803A	Piston Ring, Compression	1940	1940	
3903A	Piston Ring, Oil Regulating	1940	1940	
4172A	Washer for Manifold Stud	1940	1940	
4185A	Stud for Manifold (Short)	1940	1940	
4318A	Screw for Oil Pan (No Cut)	1940	1940	
4412A	Drive Gear Washer for Oil Pump	1940	1940	
4413A	Key for Crankshaft Gear (Woodruff No. 61)	1940	1940	
4423A	Screw, Oil Pan to Flywheel Housing (7 used) (3/8—16" x 3/4") (No Cut)	1940	1940	
4431A	Cap Screw for Cylinder Head (3/8—16" x 2-1/4") (14 used)	1940	1940	
4433A	Cap Screw for Main Bearing	1940	1940	
4448A	Pin for Starting Crank (5/16" x 1-3/16")	1940	1940	
4853A	Camshaft Thrust Washer	1940	1940	
4859A	Lock Washer for Main Bearing Cap Screw (No Cut)	1940	1940	
4877A	Gear Cover and Cylinder Head Screw (3/8—16x 2-1/2")	1940	1940	
4931A	Water Inlet Pipe Gasket	1940	1940	
5813A	Drive Gear Pin for Oil Pump	1940	1940	
8572A	Pressure Regulator or Screw for Oil Pump	1940	1940	
8573A	Pressure Regulator Screw Lock Nut for Oil Pump	1940	1940	
8574A	Pressure Regulating Acorn Nut for Oil Pump	1940	1940	
8575A	Washer for Pressure Regulator Screw Lock Nut on Oil Pump (No Cut)	1940	1940	
11022A	Felt Washer, Oil Pump to Baffle Plate	1940	1940	
11119A	Oil Seal, Flywheel Housing to Crankshaft (Victor No. 61140)	1940	1940	
14099A	Gear Cover Screw (3/8—16" x 1-7/8") (4 used) (No Cut)	1940	1940	
14224A	Outlet Pipe Gasket	1940	1940	
14589A	Washer, Oil Pump to Baffle Plate (7/8" x 2" x 22" Ga.)	1940	1940	
14591A	Camshaft and Idler Gear Thrust Adjusting Screw Plug	1940	1940	
14756A	Stud for Manifold (Long)	1940	1940	
14858A	Dowel, Flywheel Housing to Motor Block (2 used) (No Cut)	1940	1940	
14974A	Push Rod Adjusting Nut	1940	1940	
15243A	Pressure Regulator Piston for Oil Pump	1940	1940	
22071A	Fan Pulley Pin	1940	1940	
22282A	Spring for Starting Crank	1940	1940	

For Cuts of Repair Parts, see page 97.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	HERCULES IXA-3 MOTOR AND CONNECTING PARTS—Continued			
27003A	Bolt for Flywheel (7/16—20″ x 1-1/32″)	1940	1940	
27008A	Valve Spring	1940	1940	
27013A	Valve Spring Seat	1940	1940	
27018A	Seat Pin for Valve Spring (Oblong) (No Cut)	1940	1940	
27021A	Bushing for Piston Pin	1940	1940	
27053A	Main Bearing Shim (.003″)	1940	1940	
27054A	Connecting Rod Shim (.003″)	1940	1940	
27056A	Nut for Connecting Rod Bolt (No Cut)	1940	1940	
27061A	Main Bearing Shim (.002″)	1940	1940	
27067A	Connecting Rod Shim (.002″)	1940	1940	
27111A	Clamp Screw for Connecting Rod (Holds Pin) (5/16—24″ x 1-3/16″)	1940	1940	
27127A	Attaching Gasket for Oil Pump	1940	1940	
27140A	Valve Intake	1940	1940	
27317A	Push Rod	1940	1940	
27320A	Bracket for Spark Plug Cables	1940	1940	
27417A	Pressure Regulating Spring for Oil Pump	1940	1940	
27652A	Water Inlet Pipe	1940	1940	
28096A	Bolt for Connecting Rod	1940	1940	
28103A	Bayonet Gauge Bushing (No Cut)	1940	1940	
28212A	Valve, Exhaust	1940	1940	
28214A	Valve Guide	1940	1940	
28262A	Drive Shaft for Oil Pump	1940	1940	
28263A	Idler Shaft for Oil Pump	1940	1940	
28264A	Oil Pump Gears (2 used)	1940	1940	
28265A	Cover for Oil Pump	1940	1940	
28371A	Drive Gear for Oil Pump	1940	1940	
28536A	Governor Gear Bearing	1940	1940	
28780A	Magneto to Gear Cover Filler Bushing (No Cut)	1940	1940	
28789A	Breather Pipe	1940	1940	
28953A	Oil Filterator Pad Cover Plate	1940	1940	
28954A	Oil Filterator Pad Cover Plate Gasket	1940	1940	
29670A	Water Outlet Pipe	1940	1940	
40068A	Camshaft Thrust Plunger	1940	1940	
46019A	Push Rod Adjusting Screw	1940	1940	
14592AS	Camshaft and Idler Gear Thrust Adjusting Screw Assembly	1940	1940	
28038AS	Breather Cap Assembly (Oil Filter Cap)	1940	1940	
28104AS	Bayonet Oil Gauge for Oil Pan	1940	1940	
28106AS	Gear Cover Oil Seal Assembly	1940	1940	
27006B	Valve Cover	1940	1940	
27029B	Piston Pin	1940	1940	
27039B	Crankshaft Gear (21 Teeth)	1940	1940	
27040B	Front and Center Main Bearing (Upper)	1940	1940	
27042B	Rear Main Bearing (Upper)	1940	1940	
27048B	Camshaft Front Bearing	1940	1940	
27050B	Camshaft Center Bearing (2 used)	1940	1940	
27051B	Camshaft Rear Bearing	1940	1940	
27064B	Gasket for Flywheel Housing (Vellumoid)	1940	1940	
27093B	Front and Center Bearing Cap, Babbitted and Machined	1940	1940	
27094B	Rear Main Bearing Cap, Babbitted and Machined	1940	1940	
27197B	Baffle Plate for Oil Pan	1940	1940	
27271B	Fan Drive Pulley	1940	1940	
27306B	Camshaft Gear (42 Teeth)	1940	1940	
27799B	Manifold Gasket	1940	1940	
28009B	Valve Cover Gasket	1940	1940	
28107B	Oil Pan Gasket	1940	1940	
28924B	Crankshaft	1940	1940	
29711BS	Starting Crank (No Cut)	1940	1940	
28094BSY	Connecting Rod and Cap Assembly, Babbitted and Machined	1940	1940	
27214C	Piston with Bushing	1940	1940	
27233C	Cylinder Head Gasket	1940	1940	
27698C	Gear Cover Gasket	1940	1940	
28261C	Oil Pump Body	1940	1940	
28494C	Flywheel	1940	1940	
28080CS	Strainer Assembly for Oil Pan	1940	1940	
28375CS	Oil Pump Assembly	1940	1940	
28105D	Oil Pan	1940	1940	
28123D	Gear Cover	1940	1940	
28202D	Cylinder Head	1940	1940	
28571D	Flywheel Housing	1940	1940	
28827D	Manifold	1940	1940	
28973DS	Camshaft and Plunger Assembly	1940	1940	
28339ESY	Cylinder and Crankcase with Valve Guides, Camshaft Bearings and Idler Gear Bearings (No Cut)	1940	1940	

For Cuts of Repair Parts, see pages 97 and 98.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	HERCULES IXA-3 MOTOR AND CONNECTING PARTS—Continued			
125814 H	Trap for Spark Arrester	1940	1940	.....
1C295 H	Spark Arrester on Exhaust Pipe	1940	1940	.....
AP 7779 H	Raising Jack, Complete with Lever (No Cut)	1940	1940	.....
AP 8582 H	Main Drive Belt Tightener Pulley, Complete (P2003H Complete)	1940	1940	.....
AP 9454 H	Upper Air Cleaner	1940	1940	.....
AP10738 H	Clamp for Lower Air Cleaner Bowl	1940	1940	.....
AP12614 H	Donaldson Air Cleaner (No Cut)	1940	1940	.....
AP12621 H	Motor Support, Front	1940	1940	.....
AP12658 H	Exhaust Pipe	1940	1940	.....
AP12675 H	Stiffener Plate for Tractor Hitch, L. H. Side	1940	1940	.....
AP12676 H	Bracket, Complete, for Roller Bearing Box on Front End of Power Drive Shaft	1940	1940	.....
AP12679 H	Power Drive Shaft, Rear (Splined)	1940	1940	.....
AP12680 H	Power Drive Shaft, Front	1940	1940	.....
AP12682 H	Main Side Channel for Tractor Hitch (No Cut)	1940	1940	.....
AP12683 H	Brace for Main Side Channel for Tractor Hitch (No Cut)	1940	1940	.....
AP12705 H	Arm for Main Drive Belt Tightener Pulley (AP12887H with P32077H will work)	1940	1940	AP12887H
AP12754 H	Straw Shield, Complete, for Motor	1940	1940	.....
AP12821 H	Extension, Complete for Front End of Tractor Hitch (No Cut)	1940	1940	.....
AP12887 H	Arm for Main Drive Belt Tightener Pulley (with P32077H, works for AP12705H)	1940	1940	AP12705H
JD 7165 H	Roller Bearing, Complete, in Box on Front End of Power Shaft (New Departure No. 88A)	1940	1940	.....
L 373 T	Coupling for Power Drive Shaft (2 used) (Fabric) (No Cut)	1940	1940	.....
L 374 T	Washer on Power Drive Shaft Coupling Bolts (6 used) (No Cut)	1940	1940	.....
P 1857 H	Bracket on Motor for Exhaust Pipe	1940	1940	.....
P 2003 H	Main Drive Belt Tightener Pulley (Order AP8582H)	1940	1940	.....
P 2830 H	Bracket on Tractor Hitch or Main Drive Belt Tightener Pulley Arm	1940	1940	.....
P 2868 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (PK19H will work)	1940	1940	P2954H–PK19H
P 2892 H	Driven Pulley on Front End of Power Drive Shaft (11″)	1940	1940	.....
P 2954 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (PK19H will work) (No Cut)	.....	1940	P2868H–PK19H
°PK 19 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm (works for P2868H or P2954H) (Repairs only) (No Cut)	1940	1940	P2868H–P2954H
P 4240 H	Hose Clamp for Hose Connection on Pipe from Air Cleaner to Carburetor and Air Cleaner to Air Intake Pipe (6 used)	1940	1940	.....
P 9848 H	Hose Clamp for Spark Arrester	1940	1940	.....
P 10528 H	Latch for Hand Hole Cover on Motor Straw Shield	1940	1940	.....
P 12845 H	Hand Hole Cover for Motor Straw Shield	1940	1940	.....
P 14871 H	Key for Motor Pulley (3/8″ x 3/8″ x 3″)	1940	1940	.....
P 15801 H	Turnbuckle for Tractor Hitch Adjustable Truss Rods (2 used)	1940	1940	.....
P 19989 H	Hose Connection, Air Cleaner to Air Intake Pipe	1940	1940	.....
P 20410 H	Oil Gauge on Motor	1940	1940	.....
P 20824 H	U-Bolt for Exhaust Pipe	1940	1940	P32143H
P 22585 H	Companion Flange Gasket	1940	1940	.....
P 22953 H	Bronze Bushing in Main Drive Belt Tightener Pulley (2 used)	1940	1940	.....
P 25110 H	U-Bolt for Air Intake Pipe	1940	1940	P32142H
P 25232 H	Bolt for Lower Air Cleaner Oil Bowl Clamp	1940	1940	.....
P 26281 H	Rubber Collar around Bearing in Bearing Box on Front End of Power Shaft	1940	1940	.....
P 31444 H	Drive Pulley on Motor (4″)	1940	1940	.....
P 31584 H	Main Drive Belt (Length 57″) (No Cut)	1940	1940	.....
P 31592 H	Clamp Angle for Upper End of Intake and Exhaust Pipes	1940	1940	.....
P 31594 H	Angle on Stiffener Plate for Tractor Hitch, R. H. Side	1940	1940	.....
P 31611 H	Support Angle, L. H. Rear, for Motor	1940	1940	.....
P 31612 H	Support Angle, R. H. Rear, for Motor	1940	1940	.....
P 31647 H	Flat Brace for Bearing Bracket on Front End of Power Shaft	1940	1940	.....
P 31648 H	Air Intake Pipe	1940	1940	.....
P 31651 H	Bolt for Power Drive Shaft Coupling (6 used) (7/16″ x 1-1/4″) (P32298H will work)	1940	1940	P32298H
P 31657 H	Box for Roller Bearing on Front End of Power Drive Shaft	1940	1940	.....
P 31658 H	Holder for Raising Jack	1940	1940	.....
P 31682 H	Adjustable Truss Rod, R. H. Front, for Tractor Hitch	1940	1940	.....
P 31683 H	Adjustable Truss Rod, R. H. Rear, for Tractor Hitch	1940	1940	.....
P 31684 H	Angle Brace from Tractor Hitch Extension to Motor	1940	1940	.....
P 31685 H	Angle Brace from Rear End of Tractor Hitch Side, L. H. to Motor	1940	1940	.....
P 31686 H	Bracket, Rear, for Angle Brace from Rear End of Tractor Hitch Side, L. H. to Motor	1940	1940	.....
P 31701 H	Support Plate for Air Cleaner	1940	1940	.....
P 31702 H	Shaft for Main Drive Belt Tightener Pulley	1940	1940	P32077H

°"PK" Numbers are a continuation of casting numbers following P2999 H.

For Cuts of Repair Parts, see page 98.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	HERCULES IXA-3 MOTOR AND CONNECTING PARTS—Continued			
P 31711 H	Clip for L. H. Front Bracket for Shield over Power Shaft in Front of Gear Housing	1940	1940	
P 31712 H	Adjusting Rod for Main Drive Belt Tightener Pulley Arm	1940	1940	
P 31713 H	Angle Clip for Lower End of Main Drive Belt Tightener Pulley Adjusting Rod	1940	1940	
P 31714 H	Wood Spacer Block on Air Intake Pipe for Motor Shield	1940	1940	
P 31727 H	Stiffener Strap for Upper Rear Corner of Motor Shield	1940	1940	
P 31728 H	Stiffener Plate for Tractor Hitch, R. H. Side	1940	1940	
P 31731 H	Round Brace, Middle, for Intake and Exhaust Pipes	1940	1940	
P 31732 H	Round Brace, Front, for Intake and Exhaust Pipes	1940	1940	
P 31733 H	Round Brace, Rear, for Intake and Exhaust Pipes	1940	1940	
P 31743 H	Filler on Tractor Hitch Extension for Brace to Motor	1940	1940	
P 31753 H	Flat Spacer under Main Drive Belt Tightener Arm Bracket	1940	1940	
P 31756 H	Flat Spacer for L. H. Rear Motor Support Angle (Next to Motor)	1940	1940	
P 31757 H	Angle Clip on Motor for Angle Brace from Tractor Hitch Extension to Motor (used only when Transporting)	1940	1940	
P 31759 H	Bracket on Lower Rear Corner of Motor Straw Shield	1940	1940	
P 31761 H	U-Bolt on Air Intake Pipe for Motor Shield	1940	1940	
P 31814 H	Adjustable Truss Rod, L. H. Rear, for Tractor Hitch	1940	1940	
P 31815 H	Adjustable Truss Rod, L. H. Front, for Tractor Hitch	1940	1940	
P 31861 H	Pipe from Air Cleaner to Carburetor	1940	1940	
P 32059 H	Bracket, Front, for Angle Brace from Rear End of Tractor Hitch Side, L. H., to Motor	1940	1940	
P 32077 H	Shaft for Main Drive Belt Tightener Pulley	1940	1940	P31702H
P 32142 H	U-Bolt for Air Intake Pipe	1940	1940	P25110H
P 32143 H	U-Bolt for Exhaust Pipe	1940	1940	P20824H
P 32298 H	Bolt for Power Drive Shaft Coupling (6 used) (7/16" x 1-3/4") (works for P31651H)	1940	1940	P31651H
P 32353 H	Shim for Support on Tractor Hitch for L. H. End of Main Drive Gear Housing	1940	1940	
P 32609 H	Stiffener Channel for Tractor Hitch Main Side Channel Brace (No Cut)	1940	1940	
S 533 H	Handwheel for Main Drive Belt Tightener Pulley Adjusting Rod	1940	1940	
	TWIN DISK CLUTCH USED WITH IXA-3 HERCULES MOTOR			
105	Cotter Pins (8 used)	1940	1940	
118	Bolts, Nuts and Cotters for Cone Collar (2 used)	1940	1940	
120	Shims for Cone Collar (2 used)	1940	1940	
1037	Clutch Throwout Yoke	1940	1940	
1382	Adjusting Lock Pin Spring	1940	1940	
1561	Felt Washer	1940	1940	
1900	Finger Connecting Link Pin (Short) (4 used) (No Cut)	1940	1940	
2042	Adjusting Lock Pin (No Cut)	1940	1940	
2099	Release Springs (4 used)	1940	1940	
2411	Fingers (4 used)	1940	1940	
2968	Finger Connecting Links (8 used)	1940	1940	
2969	Sliding Sleeve	1940	1940	
3206	Adjusting Yoke with Pin	1940	1940	
3949	Hub and Back Plate, Complete	1940	1940	
3951	Floating Plate	1940	1940	
4461	Shaft through Clutch to Flywheel on Motor	1940	1940	
1871A	Finger Pins (4 used)	1940	1940	
2131A	Finger Connecting Link Pin (4 used) (Long)	1940	1940	
112C6½	Friction Disks (2 used)	1940	1940	
116C6½	Driving Plates	1940	1940	
117C8	Cone Collar (117C8S will work)	1940	1940	117C8S
117C8S	Cone Collar (works for 117C8)	1940	1940	117C8
110D3	Driving Pin	1940	1940	
7958E	Clutch Housing	1940	1940	
A 1002	Snap Ring for Bearing on Shaft through Housing	1940	1940	
A 1663A	Flexible Grease Tube in Clutch Housing	1940	1940	
109715 H	Key for Shifter Lever on Clutch Shaft (1/4" x 1/4" x 1")	1940	1940	
AP12693 H	Twin Disk Clutch, Complete (No Cut)	1940	1940	
AP12694 H	Shifter Lever on Clutch Shaft	1940	1940	
B 5352 H	Throw-Out Rope for Clutch (No Cut)	1940	1940	
JD 7661 R	Ball Bearing on 4461 Shaft (in Clutch) (New Departure No. 7205)	1940	1940	
JD 7675 R	Roller Bearing in Clutch Housing	1940	1940	
M 236	Lock Washer for Flexible Grease Tube Nut (No Cut)	1940	1940	
M 309	Nut for Flexible Grease Tube in Clutch Housing (No Cut)	1940	1940	
M 642	Snap Ring for Finger Connecting Link Pin (8 used) (No Cut)	1940	1940	
P 4080 H	Woodruff Key (2 used) (No Cut)	1940	1940	
P 8685 H	Tubular Rivets (100 per Box) (No Cut)	1940	1940	
P 8686 H	Tubular Rivets (50 per Box) (No Cut)	1940	1940	

For Cuts of Repair Parts, see pages 98 and 99.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	COOLING FAN USED WITH IXA-3 HERCULES MOTOR			
0267D	Lock Washer on Bolt for Fan Blade Assembly (8 used).(No Cut)	1940	1940	
1221D	Cotter Pin for Fan Spindle.....(No Cut)	1940	1940	
1428D	Bolt for Fan Blade Assembly.....	1940	1940	
1429D	Nut for Bolt on Fan Blade Assembly (8 used).....(No Cut)	1940	1940	
1491D	Bronze Washer under Thrust Nut on Rear End of Fan Spindle..	1940	1940	
1840D	Oil Plug.....	1940	1940	
2342D	Lock Washer on Front End of Spindle.....(No Cut)	1940	1940	
2343D	Nut on Front End of Fan Spindle.....	1940	1940	
3147D	Cork Gasket.....	1940	1940	
3153D	Thrust Nut on Rear End of Fan Spindle.....(No Cut)	1940	1940	
3307D	Washer on Spindle next to Fan Bracket (2 used).....	1940	1940	
4143D	Fan Spindle.....	1940	1940	
4144D	Fan Hub.....	1940	1940	
4142LD	Blades, Complete.....	1940	1940	
AP12594 H	Cooling Fan Complete, less Bracket.....	1940	1940	
P 2821 H	Fan Bracket.....(No Cut)	1940	1940	
P 31585 H	Fan Belt.....(No Cut)	1940	1940	P32270H
P 32196 H	Shield on Radiator for Fan (P32270H will work).....(No Cut)	1940	1940	
P 32197 H	Bracket for Fan Shield on Radiator.....	1940	1940	P32196H
P 32270 H	Shield on Radiator for Fan (works for P32196H).....			
P 32271 H	Bracket, Fan Shield to Radiator Support Brace (used with P32196H).....	1940	1940	
	WICO MAGNETO C1324, C4 WITH IMPULSE STARTER USED WITH IXA-3 HERCULES MOTOR			
15-186	Drive Spring.....	1940	1940	
16-369	Primary Grounding Spring.....	1940	1940	
16-449	Oil Plug.....	1940	1940	
16-539	Distributor Grounding Spring.....	1940	1940	
16-583	Drive Cup Spacing Washer (Brass).....	1940	1940	
16-738	Screw for Breaker Arm Clamp, Breaker Arm Spring and Distributor Clip.....	1940	1940	
16-491C	Impulse Lock Nut.....	1940	1940	
16-X477BR	Distributor Arm Group.....	1940	1940	
1118	Cover Screw Washer (Leather).....(No Cut)	1940	1940	
1152	Oil Scraper.....(No Cut)	1940	1940	
1153	Oil Scraper Spring.....(No Cut)	1940	1940	
1172	Oil Catcher.....	1940	1940	
1196	Fixed Contact.....	1940	1940	
1197	Breaker Arm Spacing Washer.....	1940	1940	
1207	Breaker Arm Clamp Washer.....(No Cut)	1940	1940	
1248	Name Plate Screw.....(No Cut)	1940	1940	
1328	Ground Stud.....	1940	1940	
1379	Main Oil Pad.....	1940	1940	
1383	Condenser Screw.....	1940	1940	
1397	Coil Contact.....	1940	1940	
1404	Terminal Screw.....	1940	1940	
1418	Breaker Box Spacer.....	1940	1940	
1533	Condenser Case Gasket.....	1940	1940	
1760	Coil Gasket.....	1940	1940	
1989	Distributor Oil Pad Cover.....	1940	1940	
2122	Driven Flange Spacer.....	1940	1940	
2288	Drive Spring Retainer.....	1940	1940	
2495	Rotor Bushing.....	1940	1940	
2496	Impulse Stop Gasket.....	1940	1940	
2497	Gear Housing Gasket.....	1940	1940	
2503	Coil Core Clamp.....	1940	1940	
2504	Cover Gasket.....	1940	1940	
2505	Oil Pad Spring Plate.....	1940	1940	
2506	Name Plate.....(No Cut)	1940	1940	
2537	Gear Housing Screw.....(No Cut)	1940	1940	
2538	Cover Screw.....(No Cut)	1940	1940	
2573	Breaker Arm Spring Screw Lock Washer.....(No Cut)	1940	1940	
2635	Gear Housing Screw Lock Washer.....(No Cut)	1940	1940	
2641	Impulse Stop Screw.....(No Cut)	1940	1940	
2749	Impulse Stop Screw Lock Washer.....(No Cut)	1940	1940	
342A	Lock Washer for Attaching Stud.....	1940	1940	
752A	Nut on Attaching Stud.....	1940	1940	
4895A	Attaching Stud.....	1940	1940	
11107A	Washer on Attaching Stud (Plain).....(No Cut)	1940	1940	
62950A	Gasket between Magneto and Motor.....	1940	1940	
1806B	Drive Cup.....(No Cut)	1940	1940	
2264B	Coil Wedge.....(No Cut)	1940	1940	
A 140	Stop Button Group.....	1940	1940	

For Cuts of Repair Parts, see page 99.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	WICO MAGNETO C1324, C4 WITH IMPULSE STARTER USED WITH IXA-3 HERCULES MOTOR —Continued			
A 139X	Stop Button Support	1940	1940	
A 170X	Grounding Sleeve	1940	1940	
A 179X	Trip Arm	1940	1940	
A 234X	Snap Ring (No Cut)	1940	1940	
A 138XA	Stop Button (No Cut)	1940	1940	
A 142XA	Stop Button Nut (No Cut)	1940	1940	
IVA 583	Drive Cup Spacing Washer (Steel)	1940	1940	
IXA 256	Fix Contact Screw, Cover Screw and Oil Plug Lock Washer	1940	1940	
IXA 862	Ground Stud Insulating Washer (Inside) (No Cut)	1940	1940	
M 31X	Screw for Fixed Contact	1940	1940	
M 33X	Washer for Ground Stud (No Cut)	1940	1940	
M 34X	Ground Stud Insulating Bushing (No Cut)	1940	1940	
M 35X	Ground Stud Insulating Washer (Outside) (No Cut)	1940	1940	
M 54X	Stop Button Nut, Lock Washer	1940	1940	
M 56X	Distributor Clip Screw, Lock Washer	1940	1940	
M 72X	Nut for Ground Stud (No Cut)	1940	1940	
M 90X	Condenser Screw Lock Washer	1940	1940	
M 39XA	Washer for Oil Plug (No Cut)	1940	1940	
M 42XA	Driven Flange Spacing Washer (.020")	1940	1940	
M 55XA	Lock Washer for Coil Core Clamp Screw, Fixed Contact Screw, Terminal Screw and Breaker Arm Clamp Screw	1940	1940	
M 126XB	Screw for Coil Core Clamp (No Cut)	1940	1940	
AP12613 H	Magneto, Complete (Type C-1324) (No Cut)	1940	1940	
P 5297 H	Spark Plug	1940	1940	
P 7180 H	Spark Plug with Priming Cup	1940	1940	
P 31565 H	Spark Plug Cable, Rear	1940	1940	
P 31566 H	Spark Plug Cable, Middle	1940	1940	
P 31567 H	Spark Plug Cable, Front (2 used)	1940	1940	
P 31706 H	Magneto Shield	1940	1940	
X 1408	Breaker Arm Group	1940	1940	
X 1413	Condenser Group	1940	1940	
X 1503	Gear Housing Clip, Assembly	1940	1940	
X 2286	Driven Flange Group	1940	1940	
X 2704	Distributor Cap	1940	1940	
X 2706	Coil Core Group	1940	1940	
X 2716	Rotor Assembly	1940	1940	
X 2719	Impulse Stop	1940	1940	
X 2729	Gear Housing Assembly	1940	1940	
X 2747	Oiling Disk (No Cut)	1940	1940	
X 2766	Coil Group	1940	1940	
X 2775	Impulse Coupling Unit	1940	1940	
X 2784	Ground Stud Interlead Group	1940	1940	
X 2798	Cover Group	1940	1940	
X 2875	Main Housing Unit	1940	1940	
X 2721A	Ground Stud Lead Group	1940	1940	
	IMPERIAL GAS STRAINER USED WITH IXA-3 HERCULES MOTOR			
25854	Brass Screen, Complete	1940	1940	
25857	Cork Gasket for Bowl	1940	1940	
25858	Glass Bowl	1940	1940	
25904	Needle Valve, Complete	1940	1940	
27208	Bowl Retainer Cup and Nut, Complete	1940	1940	
27209	Yoke Complete, with Screw	1940	1940	
41244-1	Head and Valve, Complete	1940	1940	
P 5304 H	Elbow or Gas Strainer to Gas Line	1940	1940	
P 5305 H	Reducing Bushing in Gasoline Tank for Strainer	1940	1940	
P 9538 H	Imperial Gasoline Strainer, Complete	1940	1940	
	ZENITH CARBURETOR O-9519 AND GAS TANK USED WITH IXA-3 HERCULES MOTOR			
AP 3938 H	Gasoline Tank (No Cut)	1940	1940	
AP 8068 H	Drain Cock for Carburetor (Weatherhead No. 135)	1940	1940	
AP 9580 H	Strap over Top of Gasoline Tank (2 used)	1940	1940	
AP 9587 H	Flexible Tubing, Complete, on Gasoline Line	1940	1940	
AP12454 H	Throttle Control	1940	1940	
AP12632 H	Gasoline Line	1940	1940	
AP12708 H	Support, Rear Complete, for Gasoline Tank	1940	1940	
AP12763 H	Carburetor, Complete (Zenith No. O-9519) (No Cut)	1940	1940	
B2-84K-1	Upper Body Assembly	1940	1940	
B 3-39P	Fuel Body	1940	1940	

For Cuts of Repair Parts, see pages 99 and 100.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No
	ZENITH CARBURETOR O-9519 AND GAS TANK USED WITH IXA-3 HERCULES MOTOR—Continued			
C 21-47	Throttle Plate	1940	1940	
C24-10x9	Throttle Lever Clamp	1940	1940	
C24-23x2	Floating Lever	1940	1940	
C 29-211	Throttle Lever and Shaft Assembly	1940	1940	
C 38-21	Venturi (Specify Size)	1940	1940	
C 46-25	Idling Adjusting Screw (No Cut)	1940	1940	
C 52-6-1	Main Jet (Specify Size) (No Cut)	1940	1940	
C 55-6	Idling Jet (Specify Size) (No Cut)	1940	1940	
C66-26-3	Main Discharge Jet (Specify Size)	1940	1940	
C 77-18	Well Vent (Specify Size) (No Cut)	1940	1940	
C 81-17	Fuel Valve Seat (Specify Size) (No Cut)	1940	1940	
C 85-28	Float Assembly	1940	1940	
C 101-17	Air Shutter	1940	1940	
C 108-64	Air Shutter Shaft with Lever (No Cut)	1940	1940	
C 111-9	Spring for Idling Adjusting Screw (No Cut)	1940	1940	
C 117-13	Air Shutter Lever Spring (No Cut)	1940	1940	
C 117-27	Throttle Lever Spring (No Cut)	1940	1940	
C 120-4	Float Axle (No Cut)	1940	1940	
C131-4x2	Retainer for Throttle Shaft Packing Washer (No Cut)	1940	1940	
C 138-23	Lower Plug (No Cut)	1940	1940	
C 142-16	Bowl to Body Gasket	1940	1940	
CR26-61	Throttle Lever Bushing	1940	1940	
CR 88-8	Float Hinge Bracket (No Cut)	1940	1940	
CR115-10	Throttle Lever Spring Retainer (No Cut)	1940	1940	
CR121-26	Throttle Lever Stop Pin (No Cut)	1940	1940	
CR134-5	Air Shutter Lever Swivel	1940	1940	
CT 52-7	Air Shutter Swivel Washer (No Cut)	1940	1940	
CT 57-4	Packing Washer on Throttle Shaft (No Cut)	1940	1940	
CT 63-2	Taper Pin in Air Shutter Lever (No Cut)	1940	1940	
P 3922 H	Gasoline Line Coupling (2 used)	1940	1940	
P 5304 H	Elbow on Carburetor for Gasoline Line	1940	1490	
P 9767 H	Gasket between Carburetor and Manifold	1940	1940	
P 14866 H	Pad for Gasoline Tank (2 used)	1940	1940	
P 17531 H	Gasoline Tank Cap	1940	1940	
P 19987 H	Elbow for Drain Cock	1940	1940	
P 23462 H	Support Strap under Gasoline Tank (2 used)	1940	1940	
P 24818 H	Choke Rod	1940	1940	
P 31593 H	Flat Brace for Gasoline Tank Front Support	1940	1940	
P 31699 H	Support, Front, for Gasoline Tank	1940	1940	
P 31703 H	Bracket for Throttle Control	1940	1940	
T1S10-10	Assembly Bolt (No Cut)	1940	1940	
T 8S8-6	Throttle Lever Swivel Screw (No Cut)	1940	1940	
T8S10-9	Throttle Lever Clamp Screw (No Cut)	1940	1940	
T15B5-3	Screw for Air Shutter and Throttle Plate (No Cut)	1940	1940	
T 41-5	Lock Washer, Air Shutter and Throttle Plate Screw (No Cut)	1940	1940	
T 41-10	Lock Washer, Bowl to Body Screw (No Cut)	1940	1940	
T 56-20	Fibre Washer for Fuel Valve Seat (No Cut)	1940	1940	
T 56-23	Fibre Washer for Lower Plug (No Cut)	1940	1940	
T 56-24	Fibre Washer for Main Jet (No Cut)	1940	1940	
T 56-60	Fibre Washer for Main Discharge Jet (No Cut)	1940	1940	
T 61-4	Cotter Pin (No Cut)	1940	1940	
T 73-9	Screw for Float Hinge Bracket (No Cut)	1940	1940	
	HANDY GOVERNOR USED WITH IXA-3 HERCULES MOTOR			
6677	Lock Washer for Governor Connecting Rod Ball Joint (Hercules No. 628 A)	1940	1940	
6726	Operating Lever Stop Screw (Hercules No. 14170A) (No Cut)	1940	1940	
7548	Pin for Governor Operating Weight (Hercules No. 58854A)	1940	1940	
7610	Operating Weight (2 used) (Hercules No. 23404A)	1940	1940	
9368	Nut for Operating Lever Stop Screw (Hercules No. 4200A) (No Cut)	1940	1940	
11762	Nut for Governor Connecting Rod Ball Joint (Hercules No. 1177A) (No Cut)	1940	1940	
22110	Lock for Governor Operating Weight Pin (Hercules No. 3370A) (No Cut)	1940	1940	
22270	Bushing for Governor Adjusting Lever (Hercules No. 62822A)	1940	1940	
22275-3	Operating Spring for Governor (Hercules No. 28944A)	1940	1940	
22967	Taper Pin for Operating Fork Assembly (Hercules No. 3287A) (No Cut)	1940	1940	
23223	Drive Shaft for Governor (Hercules No. 28539A)	1940	1940	
23498	Bushing for Governor Cover (Hercules No. 28540A) (No Cut)	1940	1940	
24475	Drive Gear for Governor (Hercules No. 28537B)	1940	1940	

For Cuts of Repair Parts, see page 100.

Cat. No.	Description	USED ON 11-A	USED ON 12-A	Similar No.
	HANDY GOVERNOR USED WITH IXA-3 HERCULES MOTOR—Continued			
24510	Operating Fork Assembly for Governor (Hercules No. 28942AS)	1940	1940	
24630	Operating Shaft for Governor (Hercules No. 28988A)	1940	1940	
24653	Stud for Governor Adjusting Lever (Hercules No. 28989A)	1940	1940	
24654	Cork Seal for Operating Shaft (Hercules No. 4735A) (No Cut)	1940	1940	
24726	Cover for Governor (Hercules No. 28569B)	1940	1940	
3791A	Ball Seat for Operating Lever Stop Screw (No Cut)	1940	1940	
14411A	Ball Joint for Governor Connecting Rod	1940	1940	
28552A	Attaching Gasket for Governor	1940	1940	
28969A	Operating Lever for Governor	1940	1940	
29853A	Connecting Rod for Governor	1940	1940	
28997AS	Adjusting Lever for Governor	1940	1940	
28995CS	Governor, Complete (Handy)	1940	1940	
	RADIATOR USED WITH IXA-3 HERCULES MOTOR			
AP12595 H	Radiator, Complete (No Cut)	1940	1940	
AP12629 H	Screen for Radiator	1940	1940	
AP12633 H	Support for Radiator	1940	1940	
P 5652 H	Hose Clamp for Lower Hose Connection (2 used)	1940	1940	
P 14761 H	Hose Clamp for Upper Hose Connection (2 used)	1940	1940	
P 22418 H	Pad on Radiator Support Plate	1940	1940	
P 31610 H	Support Plate for Radiator Screen	1940	1940	
P 31691 H	Lower Hose Connection to Motor	1940	1940	
P 31692 H	Upper Hose Connection to Motor	1940	1940	
P 31744 H	Brace, Radiator to Motor (2 used)	1940	1940	

For Cuts of Repair Parts, see page 100.

WHEELS, AXLES AND HITCH

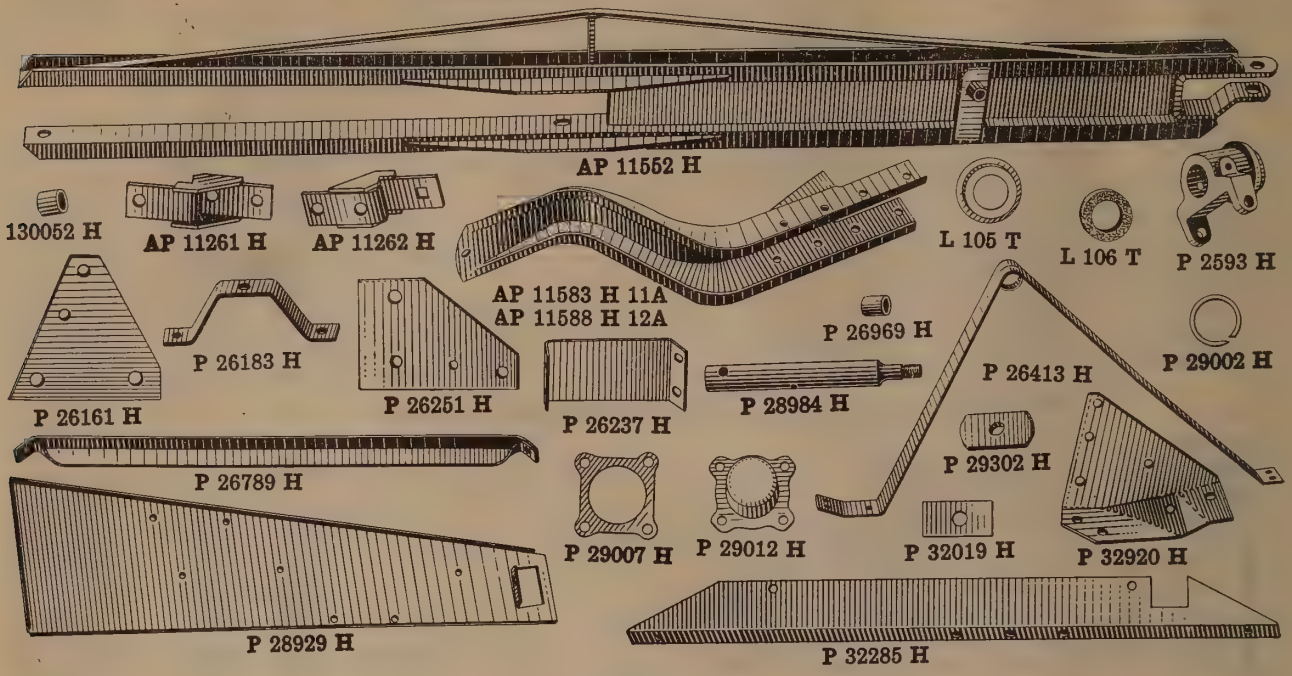

REEL

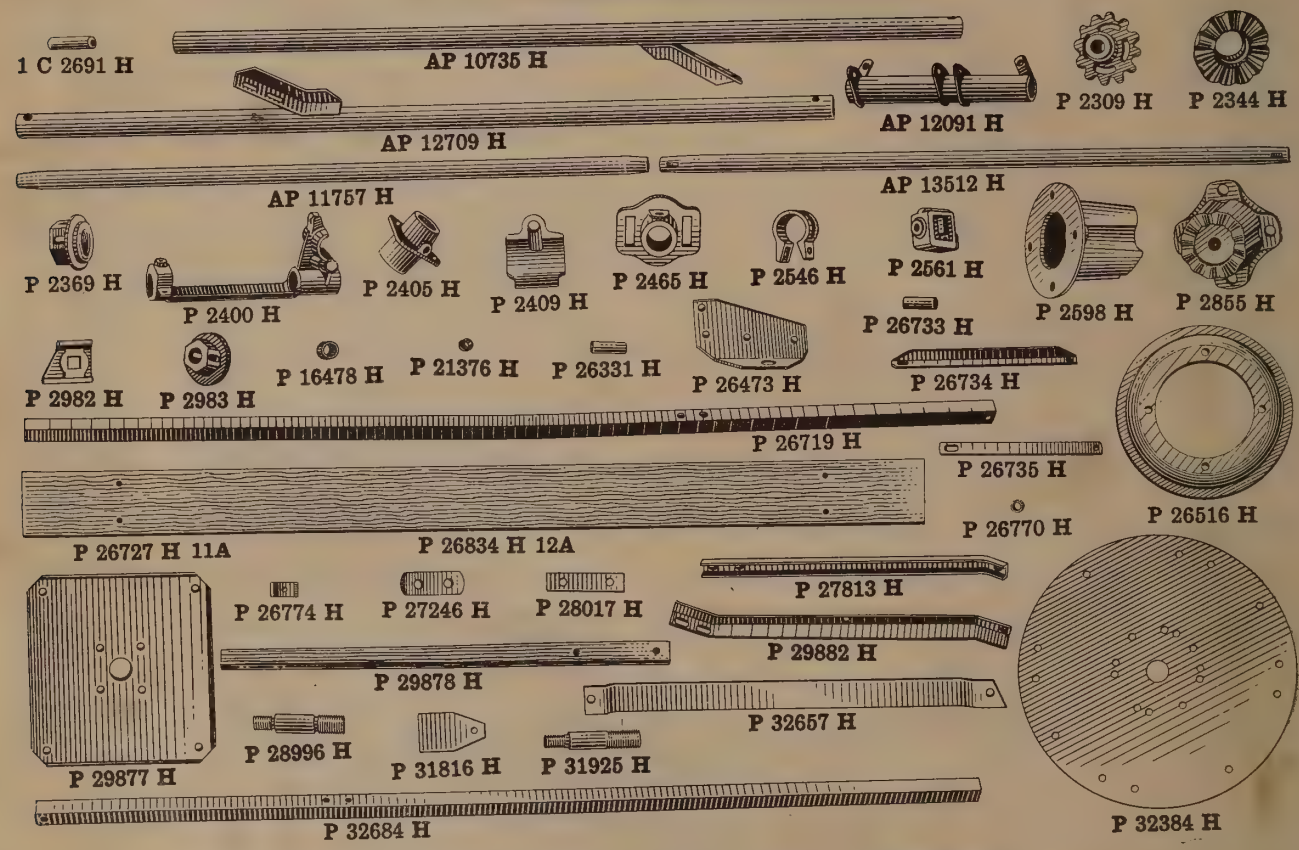

ROPE CONTROL FOR REEL WITH OUTSIDE REEL SUPPORT (SPECIAL)

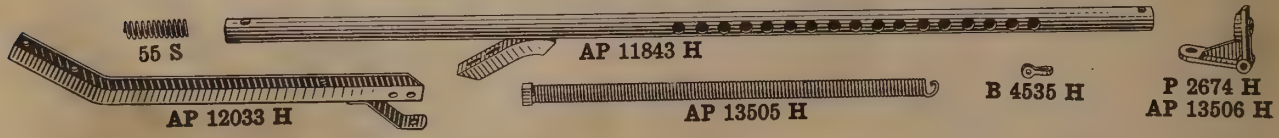

ROPE CONTROL FOR REEL WITH OUTSIDE REEL SUPPORT (SPECIAL) (Continued)

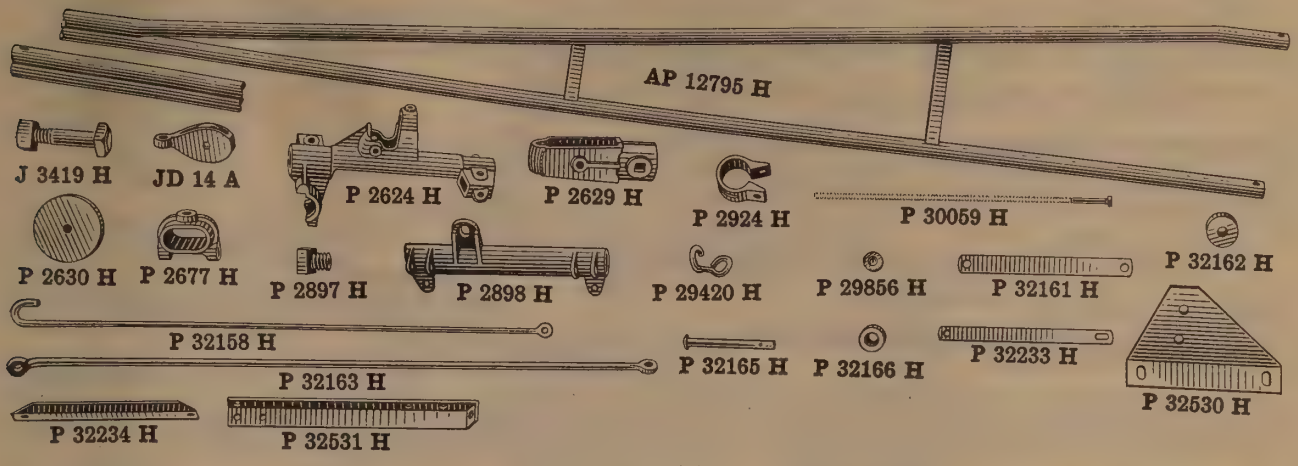

PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN

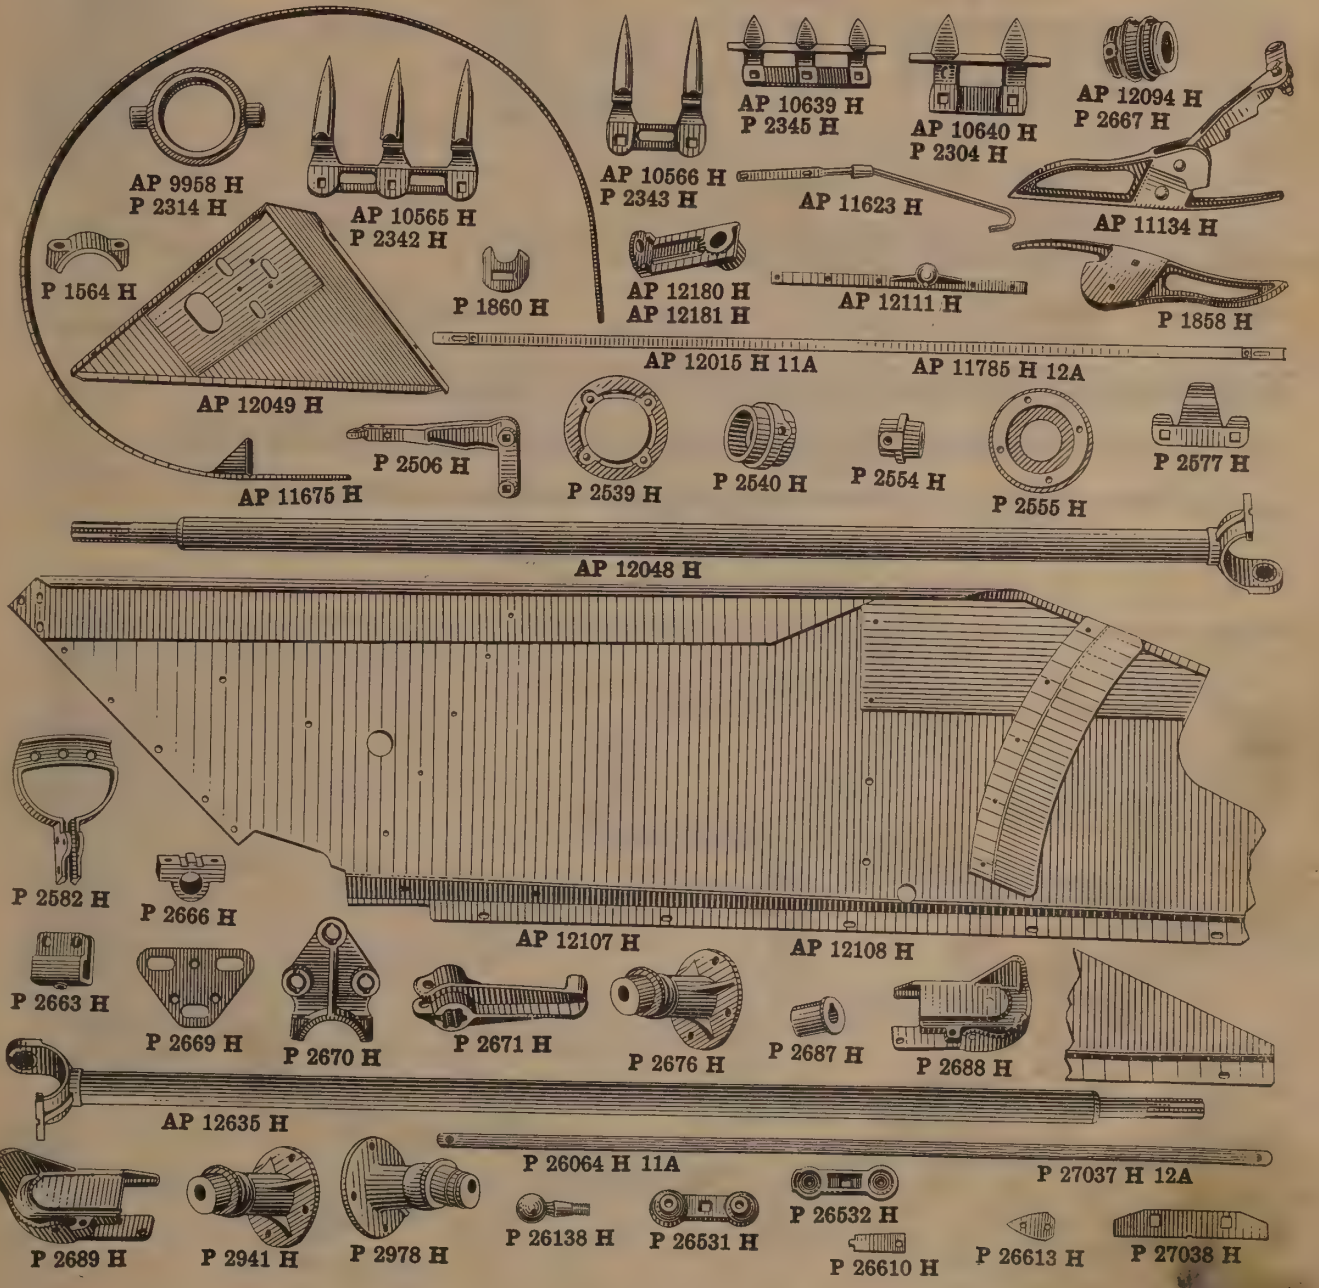

PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN (Continued)

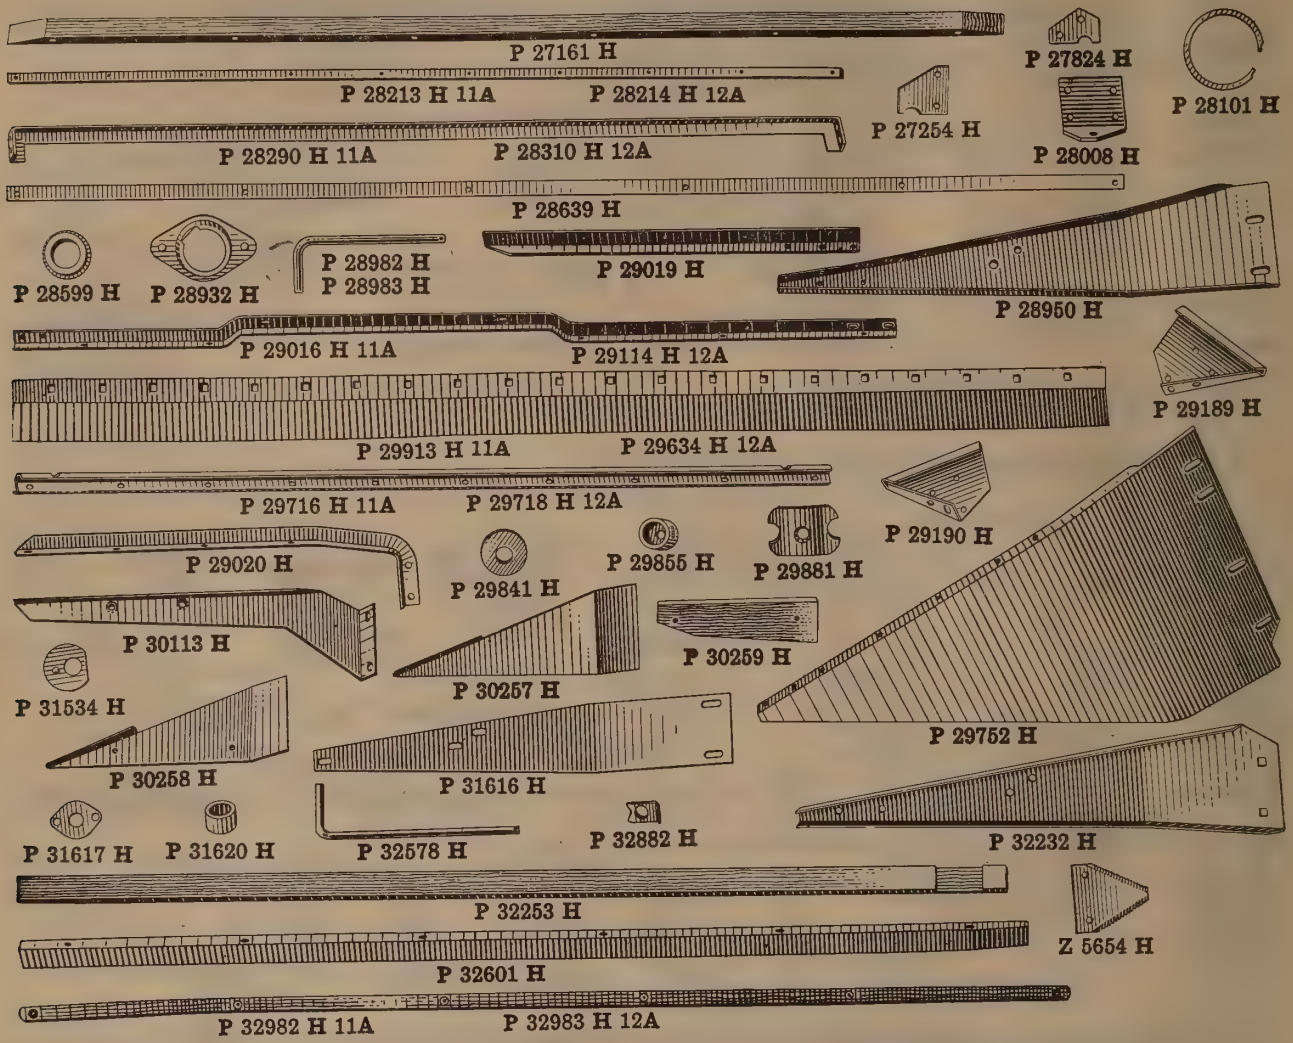

PLATFORM LIFTING LEVER AND LIFTING SPRING

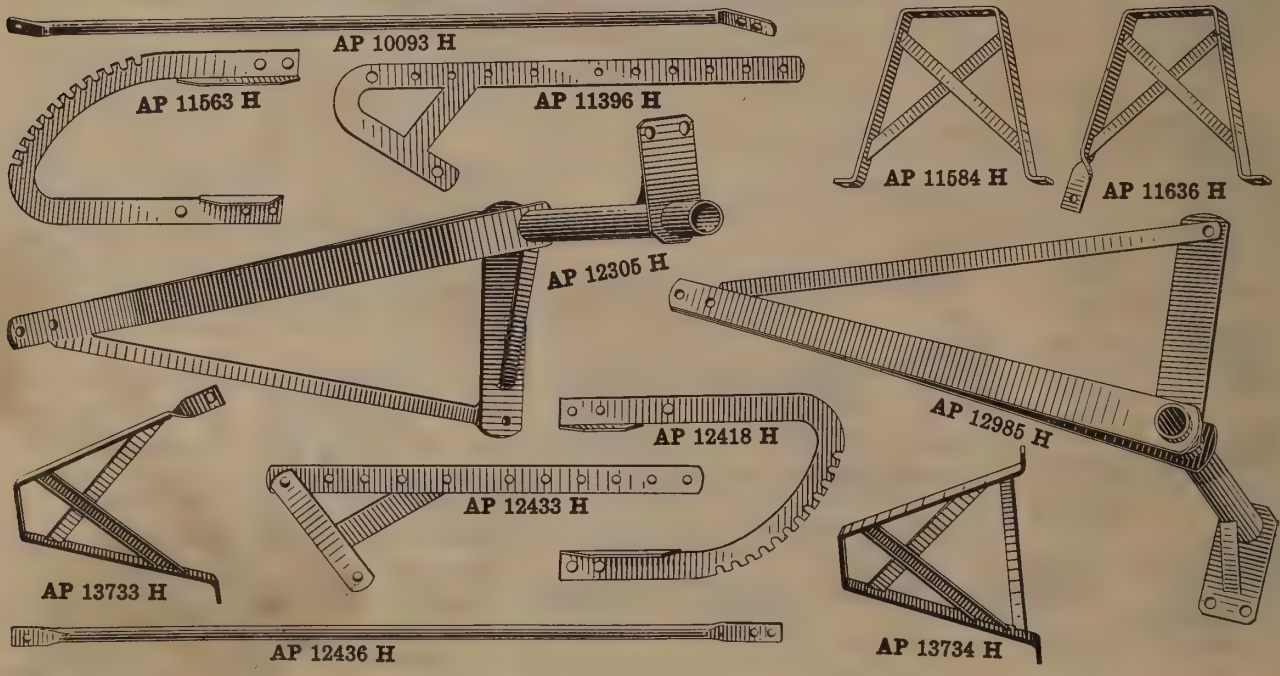

PLATFORM LIFTING LEVER AND LIFTING SPRING (Continued)

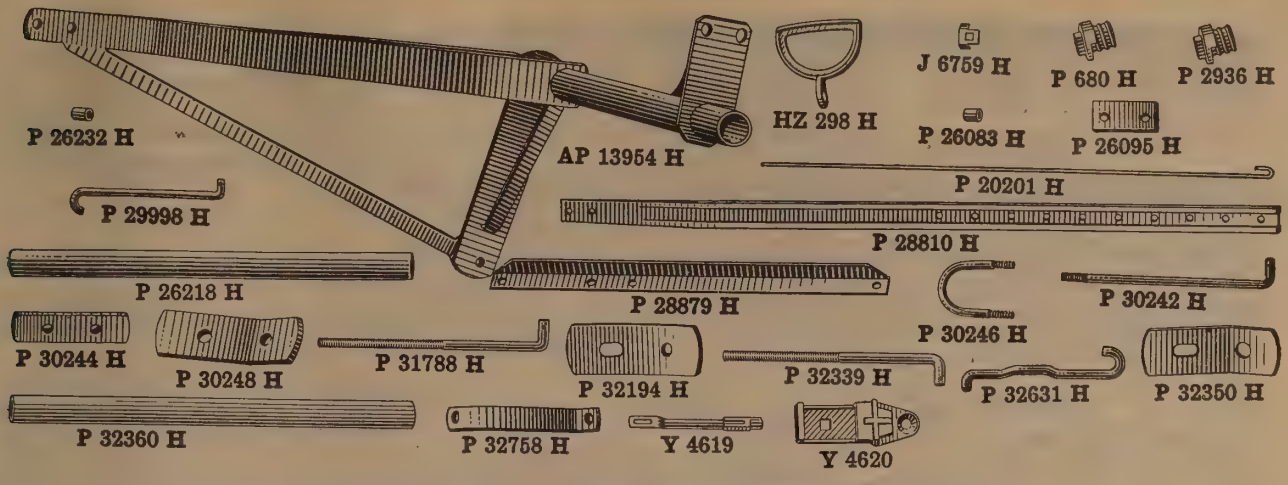

FEEDER CANVAS FRAME AND ROLLER

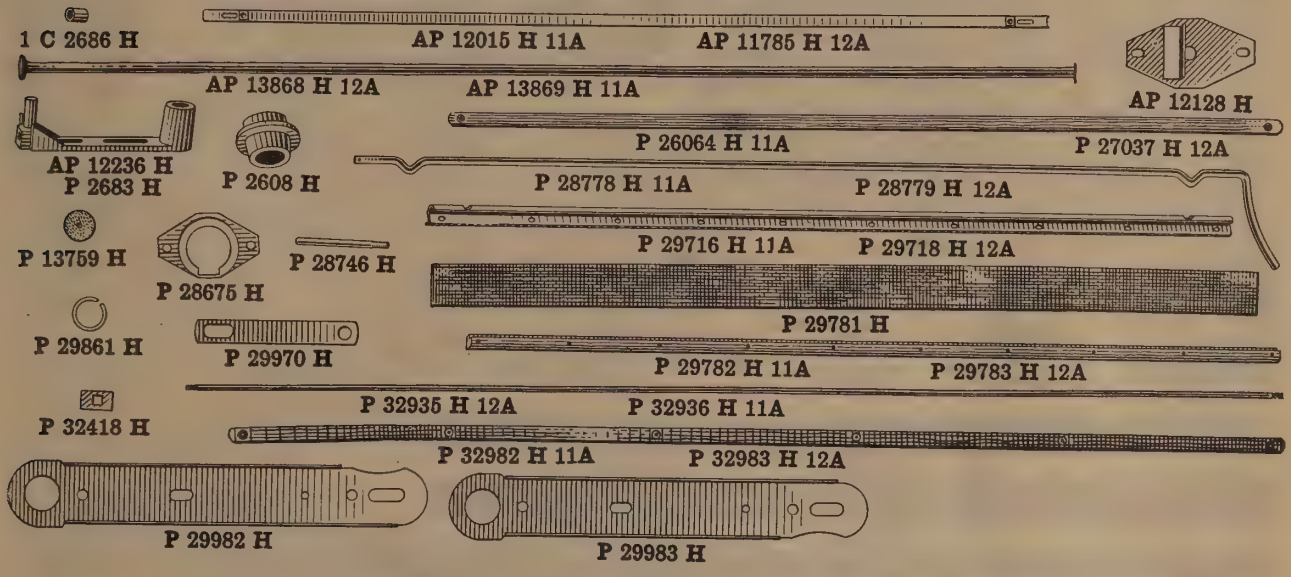

CYLINDER AND CONCAVES

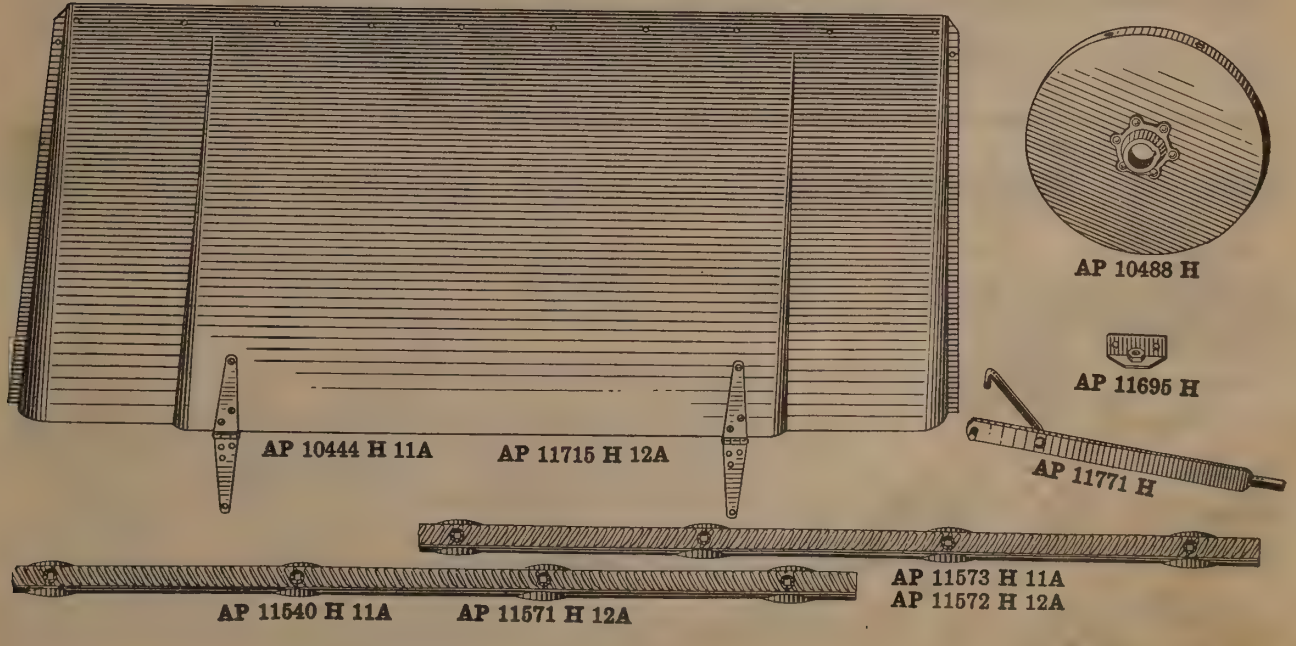

CYLINDER AND CONCAVES (Continued)

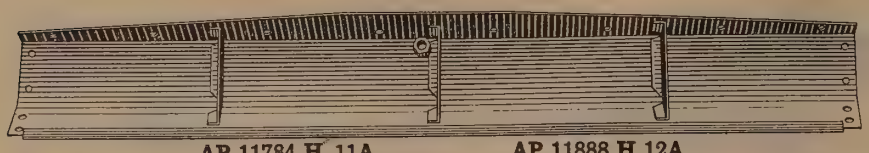
AP 11784 H 11A AP 11888 H 12A

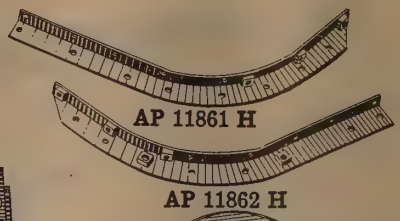
AP 11861 H AP 11862 H

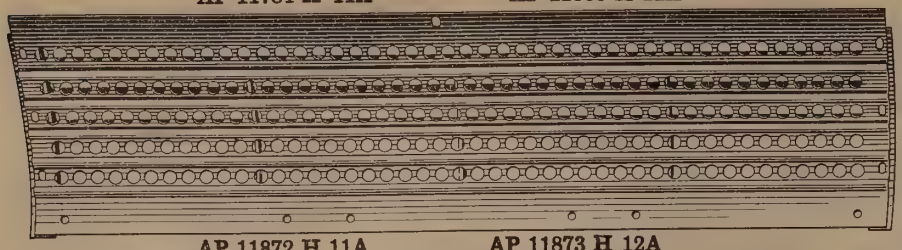
AP 11872 H 11A AP 11873 H 12A

AP 12193 H

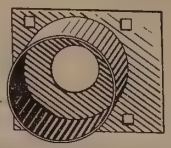
AP 12990 H

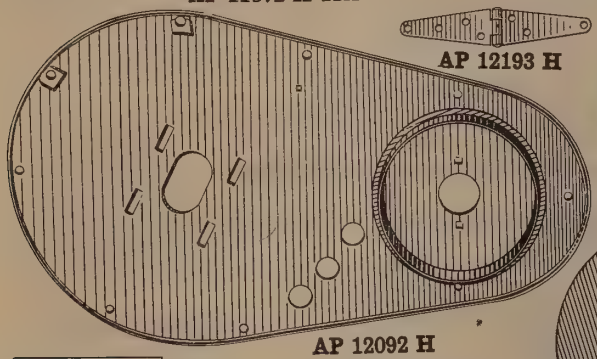
AP 12092 H

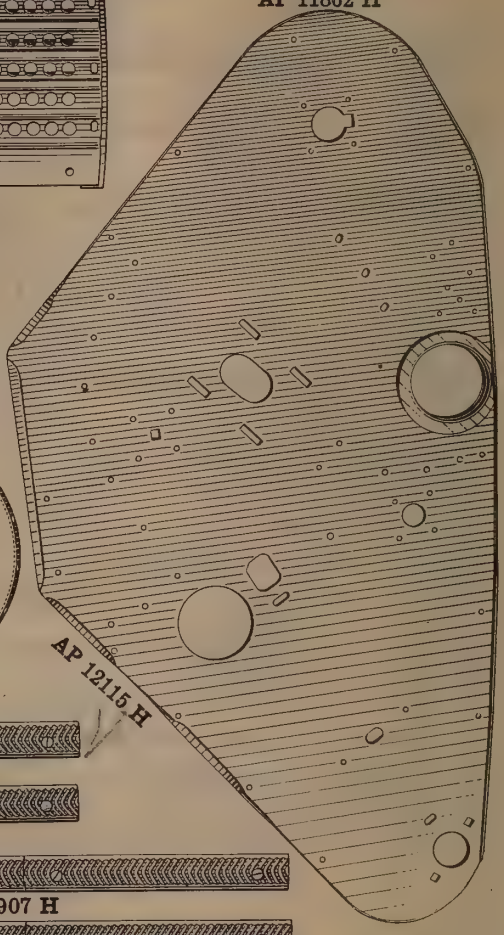
AP 12115 H

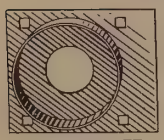
AP 12991 H

P 2482 H

P 2940 H

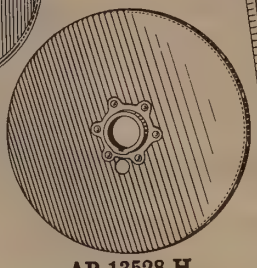
AP 13528 H


AP 12926 H P 2906 H


AP 12927 H P 2908 H


AP 12928 H P 2907 H

AP 12929 H P 2909 H

AP 12932 H 11A AP 12934 H 12A


AP 12983 H 12A AP 12984 H 11A

AP 13890 H 11A P 32409 H
AP 13891 H 12A P 32410 H

P 26281 H

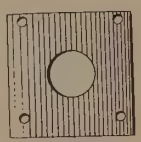
P 26389 H

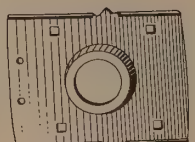
P 26424 H

P 27747 H


P 2620 H 11A P 2621 H 12A


P 28906 H 11A P 28907 H 12A

P 28485 H

P 28908 H 11A P 28909 H 12A


P 28997 H 11A
P 28998 H 12A

P 28484 H

P 29437 H

P 29211 H 11A P 29534 H 12A

CYLINDER AND CONCAVES (Continued)

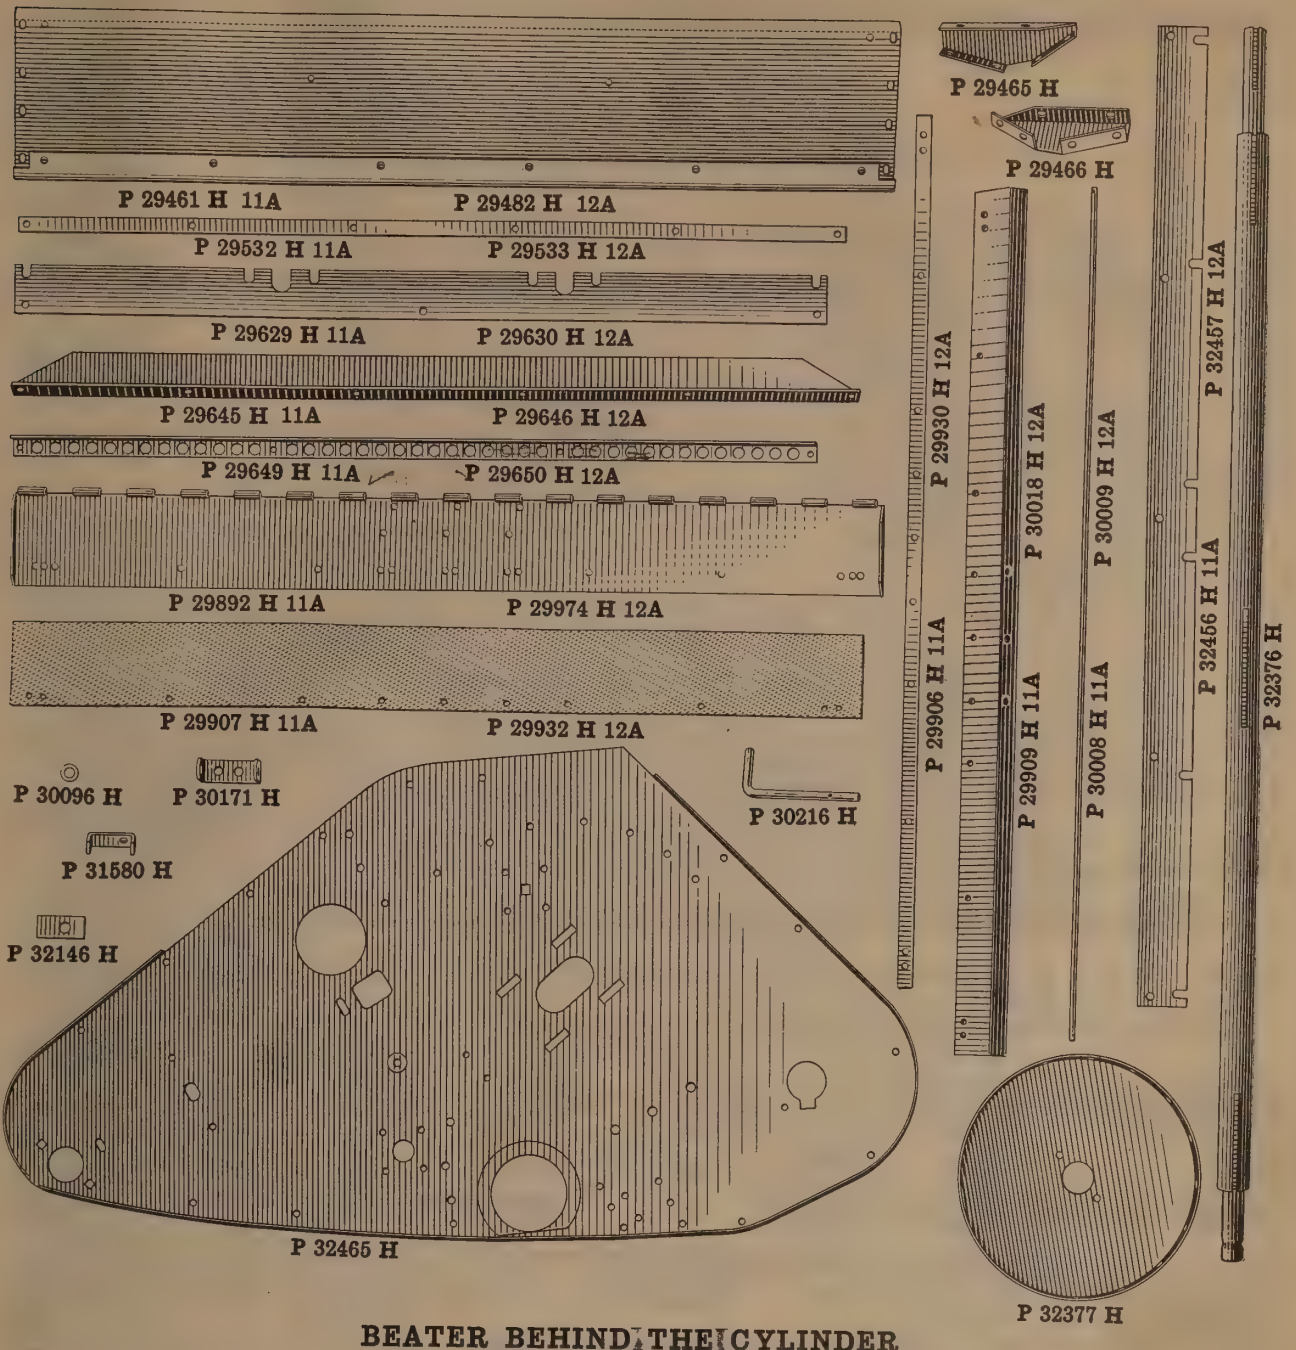

BEATER BEHIND THE CYLINDER

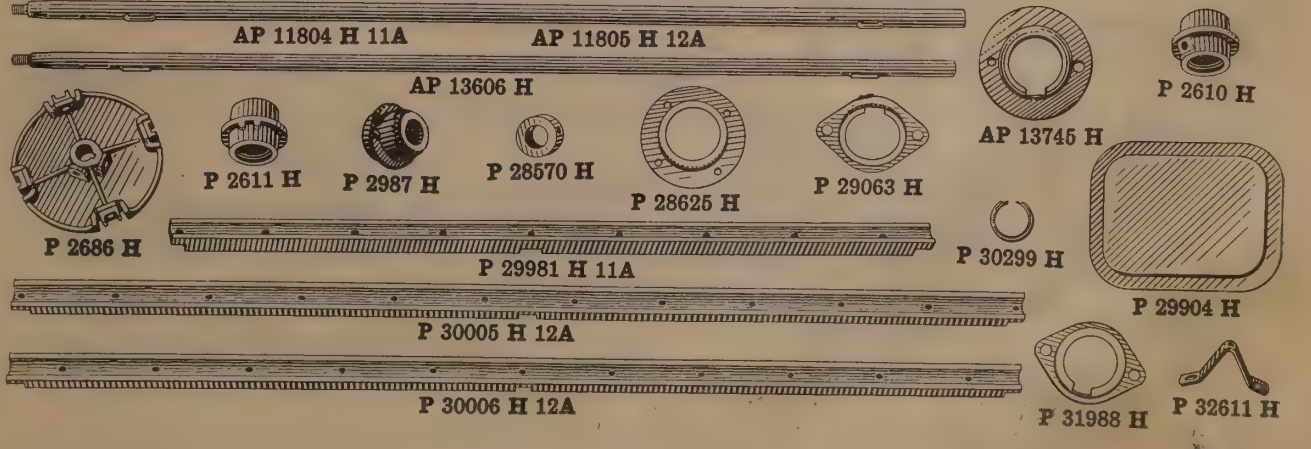

BEATER BEHIND THE CYLINDER (Continued)


P 32704 H 11A P 32705 H 12A

P 32779 H

P 32714 H

P 32715 H

STRAW RACK AND REAR HOOD

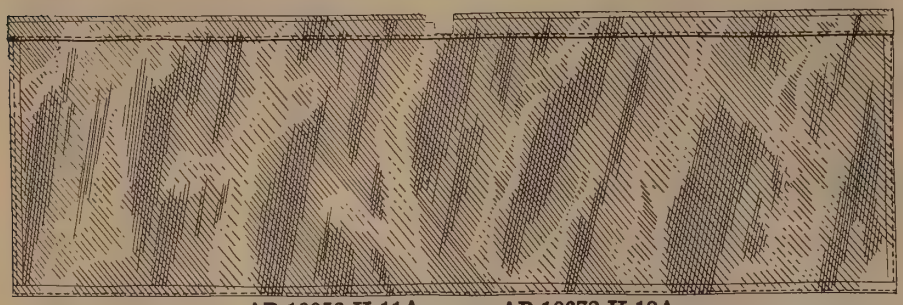
AP 10056 H 11A AP 10672 H 12A


AP 10459 H
P 2364 H

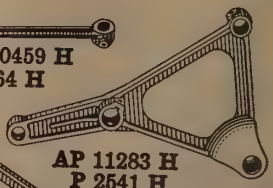
AP 11283 H
P 2541 H

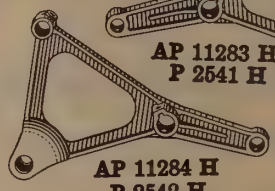
AP 11284 H
P 2542 H

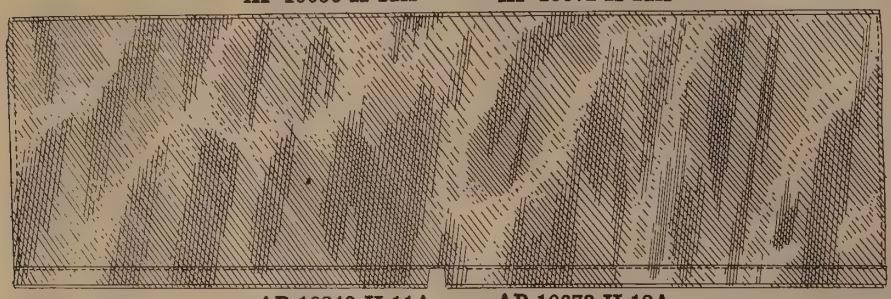
AP 10249 H 11A AP 10673 H 12A

AP 11547 H


AP 11549 H

AP 11612 H
P 2595 H


AP 10487 H

AP 11550 H

AP 11812 H 11A AP 11813 H 12A


AP 11814 H 11A AP 11815 H 12A


AP 13625 H 12A AP 13626 H 11A

P 2352 H

P 2353 H

P 2356 H

P 2545 H

P 2562 H

P 2584 H

P 2640 H

P 26054 H

P 2938 H

P 2939 H

P 26255 H

P 26282 H 11A P 26865 H 12A

P 26263 H

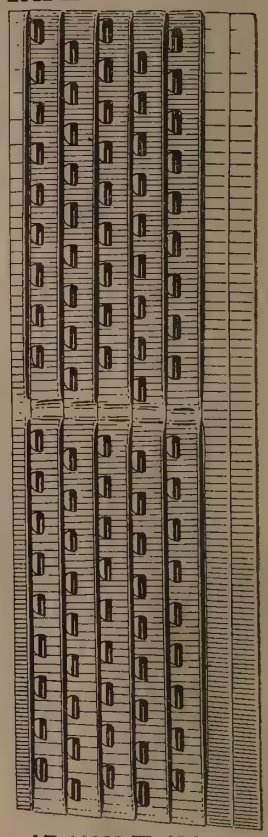
AP 11682 H 12A
AP 11683 H 11A


P 26055 H


AP 13594 H 11A AP 13595 H 12A

P 26328 H


P 26357 H 11A P 27717 H 12A


P 26446 H

P 26771 H

P 26445 H

P 26411 H 11A P 26860 H 12A


P 26459 H

P 27223 H

P 26412 H 11A P 29223 H 12A


P 27596 H 11A P 27802 H 12A


P 26433 H 11A P 29222 H 12A

P 27593 H

P 27864 H

P 28268 H

P 28294 H


P 26520 H 11A P 26864 H 12A

STRAW RACK AND REAR HOOD (Continued)

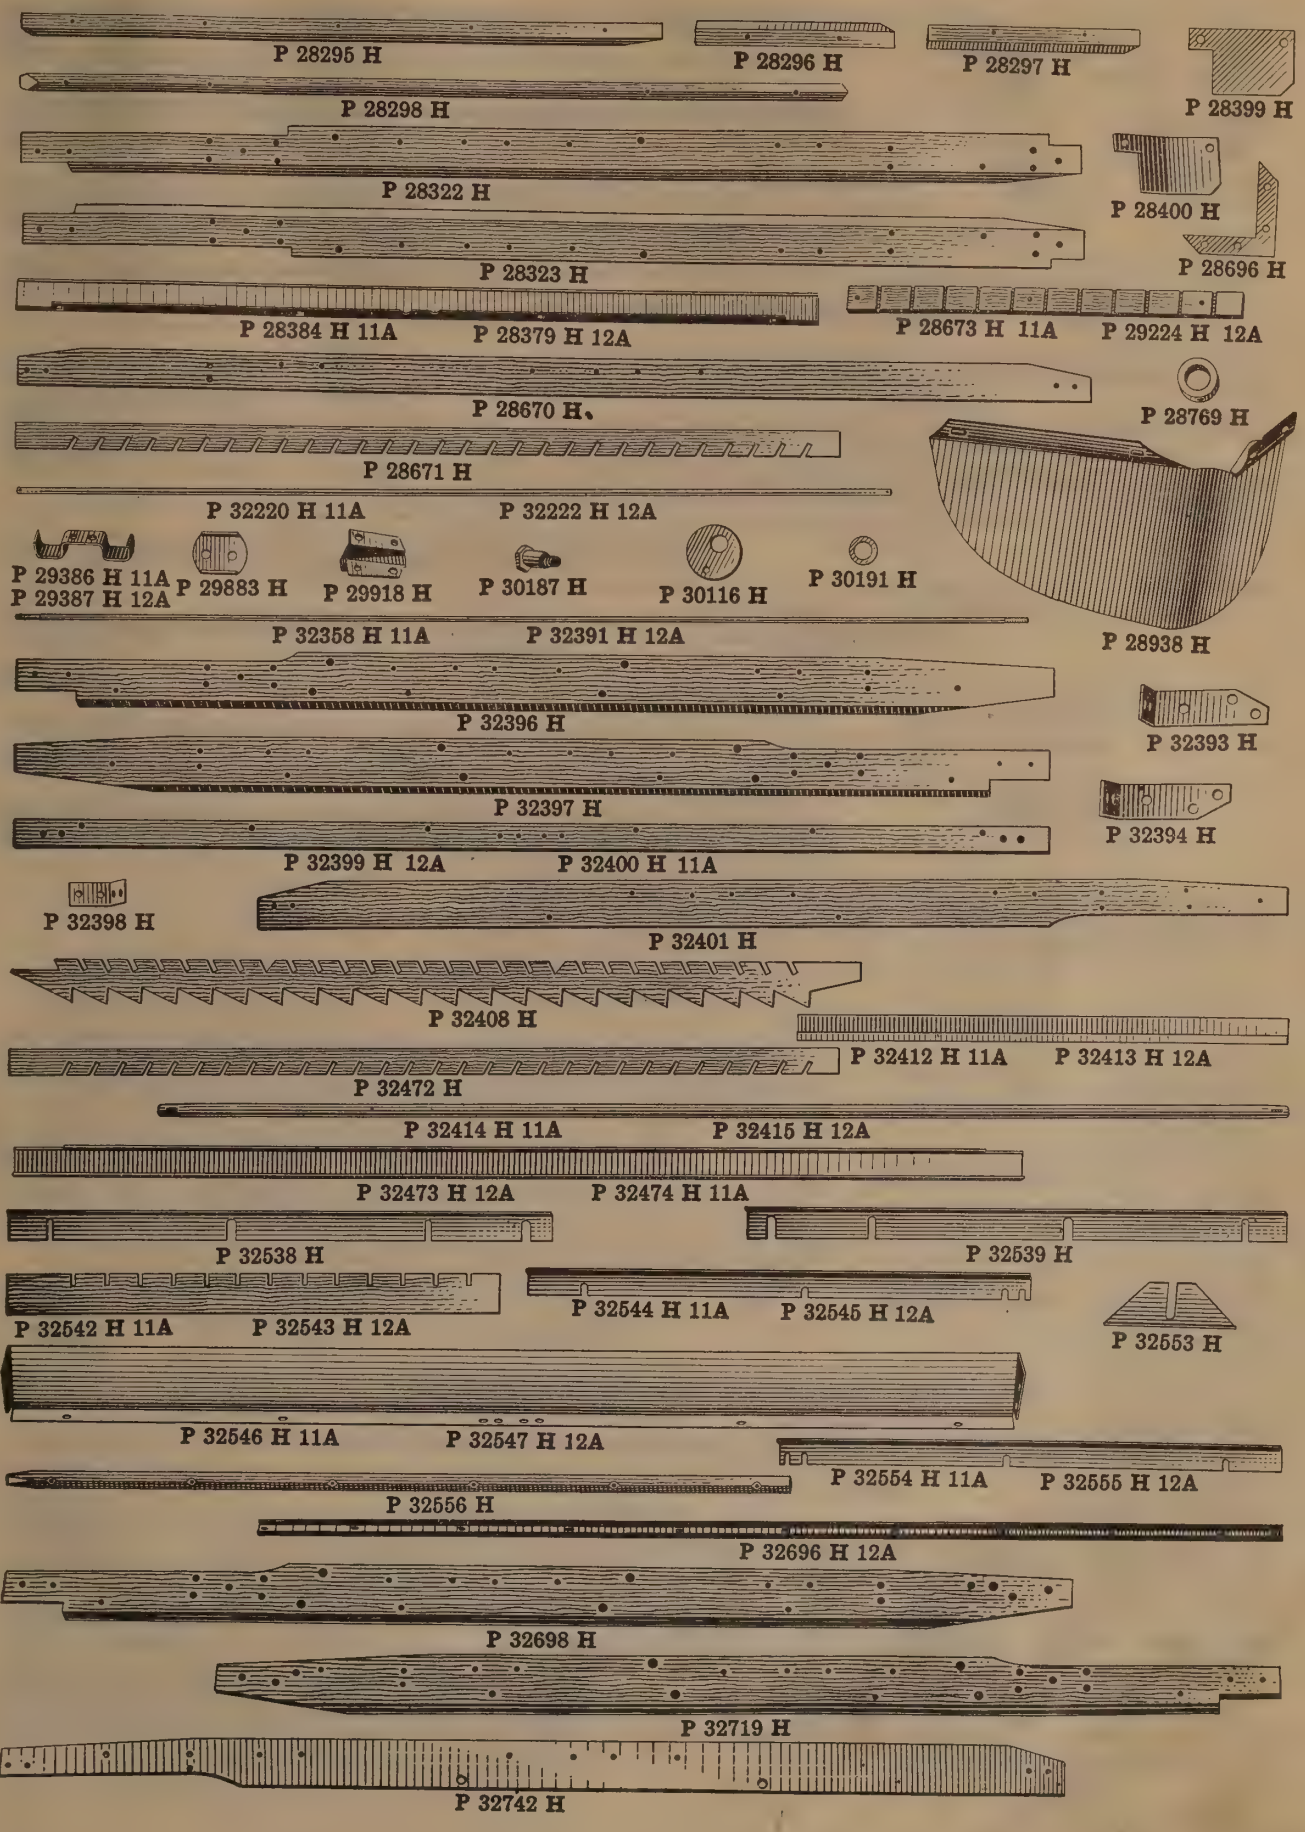

CONVEYOR UNDER STRAW RACK

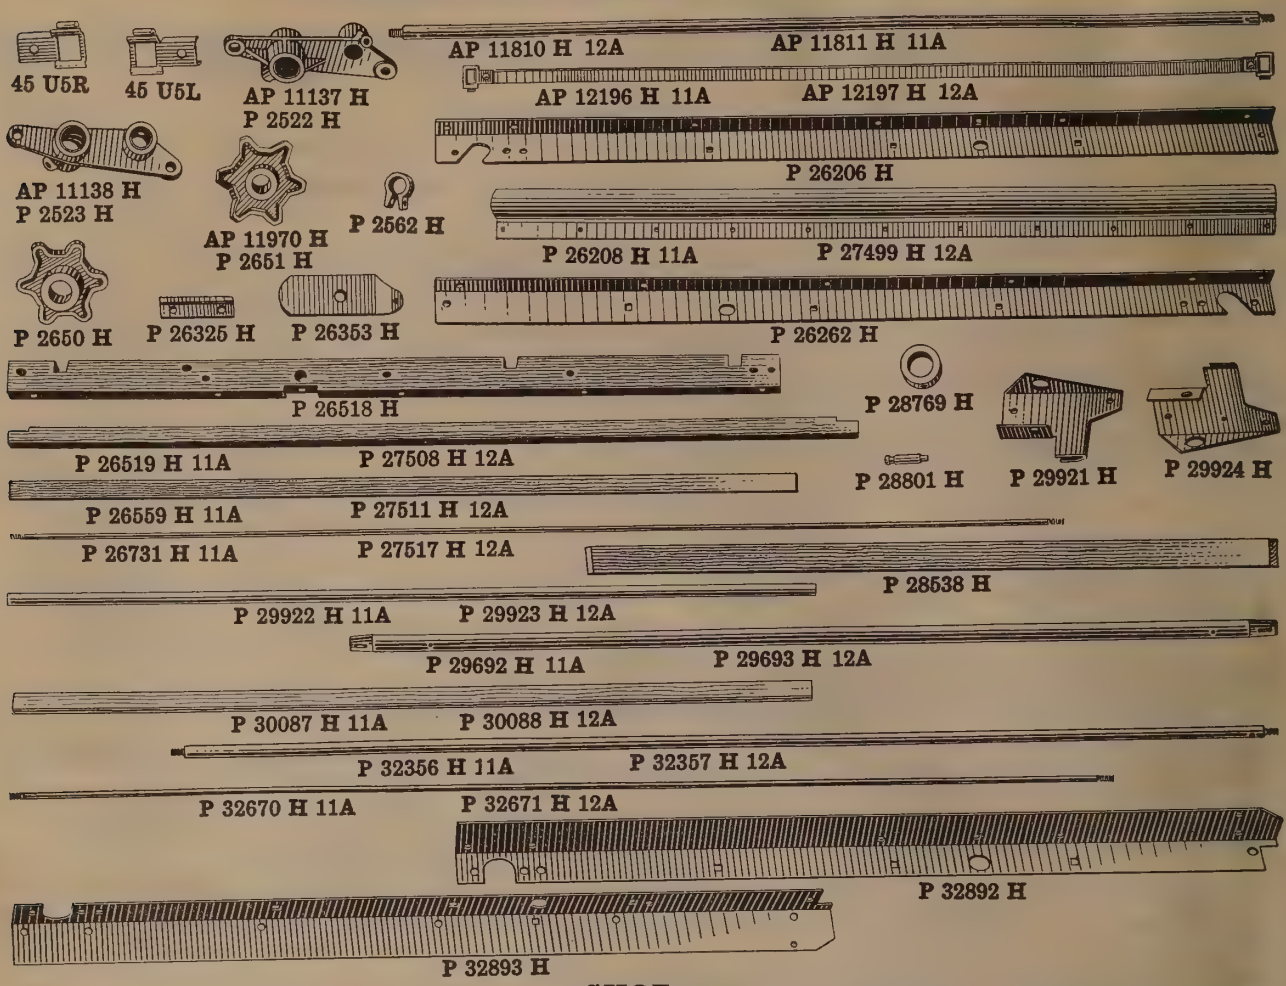

SHOE

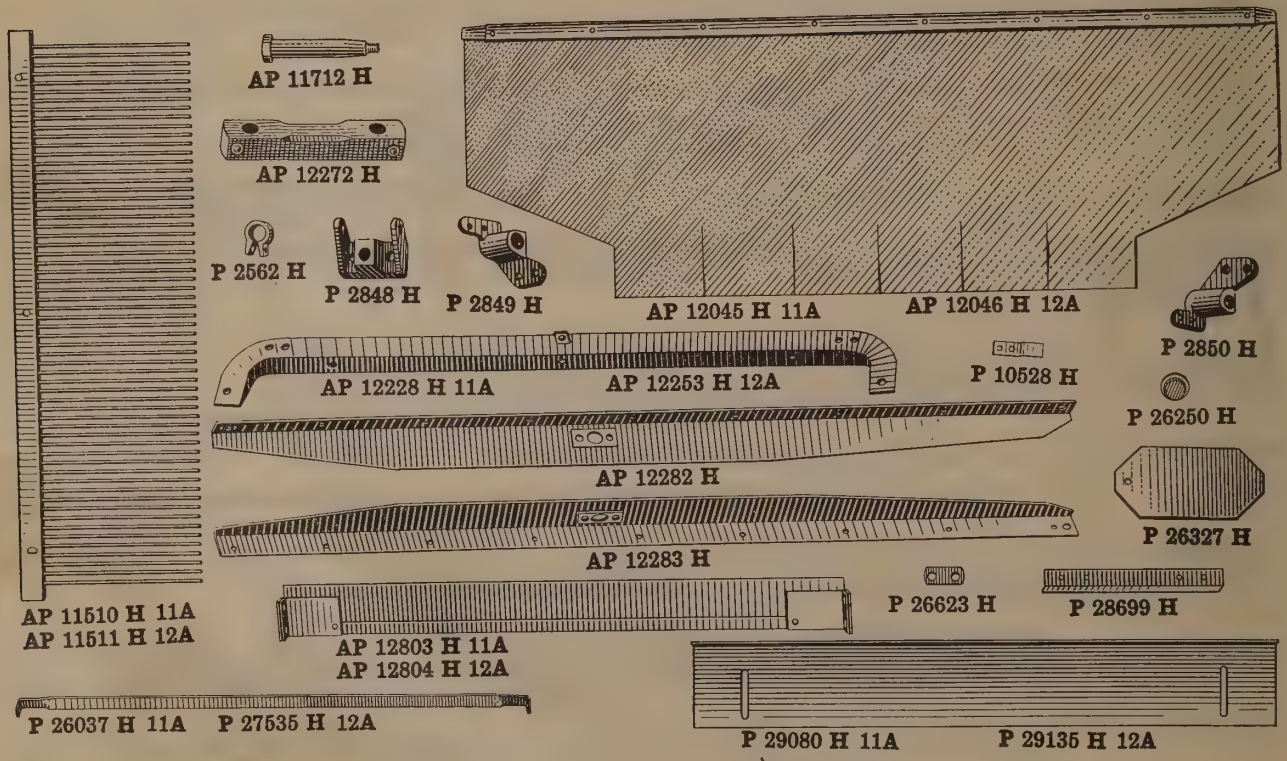

SHOE (Continued)

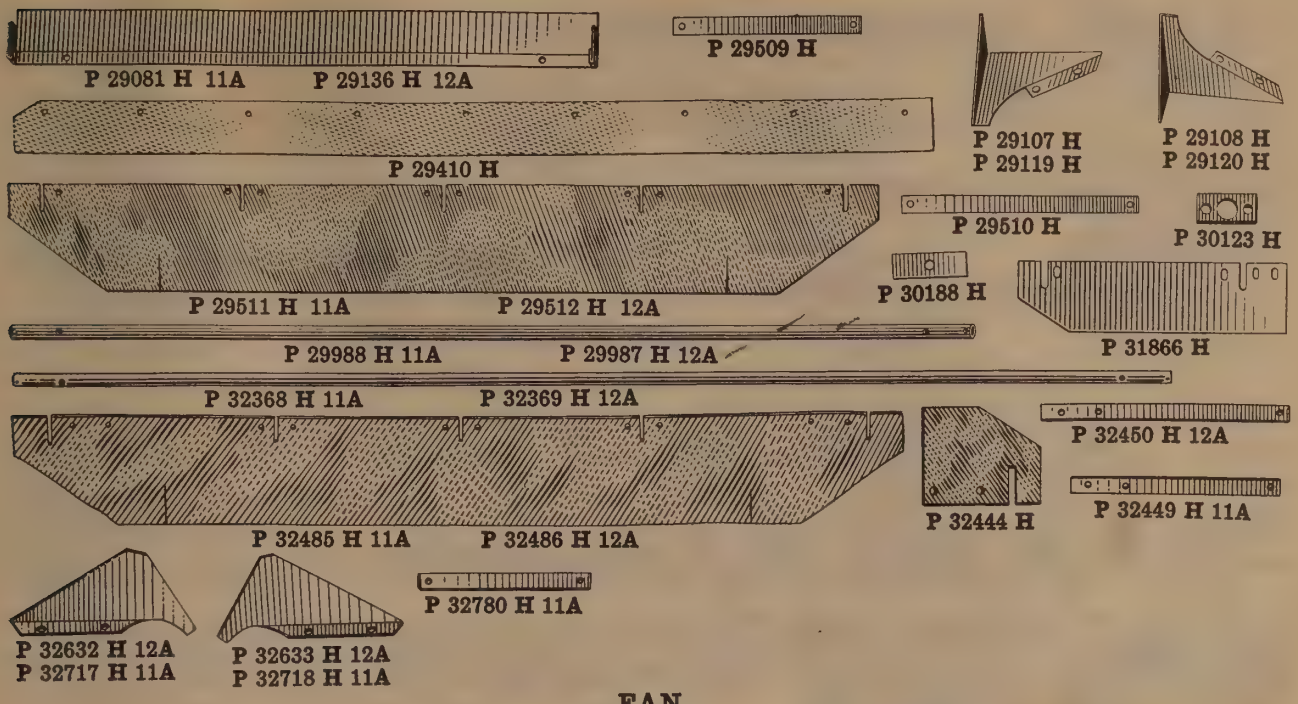

FAN

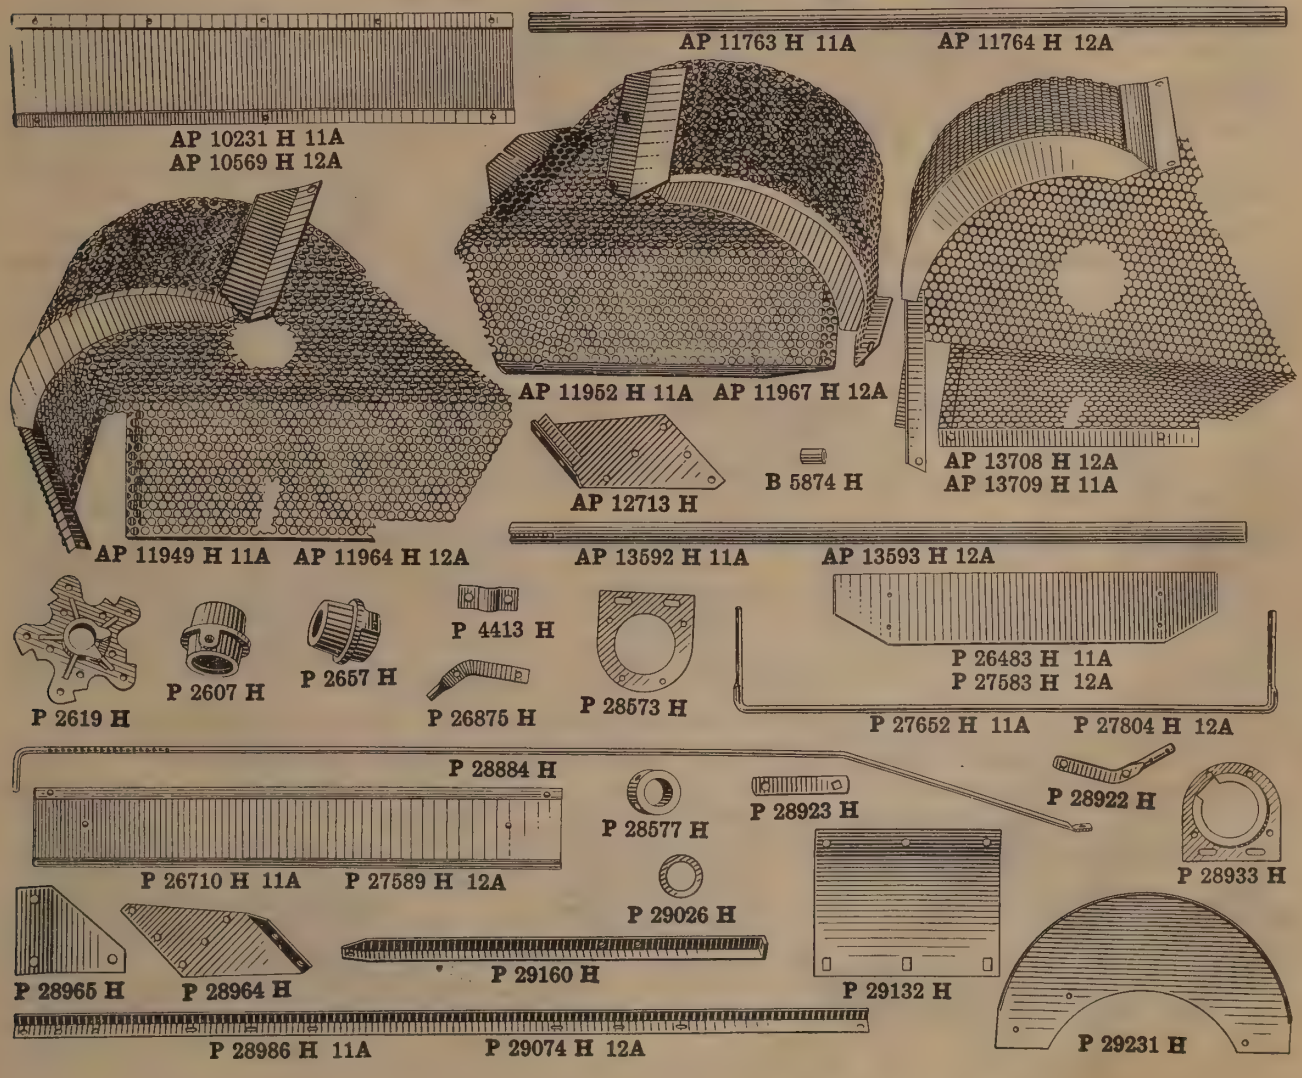

FAN (Continued)

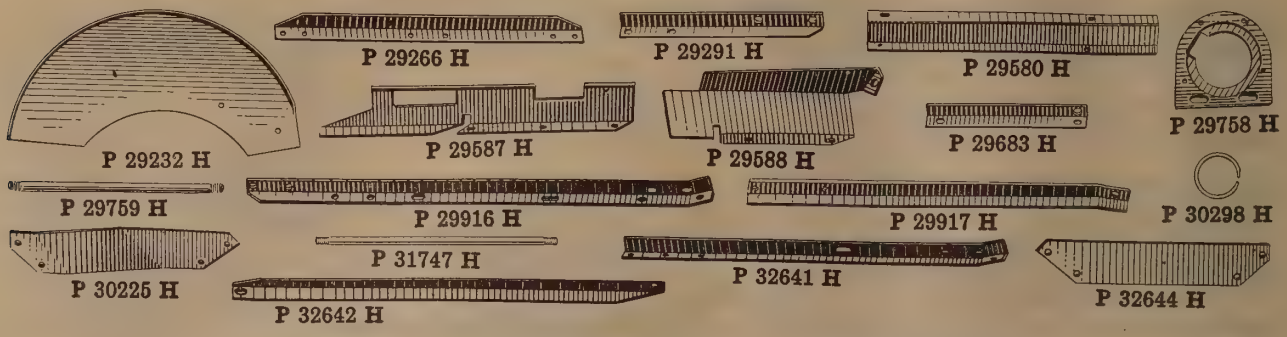

TAILINGS ELEVATOR AND TAILINGS AUGER

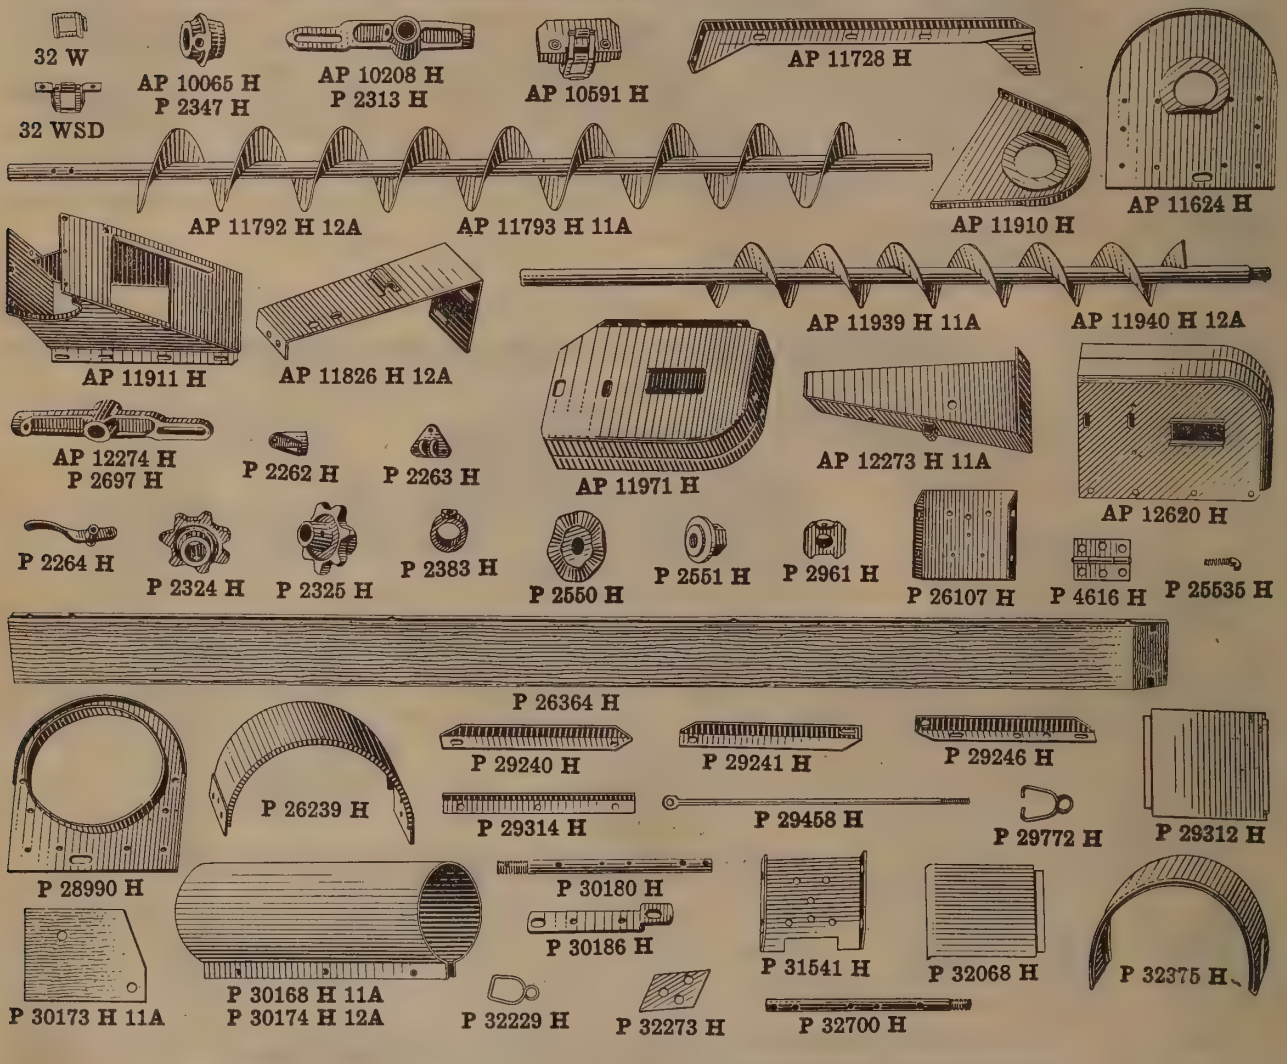

GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER

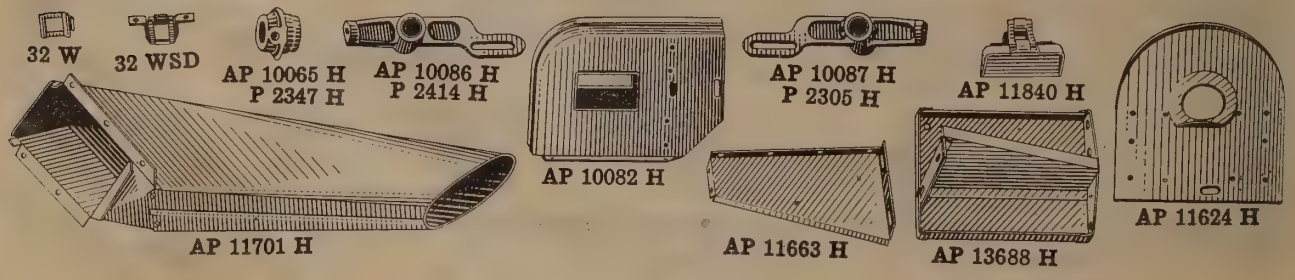

GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER (Continued)

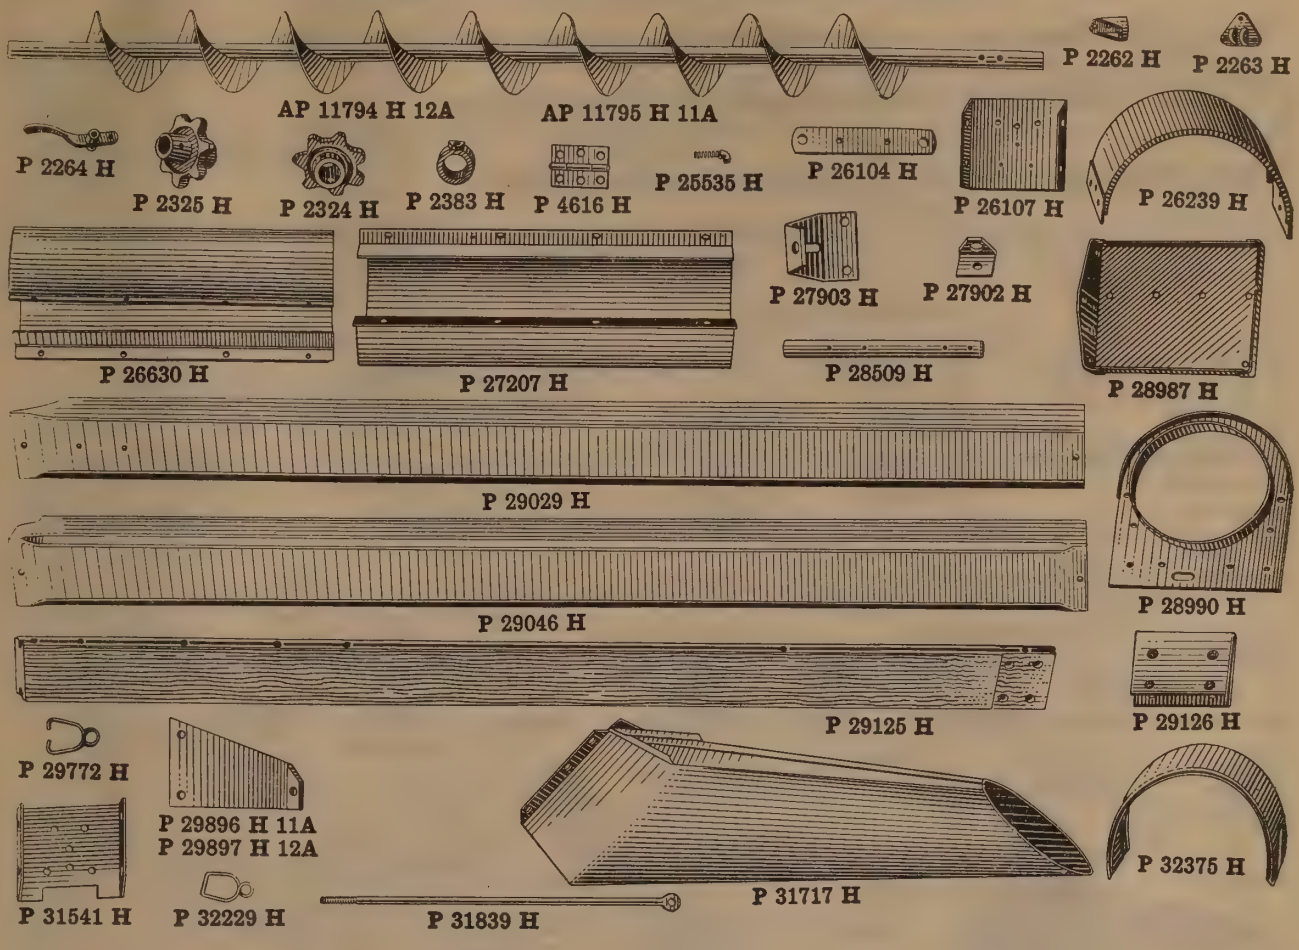

GRAIN TANK AND SUPPORTS

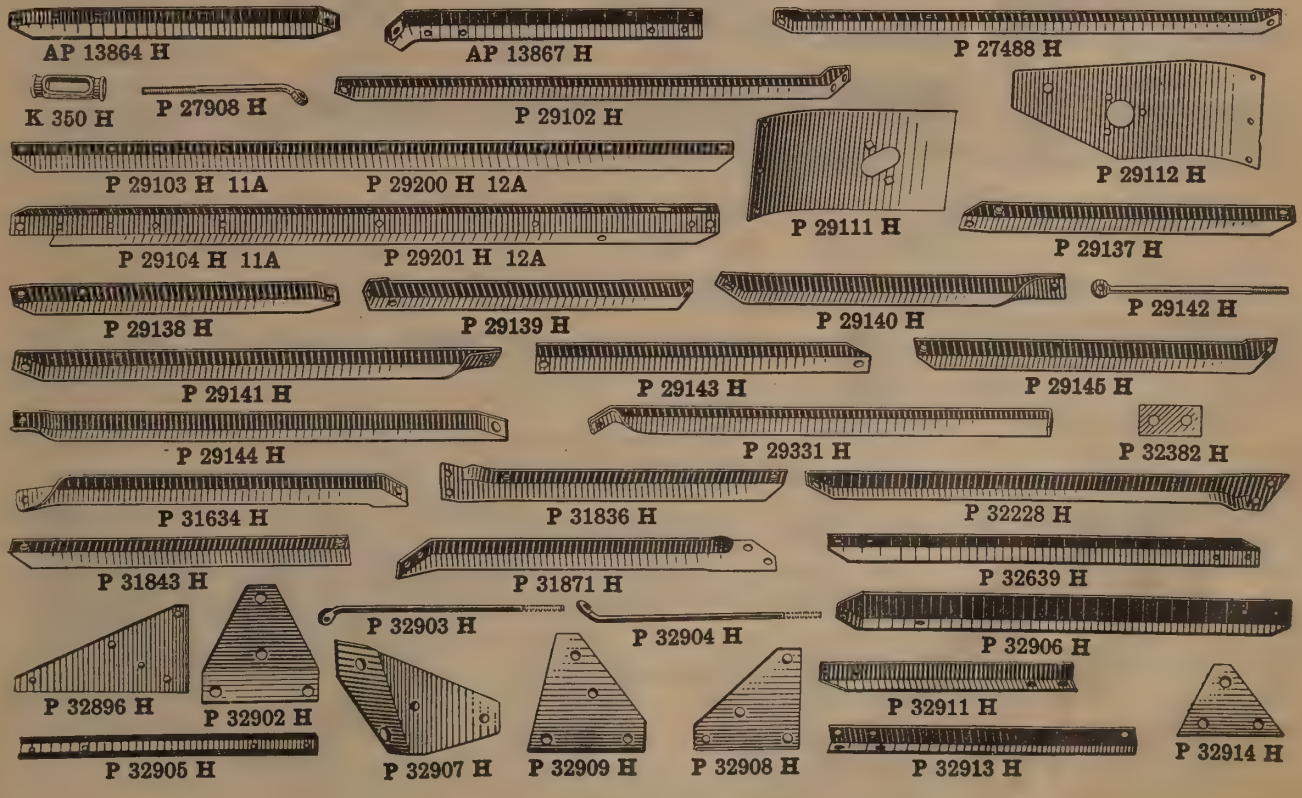

GRAIN TANK AND SUPPORTS (Continued)

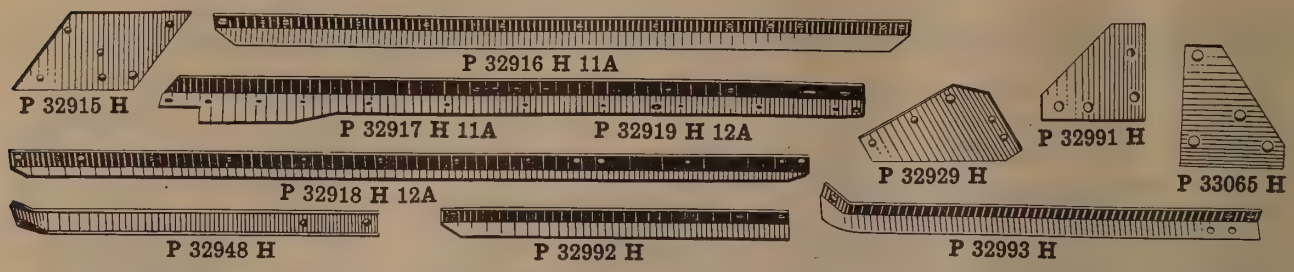

GRAIN TANK UNLOADING AUGER

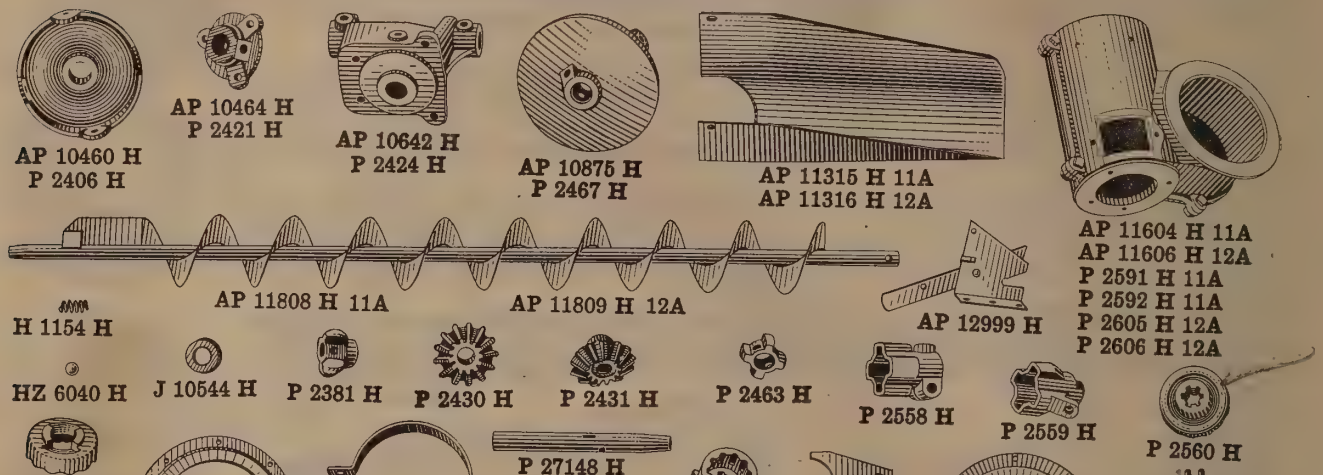

S/ CKING ATTACHMENT

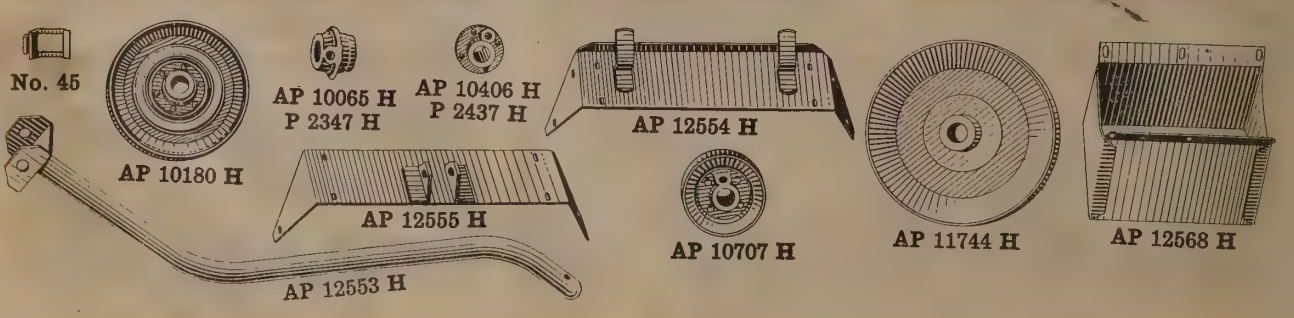

SACKING ATTACHMENT (Continued)

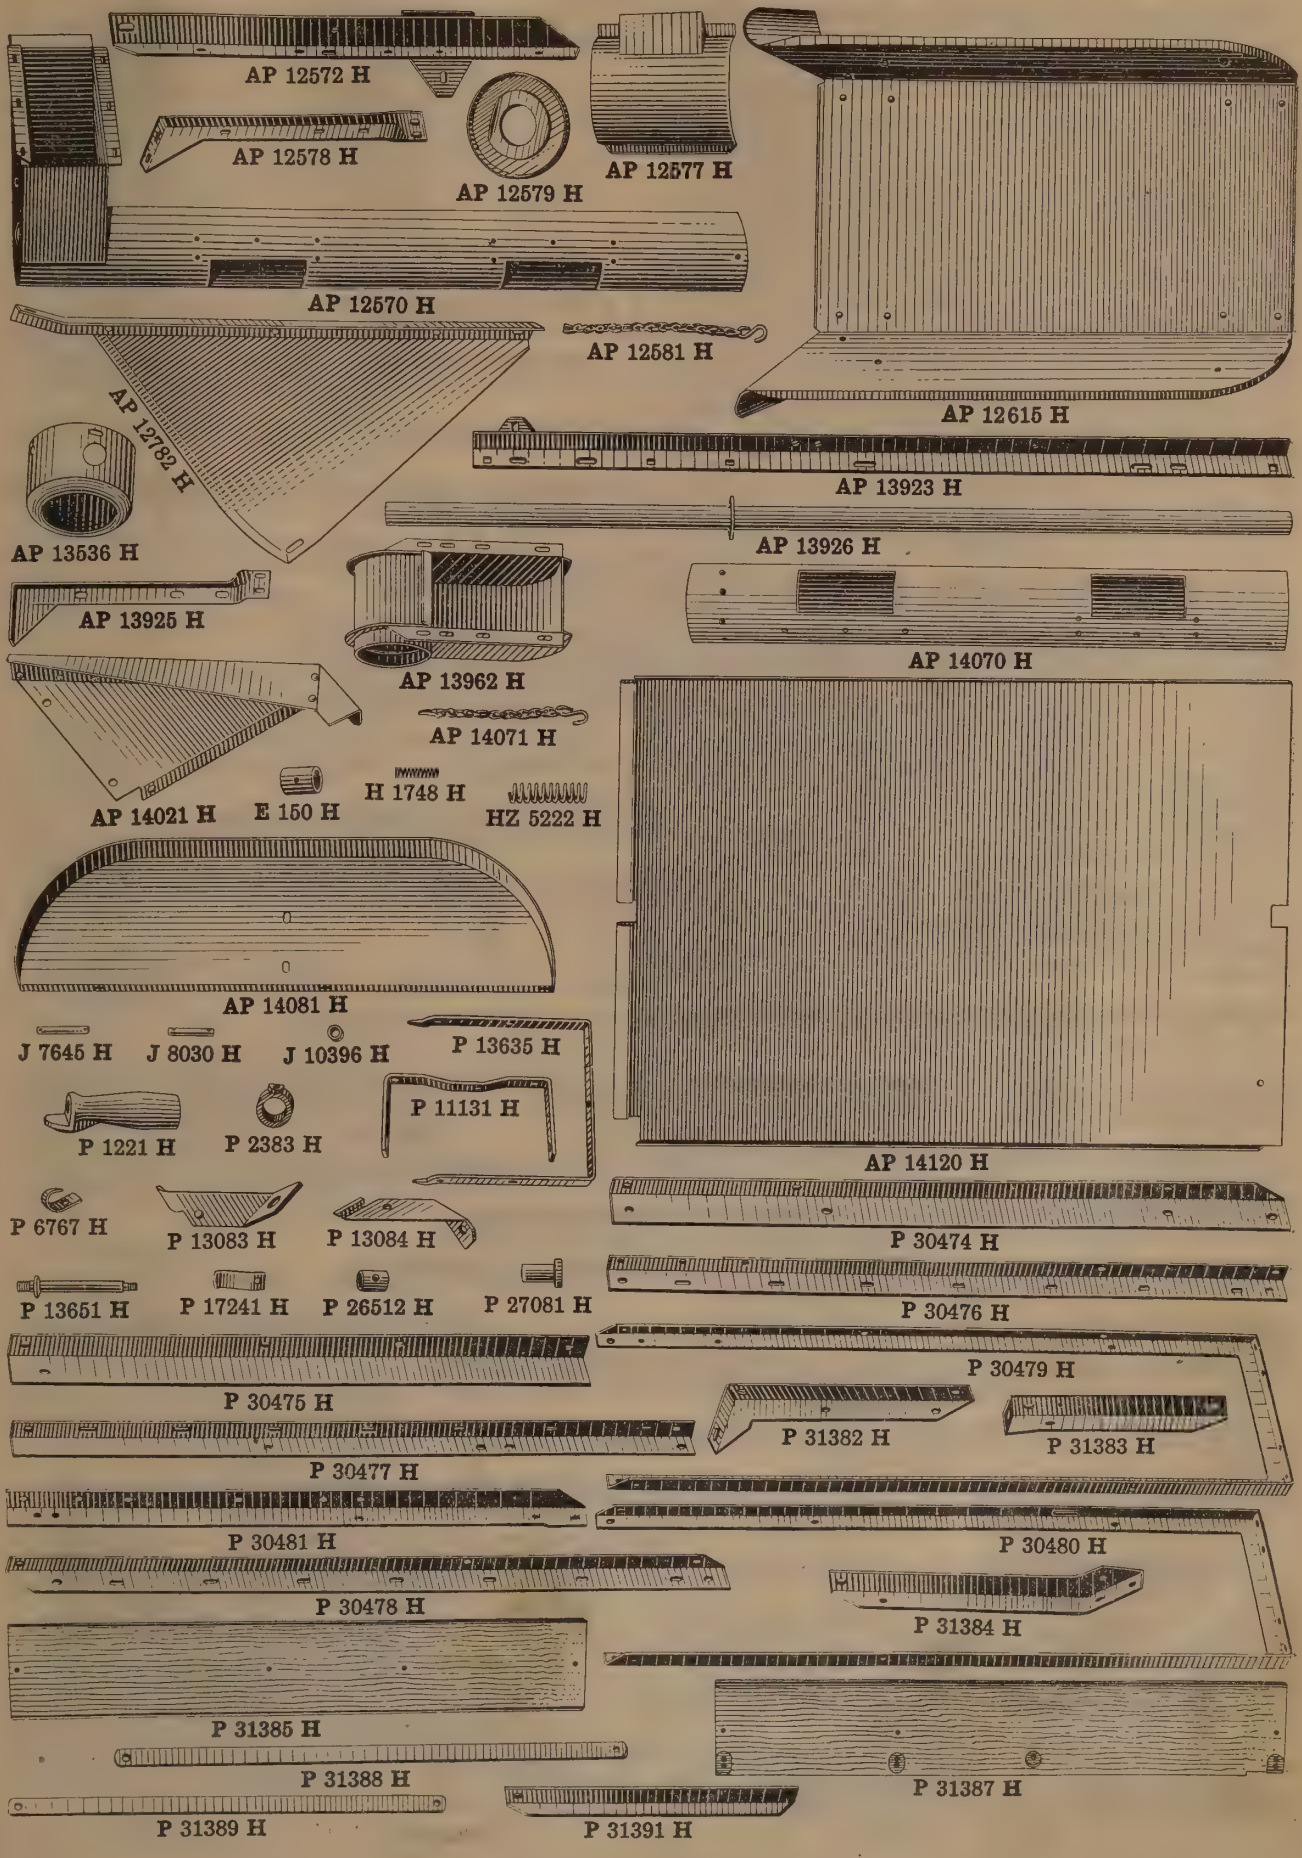

SACKING ATTACHMENT (Continued)

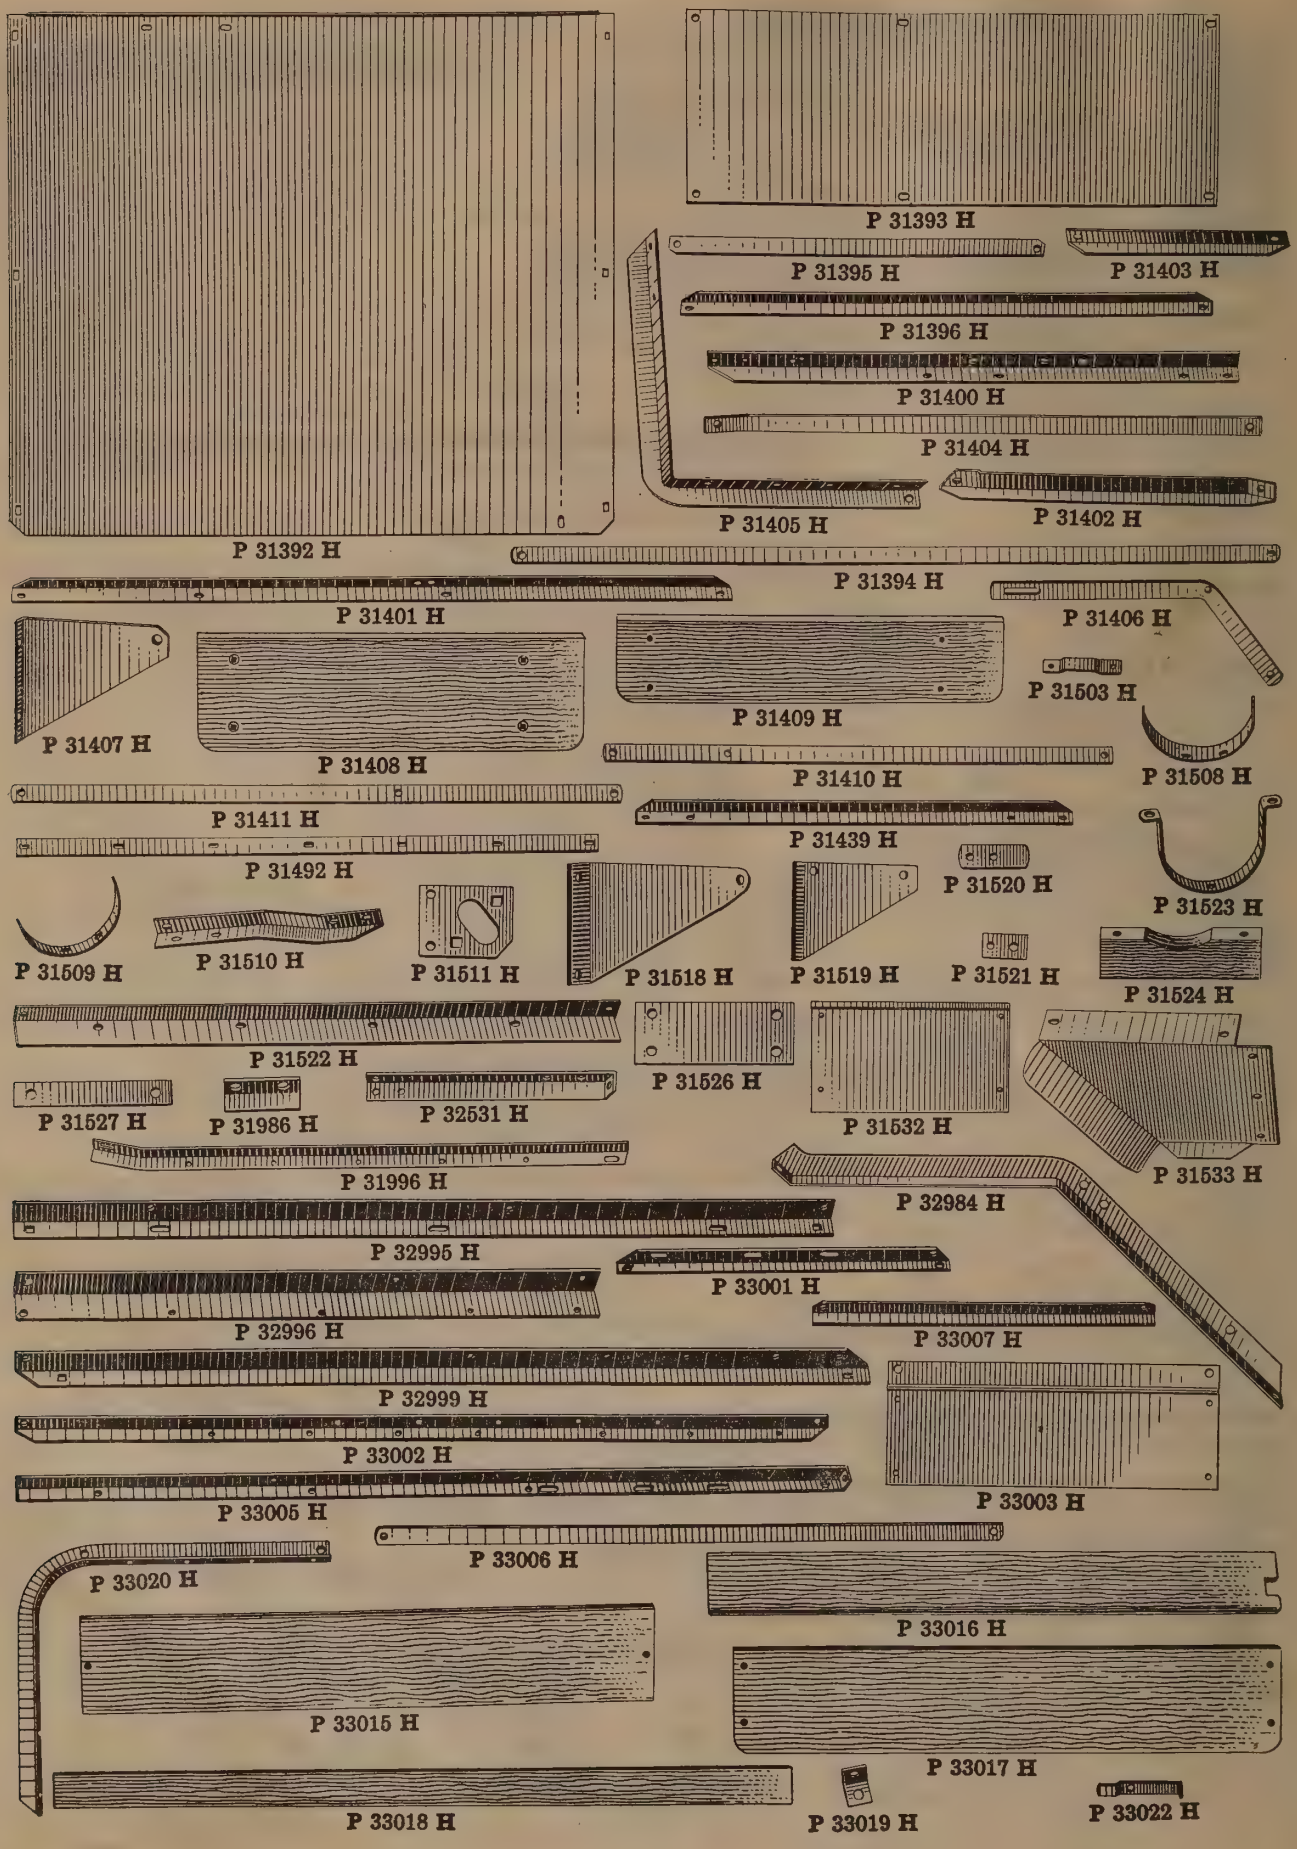

SACKING ATTACHMENT (Continued)

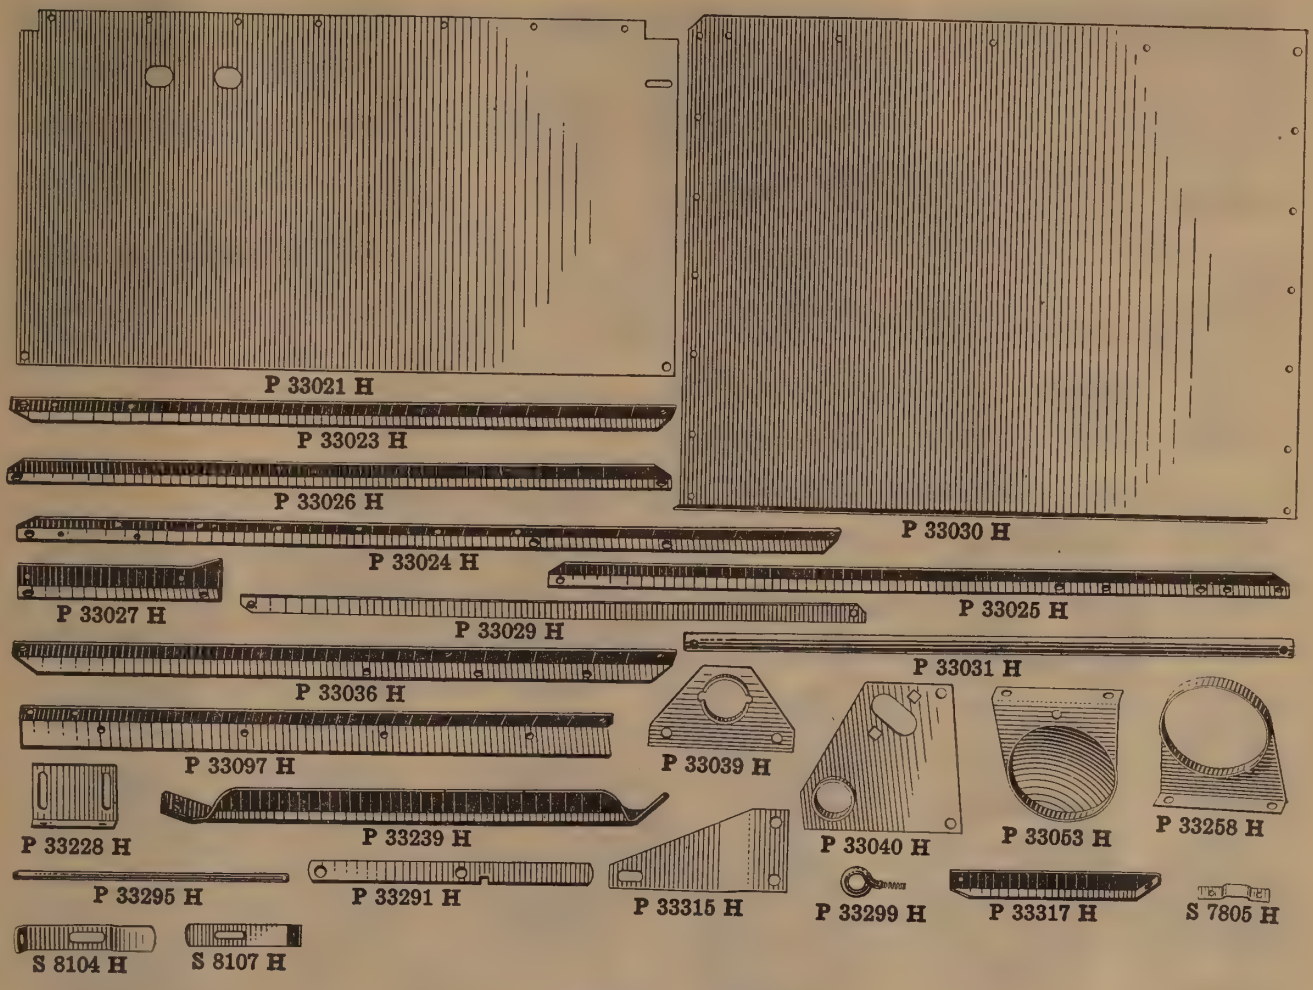

POWER DRIVE

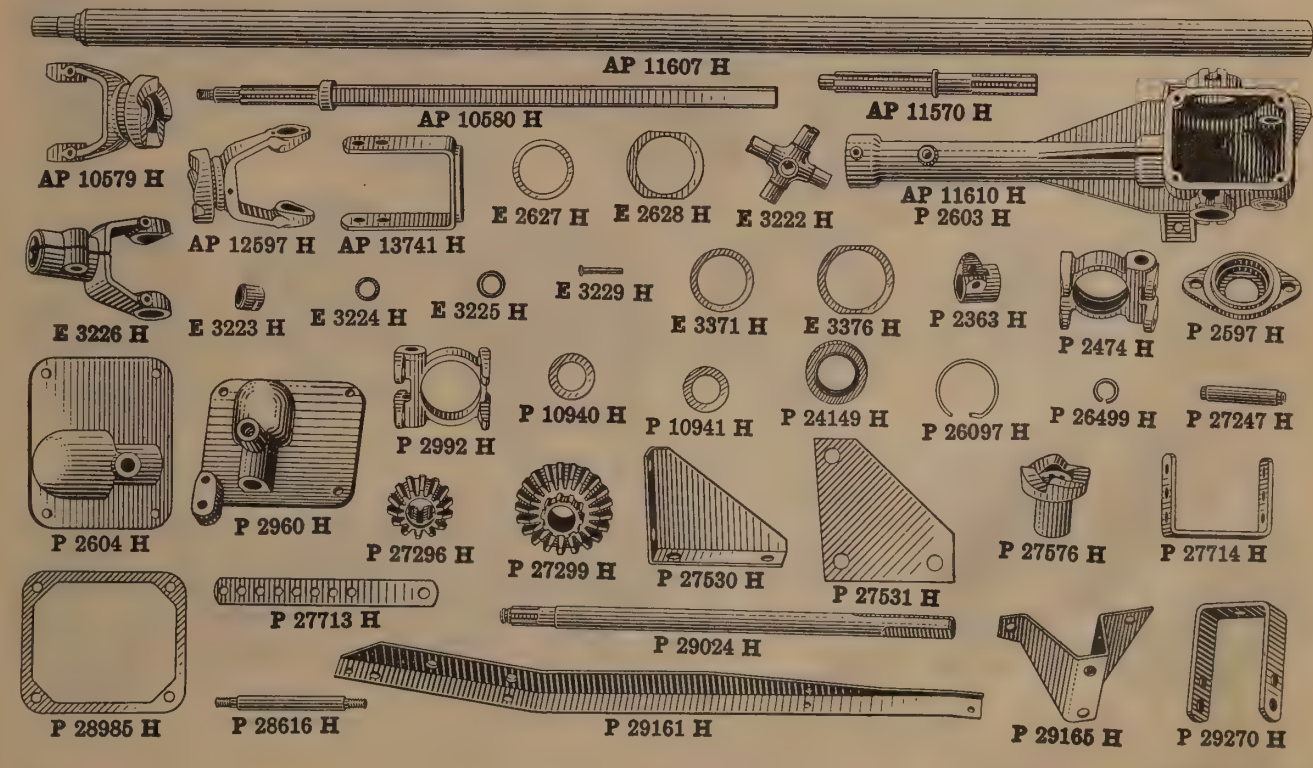

POWER DRIVE (Continued)

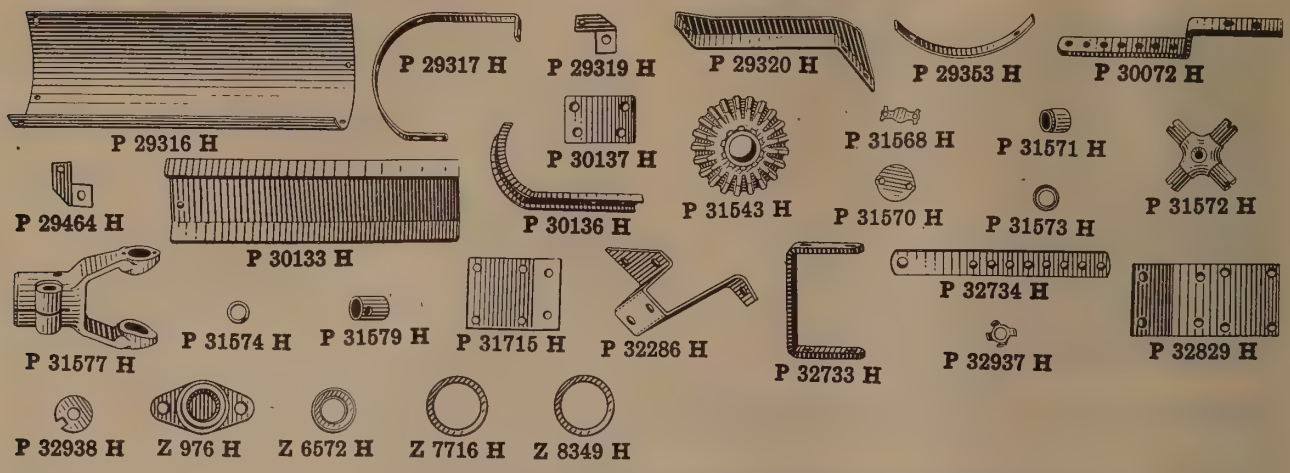

DRIVE AND DRIVEN SHEAVES AND SPROCKETS

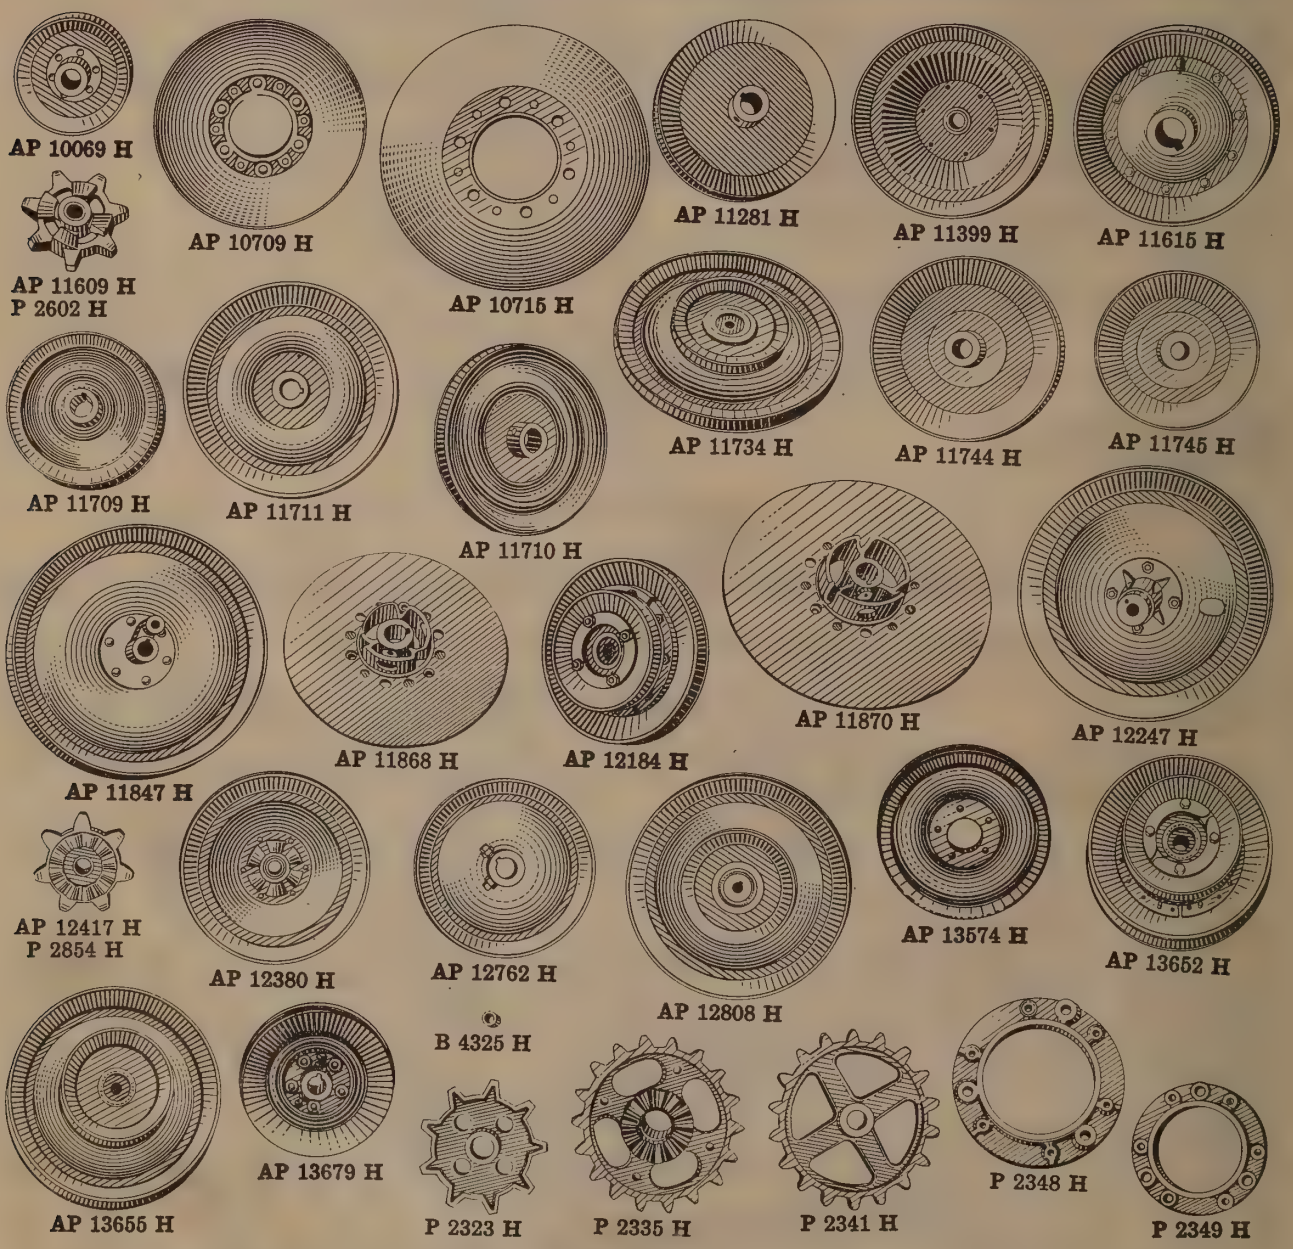

DRIVE AND DRIVEN SHEAVES AND SPROCKETS (Continued)

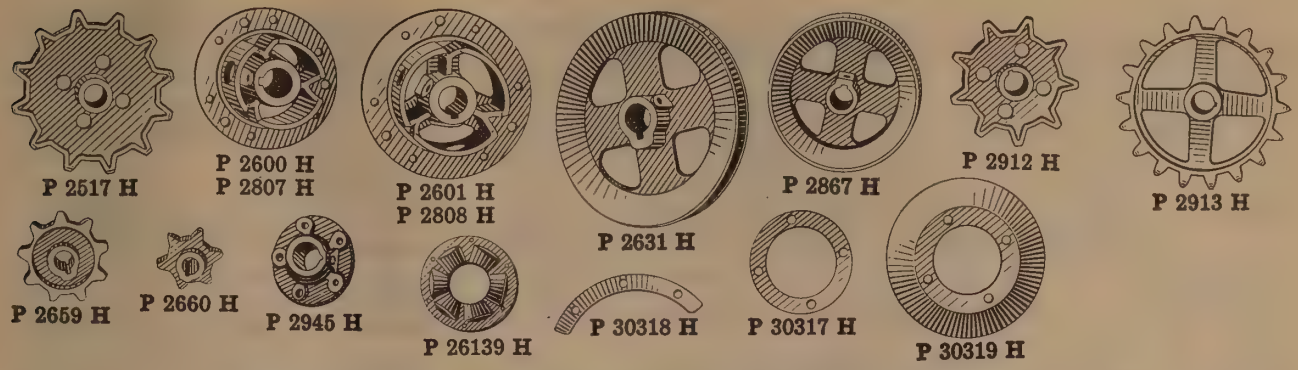

DRIVE CHAIN ANN BELT TIGHTENER AND IDLER BRACKETS, SPROCKETS, STUDS AND SHEAVES

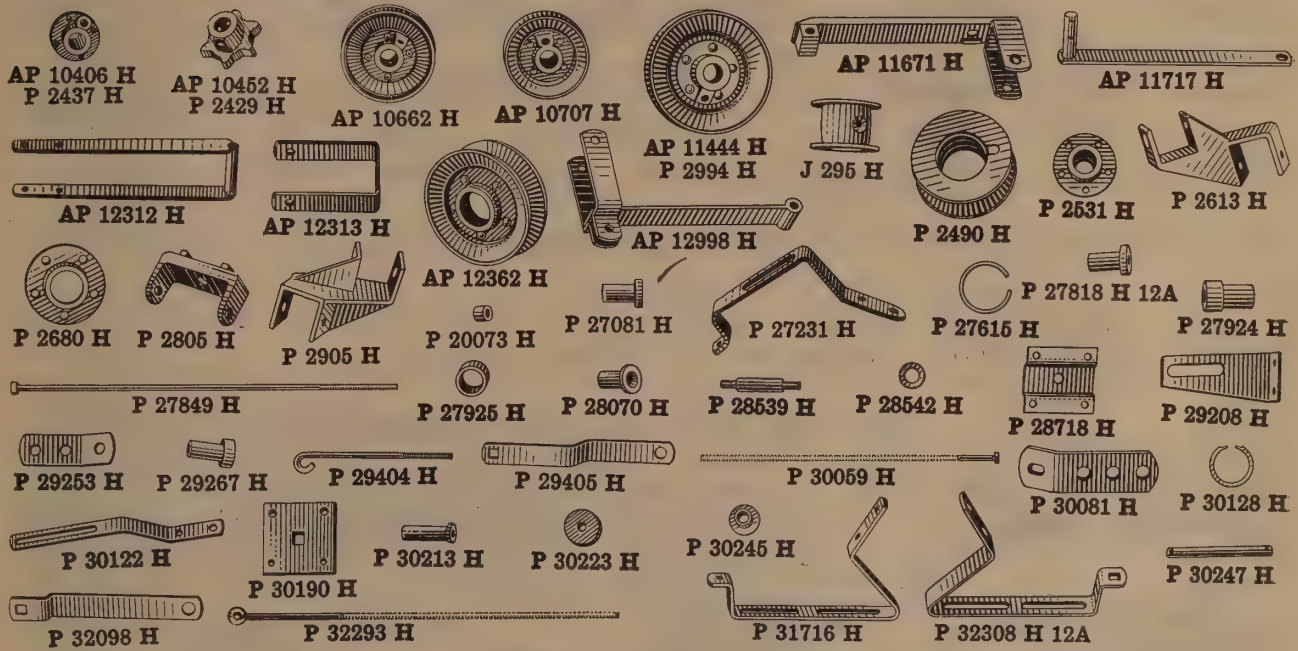

ROLLER BEARINGS AND BRONZE BEARINGS

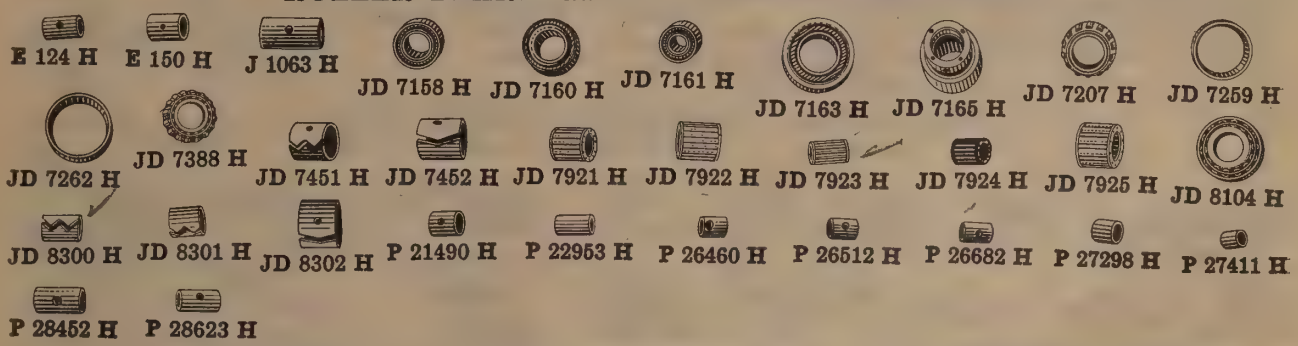

WASHERS, PINS, KEYS, BOLTS, CAP SCREWS, NUTS AND SPRINGS

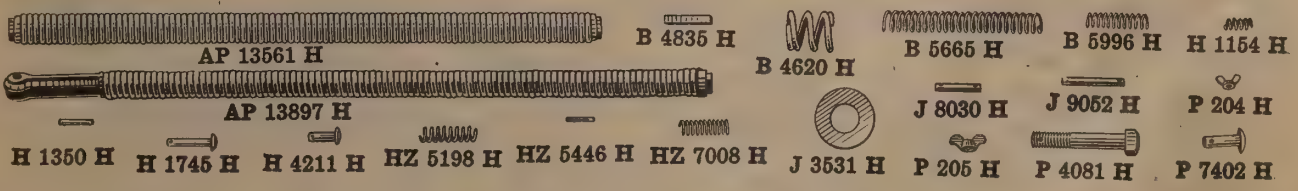

WASHERS, PINS, KEYS, BOLTS, CAP SCREWS, NUTS AND SPRINGS (Continued)

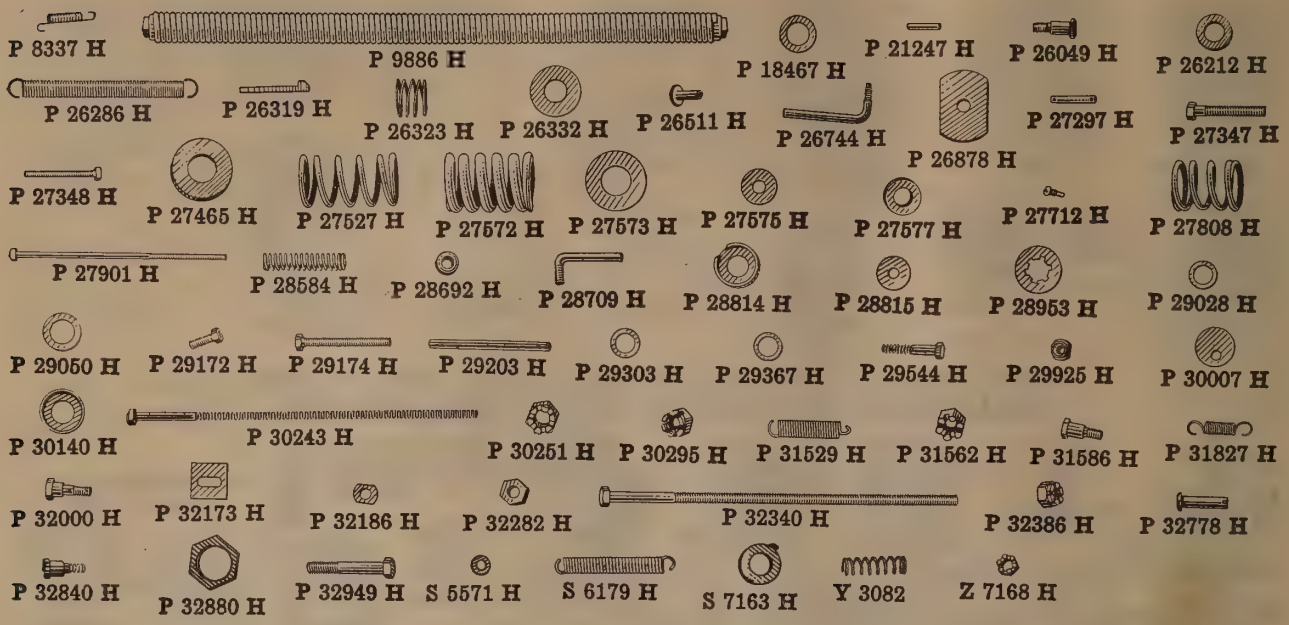

ZERK FITTINGS

TRACTOR HOOK-UP EQUIPMENT

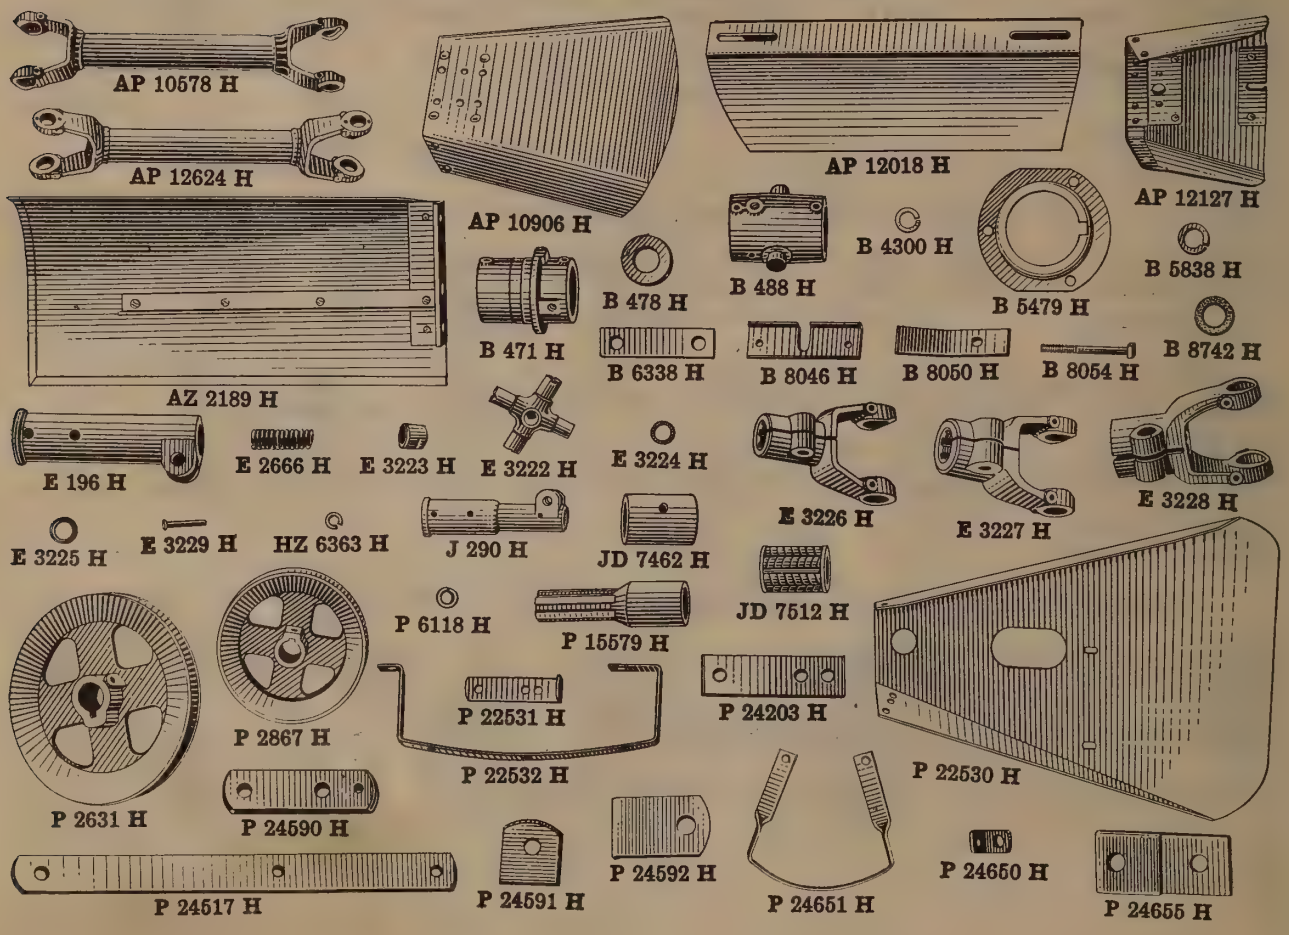

TRACTOR HOOK-UP EQUIPMENT (Continued)

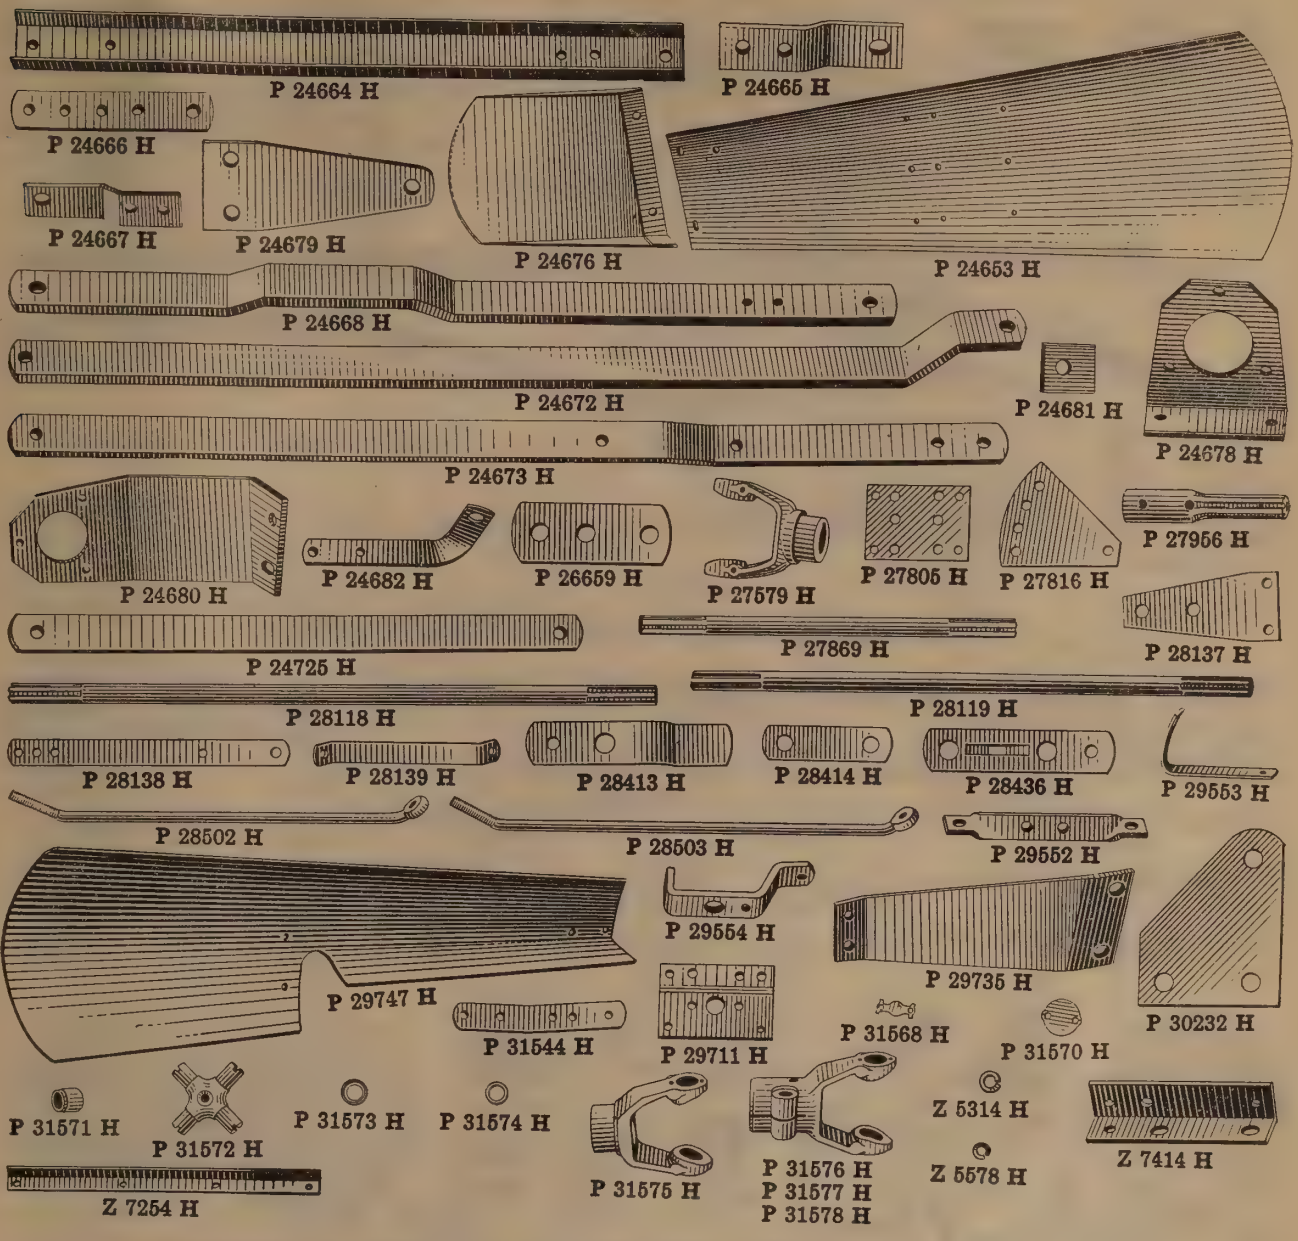

KAFFIR CORN HEADING ATTACHMENT

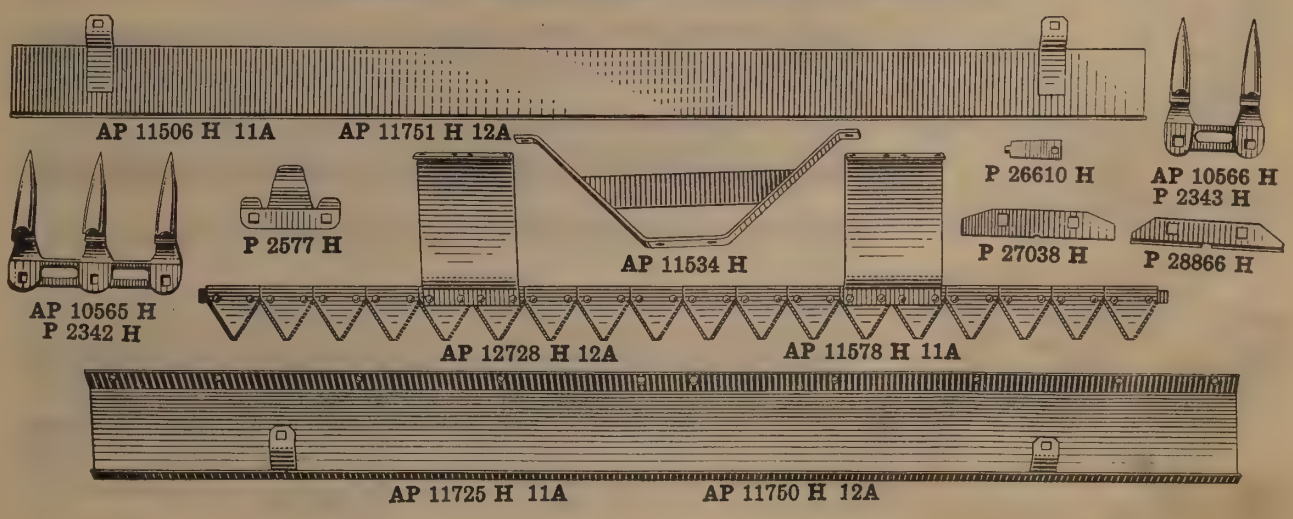

KAFFIR CORN HEADING ATTACHMENT (Continued)

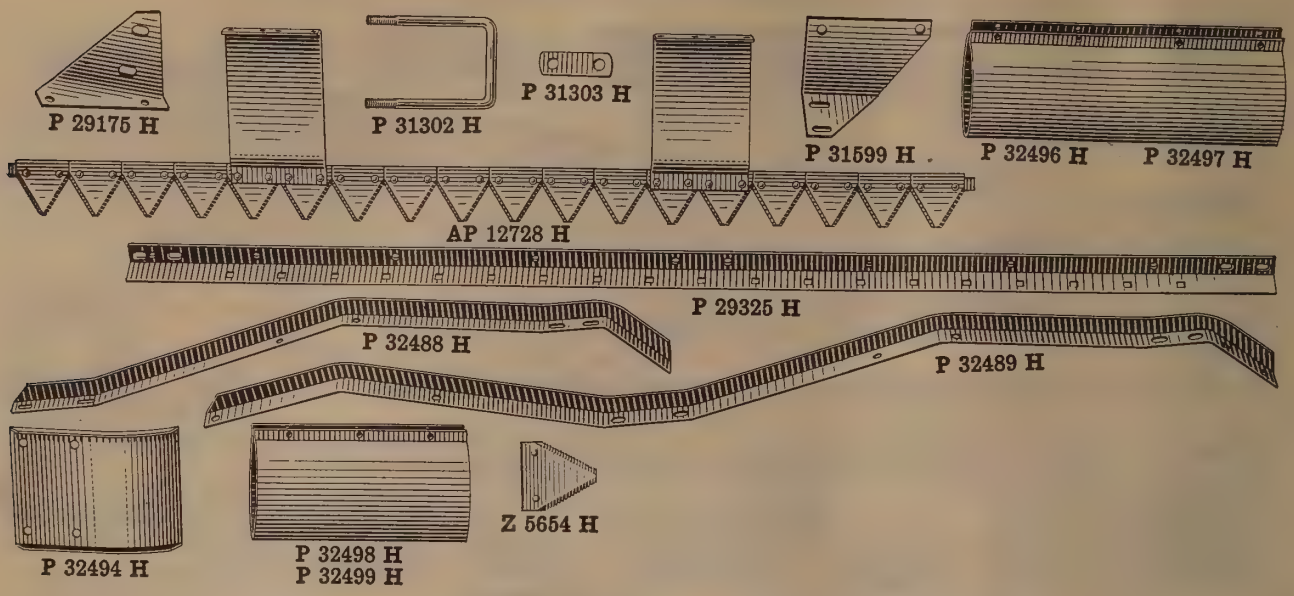

JOHN DEERE-INNES PICK-UP (STIFF TOOTH)

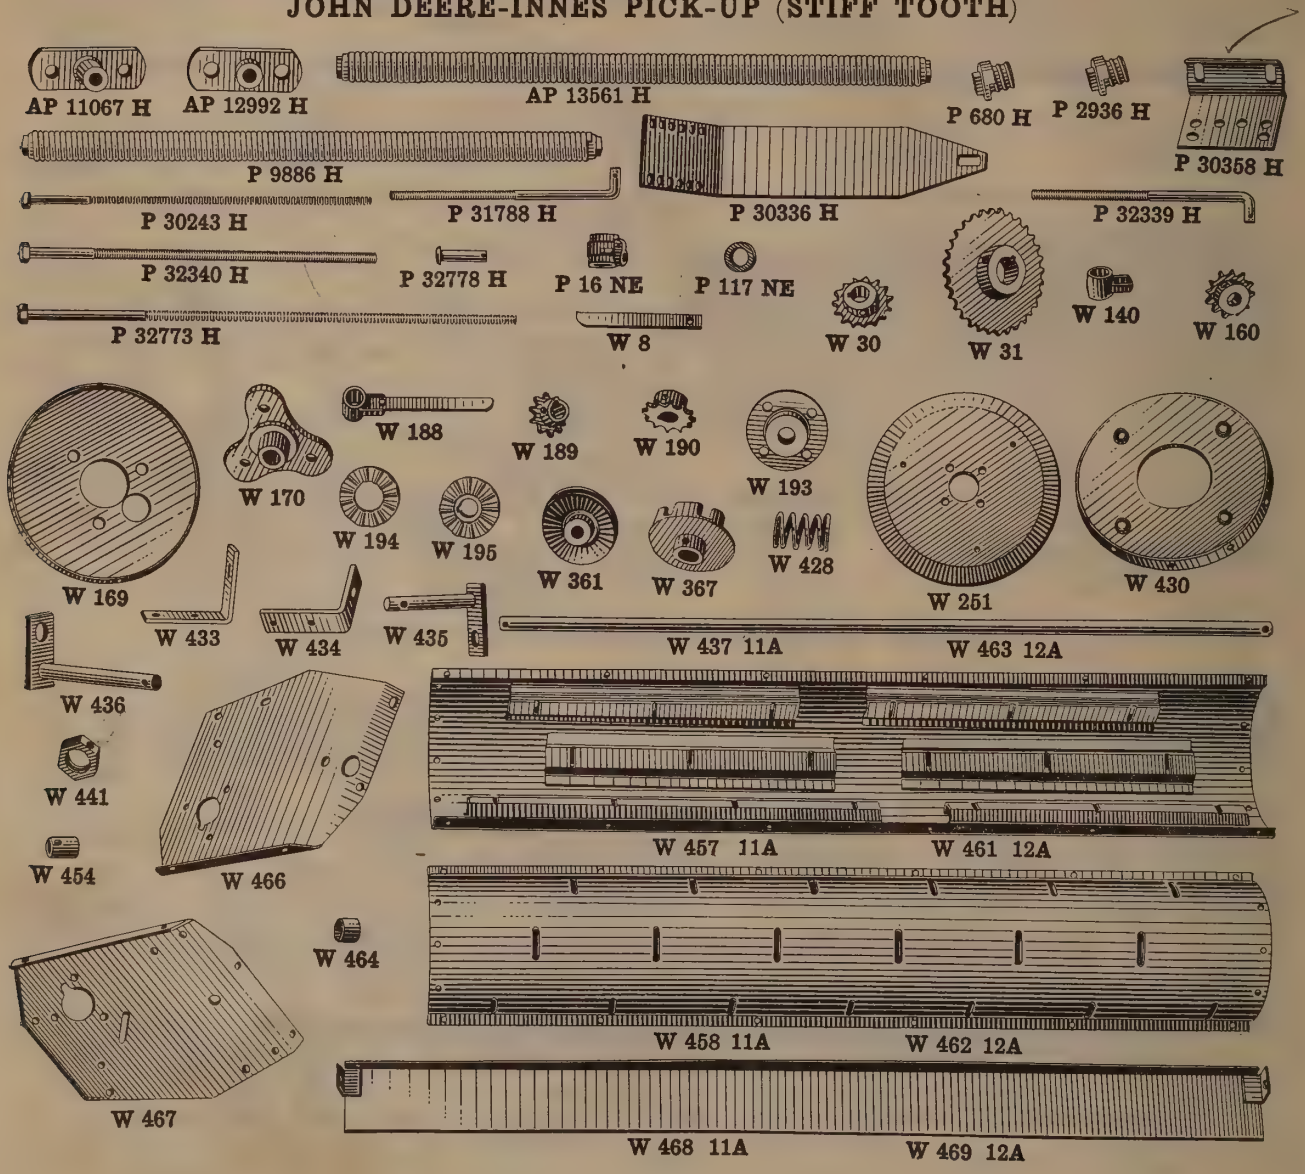

JOHN DEERE-INNES PICK-UP (STIFF TOOTH) (Continued)

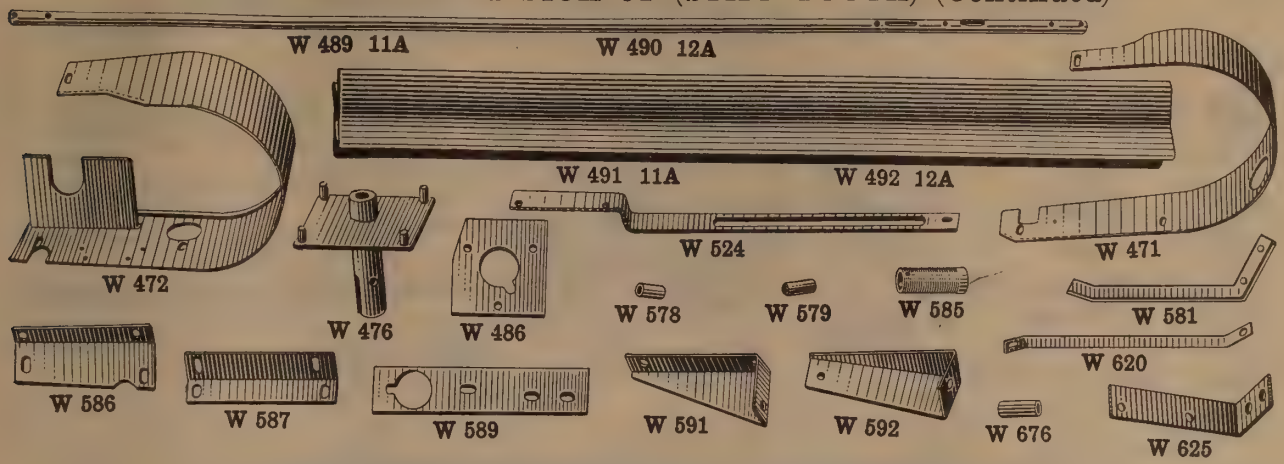

JOHN DEERE-INNES PICK-UP (SPRING TOOTH)

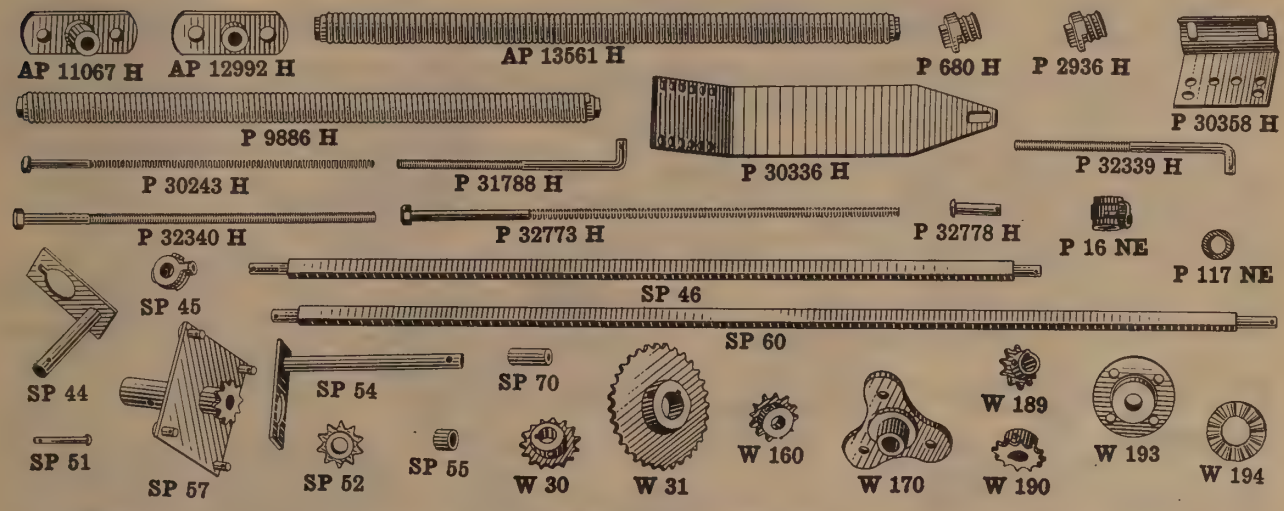

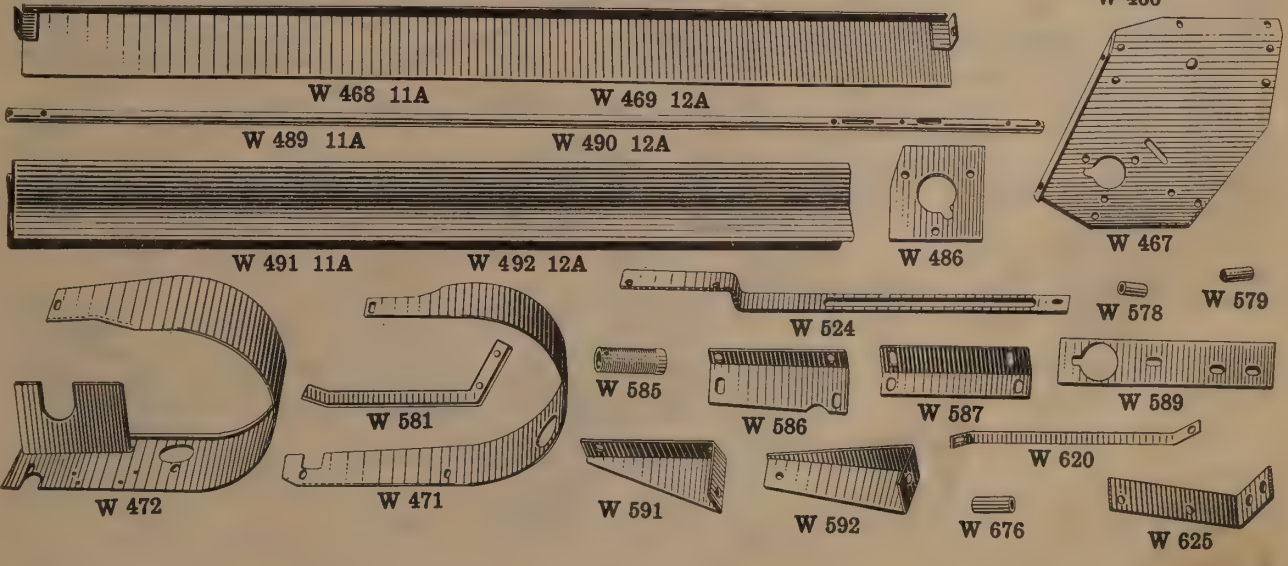

PARTING GRAIN SLINGER (SPECIAL FOR STIFF TOOTH OR SPRING TOOTH PICK-UP)

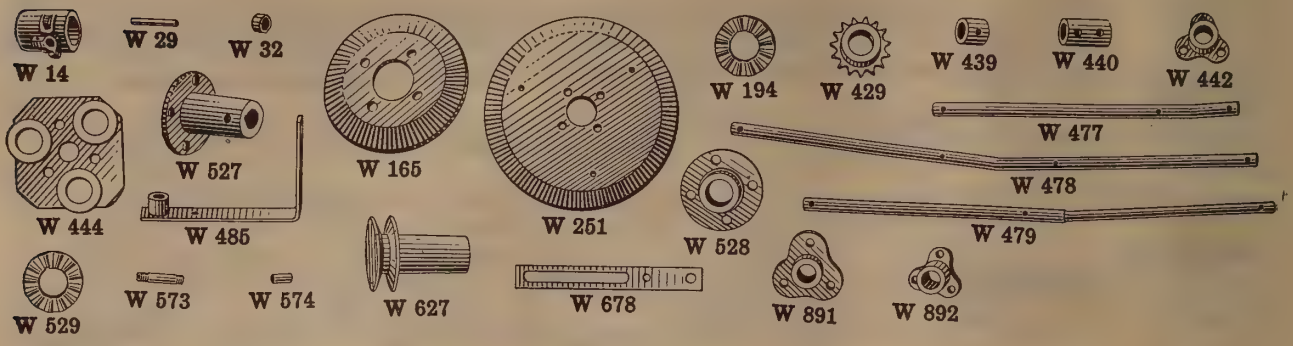

JOHN DEERE "LU" MOTOR AND CONNECTING PARTS

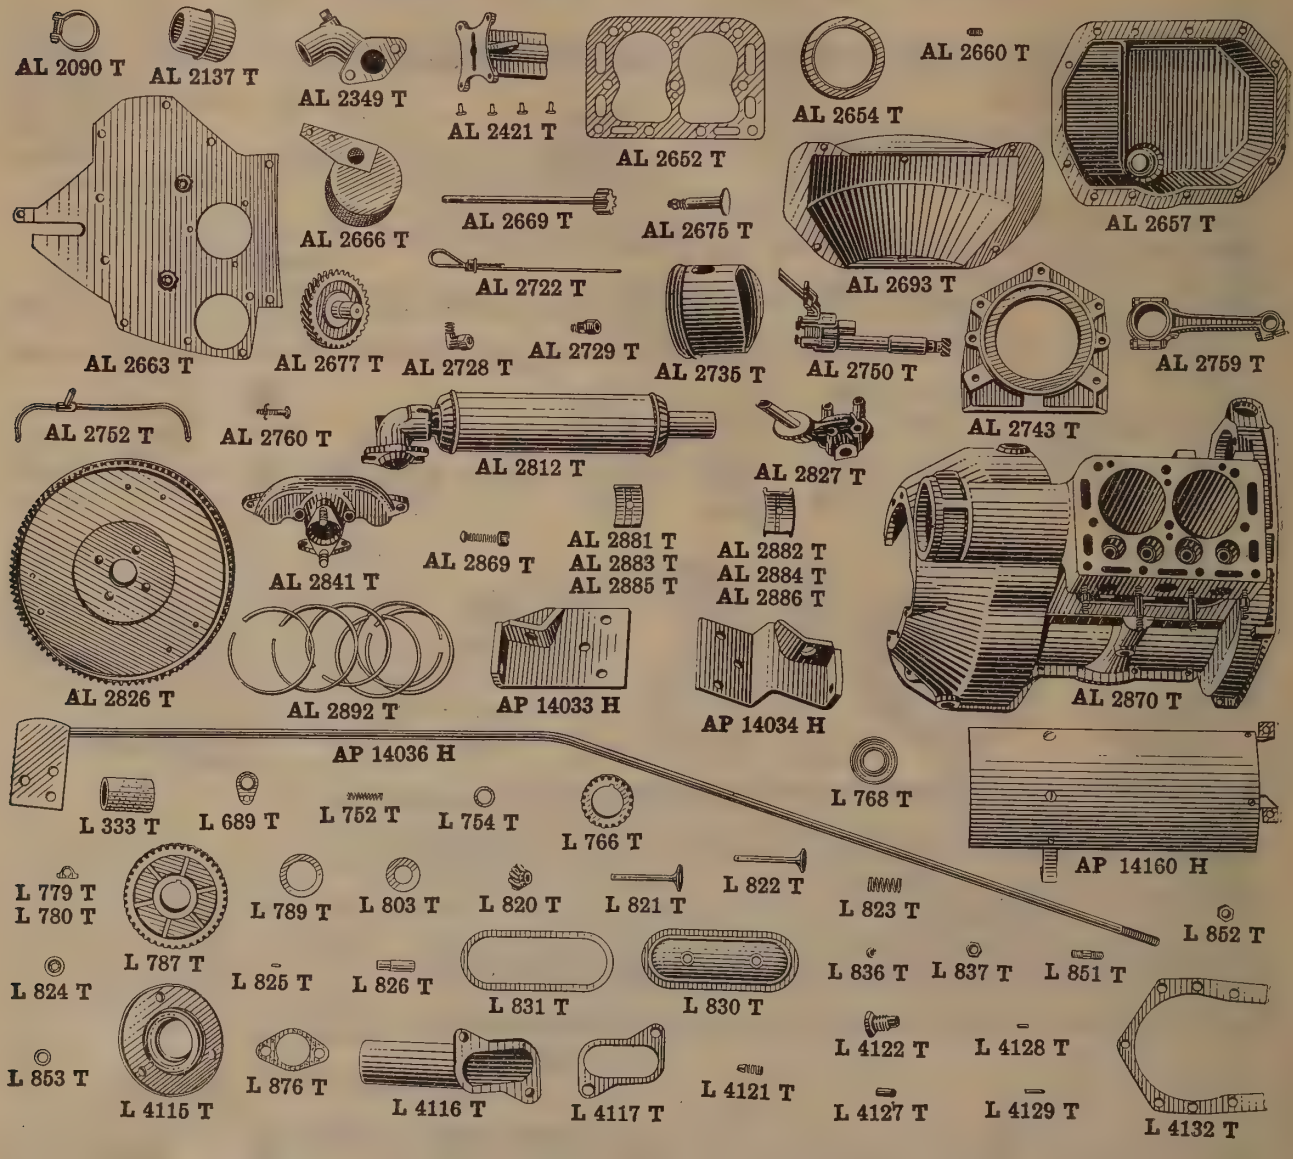

JOHN DEERE "LU" MOTOR AND CONNECTING PARTS (Continued)

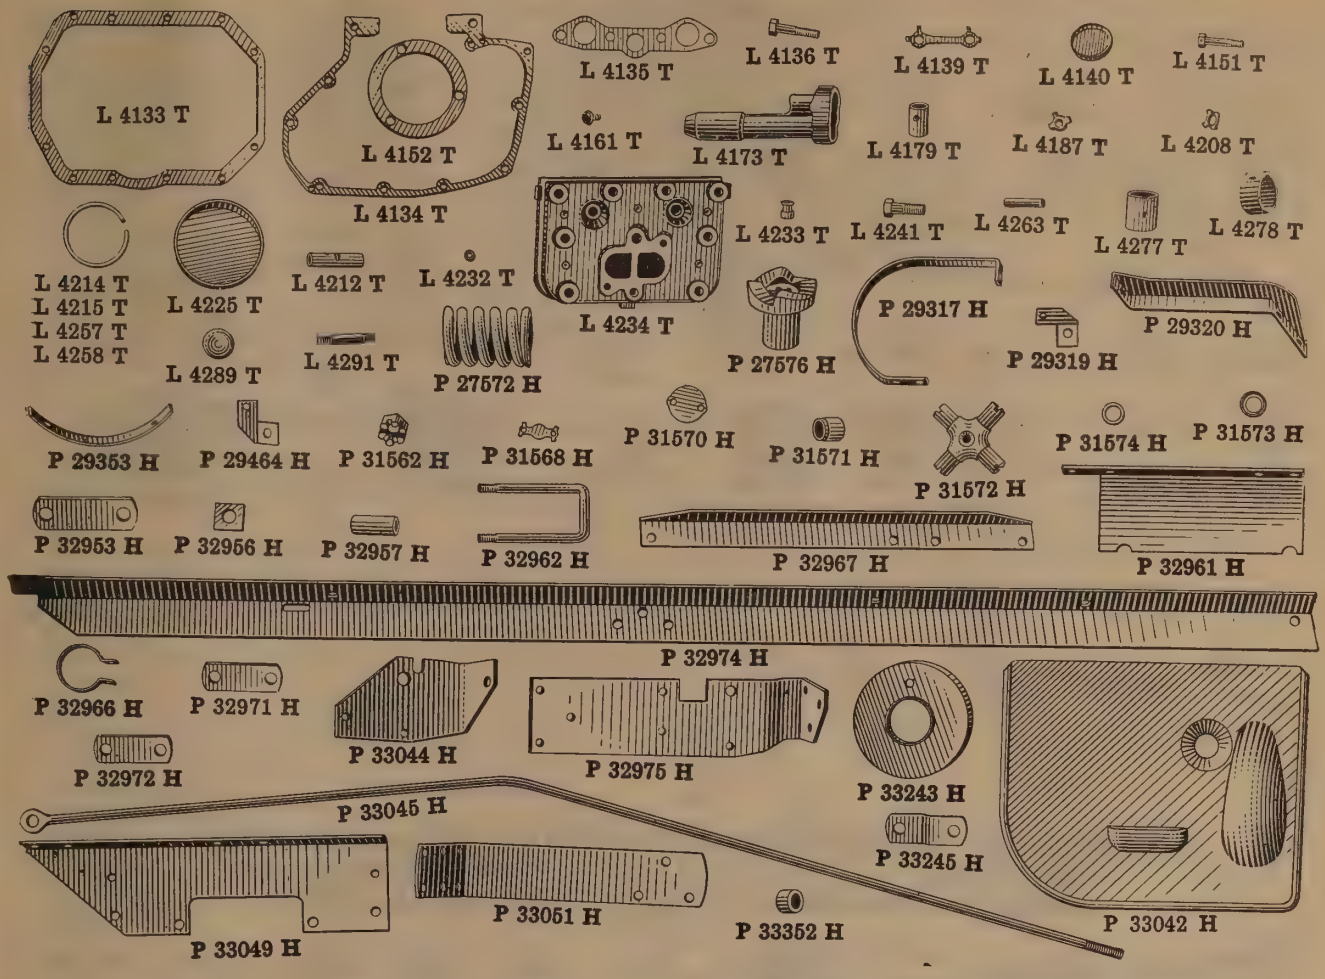

CLUTCH AND REDUCTION GEARS USED WITH "LU" JOHN DEERE MOTOR

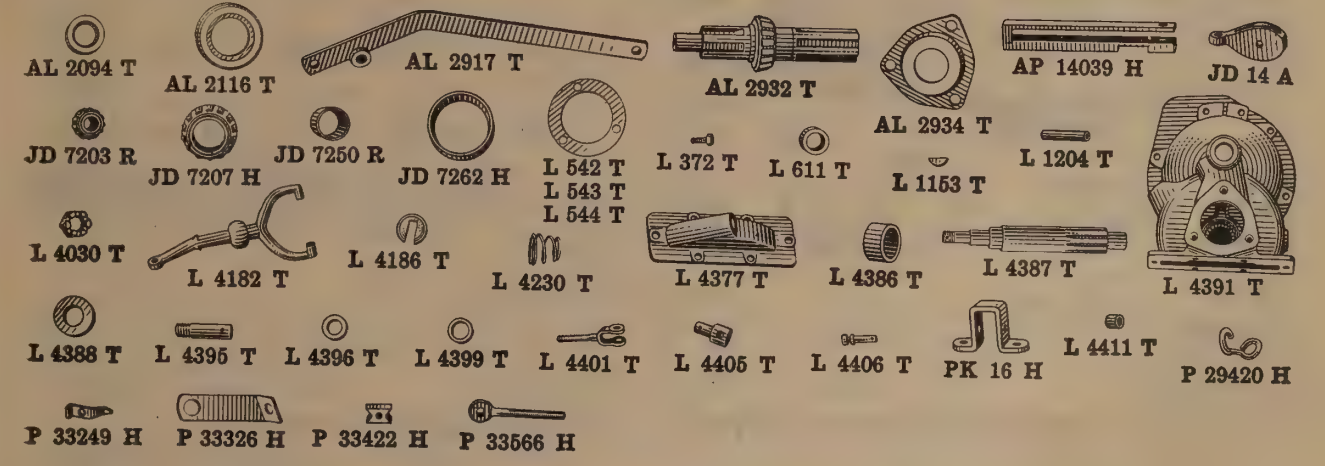

COOLING FAN USED WITH "LU" JOHN DEERE MOTOR

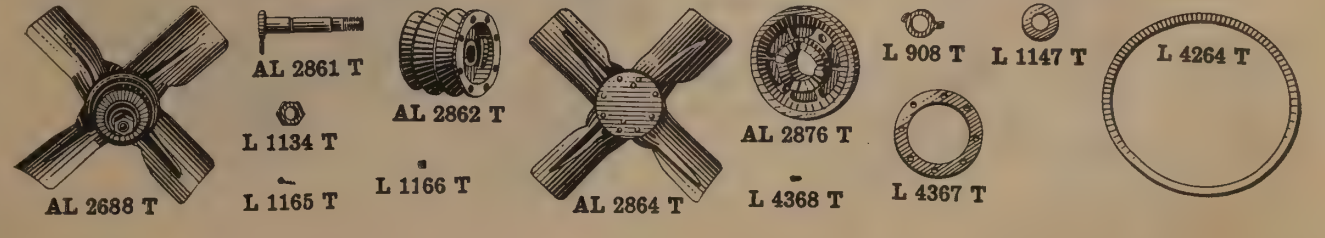

WICO MAGNETO C909 WITH IMPULSE STARTER USED WITH "LU" JOHN DEERE MOTOR

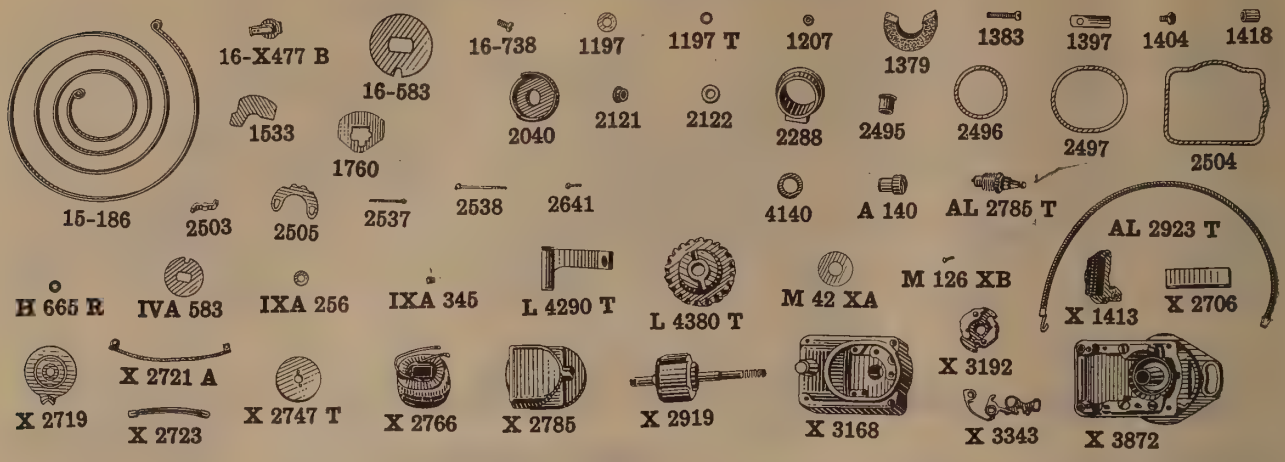

GASOLINE STRAINER USED WITH "LU" JOHN DEERE MOTOR

SCHEBLER CARBURETOR (TSX-60) AND GASOLINE TANK USED WITH "LU" JOHN DEERE MOTOR (ORDER FROM MOLINE TRACTOR DIVISION, MOLINE, ILLINOIS)

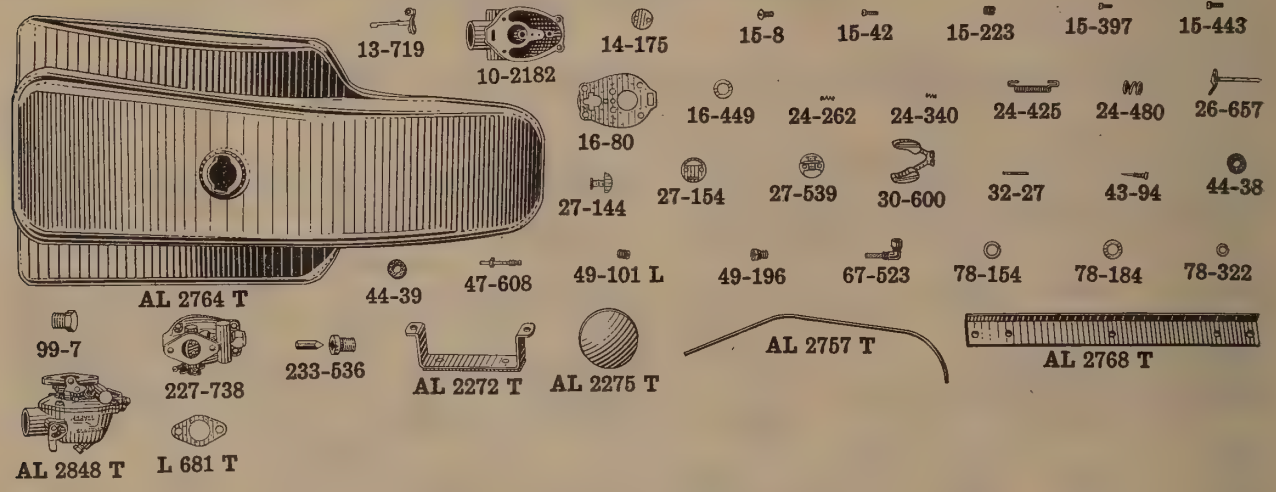

GOVERNOR USED WITH "LU" JOHN DEERE MOTOR

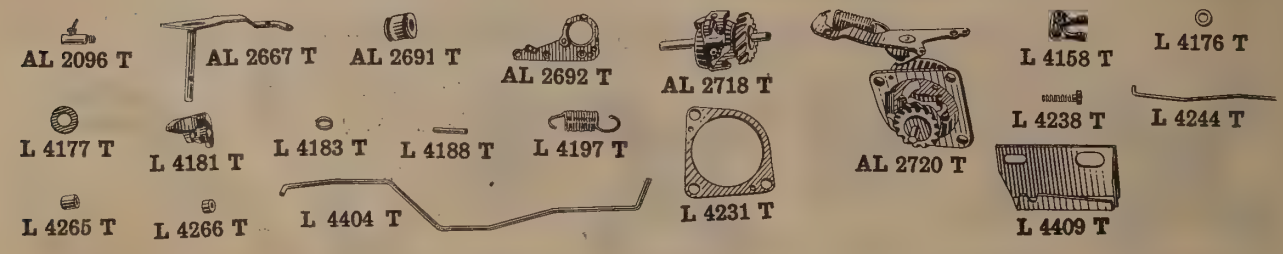

RADIATOR USED WITH "LU" JOHN DEERE MOTOR

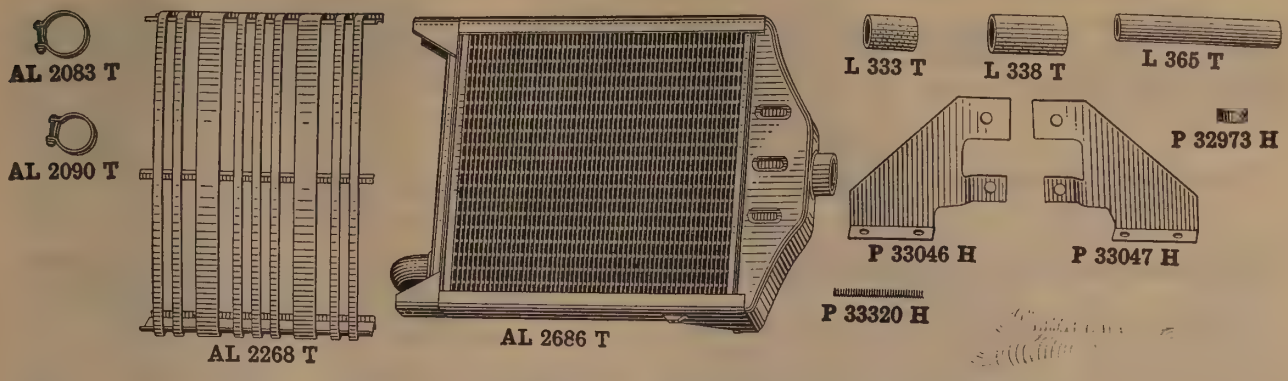

HERCULES IXA-3 MOTOR AND CONNECTING PARTS

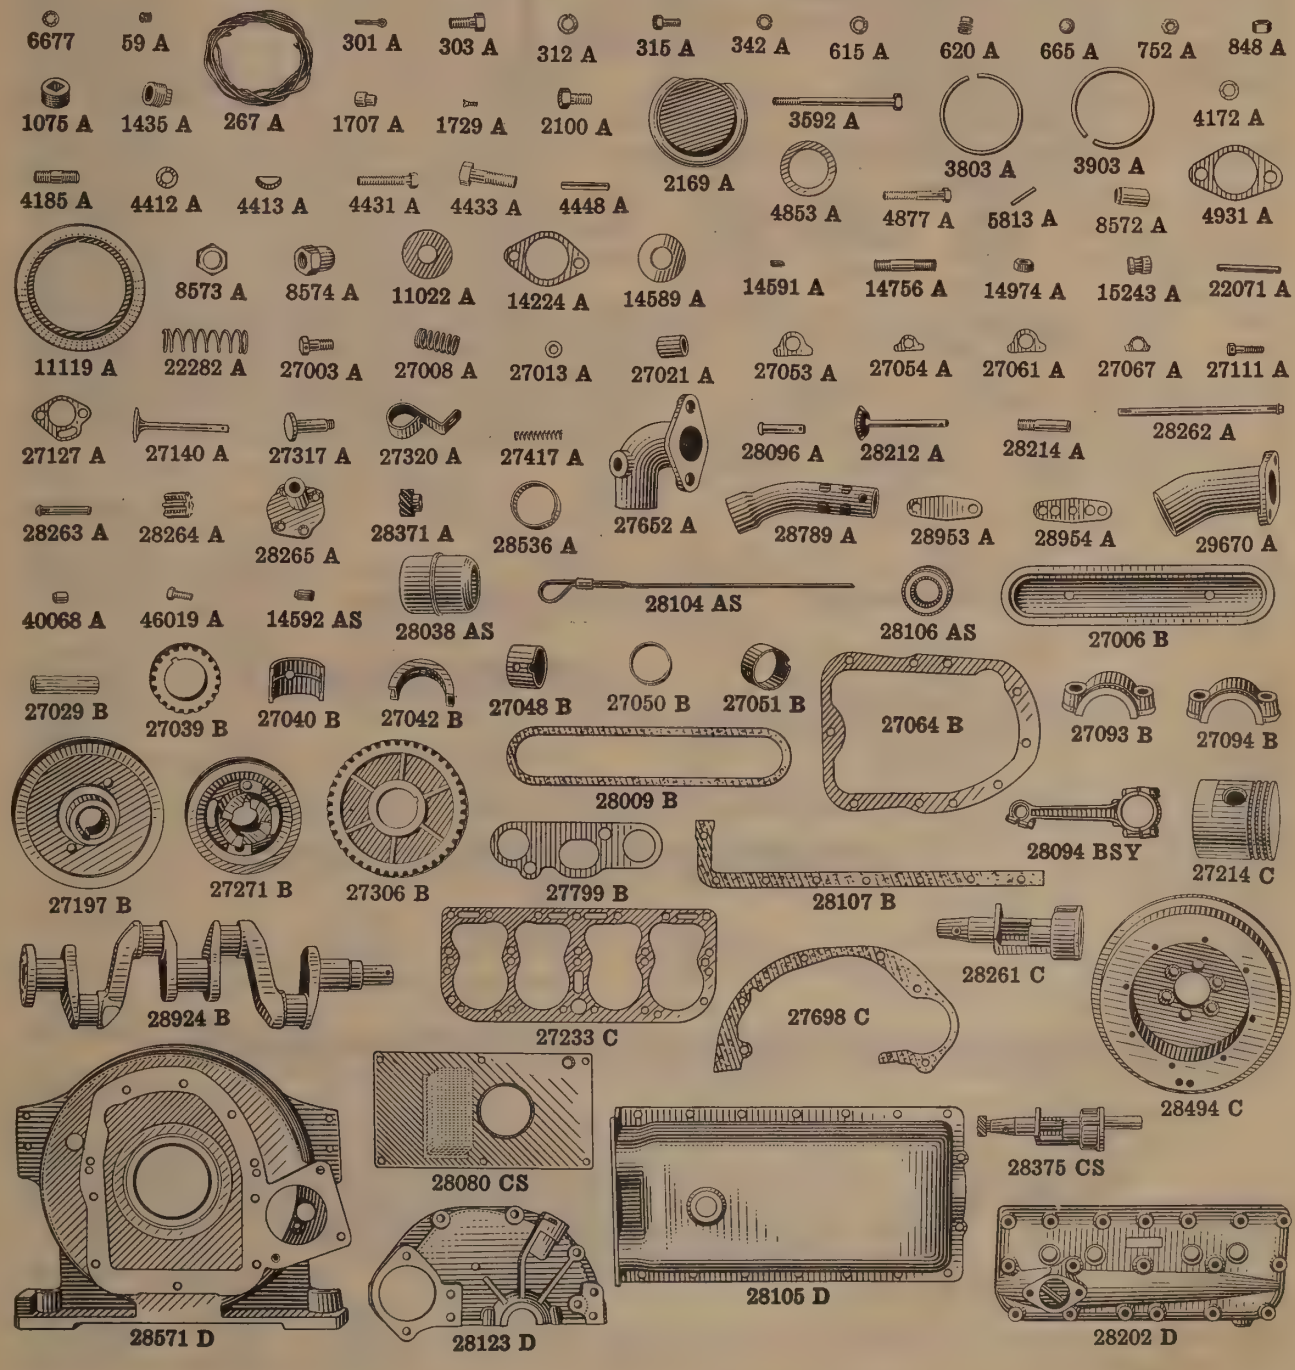

HERCULES IXA-3 MOTOR AND CONNECTING PARTS (Continued)

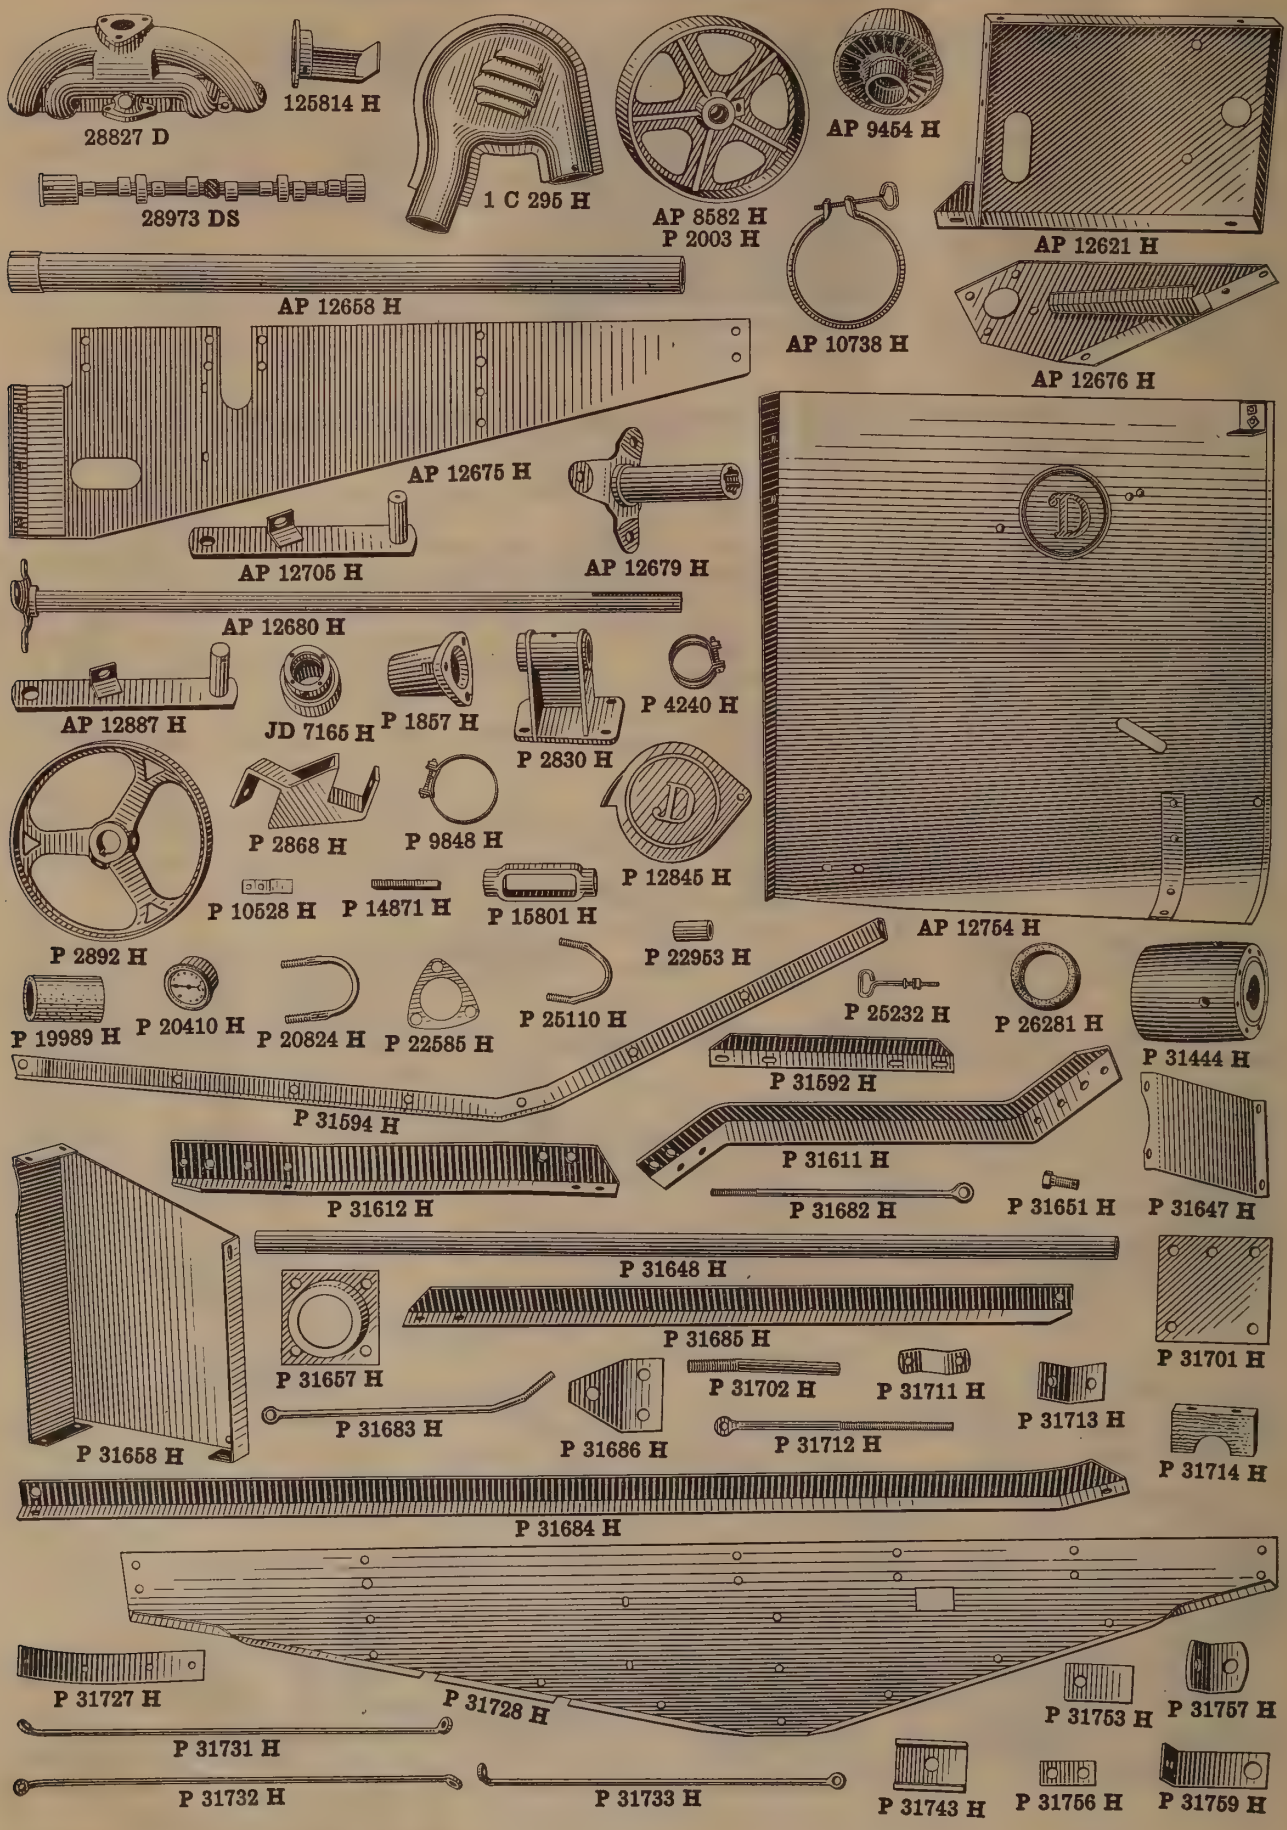

HERCULES IXA-3 MOTOR AND CONNECTING PARTS (Continued)

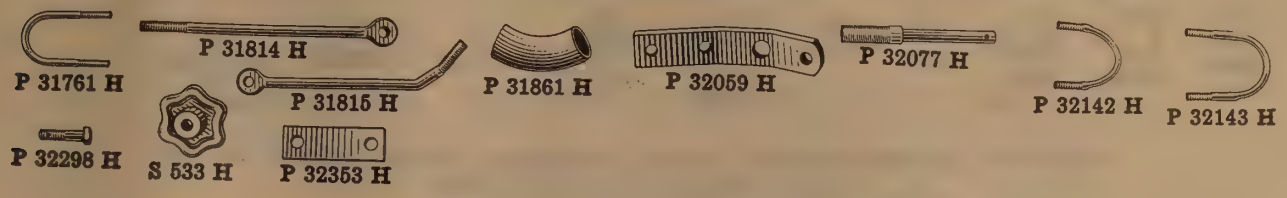

TWIN DISK CLUTCH USED WITH IXA-3 HERCULES MOTOR

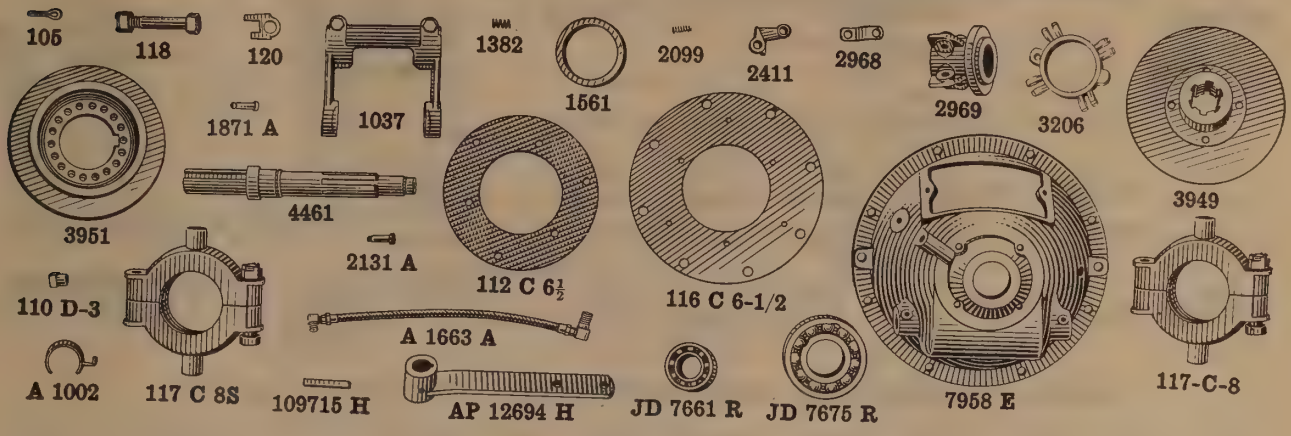

COOLING FAN USED WITH IXA-3 HERCULES MOTOR

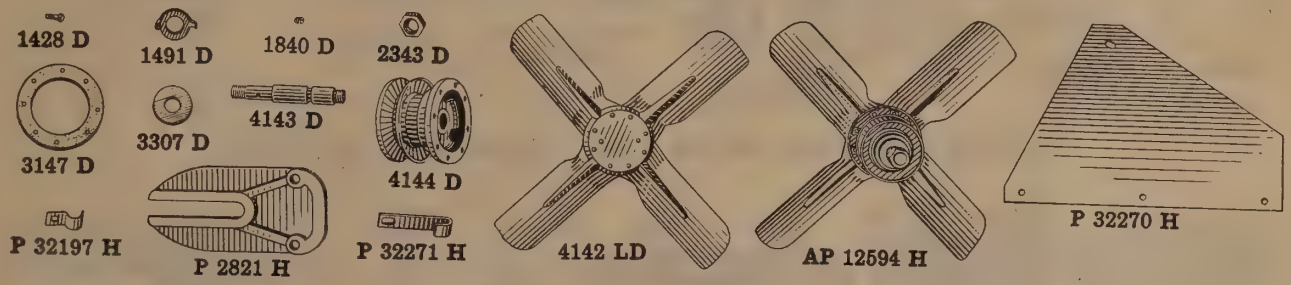

WICO MAGNETO C1324, C4 WITH IMPULSE STARTER USED WITH IXA-3 HERCULES MOTOR

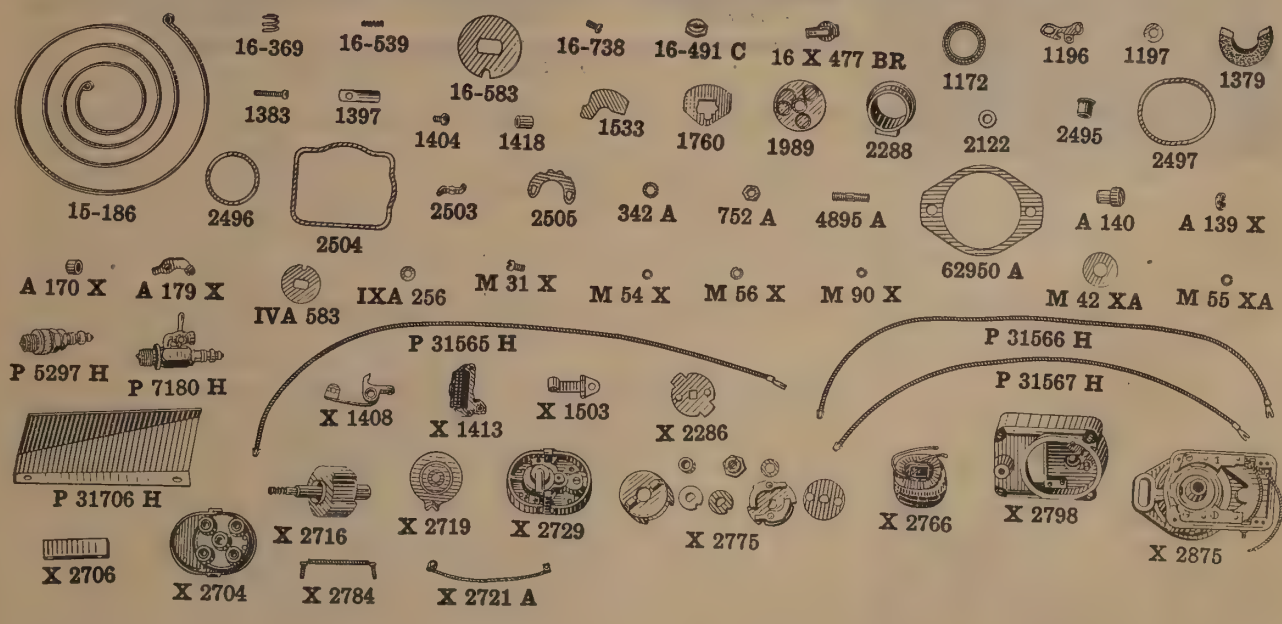

IMPERIAL GAS STRAINER USED WITH IXA-3 HERCULES MOTOR

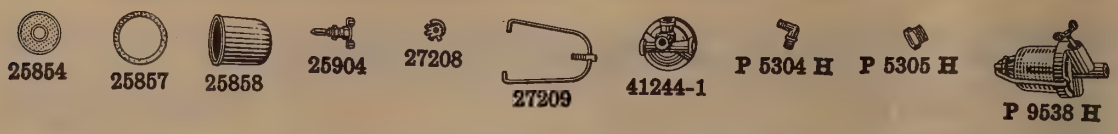

ZENITH CARBURETOR 0-9519 AND GAS TANK USED WITH IXA-3 HERCULES MOTOR

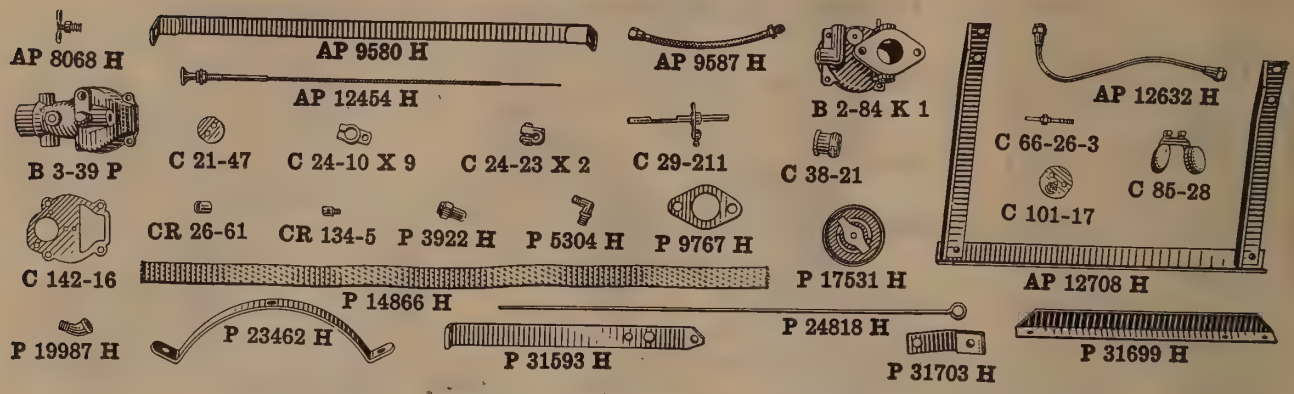

HANDY GOVERNOR USED WITH IXA-3 HERCULES MOTOR

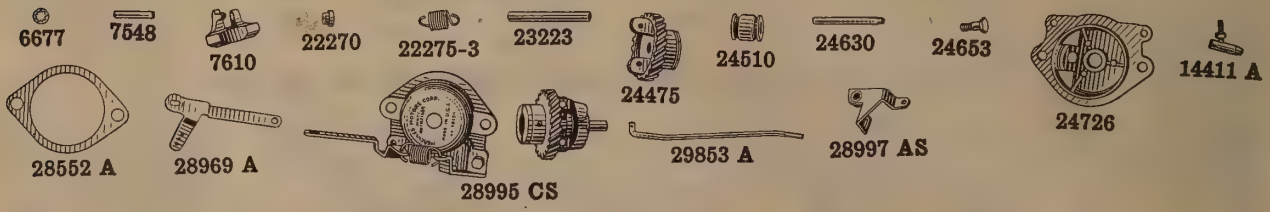

RADIATOR USED WITH IXA-3 HERCULES MOTOR

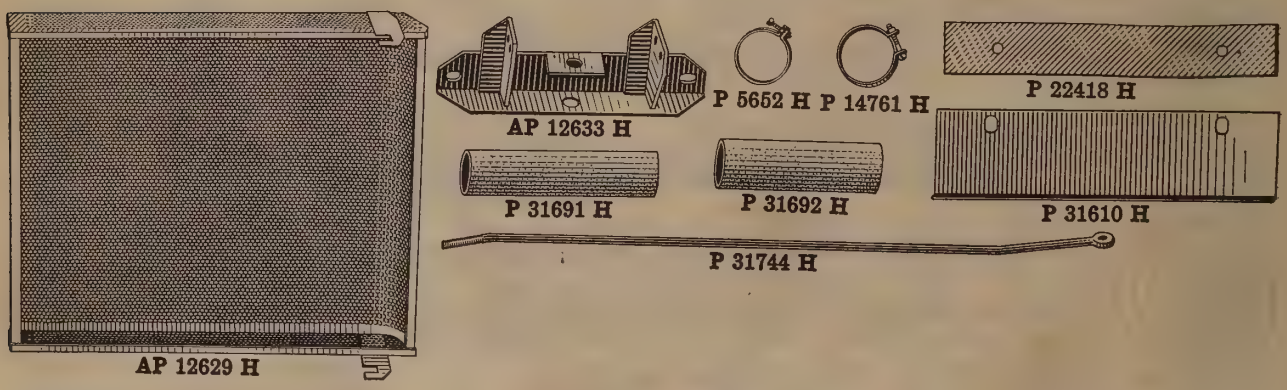

JOHN DEERE No. 11 AND No. 12 COMBINES

SECTIONAL INDEX FOR REPAIR PARTS

Description	Description Page	Illustration Page
Bolts, Capscrews and Nuts	128	150–151
Beater behind the Cylinder	109	141
Conveyor under Straw Rack	111–112	143
Cylinder and Concaves	106–108	138–141
Drive and Drive Sheaves and Sprockets	124	149–150
Drive Belts and Drive Chains	123	.....
Drive Chain and Belt Tighteners and Idler Brackets, Sprockets and Sheaves	124–125	150
Fan	113–116	144–146
Feeder Canvas Frame and Rollers	105–106	138
Grain Tank and Supports	118	147
Grain Tank Elevator and Clean Grain Auger	117–118	146–147
Grain Tank Unloading Auger	119–120	147–148
Hart Scour-Kleen (Model "SJ") for Grain Tank Machines	120–122	.....
Hook-Up Equipment for:		
John Deere Tractors	130–131	151–152
I.H.C. Tractors	131–132	151–152
Hart-Parr, Allis-Chalmers and Case Tractors	132–133	151–152
"Caterpillar" Tractors	133	151–152
Kaffir Corn Heading Attachment	129	151
Pick-Up	134–135	152–153
Pins and Keys	127	150–151
Platform, Platform Drive Parts, Sickle and Pitman	103–105	137–138
Platform Lifting Lever and Lifting Springs	105	138
Power Drive	122–123	148–149
Reel	102–103	136
Roller Bearings and Bronze Bearings	125–127	150
Shoe	112–113	143–144
Slow Speed Attachment (To Provide Cylinder Speeds of 175, 250 and 350 R.P.M.)	129	151
Springs	128	150–151
Straw Rack and Rear Hood	109–111	141–143
Tailings Elevator and Tailings Auger	116–117	146
Washers	127	150–151
Wheels, Axles and Hitch	102	136
Zerk Fittings	129	151

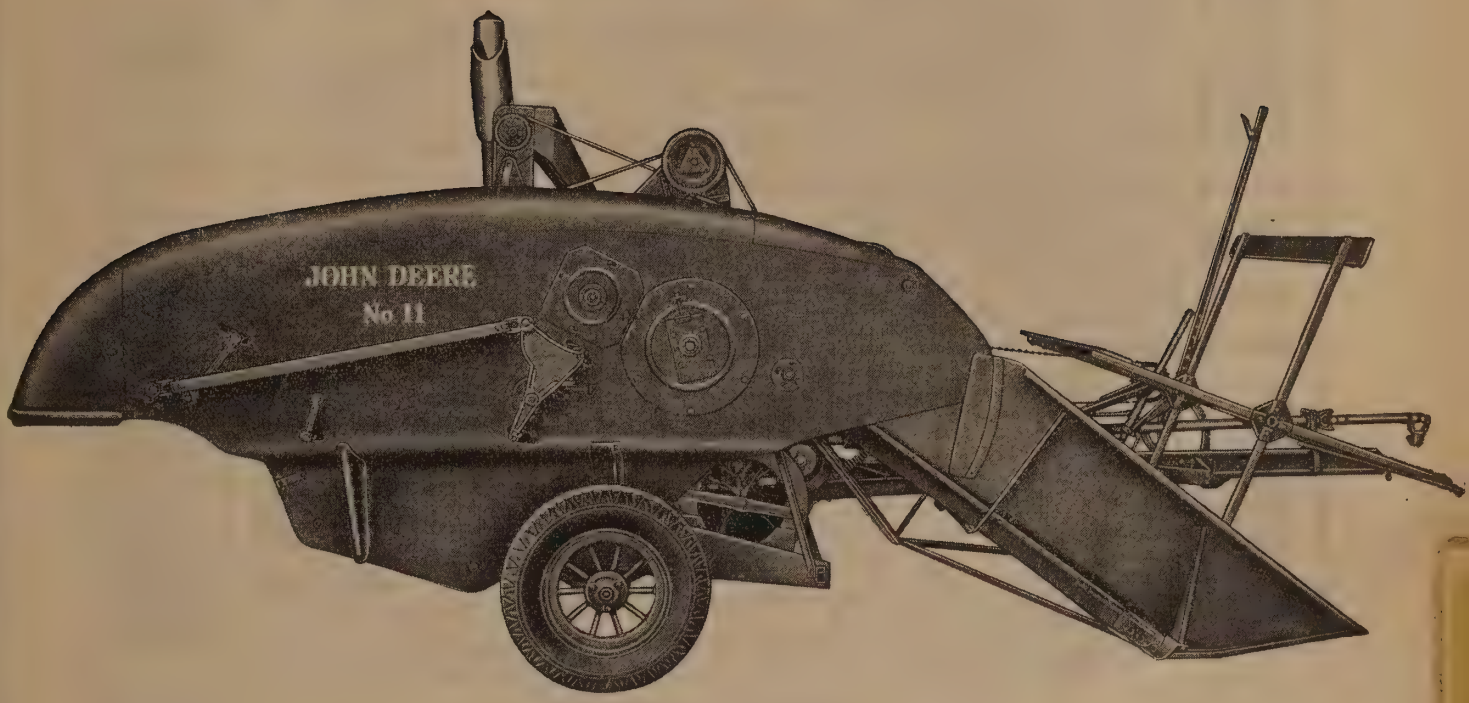

JOHN DEERE No. 11 AND No. 12 COMBINES

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	WHEELS, AXLES AND HITCH			
130052 H	Pipe Spacer on Front Bolt for Tractor Hitch Extension	1939	1939	
AP10045 H	Stub Axle (2 used)	1939	1939	
AP10070 H	Main Side Channel for Tractor Hitch (No Cut)	1939	1939	
AP10071 H	Brace for Main Side Channel for Tractor Hitch (No Cut)	1939	1939	
AP10122 H	Extension, Complete for Front End of Tractor Hitch	1939	1939	
AP10172 H	Separator Support on Main Axle (2 used)	1939		
AP10336 H	Separator Support on Main Axle (2 used) (No Cut)		1939	
AP11261 H	Bracket, Lower, on Axle Tube for Tractor Hitch Main Side Channel Brace	1939	1939	
AP11262 H	Bracket, Lower, on Axle Tube for Tractor Hitch Main Side Channel	1939	1939	
JD 1938 H	Main Wheel (2 used) (No Cut)	1939	1939	
P 2331 H	Axle Bracket, Outer (2 used)	1939	1939	
P 2388 H	Axle Bracket, Inner (2 used)	1939	1939	
P 2397 H	Hub Cap for R. H. Wheel	1939	1939	
P 26100 H	Cross Support under Tractor Hitch (Square Tubing) (few used, see P28338H)	1939		P28338H
P 26150 H	Gasket for Inner End of Wheel Hub (2 used)	1939	1939	
P 26151 H	Gasket for Wheel Hub Caps (2 used)	1939	1939	
P 26160 H	Axle Square Tubing	1939		
P 26161 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel Brace	1939	1939	
P 26183 H	Bracket on Brace for Tractor Hitch Main Side Channel for Square Tube Cross Support	1939	1939	
P 26237 H	Cross Brace for Front End of Tractor Hitch Side Channels	1939	1939	
P 26251 H	Bracket, Upper, on Axle Tube for Tractor Hitch Main Side Channel	1939	1939	
P 26267 H	Support Arm for R. H. End of Square Tube under Tractor Hitch (few used, see P28336H)	1939	1939	P28336H
P 26413 H	Transport Bracket on Front End of Tractor Hitch Main Side Channel	1939	1939	
P 26637 H	Wheel Retaining Collar on Wheel (2 used)	1939	1939	
P 26638 H	Wheel Retaining Collar on Stub Axle (2 used)	1939	1939	
P 26779 H	Rubber Rim Strip for Main Wheel (2 used)	1939	1939	
P 26789 H	Angle Brace from Side of Separator to Main Axle	1939	1939	
P 26894 H	Axle Square Tubing		1939	
P 26901 H	Oil Retaining Cord for Main Wheels (2 used)	1939	1939	
P 26912 H	Cross Support under Tractor Hitch (Square Tubing)		1939	
P 28336 H	Support Arm for R. H. End of Square Tube under Tractor Hitch (few used, see P26267H)	1939	1939	P26267H
P 28338 H	Cross Support under Tractor Hitch (Square Tubing) (few used, see P26100H) (No Cut)	1939		P26100H
P 32281 H	Stiffener "U" Channel for Tractor Hitch Main Side Channel Brace (Repairs only) (No Cut)	1939	1939	
	REEL			
AP 9966 H	Support for Reel Pipe	1939	1939	
AP10735 H	Reel Support Post	1939	1939	
AP11374 H	Reel Pipe with Spiders (No Cut)	1939		
AP11472 H	Reel Pipe with Spiders (No Cut)		1939	
AP11757 H	Reel Drive Shaft through Grain Tank	1939	1939	
P 2309 H	Handwheel on Reel Drive Sprocket on L. H. Main Wheel Axle	1939	1939	
P 2344 H	Slip Clutch for Sprocket on Reel Pipe	1939	1939	
P 2369 H	Nut for Slip Clutch on Reel Pipe	1939	1939	
P 2385 H	Clutch for Reel Drive Sprocket on L. H. Wheel Axle	1939	1939	
P 2400 H	Slide Bracket on Reel Support Post	1939	1939	
P 2405 H	Bearing, R. H., for Reel Drive Shaft through Grain Tank	1939	1939	
P 2409 H	Clamp for Reel Pipe Support on Slide Bracket	1939	1939	
P 2465 H	Bearing, L. H., for Reel Drive Shaft through Grain Tank	1939	1939	
P 2546 H	Stop Clamp on Reel Pipe	1939	1939	
P 2561 H	Lock Bolt Bracket for Reel Tilting Square Pipe	1939	1939	
P 16478 H	Pipe Trunnion in Front Drive Chain Tightener Arm	1939	1939	
P 26028 H	Stiffener Plate inside of Grain Tank for Reel Drive Chain Idler Sprocket	1939	1939	
P 26033 H	Reel Arm (8 used)	1939	1939	
P 26285 H	Clip on Grain Tank for Front Drive Chain Tightener Arm Spring	1939	1939	
P 26331 H	Pipe Trunnion in Upper End of Reel Tilting Square Pipe	1939	1939	
P 26473 H	Support on Side of Platform for Reel Slide Bar Bracket	1939	1939	
P 26516 H	Chain Guide for Slip Clutch Sprocket on Reel Pipe (2 used)	1939	1939	
P 26718 H	Angle Brace from Reel Tilting Square Pipe to Reel Pipe Support	1939	1939	
P 26719 H	Reel Tilting Square Pipe	1939	1939	
P 26727 H	Reel Slat (4 used)	1939		
P 26733 H	Pipe Trunnion in Lower End of Reel Support Post	1939	1939	
P 26734 H	Angle Brace from Slide Bracket to Reel Pipe Support	1939	1939	

For Cuts of Repair Parts, see page 136.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	REEL—Continued			
P 26735 H	Flat Brace from Slide Bracket to Reel Pipe Support	1939	1939	.....
P 26770 H	Pipe Trunnion in Lower End of Channel Brace from Reel Support Post to Cutter Bar (No Cut)	1939	1939	.....
P 26834 H	Reel Slat (4 used)	.....	1939	.....
P 26839 H	Seal for Slotted Hole in Grain Tank for Reel Drive Shaft	1939	.....	.....
P 27246 H	Reinforcing Plate on Reel Tilting Square Pipe for Angle Brace Bolts	1939	1939	.....
P 27813 H	Channel Brace from Reel Post to Cutter Bar	1939	1939	.....
P 28017 H	Bolt Plate on Reel Slat	1939	1939	.....
P 28655 H	Shaft in L. H. Wheel Axle for Reel Drive Sprocket	1939	1939	.....
P 28709 H	Lock Bolt for Reel Tilting Square Pipe and for Reel Post (2 used)	1939	1939	.....
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN			
AP 9950 H	Support for Front End of Platform Side Plate, R. H.	1939	1939	.....
AP 9956 H	Truss Frame under Platform Bottom, Complete with Cutter Bar (few used, see AP11336H) (No Cut)	1939	.....	AP11336H
AP 9958 H	Housing for Sickle Drive Eccentric Bearing on Platform Canvas Drive Sheave. (P2314H Complete)	1939	1939	.....
AP10124 H	Knife Head, Complete	1939	1939	.....
AP10257 H	Truss Frame under Platform Bottom, Complete with Cutter Bar (No Cut)	.....	1939	.....
AP10319 H	Platform Bottom (few used, see AP11329H) (No Cut)	1939	.....	AP11329H
AP10339 H	Platform Canvas, Complete (AP13683H will work) (No Cut)	.....	1939	AP13683H
AP10375 H	Platform Canvas, Complete (AP13682H will work) (No Cut)	1939	.....	AP13682H
AP10504 H	Platform Bottom (No Cut)	.....	1939	.....
AP10547 H	Platform Canvas Fastening Slide Bar	.....	1939	.....
AP10557 H	Sickle, Complete (AP10124H Head) (Z5654H Section)	1939	.....	.....
AP10565 H	Guard, Pointed Lip (P2342H Complete)	1939	1939	.....
AP10566 H	Guard, Outer Pointed Lip (P2343H Complete) (2 used)	1939	1939	.....
AP10639 H	Guard, Open Lipless (P2345H Complete) (Special)	1939	1939	.....
AP10640 H	Guard, Outer Open Lipless (P2304H Complete) (2 used) (Special)	1939	1939	.....
AP10649 H	Platform Canvas Fastening Slide Bar	1939	.....	.....
AP10778 H	Sickle, Complete (AP10124H Head) (Z5654H Section)	.....	1939	.....
AP10786 H	Extension for Front End of Platform Side Plate, L. H.	1939	1939	.....
AP11006 H	Extension for Outside Divider	1939	1939	.....
AP11007 H	Extension for Inside Divider (Special)	1939	1939	.....
AP11067 H	Tightener Bracket on Rear End of Platform Lifting Springs	1939	1939	.....
AP11134 H	Lifting Guard, Complete (Special)	1939	1939	.....
AP11329 H	Platform Bottom (few used, see AP10319H) (No Cut)	1939	.....	AP10319H
AP11336 H	Truss Frame, under Platform Bottom, Complete with Cutter Bar (few used, see AP9956H) (No Cut)	1939	.....	AP9956H
AP11738 H	Platform Canvas Idler Roller at Front End of Platform (No Cut)	1939	.....	.....
AP11739 H	Platform Canvas Idler Roller at Front End of Platform (No Cut)	.....	1939	.....
AP12048 H	Sickle Drive Pipe, Complete (AP12635H with P31617H, P31618H and 2—1/4 x 1/2" Hex. Head Capscrews will work)	1939	1939	AP12635H
AP12093 H	Support for Front End of Sickle Drive Pipe	1939	1939	.....
AP12094 H	Bearing Box, Complete at Front End of Pitman Drive Pipe (P2667H Complete) (Bearing J1063H)	1939	1939	.....
AP12185 H	Platform Side Sheet, R. H. (No Cut)	1939	1939	.....
AP12186 H	Platform Side Sheet, L. H. (No Cut)	1939	1939	.....
AP12198 H	Platform Canvas Drive Roller (AP13838H with P2978H, P32808H, P32882 and P32949H will work) (No Cut)	1939	.....	AP13838H
AP12256 H	Platform Canvas Drive Roller (AP13839H with P2978H, P32808H, P32882H and P32949H will work) (No Cut)	.....	1939	AP13839H
AP12292 H	Tightener Slide Bracket for Platform Canvas Idler Roller (Order AP12293H) (2 used)	1939	1939	.....
AP12293 H	Tightener Slide Bracket for Platform Canvas Idler Roller (AP-12292H Complete) (2 used)	1939	1939	.....
AP12490 H	Pivot Plate on Upper End of R. H. Platform Side Angle (See AP12492H) (No Cut)	1939	.....	AP12492H
AP12491 H	Pivot Plate on Upper End of L. H. Platform Side Angle (See AP12493H) (No Cut)	1939	.....	AP12493H
AP12492 H	Pivot Plate on Upper End of R. H. Platform Side Angle (See AP12490H) (No Cut)	1939	1939	AP12490H
AP12493 H	Pivot Plate on Upper End of L. H. Platform Side Angle (See AP12491H) (No Cut)	1939	1939	AP12491H
AP12635 H	Sickle Drive Pipe, Complete (with P31617H, P31618H and 2—1/4 x 1/2" Hex. Head Capscrews, works for AP12048H) (Repairs only)	1939	1939	AP12048H
AP13682 H	Platform Canvas, Complete with Fastening Slide Bar (Repairs only) (works for AP10375H) (No Cut)	1939	.....	AP10375H
AP13683 H	Platform Canvas, Complete with Fastening Slide Bar (Repairs only) (works for AP10339H) (No Cut)	.....	1939	AP10339H

For Cuts of Repair Parts, see pages 136 and 137.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN—Continued			
AP13838 H	Platform Canvas Drive Roller (with P2978H, P32880H, P32882H and P32949H works for AP12198H) (Repairs only)...(No Cut)	1939	.....	AP12198H
AP13839 H	Platform Canvas Drive Roller (with P2978H, P32880H, P32882H and P32949H works for AP12256H) (Repairs only)...(No Cut)	.....	1939	AP12256H
P 1564 H	Cap for Bearing Box Support Bracket at Front End of Pitman Drive Pipe	1939	1939	.....
P 1858 H	Lifting Guard (Special)	1939	1939	.....
P 1860 H	Adjusting Block for Lifting Guard (Special)	1939	1939	.....
P 2304 H	Guard, Outer Open Lipless (Order AP10640H) (2 used) (Special)	1939	1939	.....
P 2314 H	Housing for Sickle Drive Eccentric Bearing on Platform Canvas Drive Sheave (Order AP9958H)	1939	1939	.....
P 2342 H	Guard, Pointed Lip (Order AP10565H)	1939	1939	.....
P 2343 H	Guard, Outer Pointed Lip (Order AP10566H) (2 used)	1939	1939	.....
P 2345 H	Guard, Open Lipless (Order AP10639H) (Special)	1939	1939	.....
P 2412 H	Cutter Bar Support, R. H.	1939	1939	.....
P 2413 H	Cutter Bar Support, L. H.	1939	1939	.....
P 2506 H	Support Arm on Cutter Bar for Lifting Guard (Special)	1939	1939	.....
P 2540 H	Bearing Box, L. H., for Platform Canvas Drive Roller (Bearing JD7925H) (Sleeve JD8302H)	1939	1939	.....
P 2554 H	Bearing Box, R. H., for Platform Canvas Drive Roller (Bearing JD7924H) (Sleeve JD8301H)	1939	1939	.....
P 2577 H	Sickle Holder (4 used)	1939	1939	.....
P 2663 H	Knife Head Guide	1939	1939	.....
P 2666 H	Bracket for Bearing Cup on Rear End of Sickle Drive Pipe	1939	1939	.....
P 2667 H	Bearing Box at Front End of Pitman Drive Pipe (Order AP12094H)	1939	1939	.....
P 2669 H	Notched Adjusting Plate for Front End of Pitman Drive Pipe	1939	1939	.....
P 2670 H	Support Bracket for Bearing Box at Front End of Pitman Drive Pipe	1939	1939	.....
P 2671 H	Drive Arm on Front End of Sickle Drive Pipe	1939	1939	.....
P 2676 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Sheave (P2941H will work)	1939	1939	P2978H
P 2693 H	Pivot Ring on Upper End of Platform Side Sheet, L. H.	1939	1939	.....
P 2694 H	Pivot Ring on Upper End of Platform Side Sheet, R. H.	1939	1939	.....
P 2941 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Sheave (Repairs only) (works for P2676H)	1939	1939	P2676H
P 2978 H	Eccentric Hub for Sickle Drive on Platform Canvas Driven Sheave (Order when Original Platform Canvas Drive Roller has been replaced with AP13838H) (Repairs only)...(No Cut)	1939	1939	P2676H
P 5645 H	Guard Plate Rivets (1 lb.) (13/64 x 1-1/8" Countersunk Head)...(No Cut)	1939	1939	.....
P 26048 H	Guide Plate for Platform Side Sheets (2 used)	1939	1939	.....
P 26056 H	Lock Strip on Ends of Platform Canvas (2 used)	.....	1939	.....
P 26058 H	Shield for Cutter Bar	1939	.....	.....
P 26064 H	Canvas Slat for Platform Canvas (P32982H will work)	1939	.....	P32982H
P 26138 H	Ball for Sickle Drive Arm	1939	1939	.....
P 26470 H	Stiffener Angle on Platform Side Sheet, L. H.	1939	1939	.....
P 26471 H	Stiffener Angle on Platform Side Sheet, R. H.	1939	1939	.....
P 26472 H	Cross Angle on Platform Bottom for Side Sheet Stiffener Angles	1939	.....	.....
P 26531 H	Ball Socket, Front, for Sickle Head	1939	1939	.....
P 26532 H	Ball Socket, Rear, for Sickle Head	1939	1939	.....
P 26610 H	Ledger Plate for Pointed Lip Guard	1939	1939	.....
P 26613 H	Ledger Plate for Open Lipless Guard (Special)	1939	1939	.....
P 26877 H	Cross Angle on Platform Bottom for Side Sheet Stiffener Angles	.....	1939	.....
P 26991 H	Bracket for R. H. Box on Platform Canvas Drive Roller	1939	1939	.....
P 27035 H	Bracket for L. H. Box on Platform Canvas Drive Roller	1939	1939	.....
P 27036 H	Retainer for L. H. Box on Platform Canvas Drive Roller	1939	1939	.....
P 27037 H	Canvas Slat for Platform Canvas (P32983H will work)	.....	1939	P32983H
P 27038 H	Wearing Plate for Sickle	1939	1939	.....
P 27080 H	Lock Strip on Ends of Platform Canvas (2 used)	1939	.....	.....
P 27161 H	Platform Canvas Guides (2 used) (P32253H will work)	1939	1939	P32253H
P 27254 H	Lock Bracket for Platform Canvas Tightener Spring Rod (2 used)	1939	.....	.....
P 27306 H	Rod for Platform Canvas Tightener Spring (2 used)	1939	.....	.....
P 27529 H	Rod for Platform Canvas Tightener Spring (2 used)	.....	1939	.....
P 27715 H	Shield for Cutter Bar	.....	1939	.....
P 27824 H	Lock Bracket for Platform Canvas Tightener Spring Rod (2 used)	.....	1939	.....
P 28008 H	Bracket for Platform Canvas Tightener Spring Rod (2 used)	1939	1939	.....
P 28066 H	Cover for Pick-Up Shaft Bearing Hole in Side Sheet (2 used)	1939	1939	.....
P 28101 H	Snap Ring in Housing for Eccentric Bearing on Platform Canvas Drive Sheave (2 used)	1939	1939	.....
P 28213 H	Wood Slat for Lock Strip on Ends of Platform Canvas (2 used)	1939	.....	.....
P 28214 H	Wood Slat for Lock Strip on Ends of Platform Canvas (2 used)	.....	1939	.....
P 28290 H	Crosstie Angle at Rear End of Platform Bottom Angles	1939	.....	.....
P 28310 H	Crosstie Angle at Rear End of Platform Bottom Angles	.....	1939	.....
P 28487 H	Plate on Lower End of Platform Side Sheet to Close Opening between Canvas and Side Sheet (2 used)	1939	1939	.....

For Cuts of Repair Parts, see page 137.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN—Continued			
P 28599 H	Box End in Platform Canvas Drive Roller Bearing Box, R. H.	1939	1939	.....
P 28621 H	Point on Front End of Platform Side Sheet, R. H.	1939	1939	.....
P 28622 H	Point on Front End of Platform Side Sheet, L. H.	1939	1939	.....
P 28639 H	Wearing Strip on Platform Bottom for Slats (2 used)	1939	1939	.....
P 28669 H	Box End in Platform Canvas Drive Bearing Box, L. H.(No Cut)	1939	1939	.....
P 28758 H	Reinforcing Plate at Upper End of R. H. Platform Side Sheet	1939	1939	.....
P 28759 H	Reinforcing Plate at Upper End of L. H. Platform Side Sheet (No Cut)	1939	1939	.....
P 29841 H	Sidehill Washer on Sickle Drive Eccentric Bearing	1939	1939	.....
P 29855 H	Bearing Cup for Zerk Fitting in Fork at Rear End of Pitman Drive Pipe	1939	1939	P31620H
P 29881 H	Spring for Sickle Head Ball Socket	1939	1939	.....
P 29927 H	Bottom Plate for Front End of Platform Side Sheet, R. H.	1939	1939	.....
P 29978 H	Bottom Plate for Front End of Platform Side Sheet, L. H.	1939	1939	.....
P 30054 H	Reinforcing Strip for Top of Platform Side Plate, R. H.	1939	1939	.....
P 30055 H	Reinforcing Strip for Top of Platform Side Plate, L. H.	1939	1939	.....
P 30119 H	Retainer for R. H. Box on Platform Canvas Drive Roller	1939	1939	.....
P 30154 H	Wearing Plate on Bottom of Inside Divider (Lespedeza only) (No Cut)	1939	1939	.....
P 31617 H	Retainer Plate on Sickle Drive Pipe Fork for Bearing Cup (Repairs only)	1939	1939	.....
P 31618 H	Spacer for Retainer Plate on Sickle Drive Pipe for Fork Bearing Cup (Repairs only) (No Cut)	1939	1939	.....
P 31620 H	Bearing Cup for Zerk Fitting in Fork on Rear End of Pitman Drive Pipe (Repairs only)	1939	1939	P29855H
P 32253 H	Platform Canvas Guides (2 used) (Repairs only) (works for P27161H) (No Cut)	1939	1939	P27161H
P 32880 H	Retaining Nut for Bearing on Eccentric Hub (order when Original Platform Canvas Drive Roller has been replaced with AP13838H) (Repairs only) (No Cut)	1939	1939	.....
P 32882 H	Lock for Capscrew and Nut on L. H. End of Platform Canvas Drive Roller (order when Original Platform Canvas Drive Roller has been replaced with AP13838H) (Repairs only) (No Cut)	1939	1939	.....
P 32982 H	Canvas Slat for Platform Canvas (Repairs only) (works for P26064H) (No Cut)	1939	.....	P26064H
P 32983 H	Canvas Slat for Platform Canvas (Repairs only) (works for P27037H) (No Cut)	.....	1939	P27037H
Z 5086 H	Section Rivets (1 lb.) (13/64 x 9/16" O. H.) (No Cut)	1939	1939	.....
Z 5654 H	Serrated Section	1939	1939	.....
Z 5874 H	Knife Head Rivets (1 lb.) (13/64 x 7/8" O. H.) (No Cut)	1939	1939	.....
	PLATFORM LIFTING LEVER AND LIFTING SPRINGS			
AP 9949 H	Platform Lifting Arm on Tractor Hitch	1939	1939	.....
AP10057 H	Support on Tractor Hitch for Platform Lifting Arm (2 used)	1939	1939	.....
AP10093 H	Platform Lifting Rod	1939	1939	.....
AP10234 H	Platform Lifting Lever, Rear	1939	1939	.....
AP10442 H	Lifting Lever Ratchet	1939	1939	.....
B 6776 H	Detent Handle for Platform Lifting Lever (few used, see HZ298H)	1939	1939	HZ298H
HZ 297 H	Spade Handle on End of Platform Lifting Lever	1939	1939	.....
HZ 298 H	Hand Latch for Platform Lifting Lever (few used, see B6776H)	1939	1939	B6776H
J 6759 H	Clamp for Platform Lifting Lever Detent Rod	1939	1939	.....
P 20201 H	Detent Rod on Platform Lifting Lever (2 used)	1939	1939	.....
P 26044 H	U-Bolt for Lifting Arm on Tractor Hitch (2 used)	1939	1939	.....
P 26045 H	Link from Platform Lifting Arm to Cutter Bar	1939	1939	.....
P 26052 H	Cross Angle on Tractor Hitch for Platform Lifting Arm Supports	1939	1939	.....
P 26083 H	Pipe Trunnion in Rear of Platform Lifting Rod	1939	1939	.....
P 26085 H	Platform Lifting Lever, Front (few used, see P28810H)	1939	1939	P28810H
P 26095 H	Filler between Platform Lifting Lever Sector and Tractor Hitch Hitch Extension (2 used)	1939	1939	.....
P 26218 H	Pivot Pipe for Platform Lifting Arm	1939	1939	.....
P 26232 H	Pipe Trunnion in Front End of Platform Lifting Rod	1939	1939	.....
P 27274 H	Bracket on Tractor Hitch for Platform Lifting Spring Adjusting Bolt	1939	1939	.....
P 28528 H	Flat Link from Platform Lifting Arm to Front Bracket on Lifting Spring (2 used)	1939	1939	.....
P 28529 H	Tie Bracket for Front End of Platform Lifting Springs	1939	1939	.....
P 28810 H	Platform Lifting Lever, Front (few used, see P26085H)	1939	1939	P26085H
Y 4619B	Platform Lifting Lever Detent (2 used) (No Cut)	1939	1939	.....
Y 4620B	Platform Lifting Lever Detent Box (No Cut)	1939	1939	.....
Z 652 H	Nut for Platform Lifting Spring (2 used)	1939	1939	.....
	FEEDER CANVAS FRAME AND ROLLERS			
AP11752 H	Feeder Canvas Frame, Complete (No Cut)	.....	1939	.....
AP11785 H	Feeder Canvas Fastening Slide Bar	.....	1939	.....

For Cuts of Repair Parts, see pages 137 and 138.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	FEEDER CANVAS FRAME AND ROLLERS—Continued			
AP12015 H	Feeder Canvas Fastening Slide Bar	1939	.....	.....
AP12042 H	Feeder Canvas, Complete (AP13963H will work) (No Cut)	1939	.....	AP13680H
AP12043 H	Feeder Canvas, Complete (AP13964H will work) (No Cut)	.....	1939	AP13681H
AP12114 H	Feeder Canvas Frame, Complete (No Cut)	1939	.....	.....
AP12128 H	Bearing Plate and Stop for Feeder Canvas Tightener Crank	1939	1939	.....
AP12131 H	Idler Roller, Complete for Feeder Canvas (No Cut)	1939	.....	.....
AP12155 H	Idler Roller, Complete for Feeder Canvas (No Cut)	.....	1939	.....
AP12212 H	Drive Roller, Complete for Feeder Canvas (No Cut)	1939	.....	.....
AP12236 H	Bearing Box for Feeder Canvas Idler Roller (P2683H Complete) (Bearing P22953H) (2 used)	1939	1939	.....
AP12258 H	Drive Roller, Complete for Feeder Canvas (No Cut)	.....	1939	.....
AP13680 H	Feeder Canvas, Complete with Fastening Slide Bar (Repairs only) (AP13963H will work) (No Cut)	1939	.....	AP12042H–AP13963H
AP13681 H	Feeder Canvas, Complete with Fastening Slide Bar (Repairs only) (AP13964H will work) (No Cut)	.....	1939	AP12043H–AP13964H
AP13963 H	Feeder Canvas, Complete with Fastening Slide Bar (Repairs only) (works for AP12042H or AP13680H) (No Cut)	1939	.....	AP13680H
AP13964 H	Feeder Canvas, Complete with Fastening Slide Bar (Repairs only) (works for AP12043H or AP13681H) (No Cut)	.....	1939	AP13681H
P 2608 H	Roller Bearing Box for Feeder Canvas Drive Roller (2 used) (Bearing JD7924H) (Sleeve JD8301H)	1939	1939	.....
P 2683 H	Bearing Box for Feeder Canvas Idler Roller (Order AP12236H) (2 used)	1939	1939	.....
P 13759 H	Leather Washer on Canvas	1939	1939	.....
P 26064 H	Canvas Slat for Feeder Canvas (P32982H will work)	1939	.....	P32982H
P 26083 H	Pipe Spacer between Idler Roller Bearing Box and Frame (2 used)	1939	1939	.....
P 26254 H	Tie Rod for Feeder Frame Side Bars	1939	.....	.....
P 27037 H	Canvas Slat for Feeder Canvas (P32983H will work)	.....	1939	P32983H
P 27449 H	Tie Rod for Feeder Frame Side Bars	.....	1939	.....
P 28675 H	Retainer for Feeder Canvas Drive Roller Bearing Box (2 used)	1939	1939	.....
P 28746 H	Spring Rod in Feeder Canvas Idle Rollrer Boxes (2 used)	1939	1939	.....
P 28778 H	Feeder Canvas Tightener Crank	1939	.....	.....
P 28779 H	Feeder Canvas Tightener Crank	.....	1939	.....
P 29716 H	Lock Strip on Ends of Feeder Canvas (2 used)	1939	.....	.....
P 29718 H	Lock Strip on Ends of Feeder Canvas (2 used)	.....	1939	.....
P 29781 H	Wearing Strap on Edge of Feeder Canvas (2 used)	1939	1939	.....
P 29782 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (P32980H will work)	1939	.....	P32980H
P 29783 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (P32981H will work)	.....	1939	P32981H
P 29861 H	Snap Spring for Roller Bearing Boxes on Feeder Drive Roller (2 used)	1939	1939	.....
P 29970 H	Link for Feeder Canvas Tightener Crank (2 used)	1939	1939	.....
P 29982 H	Canvas Guide Plate, R. H., on Feeder Frame	1939	1939	.....
P 29983 H	Canvas Guide Plate, L. H., on Feeder Frame	1939	1939	.....
P 32980 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (Repairs only) (works for P29782H) (No Cut)	1939	.....	P29782H
P 32981 H	Wood Slat for Lock Strip on Ends of Feeder Canvas (Repairs only) (works for P29783H) (No Cut)	.....	1939	P29783H
P 32982 H	Canvas Slat for Feeder Canvas (Repairs only) (works for P26064H) (No Cut)	1939	.....	P26064H
P 32983 H	Canvas Slat for Feeder Canvas (Repairs only) (works for P27037H) (No Cut)	.....	1939	P27037H
	CYLINDER AND CONCAVES			
AP10034 H	Rasp Bar, R. H., for Cylinder (4 used)	1939	.....	.....
AP10035 H	Rasp Bar, L. H., for Cylinder (4 used)	1939	.....	.....
AP10036 H	Cylinder, Complete (No Cut)	1939	.....	.....
AP10073 H	Cylinder Pulley Wrench	1939	1939	.....
AP10444 H	Door over Top of Cylinder	1939	.....	.....
AP10488 H	Cylinder Head with Hub (2 used No. 11, 3 used No. 12)	1939	1939	AP13528H
AP10617 H	Cylinder, Complete (AP13718H will work) (No Cut)	.....	1939	AP13718H
AP10618 H	Rasp-Bar, R. H., for Cylinder (4 used)	.....	1939	.....
AP10619 H	Rasp-Bar, L. H., for Cylinder (4 used)	.....	1939	.....
AP10850 H	Door over Top of Cylinder	.....	1939	.....
AP11363 H	Plate on Rear of Concaves	1939	.....	.....
AP11410 H	Plate on Rear of Concaves	.....	1939	.....
AP11431 H	Support for Grate under Cylinder	1939	.....	.....
AP11432 H	Support for Grate under Cylinder	.....	1939	.....
AP11486 H	Strut for Truss Rods on Grate under Cylinder (2 used)	1939	1939	.....
AP11487 H	Strut for Truss Rods on Support Plate for Rasp Bars (2 used)	1939	1939	.....
AP11488 H	Adjustable Truss Rod, R. H., on Grate under Cylinder	1939	.....	.....
AP11489 H	Adjustable Truss Rod, L. H., on Grate under Cylinder	1939	.....	.....
AP11490 H	Adjustable Truss Rod, R. H., on Support Plate for Rasp Bars	1939	.....	.....

For Cuts of Repair Parts, see pages 138 and 139.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	CYLINDER AND CONCAVES—Continued			
AP11491 H	Adjustable Truss Rod, L. H., on Support Plate for Rasp Bars	1939	.....	.....
AP11530 H	Adjustable Truss Rod, R. H., on Support Plate for Rasp Bars	.....	1939	.....
AP11531 H	Adjustable Truss Rod, L. H., on Support Plate for Rasp Bars	.....	1939	.....
AP11532 H	Adjustable Truss Rod, R. H., on Grate under Cylinder	.....	1939	.....
AP11533 H	Adjustable Truss Rod, L. H., on Grate under Cylinder	.....	1939	.....
AP12148 H	Stripper Angle for Cylinder (No Cut)	1939	.....	.....
AP12149 H	Stripper Angle for Cylinder (No Cut)	.....	1939	.....
AP12193 H	Hinge for Cylinder Top Door (2 used)	1939	1939	.....
AP12221 H	Cover over Top of Cylinder (No Cut)	1939	.....	.....
AP12232 H	Removable Side Plate at R. H. End of Cylinder and Beater (few used see AP12233H)	1939	1939	AP12233H
AP12233 H	Removable Side Plate at R. H. End of Cylinder and Beater (few used, see AP12232H)	1939	1939	AP12232H
AP12257 H	Cover over Top of Cylinder (No Cut)	.....	1939	.....
AP12296 H	Concave Grate under Cylinder (Special for Flax) (AP12939H will work) (No Cut)	.....	1939	AP12939H
AP12298 H	Concave Grate under Cylinder (Special for Flax) (AP12938H will work) (No Cut)	1939	.....	AP12938H
AP12322 H	Plate on Rear of Concaves (Special for Flax) (No Cut)	1939	.....	.....
AP12324 H	Plate on Rear of Concaves (Special for Flax) (No Cut)	.....	1939	.....
AP12926 H	Concave Rasp Bar, Complete with Bolts (P2906H Complete) (Special for Flax)	1939	.....	.....
AP12928 H	Concave Rasp Bar, Complete with Bolts (P2907H Complete) (Special for Flax)	.....	1939	.....
AP12931 H	Rasp Bar, Complete with Bolts for Cylinder (4 used) (Repairs only) (Flax) (See AP12932H) (No Cut)	1939	.....	.....
AP12932 H	Rasp Bar, Complete with Bolts for Cylinder (4 used) (Repairs only) (Flax) (See AP12931H)	1939	.....	.....
AP12933 H	Rasp Bar, Complete with Bolts for Cylinder (4 used) (Repairs only) (Flax) (See AP12934H) (No Cut)	.....	1939	.....
AP12934 H	Rasp Bar, Complete with Bolts for Cylinder (4 used) (Repairs only) (Flax) (See AP12933H)	.....	1939	.....
AP12938 H	Concave Grate under Cylinder, Complete with Rasp Bars (Special for Flax) (works for AP12298H) (No Cut)	1939	.....	AP12298H
AP12939 H	Concave Grate under Cylinder, Complete with Rasp Bars (Special for Flax) (works for AP12296H) (No Cut)	.....	1939	AP12296H
AP12990 H	Shield between Separator Side, L. H., and Cylinder (Repairs only)	1939	.....	.....
AP12991 H	Shield between Separator Side (R. H. No. 11) and Cylinder (1 used No. 11, 2 used No. 12) (Repairs only)	1939	1939	.....
AP13528 H	Cylinder Head with Hub (3 used) (Repairs only) (Order when Complete Cylinder has been replaced by AP13718H) (No Cut)	.....	1939	AP10488H
AP13611 H	Angle Insert on Top of Concave Plate (Rubber Faced) (See P29649H) (No Cut)	1939	.....	P29649H
AP13624 H	Angle Insert on Top of Concave Plate (Rubber Faced) (See P29650H) (No Cut)	.....	1939	P29650H
AP13718 H	Cylinder, Complete (Repairs only) (works for AP10617H) (No Cut)	.....	1939	AP10617H
K 350 H	Turnbuckle for Adjustable Truss Rods on Grate under Cylinder and Support Plate for Rasp Bars (2 used)	1939	1939	.....
P 2326 H	Concave Rasp Bar (3 used)	1939	.....	.....
P 2442 H	Concave Rasp Bar (4 used)	.....	1939	.....
P 2482 H	Hub for Cylinder Head (2 used No. 11, 3 used No. 12)	1939	1939	P2940H
P 2906 H	Concave Rasp Bar (Order AP12926H) (Special for Flax)	1939	.....	.....
P 2907 H	Concave Rasp Bar (Order AP12928H) (Special for Flax)	.....	1939	.....
P 2940 H	Hub for Cylinder Head (3 used) (Repairs only) (Order when Complete Cylinder has been replaced by AP13718H)	.....	1939	P2482H
P 14816 H	U-Bolt on Truss Rod Struts (4 used)	1939	1939	.....
P 26197 H	Support Angle, R. H., on Separator Side for Grate under Cylinder	1939	1939	.....
P 26198 H	Support Angle, L. H., on Separator Side for Grate under Cylinder	1939	1939	.....
P 26281 H	Rubber Collar around Cylinder Shaft Bearing (2 used)	1939	1939	.....
P 26389 H	Cover Plate, Inner, for Bearings on Cylinder Shaft (2 used)	1939	1939	.....
P 26417 H	Angle Bracket for Cylinder Adjusting Bolts (4 used) (P29437H will work)	1939	1939	P29437H
P 26424 H	Housing for Bearings on Cylinder Shaft (2 used)	1939	1939	.....
P 26649 H	Concave Grate under Cylinder	1939	.....	.....
P 26652 H	Front Support for Grate under Cylinder	1939	.....	.....
P 26687 H	Support Plate for Rasp Bars (few used, see P28694H)	1939	.....	P28694H
P 26690 H	Support for Rasp Bar Plate (2 used)	1939	1939	.....
P 26736 H	Concave Grate under Cylinder	.....	1939	.....
P 27196 H	Front Support for Grate under Cylinder	.....	1939	.....
P 27703 H	Cylinder Shaft	.....	1939	P32660H
P 27747 H	Cylinder Head, Middle (2 used)	1939	1939	.....
P 27765 H	Cylinder Shaft	1939	.....	.....
P 27798 H	Retainer for Rubber Seal from Front of Cylinder to Platform	.....	1939	.....
P 27799 H	Rubber Seal from Front of Cylinder to Platform	.....	1939	.....

For Cuts of Repair Parts, see pages 139 and 140.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	CYLINDER AND CONCAVES—Continued			
P 27800 H	Retainer for Rubber Seal from Front of Cylinder to Platform	1939	.....	.....
P 28306 H	Extension for Door over Top of Cylinder	1939	.....	.....
P 28307 H	Extension for Door over Top of Cylinder	.....	1939	.....
P 28334 H	Wood Strip for Rubber Seal from Front of Cylinder to Platform	.....	1939	.....
P 28337 H	Wood Strip for Rubber Seal from Front of Cylinder to Platform	1939	.....	.....
P 28484 H	Adapter for Cylinder Shaft Bearing	1939	1939	.....
P 28485 H	Nut for Adapter on Cylinder Shaft Bearing	1939	1939	.....
P 28510 H	Cross Support under Rasp Bar Plate	1939	.....	.....
P 28693 H	Angle Rest for Grate Support under Cylinder (2 used)	1939	1939	.....
P 28694 H	Support Plate for Rasp Bars (few used, see P26687H)	1939	.....	P26687H
P 28695 H	Support Plate under Cylinder for Platform Rubber Seal (few used, see P28697H)	1939	.....	P28697H
P 28697 H	Support Plate under Cylinder for Platform Rubber Seal (few used, see P28695H)	1939	.....	P28695H
P 28737 H	Support Plate for Rasp Bars	.....	1939	.....
P 28739 H	Support Plate under Cylinder for Platform Rubber Seal	.....	1939	.....
P 28743 H	Reinforcing Plate on R. H. Front Corner of Door over Top of Cylinder	1939	1939	.....
P 28744 H	Reinforcing Plate on L. H. Front Corner of Door over Top of Cylinder	1939	1939	.....
P 28745 H	Cross Support under Rasp Bar Plate	.....	1939	.....
P 28829 H	Angle Insert on Top of Concave Plate (No Cut)	1939	.....	.....
P 28847 H	Rubber Seal from Front of Cylinder to Platform	1939	.....	.....
P 28851 H	Plate on Grate under Cylinder for Truss Rods and Struts (8 used)	1939	1939	.....
P 29065 H	Angle Insert on Top of Concave Plate (No Cut)	.....	1939	.....
P 29437 H	Angle Bracket for Cylinder Adjusting Bolts (4 used) (works for P26417H) (Repairs only)	1939	1939	P26417H
P 29649 H	Angle Insert on Top of Concave Plate (See AP13611H)	1939	.....	AP13611H
P 29650 H	Angle Insert on Top of Concave Plate (See AP13624H)	.....	1939	AP13624H
P 29892 H	Hinged Extension for Cylinder Top Cover	1939	.....	.....
P 29906 H	Retainer for Rubber Extension on Cylinder Top Cover Hinged Extension	1939	.....	.....
P 29907 H	Rubber Extension for Cylinder Top Cover Hinged Extension	1939	.....	.....
P 29925 H	Nut for Bolt in Removable Side Plate at Ends of Cylinder (9 used)	1939	1939	.....
P 29930 H	Retainer for Rubber Extension on Cylinder Top Cover Hinged Extension	.....	1939	.....
P 29932 H	Rubber Extension for Cylinder Top Cover Hinged Extension	.....	1939	.....
P 29974 H	Hinged Extension for Cylinder Top Cover	.....	1939	.....
P 30008 H	Rod for Cylinder Top Cover Hinged Extension	1939	.....	.....
P 30009 H	Rod for Cylinder Top Cover Hinged Extension	.....	1939	.....
P 30064 H	Cover on Removable Side Plate over Stripper Angle Bolts (No Cut)	1939	1939	.....
P 30068 H	Plate, R. H., for Separator Body (few used, see P30070H)	1939	1939	P30070H
P 30069 H	Plate, L. H., for Separator Body (few used, see P30086H)	1939	1939	P30086H
P 30070 H	Plate, R. H., for Separator Body (few used, see P30068H) (No Cut)	1939	1939	P30068H
P 30086 H	Plate, L. H., for Separator Body (few used, see P30069H) (No Cut)	1939	1939	P30069H
P 30171 H	Latch Rod Bracket for Cylinder Top Cover Hinged Extension (2 used)	1939	1939	.....
P 30216 H	Latch Rod for Cylinder Top Cover Hinged Extension (2 used)	1939	1939	.....
P 30219 H	Extension for L. H. Grate Support under Cylinder (Flax)	1939	1939	.....
P 30220 H	Extension for R. H. Grate Support under Cylinder (Flax)	1939	1939	.....
P 30221 H	Shim, 1/4" for Cylinder Grate Support	1939	1939	.....
P 30261 H	Support, R. H., for Grate under Cylinder	1939	1939	.....
P 30262 H	Support, L. H., for Grate under Cylinder	1939	1939	.....
P 30263 H	Shim, 1/16" for Cylinder Grate Support	1939	1939	.....
P 30264 H	Shim, 1/8" for Cylinder Grate Support	1939	1939	.....
P 30273 H	Support Plate under Cylinder for Platform Rubber Seal (Special for Flax) (few used, see P30277H)	1939	.....	P30277H
P 30275 H	Extension Plate at Front of Conaves (Special for Flax) (No Cut)	1939	.....	.....
P 30276 H	Extension Plate at Front of Concaves (Special for Flax) (No Cut)	.....	1939	.....
P 30277 H	Support Plate under Cylinder for Platform Rubber Seal (Special for Flax) (few used, see P30273H)	1939	.....	P30273H
P 30278 H	Support Plate under Cylinder for Platform Rubber Seal (Special for Flax) (few used, see P30279H)	.....	1939	P30279H
P 30279 H	Support Plate under Cylinder for Platform Rubber Seal (Special for Flax) (few used, see P30278H)	.....	1939	P30278H
P 30320 H	Extension for L. H. Grate Support under Cylinder	1939	1939	.....
P 30321 H	Extension for R. H. Grate Support under Cylinder	1939	1939	.....
P 32660 H	Cylinder Shaft (Repairs only) (Order when Complete Cylinder has been replaced by AP13718H) (No Cut)	.....	1939	P27703H
P 33303 H	Channel Bars for Cylinder (8 used) (Special) (Repairs only) (No Cut)	1939	.....	.....
P 33304 H	Channel Bar for Cylinder (8 used) (Special) (Repairs only) (No Cut)	.....	1939	.....
P 33377 H	Spacer between Cylinder Channel Bar and Cylinder Drum (64 used No. 11, 80 used No. 12) (Special) (Repairs only) (No Cut)	1939	1939	.....

For Cuts of Repair Parts, see pages 140 and 141.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	BEATER BEHIND THE CYLINDER			
AP11205 H	Roller Bearing Housing, with Bearing on L. H. End of Beater Shaft (Bearing New Departure No. 88123) (few used see P2534H)	1939	1939	P2534H
AP11749 H	Beater Drum, Complete (No Cut)	.....	1939	.....
AP12138 H	Beater Drum, Complete (No Cut)	1939	.....	.....
AP12495 H	Shaft for Beater (No Cut)	1939	.....	.....
AP12496 H	Shaft for Beater (No Cut)	.....	1939	.....
P 2533 H	Roller Bearing Box on R. H. End of Beater Shaft (Bearing JD7921H, Sleeve JD7451H) (few used, see P26340H)	1939	1939	P26340H
P 2534 H	Roller Bearing Box on L. H. End of Beater Shaft (Bearing JD7921H, Sleeve JD7451H) (few used, see AP11205H)	1939	1939	AP11205H
P 2686 H	Head for Beater (2 used)	1939	1939	.....
P 26340 H	Roller Bearing Housing on R. H. End of Beater Shaft (Bearing Schatz 15638) (few used, see P2533H)	1939	1939	P2533H
P 28470 H	Collar on L. H. End of Beater Shaft between Sheave and Bearing	1939	1939	.....
P 28571 H	Box End for Beater Shaft Roller Bearing Box (2 used)	1939	1939	.....
P 28625 H	Retainer for Roller Bearing Boxes on Beater Shaft (2 used)	1939	1939	.....
P 28769 H	Clamp Collar on L. H. End of Beater Shaft	1939	1939	.....
P 29904 H	Beater Clean-Out Door on Separator Side	1939	1939	.....
P 29981 H	Wood Cover Bar for Beater Teeth (4 used)	1939	.....	.....
P 29991 H	Bracket for Beater Tooth Cover Bar (12 used) (No Cut)	1939	1939	.....
P 30005 H	Wood Cover Bar for Beater Teeth (with 6-Tooth Holes (2 used)	.....	1939	.....
P 30006 H	Wood Cover Bar for Beater Teeth (2 used) (with 4-Tooth Holes)	.....	1939	.....
P 30022 H	Cover over Top of Beater (No Cut)	1939	.....	.....
P 30144 H	Cover over Top of Beater (No Cut)	.....	1939	.....
P 30272 H	Spacing Collar on Beater Shaft (2 used)	1939	1939	.....
P 30369 H	Shield on Separator Side at End of Beater (No Cut)	1939	1939	.....
	STRAW RACK AND REAR HOOD			
AP10056 H	Canvas Curtain, Rear, over Straw Rack	1939	.....	.....
AP10123 H	Chaffer Plate on Front End of Straw Rack (No Cut)	1939	.....	.....
AP10170 H	Bearing, L. H., for Rocker Arm Shaft, Front (P2371H Complete)	1939	1939	.....
AP10171 H	Bearing, R. H., for Rocker Arm Shaft, Front (P2357H Complete)	1939	1939	.....
AP10249 H	Canvas Curtain, Front, for Straw Rack	1939	.....	.....
AP10255 H	Chaffer Plate on Front End of Straw Rack (No Cut)	.....	1939	.....
AP10371 H	Rocker Arm, L. H., Front (P2367H Complete) (few used, see AP11325H)	1939	1939	AP11325H
AP10372 H	Rocker Arm, R. H., Front (P2368H Complete) (few used, see AP11324H)	1939	1939	AP11324H
AP10459 H	Rocker Arm, Rear, Complete (P2364H Complete) (2 used)	1939	1939	.....
AP10487 H	Straw Rack Pitman, R. H., Complete	1939	1939	.....
AP10672 H	Canvas Curtain, Rear, over Straw Rack	.....	1939	.....
AP10673 H	Canvas Curtain, Front, over Straw Rack	.....	1939	.....
AP11018 H	Rear Hood (No Cut)	.....	1939	.....
AP11232 H	Straw Rack, Complete (AP13660H will work) (If this Straw Rack Complete, has been replaced by AP13660H, order parts marked x) (No Cut)	.....	1939	AP13660H
AP11324 H	Rocker Arm, R. H., Front (P2552H Complete) (few used, see AP10372H)	1939	1939	AP10372H
AP11325 H	Rocker Arm, L. H., Front (P2553H Complete) (few used, see AP10371H)	1939	1939	AP10371H
AP11415 H	Straw Rack, Complete (AP13677H will work) If this Straw Rack Complete, has been replaced by AP13677H, order parts marked x) (No Cut)	1939	.....	AP13677H
AP11547 H	Rocker Arm Stud, Rear, on Rack (2 used)	1939	1939	.....
AP11549 H	Rocker Arm Stud, Front, on Rack (2 used)	1939	1939	.....
AP11550 H	Straw Rack Pitman, L. H., Complete	1939	1939	.....
AP11812 H	Shaft for Rear Rocker Arms	1939	.....	.....
AP11813 H	Shaft for Rear Rocker Arms	.....	1939	.....
AP12300 H	Shaft for Front Rocker Arms	1939	.....	.....
AP12318 H	Shaft for Front Rocker Arms	.....	1939	.....
xAP13533 H	Chaffer Plate on Front End of Straw Rack (Repairs only) (No Cut)	.....	1939	.....
xAP13534 H	Chaffer Plate on Front End of Straw Rack (Repairs only) (No Cut)	1939	.....	.....
xAP13625 H	Front Cross Slat for Rack (16 used) (Metal Covered) (No Cut)	.....	1939	.....
xAP13626 H	Front Cross Slat for Rack (16 used) (Metal Covered) (No Cut)	1939	.....	.....
xAP13660 H	Straw Rack, Complete (Repairs only) (works for AP11232H) (No Cut)	.....	1939	AP11232H
xAP13670 H	Straw Rack Grate, L. H., Complete (Repairs only) (No Cut)	.....	1939	.....
xAP13671 H	Straw Rack Grate, R. H., Complete (Repairs only) (No Cut)	.....	1939	.....
xAP13675 H	Straw Rack Grate, R. H., Complete (Repairs only) (No Cut)	1939	.....	.....
xAP13676 H	Straw Rack Grate, L. H., Complete (Repairs only) (No Cut)	1939	.....	.....
xAP13677 H	Straw Rack, Complete (works for AP11415H) (No Cut)	1939	.....	AP11415H
P 2318 H	Pitman Crank, R. H.	1939	1939	.....
P 2352 H	Bracket for Rear Hanger Stud on Rack (2 used)	1939	1939	.....
P 2353 H	Bracket, L. H., for Front Hanger Stud on Rack	1939	1939	.....
P 2356 H	Bracket, R. H., for Front Hanger Stud on Rack	1939	1939	.....

If original Straw Rack Complete has been replaced with AP13660H or AP13677H order Repairs marked x.

For Cuts of Repair Parts, see pages 141 and 142.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	STRAW RACK AND REAR HOOD—Continued			
P 2357 H	Bearing, R. H., for Rocker Arm Shaft, Front (Order AP10171H)	1939	1939	.....
P 2364 H	Rocker Arm, Rear (Order AP10459H) (2 used)	1939	1939	.....
P 2367 H	Rocker Arm, L. H., Front (Order AP10371H)	1939	1939	P2553H
P 2368 H	Rocker Arm, R. H., Front (Order AP10372H)	1939	1939	P2552H
P 2371 H	Bearing, L. H., for Rocker Arm Shaft, Front (Order AP10170H)	1939	1939	.....
P 2545 H	Connecting Bracket from Pitman to Crank (2 used)	1939	1939	.....
P 2552 H	Rocker Arm, R. H., Front (Order AP11324H)	1939	1939	P2368H
P 2553 H	Rocker Arm, L. H., Front (Order AP11325H)	1939	1939	P2367H
P 2562 H	Retaining Collar on Rocker Arm Studs on Straw Rack, also on Shaft for Rear Rocker Arms (6 used)	1939	1939	.....
P 2678 H	Pitman Crank, L. H., and Hub for Conveyor Drive Pulley	1939	1939	.....
xP 2938 H	Bracket, R. H., for Front Hanger Stud on Rack (Repairs only) (No Cut)	1939	1939	.....
xP 2939 H	Bracket, L. H., for Front Hanger Stud on Rack (Repairs only) (No Cut)	1939	1939	.....
P 26054 H	Stud in Front Rocker Arms for Pitman (2 used)	1939	1939	.....
P 26055 H	Pitman (Wood) (2 used)	1939	1939	.....
P 26255 H	Corner Bracket for Front R. H. Corner of Rack	1939	1939	.....
P 26263 H	Corner Bracket for Front L. H. Corner of Rack	1939	1939	.....
P 26282 H	Short Cross Slat for Rack (60 used)	1939	.....	.....
P 26328 H	Shim for Front End of Pitman (4 used)	1939	1939	.....
P 26357 H	Rod for Rear Canvas Curtains over Straw Rack (Pipe) (P32220H will work)	1939	.....	P32220H
P 26400 H	Rear Hood (No Cut)	1939	.....	.....
P 26411 H	Straw Rack Front End Board	1939	.....	.....
P 26412 H	Straw Rack Rear End Board	1939	.....	.....
P 26433 H	Grain Chute on Bottom of Straw Rack at Rear End	1939	.....	.....
P 26445 H	Corner Bracket for Middle Sill (4 used)	1939	1939	.....
P 26446 H	Stiffener Plate on Rack Side for Rear Hanger Bracket (2 used)	1939	1939	.....
P 26459 H	Support (Long) on Sill for Cross Slat (4 used)	1939	1939	.....
P 26520 H	Tie Rod for Rack (4 used)	1939	.....	.....
P 26771 H	Zerk Plate on Pitman (2 used)	1939	1939	.....
P 26860 H	Straw Rack Front End Board	.....	1939	.....
P 26861 H	Grain Chute on Bottom of Straw Rack at Rear End	.....	1939	.....
P 26862 H	Straw Rack Rear End Board	.....	1939	.....
P 26864 H	Tie Rod for Rack (4 used)	.....	1939	.....
P 26865 H	Short Cross Slat for Rack (60 used)	.....	1939	.....
P 27222 H	Stud for R. H. Pitman Crank	1939	1939	.....
P 27224 H	Straw Deflector on Rear Hood (few used, see P28246H)	1939	1939	P28246H
P 27593 H	Support (Short) on Sill for Cross Slats (4 used)	1939	1939	.....
P 27596 H	Front Cross Slat for Rack (2 used)	1939	.....	.....
P 27717 H	Rod for Rear Canvas Curtains over Straw Rack (Pipe) (P32222H will work)	.....	1939	P32222H
P 27802 H	Front Cross Slat for Rack (2 used)	.....	1939	.....
P 27864 H	Gasket for Zerk Plate on Pitman (2 used)	1939	1939	.....
P 28246 H	Straw Deflector on Rear Hood (few used, see P27224H) (No Cut)	.....	1939	P27224H
P 28268 H	Retaining Strap over Tie Rods on Rack Middle Sill (2 used)	1939	1939	.....
P 28294 H	Retainer Strip, Front, on Straw Rack Sill, R. H., for Cross Slats	1939	1939	.....
P 28295 H	Retainer Strip, Front, on Straw Rack Sill, L. H., for Cross Slats	1939	1939	.....
P 28296 H	Retainer Strip, Rear, on Straw Rack Sill, R. H., for Cross Slats	1939	1939	.....
P 28297 H	Retainer Strip, Rear, on Straw Rack Sill, L. H., for Cross Slats	1939	1939	.....
P 28298 H	Retainer Strip on Straw Rack Middle Sill for Cross Slats	1939	1939	.....
P 28322 H	Straw Rack Sill, R. H.	1939	1939	.....
P 28323 H	Straw Rack Sill, L. H.	1939	1939	.....
P 28379 H	Extension Plate on Front End of Straw Rack	.....	1939	.....
P 28384 H	Extension Plate on Front End of Straw Rack	1939	.....	.....
P 28396 H	Plate, Front, on Rack Sill for Tie Rod Tightener Screw (2 used)	1939	1939	.....
P 28399 H	Plate over Opening in R. H. Separator Side Sheet for Rocker Arm, Front	1939	1939	.....
P 28400 H	Plate over Opening in L. H. Separator Side Sheet for Rocker Arm, Front	1939	1939	.....
P 28416 H	Support Clip for Riser on Top of Straw Rack (8 used No. 11, 10 used No. 12)	1939	1939	.....
P 28670 H	Straw Rack Middle Sill	1939	1939	.....
P 28671 H	Long Slat for Rack (22 used)	1939	1939	.....
P 28673 H	Wood Filler Block between Rear End Board and Slats (2 used)	1939	.....	.....
P 28674 H	Wood Filler Block between Rear End Board and Slats (2 used)	.....	1939	.....
P 28696 H	Corner Bracket for Rear Corners of Rack (2 used)	1939	1939	.....
P 28732 H	Riser on Top of Straw Rack (4 used No. 11, 5 used No. 12)	1939	1939	.....
P 28735 H	Bracket on Riser for Support Clip (4 used No. 11, 5 used No. 12)	1939	1939	.....
P 28769 H	Retaining Collar on Front Rocker Arm Shaft (2 used)	1939	1939	.....
P 29883 H	Bolt Plate on Straw Rack Pitman (4 used)	1939	1939	.....
P 30116 H	Speed Indicator Plate on Pitman Crank Stud, L. H.	1939	1939	.....
P 30117 H	Stud for L. H. Pitman Crank	1939	1939	.....

If Original Straw Rack Complete has been replaced with AP13660H or AP13677H order Repairs marked **x**.

For Cuts of Repair Parts, see pages 141 to 143.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	STRAW RACK AND REAR HOOD—Continued			
P 30182 H	Rod for Front Canvas Curtain over Straw Rack.....(No Cut)	1939	.....	.....
P 30183 H	Rod for Front Canvas Curtain over Straw Rack.....(No Cut)	.....	1939	.....
P 30191 H	Spacer Collar for Speed Indicator Plate on Pitman Crank Stud, L. H.	1939	1939	.....
P 30224 H	Plate, Rear, on Rack Sill for Tie Rod Tightener Screw (2 used)..	1939	1939	.....
P 30288 H	Stiffener on Separator Side over Slot for Rear Rocker Arm (2 used)	1939	1939	.....
P 30289 H	Stiffener on Separator Side over Lower Slot for Rocker Arm (2 used)	1939	1939	.....
P 30362 H	Plate on Rack Sill for Front Tie Rod.....(No Cut)	1939	1939	.....
P 32220 H	Rod for Canvas Curtains over Straw Rack (2 used) (works for P26357H) (Repairs only)	1939	.....	P26357H
P 32222 H	Rod for Canvas Curtains over Straw Rack (2 used) (works for P27717H) (Repairs only)	.....	1939	P27717H
xP 32358 H	Tie Rod for Rack (4 used) (Repairs only).....(No Cut)	1939	.....	.....
xP 32391 H	Tie Rod for Rack (4 used) (Repairs only).....(No Cut)	.....	1939	.....
xP 32393 H	Corner Bracket for Front R. H. Corner of Rack (Repairs only)	1939	1939	.....
xP 32394 H	Corner Bracket for Front L. H. Corner of Rack (Repairs only)..	1939	1939	.....
xP 32396 H	Straw Rack Sill, R. H. (Repairs only).....(No Cut)	1939	1939	.....
xP 32397 H	Straw Rack Sill, L. H. (Repairs only).....(No Cut)	1939	1939	.....
xP 32398 H	Corner Bracket for Middle Sill (6 used) (Repairs only).....	1939	1939	.....
xP 32399 H	Straw Rack Front End Board (Repairs only).....(No Cut)	.....	1939	.....
xP 32400 H	Straw Rack Front End Board (Repairs only).....(No Cut)	1939	.....	.....
xP 32401 H	Straw Rack Middle Sill (Repairs only).....(No Cut)	1939	1939	.....
xP 32408 H	Riser on Top of Straw Rack (Repairs only).....(No Cut)	1939	1939	.....
xP 32412 H	Metal Covering for Straw Rack Front Slats (16 used) (Repairs only).....(No Cut)	1939	.....	.....
xP 32413 H	Metal Covering for Straw Rack Front Slats (16 used) (Repairs only).....(No Cut)	.....	1939	.....
xP 32472 H	Long Slat for Rack (22 used No. 11, 28 used No. 12) (Repairs only).....(No Cut)	1939	1939	.....
xP 32473 H	Extension Plate on Front End of Straw Rack (Repairs only) .....(No Cut)	.....	1939	.....
xP 32474 H	Extension Plate on Front End of Straw Rack (Repairs only) .....(No Cut)	1939	.....	.....
xP 32538 H	Retainer Strip, Front, on Straw Rack Sill, R. H., for Cross Slats (Repairs only).....(No Cut)	1939	1939	.....
xP 32539 H	Retainer Strip, Front, on Straw Rack Sill, L. H., for Cross Slats (Repairs only).....(No Cut)	1939	1939	.....
xP 32542 H	Short Cross Slat for Rack (42 used) (Repairs only).....(No Cut)	1939	.....	.....
xP 32543 H	Short Cross Slat for Rack (42 used) (Repairs only).....(No Cut)	.....	1939	.....
xP 32544 H	Stiffener Plate for R. H. Side of Grain Chute on Rear End of Rack (Repairs only).....(No Cut)	1939	.....	.....
xP 32545 H	Stiffener Plate for R. H. Side of Grain Chute on Rear End of Rack (Repairs only).....(No Cut)	.....	1939	.....
xP 32546 H	Grain Chute on Bottom of Straw Rack at Rear End (Repairs only).....(No Cut)	1939	.....	.....
xP 32547 H	Grain Chute on Bottom of Straw Rack at Rear End (Repairs only).....(No Cut)	.....	1939	.....
xP 32553 H	Retainer Strip, Rear, on Straw Rack Sill for Cross Slats (2 used) (Repairs only).....	1939	1939	.....
xP 32554 H	Stiffener Plate for L. H. Side of Grain Chute on Rear End of Rack (Repairs only).....(No Cut)	1939	.....	.....
xP 32555 H	Stiffener Plate for L. H. Side of Grain Chute on Rear End of Rack (Repairs only).....(No Cut)	.....	1939	.....
xP 32556 H	Retainer Strip on Straw Rack Middle Sill for Cross Slats (Repairs only).....(No Cut)	1939	1939	.....
	CONVEYOR UNDER STRAW RACK			
45	Steel Chain Link for Conveyor Chain.....	1939	1939	.....
45U5L	Attachment Link, L. H. for Conveyor Chain (Marked 45U5R)..	1939	1939	.....
45U5R	Attachment Link, R. H., for Conveyor Chain (Marked 45U5L)..	1939	1939	.....
AP11137 H	Bearing Bracket, L. H., on Conveyor Chain Drive Shaft (P2522H Complete).....	1939	1939	.....
AP11138 H	Bearing Bracket, R. H., on Conveyor Chain Drive Shaft (P2523H Complete).....	1939	1939	.....
AP11810 H	Conveyor Chain Idler Shaft.....	.....	1939	.....
AP11811 H	Conveyor Chain Idler Shaft.....	1939	.....	.....
AP11970 H	Idler Sprocket for Conveyor Chain (P2651H Complete).....	1939	1939	.....
AP12194 H	Conveyor Chain, Complete with Slats.....(No Cut)	1939	.....	.....
AP12195 H	Conveyor Chain, Complete with Slats.....(No Cut)	.....	1939	.....
AP12196 H	Slat with Link for Conveyor Chain.....	1939	.....	.....
AP12197 H	Slat with Link for Conveyor Chain.....	.....	1939	.....
P 2522 H	Bearing Bracket, L. H., on Conveyor Chain Drive Shaft (Order AP11137H).....	1939	1939	.....

If Original Straw Rack Complete has been replaced with AP13660H or AP13677H order Repairs marked x.

For Cuts of Repair Parts, see page 143.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	CONVEYOR UNDER STRAW RACK—Continued			
P 2523 H	Bearing Bracket, R. H., on Conveyor Chain Drive Shaft (Order AP11138H)	1939	1939	
P 2562 H	Retaining Collars on Conveyor Idler Shaft (2 used)	1939	1939	
P 2650 H	Conveyor Chain Drive Sprocket (2 used)	1939	1939	
P 2651 H	Idler Sprocket for Conveyor Chain (Order AP11970H)	1939	1939	
P 26206 H	Side Angle, R. H., for Conveyor Chain Bottom Board	1939	1939	
P 26208 H	Shield over Conveyor Chain Drive Shaft	1939	1939	
P 26244 H	Bottom Board for Conveyor (No Cut)	1939		
P 26262 H	Side Angle, L. H., for Conveyor Chain Bottom Board	1939	1939	
P 26325 H	Guide for Conveyor Chain Tightener Brackets (4 used)	1939	1939	
P 26353 H	Tightener Bracket for Conveyor Chain (2 used)	1939	1939	
P 26518 H	Wood Side Sill for Conveyor Bottom (2 used)	1939	1939	
P 26519 H	Wood Cross Support under Conveyor Bottom, Rear and Nos. 2 and 3 from Rear (3 used)	1939		
P 26559 H	Wood Cross Support under Conveyor Bottom, Front and No. 1 from Rear (2 used)	1939		
P 26730 H	Spacer Pipe on Conveyor Bottom Tie Rods (2 used)	1939		
P 26731 H	Tie Rod for Conveyor Bottom (2 used)	1939		
P 27499 H	Shield over Conveyor Chain Drive Shaft		1939	
P 27505 H	Bottom Board for Conveyor (No Cut)		1939	
P 27508 H	Wood Cross Support, Rear and Nos. 2 and 3 from Rear, under Conveyor Bottom (3 used)		1939	
P 27511 H	Wood Cross Support, Front and No. 1 from Rear, under Conveyor Bottom (2 used)		1939	
P 27514 H	Spacer Pipe on Conveyor Bottom Tie Rods (2 used)		1939	
P 27517 H	Tie Rod for Conveyor Bottom (2 used)		1939	
P 27615 H	Snap Ring in Boxes on Conveyor Chain Drive Shaft (4 used)	1939	1939	
P 28314 H	Rubber Belting Strip on Conveyor Chain (2 used) (No Cut)		1939	
P 28446 H	Pipe Spacer on L. H. End of Conveyor Drive Shaft between Retainer Collar and Bearing	1939	1939	
P 28538 H	Wood Guide for Conveyor Chain (2 used)	1939	1939	
P 28730 H	Corner Plate, Rear, L. H., on Conveyor Bottom	1939	1939	
P 28731 H	Corner Plate, Rear, R. H., on Conveyor Bottom	1939	1939	
P 28769 H	Retaining Collar on L. H. End of Conveyor Drive Shaft	1939	1939	
P 28801 H	Stud in Separator Side for Conveyor Chain Tightener Spring (2 used)	1939	1939	
P 29692 H	Conveyor Chain Drive Shaft	1939		
P 29693 H	Conveyor Chain Drive Shaft		1939	
P 30287 H	Stiffener on Separator Side under Drive Shaft Roller Bearing Bracket (2 used)	1939	1939	
	SHOE			
AP 9960 H	Canvas Curtain at Front of Shoe	1939		
AP10253 H	Shoe, Complete (AP12948H will work) (No Cut)	1939		AP12948H
AP10314 H	Adjustable Sieve in Shoe (No Cut)	1939		
AP10315 H	Adjustable Sieve in Shoe (No Cut)		1939	
AP10316 H	Adjustable Chaffer in Shoe (No Cut)	1939		
AP10317 H	Adjustable Chaffer in Shoe (No Cut)		1939	
AP10613 H	Canvas Curtain at Front of Shoe		1939	
AP10636 H	Shoe, Complete (AP12949H will work) (No Cut)		1939	AP12949H
AP10810 H	Soy Bean Sieve in Shoe (3/8" Round Hole) (Special) (No Cut)	1939		
AP10988 H	Chaffer on Rear of Shoe (No Choke) (Special) (AP13552H will work) (No Cut)	1939		AP13552H
AP10989 H	Chaffer on Rear of Shoe (No Choke) (Special) (AP13553H will work) (No Cut)		1939	AP13553H
AP11035 H	Soy Bean Sieve in Shoe (3/8" Round Hole) (No Cut)		1939	
AP11091 H	Timothy Sieve in Shoe (1/12" Round Hole) (Special) (No Cut)	1939		
AP11092 H	Clover and Alfalfa Sieve in Shoe (1/10" Round Hole) (Special) (No Cut)	1939		
AP11093 H	Lespedeza Sieve in Shoe (9/64" Round Hole) (Special) (No Cut)	1939		
AP11094 H	Flax Sieve in Shoe (5/32" Round Hole) (Special) (No Cut)	1939		
AP11095 H	Wheat and Milo-Maize Sieve in Shoe (9/32" Round Hole) (Special) (No Cut)	1939		
AP11096 H	Navy Bean Sieve in Shoe (9/16" Round Hole) (Special) (No Cut)	1939		
AP11097 H	Timothy Sieve in Shoe (1/12" Round Hole) (Special) (No Cut)		1939	
AP11098 H	Clover and Alfalfa Sieve in Shoe (1/10" Round Hole) (Special) (No Cut)		1939	
AP11099 H	Lespedeza Sieve in Shoe (9/64" Round Hole) (Special) (No Cut)		1939	
AP11100 H	Flax Sieve in Shoe (5/32" Round Hole) (Special) (No Cut)		1939	
AP11101 H	Wheat and Milo-Maize Sieve in Shoe (9/32" Round Hole) (Special) (No Cut)		1939	
AP11102 H	Navy Bean Sieve in Shoe (9/16" Round Hole) (Special) (No Cut)		1939	
AP11293 H	Flax Sieve in Shoe (13/64" Round Hole) (Special) (No Cut)	1939		
AP11294 H	Flax Sieve in Shoe (13/64" Round Hole) (Special) (No Cut)		1939	

For Cuts of Repair Parts, see page 143.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	SHOE—Continued			
AP11510 H	Tailings Finger Bar on Rear of Shoe	1939	.....	.....
AP11511 H	Tailings Finger Bar on Rear of Shoe	.....	1939	.....
AP11548 H	Hanger Stud, Front, on Shoe (2 used)	1939	1939	.....
AP12045 H	Canvas Curtain at Front of Shoe (Special for Flax)	1939	.....	.....
AP12046 H	Canvas Curtain at Front of Shoe (Special for Flax)	.....	1939	.....
AP12235 H	Cross Bar on Rear End of Shoe	1939	.....	.....
AP12267 H	Cross Bar on Rear End of Shoe	.....	1939	.....
AP12272 H	Wood Hanger Arms, for Rear of Shoe (2 used)	1939	1939	.....
AP12282 H	Reinforcing Plate for Top of R. H. Shoe Side	1939	.....	.....
AP12283 H	Reinforcing Plate for Top of L. H. Shoe Side	1939	.....	.....
AP12284 H	Reinforcing Plate for Top of R. H. Shoe Side	.....	1939	.....
AP12285 H	Reinforcing Plate for Top of L. H. Shoe Side	.....	1939	.....
AP12317 H	Sieve Stop Plate with Sieve Clips on Front of Shoe	1939	.....	.....
AP12320 H	Sieve Stop Plate with Sieve Clips on Front of Shoe	.....	1939	.....
AP12948 H	Shoe, Complete (Repairs only) (works for AP10253H)..(No Cut)	1939	.....	AP10253H
AP12949 H	Shoe, Complete (Repairs only) (works for AP10636H)..(No Cut)	.....	1939	AP10636H
AP13552 H	Chaffer on Rear of Shoe (No Choke) (Special) (Repairs only) (works for AP10988H).....(No Cut)	1939	.....	AP10988H
AP13553 H	Chaffer on Rear of Shoe (No Choke) (Special) (Repairs only) (works for AP10989H).....(No Cut)	.....	1939	AP10989H
P 204 H	Wing Nut on Bolt for Tailboard on Tailings Auger Housing (2 used)	1939	1939	.....
P 2213 H	Bracket on Shoe for Front Hanger Stud	1939	1939	.....
P 2562 H	Retaining Collar on Front Shoe Rocker Studs (2 used)	1939	1939	.....
P 10528 H	Latch for Hand Hole Cover on Separator Side Sheet (2 used)	1939	1939	.....
P 26037 H	Crosstie on Bottom of Shoe under Sieve	1939	.....	.....
P 26212 H	Washer on Wood Arm Hanger Pipe between Arm and Separator Sides (2 used)	1939	1939	.....
P 26250 H	Cap for Ends of Wood Hanger Arm Pipe (2 used)	1939	1939	.....
P 26327 H	Hand Hole Cover for Shoe Front Hanger Studs in Separator Side Sheet (2 used)	1939	1939	.....
P 26476 H	Rest for Chaffer on Shoe Side Plate (2 used)	1939	1939	.....
P 26554 H	Rubber Seal for Side of Shoe (2 used)	1939	1939	.....
P 26623 H	Spacer between Rear Hanger Stud and Shoe (2 used)	1939	1939	.....
P 27281 H	Tailboard on Tailings Auger Housing for Tailings Finger Bar	1939	.....	.....
P 27288 H	Clip, R. H., for Top of Tailboard on Tailings Auger Housing	1939	1939	.....
P 27289 H	Clip, L. H., for Top of Tailboard on Tailings Auger Housing	1939	1939	.....
P 27450 H	Tailboard on Tailings Auger Housing for Tailings Finger Bar	.....	1939	.....
P 27535 H	Crosstie on Bottom of Shoe under Sieve	.....	1939	.....
P 27600 H	Retaining Strip, Middle, for Rubber Seal from Front of Shoe to Bottom of Concaves	1939	1939	.....
P 27601 H	Retaining Strip, R. and L. H., for Rubber Seal from Front of Shoe to Bottom of Concaves (2 used)	1939	.....	.....
P 27616 H	Grain Deflector at Ends of Rubber Seal from Bottom of Concaves to Front of Shoe (2 used)	1939	1939	.....
P 27740 H	Retaining Strip, R. and L. H., for Rubber Seal from Front of Shoe to Bottom of Concaves	.....	1939	.....
P 28681 H	Rub Plate for Rubber Seal on Shoe (Under Concaves) (2 used)	1939	.....	.....
P 28781 H	Rubber Seal from Front of Shoe to Bottom of Concaves	1939	.....	.....
P 28782 H	Rubber Seal from Front of Shoe to Bottom of Concaves	.....	1939	.....
P 28888 H	Rubber Filler under Rub Plate for Rubber Seal on Shoe (Under Concaves) (4 used)	1939	.....	.....
P 29965 H	Reinforcing Plate on Separator Side over Slot for Rear Rocker Arm Stud (2 used)	1939	1939	.....
P 29967 H	Wood Strip (Beveled) for R. H. Side of Chaffer	1939	1939	.....
P 29968 H	Wood Strip (Beveled) for L. H. Side of Chaffer	1939	1939	.....
P 29987 H	Pipe for Shoe Rear Wood Hanger Arms	.....	1939	.....
P 29988 H	Pipe for Shoe Rear Wood Hanger Arms	1939	.....	.....
P 30155 H	Grain Deflector Plate R. H., on Inside of Shoe	1939	.....	.....
P 30161 H	Hanger Stud, R. H., Rear, on Shoe	1939	.....	.....
P 30162 H	Hanger Stud, L. H., Rear, on Shoe	1939	.....	.....
P 30163 H	Pipe Sleeve on Rear Hanger Studs for Wood Hanger Arms (2 used)	1939	1939	.....
P 30181 H	Grain Deflector Plate R. H., on Inside of Shoe	.....	1939	.....
P 30184 H	Hanger Stud, R. H., Rear, on Shoe	.....	1939	.....
P 30185 H	Hanger Stud, L. H., Rear, on Shoe	.....	1939	.....
P 30188 H	Bolting Strap for Tailings Finger Bar (5 used)	1939	1939	.....
P 30197 H	Grain Deflector Plate, L. H., on Inside of Shoe.....(No Cut)	1939	.....	.....
P 31545 H	Grain Deflector Plate, L. H., on Inside of Shoe.....(No Cut)	.....	1939	.....
P 31866 H	Strip at Sides of Rubber Seal from Front of Shoe to Bottom of Concaves (2 used) (Special for Flax)	1939	1939	.....
	FAN			
AP10027 H	Fan Shaft, Complete (few used, see AP11273H)	1939	.....	AP11273H
AP10179 H	Roller Bearing Housing, Complete with Bearing on L. H. End of Fan Shaft (Bearing JD7160H) (few used, see P2532H)	1939	1939	P2532H

For Cuts of Repair Parts, see pages 143 and 144.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	FAN—Continued			
AP10231 H	Canvas Seal between Upper Side of Fan Housing and Bottom of Step Pan on Front of Shoe	1939	.....	.....
AP10256 H	Roller Bearing Housing, Complete with Bearing on R. H. End of Fan Shaft (Bearing JD7162H) (few used, see P2532H)	1939	1939	P2532H
AP10569 H	Canvas Seal between Upper Side of Fan Housing and Bottom of Step Pan on Front of Shoe	.....	1939	.....
AP10584 H	Fan Shaft, Complete	.....	1939	.....
AP10590 H	Fan Housing, Complete.....(No Cut)	1939	.....	.....
AP11009 H	Fan Housing, Complete.....(No Cut)	.....	1939	.....
AP11077 H	Screen Housing, Front, at R. H. End of Fan Housing (few used, see P27641H and P27642H).....(No Cut)	1939	.....	P27641H–P27642H
AP11125 H	Screen Housing, Front, at L. H. End of Fan Housing (few used, see P27649H)	1939	.....	P27649H
AP11273 H	Fan Shaft, Complete (few used, see AP10027H)	1939	.....	AP10027H
P 2306 H	Fan Spider Hub (2 used)	1939	1939	.....
P 2532 H	Roller Bearing Box on Fan Shaft (2 used) (Bearing JD7922H, Sleeve JD7452H) (few used, see AP10179H and AP10256H)	1939	1939	AP10179H–AP10256H
P 4413 H	Hinge Bracket for Fan Shutter Hinge Rod (2 used)	1939	1939	.....
P 26159 H	Bracket for R. H. End of Cross Angle at Upper End of Fan Upright Support Angles	1939	1939	.....
P 26211 H	Spoke for Fan Blade (8 used)	1939	1939	.....
P 26217 H	Cross Angle for Upper End of Fan Upright Support Angles	1939	.....	.....
P 26227 H	Support Angle for Roller Bearing Housing on L. H. End of Fan Shaft (few used, see P28664H)	1939	1939	P28664H
P 26252 H	Fan Blade Brace (8 used)	1939	1939	.....
P 26366 H	Support Angle for Roller Bearing Housing on End of Fan Shaft (few used, see P28690H)	1939	1939	P28690H
P 26483 H	Fan Blade (4 used)	1939	.....	.....
P 26510 H	Upright Angle, L. H., for Front Side of Fan Housing (few used, see P28705H)	1939	1939	P28705H
P 26514 H	Stiffener Bracket for Lower End of Fan Housing Upright Angle, L. H.	1939	1939	.....
P 26710 H	Air Shutter in Fan Throat	1939	.....	.....
P 26875 H	Hinge, L. H., for Air Shutter in Fan Throat	1939	1939	.....
P 27157 H	Cross Support Angle on Front of Fan Housing (few used, see P28456H)	1939	.....	P28456H
P 27178 H	Upright Angle, R. H., for Front Side of Fan Housing (few used, see P28332H).....(No Cut)	1939	1939	P28332H
P 27220 H	Side Filler, L. H., for Rear End of Fan Throat	1939	1939	.....
P 27221 H	Side Filler, R. H., for Rear End of Fan Throat	1939	1939	.....
P 27479 H	Cross Angle for Upper End of Fan Upright Support Angles	.....	1939	.....
P 27583 H	Fan Blade (4 used)	.....	1939	.....
P 27589 H	Air Shutter in Fan Throat	.....	1939	.....
P 27590 H	Cross Support Angle on Front of Fan Housing (few used, see P28456H)	.....	1939	P28456H
P 27639 H	Clamp Bracket for Fan Shutter Adjusting Lever (few used, see P28352H)	1939	1939	P28352H
P 27641 H	Screen Housing, L. H. Front, at R. H. End of Fan Housing (few used, see AP11077H)	1939	.....	AP11077H
P 27642 H	Screen Housing, R. H., Front, at R. H. End of Fan Housing (few used, see AP11077H)	1939	.....	AP11077H
P 27643 H	Screen Bottom for L. H. End of Fan Housing (few used, see P28389H)	1939	.....	P28389H
P 27644 H	Screen, Outer, for L. H. End of Fan Housing (few used, see P28387H)	1939	.....	P28387H
P 27645 H	Rear Screen for L. H. End of Fan Housing (few used, see P28389H)	1939	.....	P28389H
P 27646 H	Screen, Top, for L. H. End of Fan Housing (few used, see P28388H)	1939	.....	P28388H
P 27647 H	Stiffener Strap on Front End of Outer Fan Screen at L. H. End of Fan Housing (few used, see P28390H)	1939	.....	P28390H
P 27648 H	Stiffener Strap on Top of Outer Screen on L. H. End of Fan Housing (few used, see P28393H)	1939	.....	P28393H
P 27649 H	Screen Housing, Front, at L. H. End of Fan Housing (few used, see AP11125H)	1939	.....	AP11125H
P 27650 H	Corner Bracket and Support for Rear Fan Screen on L. H. End of Fan Housing (few used, see P28394H)	1939	.....	P28394H
P 27651 H	Stiffener Strap for Lower End of Outer Fan Screen at L. H. End of Fan Housing (few used, see P28392H)	1939	.....	P28392H
P 27652 H	Fan Side Shutter Hinge Rod	1939	.....	.....
P 27659 H	Support Bracket on Fan L. H. Housing End for Bottom Screen (few used, see P28391H).....(No Cut)	1939	.....	P28391H
P 27665 H	Outer Screen for R. H. End of Fan Housing (few used, see P28348H)	1939	1939	P28348H
P 27667 H	Hand Lever for Air Shutter in Fan Throat	1939	1939	.....
P 27669 H	Corner Stiffener for Upper End of Outer Screen at R. H. End of Fan Housing (few used, see P28342H)	1939	1939	P28342H

For Cuts of Repair Parts, see page 144.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	FAN—Continued			
P 27671 H	Spacer between R. H. End of Fan Housing and Bracket for Rear Screen (few used, see P28347H)	1939	.....	P28347H
P 27672 H	Bracket for Rear Screen on R. H. End of Fan Housing (few used, see P28344H)	1939	.....	P28344H
P 27673 H	Top Screen for R. H. End of Fan Housing (few used, see P28349H)	1939	.....	P28349H
P 27675 H	Corner Bracket for Rear End of Outer Screen at R. H. End of Fan Housing (few used, see P28345H)	1939	1939	P28345H
P 27676 H	Rear Screen for R. H. End of Fan Housing (few used, see P28350H)	1939	.....	P28350H
P 27682 H	Support Strap for Rear End of Front Screen Housing at L. H. End of Fan Housing (few used, see P28360H)	1939	.....	P28360H
P 27688 H	Hand Lever for Side Shutter on Ends of Fan Housing	1939	1939	.....
P 27689 H	Bracket for Side Shutter Adjusting Lever Latch Spring	1939	1939	.....
P 27691 H	Support Bracket on Fan Housing for R. H. Fan Screen Housing, L. H., Front (No Cut)	1939	1939	.....
P 27744 H	Trunnion in Rear End of Fan Shutter Adjusting Lever (No Cut)	1939	1939	.....
P 27804 H	Fan Side Shutter Hinge Rod	.....	1939	.....
P 27830 H	Screen Housing, L. H., Front, at R. H. End of Fan Housing	.....	1939	.....
P 27831 H	Screen Housing, R. H., Front, at R. H. End of Fan Housing	.....	1939	.....
P 27832 H	Bracket for Rear Screen on R. H. End of Fan Housing	.....	1939	.....
P 27833 H	Spacer between R. H. End of Fan Housing and Bracket for Rear Screen	.....	1939	.....
P 27834 H	Top Screen for R. H. End of Fan Housing	.....	1939	.....
P 27835 H	Rear Screen for R. H. End of Fan Housing	.....	1939	.....
P 27836 H	Screen Housing, Front, at L. H. End of Fan Housing	.....	1939	.....
P 27837 H	Screen, Outer, for L. H. End of Fan Housing	.....	1939	.....
P 27838 H	Screen, Top, for L. H. End of Fan Housing	.....	1939	.....
P 27839 H	Screen, Bottom, for L. H. End of Fan Housing	.....	1939	.....
P 27840 H	Filler between Screen Bottom, L. H., and End of Fan Housing	.....	1939	.....
P 27841 H	Corner Bracket for Rear End of Outer Screen at L. H. End of Fan Housing	.....	1939	.....
P 27842 H	Corner Stiffener for Upper End of Outer Screen at L. H. End of Fan Housing	.....	1939	.....
P 27843 H	Fastening Bracket for Bottom of L. H. Screen Rear End	.....	1939	.....
P 27844 H	Bracket for Rear End of L. H. Screen, Outer Side	.....	1939	.....
P 27896 H	Spacing Collar on L. H. End of Fan Shaft at R. H. Side of Bearing (few used, see P28577H)	1939	1939	P28577H
P 27897 H	Spacing Collar on L. H. End of Fan Shaft at L. H. Side of Bearing (few used, see P28577H)	1939	1939	P28577H
P 28061 H	Stiffener for Opening in Outer Screen for L. H. End of Housing	1939	.....	.....
P 28088 H	Stiffener Strap for Support Bracket on Screen Housing, Front, at L. H. End of Fan Housing	1939	.....	.....
P 28089 H	Support Bracket on Bottom of Outer Screen at L. H. End of Fan Housing (few used, see P28824H)	1939	.....	P28824H
P 28130 H	Support Bracket on Front End of Screen Housing on R. H. End of Fan	1939	.....	.....
P 28332 H	Upright Angle, R. H., for Front Side of Fan Housing (few used, see P27178H)	1939	1939	P27178H
P 28341 H	Stiffener, Front, for Outer Screen at R. H. End of Fan Housing	1939	.....	.....
P 28342 H	Stiffener, Upper, for Outer Screen at R. H. End of Fan Housing	1939	.....	P27669H
P 28343 H	Stiffener, Lower, for Outer Screen at R. H. End of Fan Housing	1939	.....	.....
P 28344 H	Stiffener, L. H., for Rear Screen on R. H. End of Fan Housing (few used, see P27672H)	1939	.....	P27672H
P 28345 H	Stiffener, Rear, for Rear Screen at R. H. End of Fan Housing (few used, see P27675H)	1939	.....	P27675H
P 28346 H	Spacer between Support Arm for R. H. End of Square Tube under Tractor Hitch and Screen Housing Front at R. H. End of Fan Housing	1939	.....	.....
P 28347 H	Spacer between R. H. End of Fan Housing and Rear Screen (few used, see P27671H)	1939	.....	P27671H
P 28348 H	Outer Screen for R. H. End of Fan Housing (few used, see P27665H)	1939	.....	P27665H
P 28349 H	Top Screen for R. H. End of Fan Housing (few used, see P27673H)	1939	.....	P27673H
P 28350 H	Rear Screen for R. H. End of Fan Housing (few used, see P27676H)	1939	.....	P27676H
P 28352 H	Channel Bracket on R. H. Front Screen Housing for Fan Shutter Adjusting Lever (few used, see P27639H)	1939	.....	P27639H
P 28360 H	Flat Support for Screen Housing Front at L. H. End of Fan Housing (few used, see 27682H)	1939	.....	P27682H
P 28387 H	Screen Outer for L. H. End of Fan Housing (few used, see P27644H)	1939	.....	P27644H
P 28388 H	Screen, Top, for L. H. End of Fan Housing (few used, see P27646H) (No Cut)	1939	.....	P27646H
P 28389 H	Screen Bottom and Rear for L. H. End of Fan Housing (few used, see P27643H and P27645H)	1939	.....	P27643H–P27645H
P 28390 H	Stiffener Strap on Front End of Outer Screen at L. H. End of Fan Housing (few used, see P27647H)	1939	.....	P27647H

For Cuts of Repair Parts, see pages 144 and 145.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	FAN—Continued			
P 28391 H	Support Bracket on Fan L. H. Housing End of Bottom Screen (few used, see P27659H)	1939	.....	P27659H
P 28392 H	Corner Bracket for Bottom and Rear End of Outer Screen at L. H. End of Fan Housing (few used, see P27651H)	1939	.....	P27651H
P 28393 H	Stiffener Strap on Top of Outer Screen on L. H. End of Fan Housing (few used, see P27648H)	1939	.....	P27648H
P 28394 H	Corner Bracket for Rear Fan Screen on L. H. End of Fan Housing (few used, see P27650H)	1939	.....	P27650H
P 28395 H	Hanger Strap from Separator Body to Screen at L. H. End of Fan Housing	1939	.....	.....
P 28454 H	Side Shutter for R. H. End of Fan Housing (No Cut)	1939	1939	.....
P 28455 H	Side Shutter for L. H. End of Fan Housing	1939	1939	.....
P 28456 H	Support Bracket on Front of Fan Housing (2 used No. 11, 3 used No. 12) (few used, see P27157H and P27590H)	1939	1939	P27157H–P27590H
P 28573 H	Retainer Plate, Inner, for Fan Shaft Roller Bearing Box (2 used)	1939	1939	.....
P 28574 H	Retainer Plate, Outer, for Fan Shaft Roller Bearing Box, R. H.	1939	1939	.....
P 28575 H	Retainer Plate, Outer, for Fan Shaft Roller Bearing Box, L. H.	1939	1939	.....
P 28576 H	Box End for Roller Bearing Boxes on Fan Shaft (2 used)	1939	1939	.....
P 28577 H	Spacing Collar on Fan Shaft (2 used) (few used, see P27896H and P27897H)	1939	1939	P27896H–P27897H
P 28664 H	Support Angle for Roller Bearing Box on L. H. End of Fan Shaft (few used, see P26227H)	1939	1939	P26227H
P 28690 H	Support Angle for Roller Bearing Box on R. H. End of Fan Shaft (few used, see P26366H)	1939	1939	P26366H
P 28705 H	Upright Angle, L. H., for Front Side of Fan Housing (few used, see P26510H)	1939	1939	P26510H
P 28811 H	Cover for Grease Gun Hole in Screen on R. H. End of Fan Housing	1939	1939	.....
P 28824 H	Support Bracket on Bottom of Outer Screen at L. H. End of Fan Housing (few used, see P28089H)	1939	.....	P28089H
P 28922 H	Hinge R. H. for Air Shutter in Fan Throat	1939	1939	.....
P 28923 H	Arm on Air Shutter Shaft for Adjusting Lever	1939	1939	.....
P 29205 H	Deflector Sheet in Fan Throat	1939	.....	.....
P 29206 H	Deflector Sheet in Fan Throat	.....	1939	.....
P 30075 H	Brace from Bearing Box Support Angle on L. H. End of Fan to Upright Angle (few used, see P30332H)	1939	1939	P30332H
P 30332 H	Brace from Bearing Box Support Angle on L. H. End of Fan to Upright Angle (few used, see P30075H) (No Cut)	1939	1939	.....
P 30434 H	Cross Angle on Auger Housing for Fan Housing (No Cut)	1939	.....	.....
P 30435 H	Cross Angle on Auger Housing for Fan Housing (No Cut)	.....	1939	.....
P 31461 H	Hanger Strap from Separator Body to Screen at R. H. End of Fan Housing (No Cut)	1939	.....	.....
	TAILINGS ELEVATOR AND TAILINGS AUGER			
32W	Conveyor Chain Link	1939	1939	.....
32WSD	Attachment Link for Conveyor Chain	1939	1939	.....
AP10053 H	Tailings Auger, Complete with Pipe and Spiral	1939	.....	.....
AP10065 H	Bearing Box on Tailings Auger (2 used) (P2347H, Complete)	1939	1939	.....
AP10068 H	Lower End Plate, L. H.	1939	1939	.....
AP10082 H	Hood at Upper End of Elevator	1939	1939	.....
AP10207 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (P2415H, Complete)	1939	1939	.....
AP10208 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (P2313H, Complete)	1939	1939	.....
AP10587 H	Tailings Auger, Complete with Pipe and Spiral	.....	1939	.....
AP10591 H	Conveyor Chain Paddle with Attachment Link	1939	1939	.....
AP10592 H	Conveyor Chain, Complete with 19 Paddles (No Cut)	1939	1939	.....
AP11249 H	Support Angle, Complete for Elevator Upper Upright Angles	1939	1939	.....
AP11825 H	Lower Support for Elevator	1939	.....	.....
AP11826 H	Lower Support for Elevator	.....	1939	.....
AP12407 H	Spout from Tailings Elevator to Cylinder (No Cut)	1939	1939	.....
P 2262 H	Latch Bracket for Door on Lower End of Elevator	1939	1939	.....
P 2263 H	Bracket on Lower End of Elevator for Door Lock Lever	1939	1939	.....
P 2264 H	Lock Lever for Door on Lower End of Elevator	1939	1939	.....
P 2313 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (Order AP10208H)	1939	1939	.....
P 2324 H	Drive Sprocket for Auger in Lower End of Elevator (7 Teeth)	1939	1939	.....
P 2325 H	Conveyor Chain Drive Sprocket in Upper End of Elevator (7 Teeth)	1939	1939	.....
P 2347 H	Bearing Box on Tailings Auger (2 used) (Order AP10065H)	1939	1939	.....
P 2383 H	Collar on R. H. End of Tailings Auger	1939	1939	.....
P 2415 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (Order AP10207H)	1939	1939	.....
P 2550 H	Slip Clutch, L. H., for Driven Sheave at Upper End of Tailings Elevator	1939	1939	.....

For Cuts of Repair Parts, see pages 145 and 146.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	TAILINGS ELEVATOR AND TAILINGS AUGER —Continued			
P 2551 H	Slip Clutch Nut on Drive Shaft in Upper End of Tailings Elevator	1939	1939	
P 4616 H	Hinge for Door on Lower End of Elevator	1939	1939	
P 10528 H	Latch for Hand Hole Cover on Spout from Elevator to Cylinder	1939	1939	
P 25535 H	Lock Hook Bolt for Door on Lower End of Elevator	1939	1939	
P 26104 H	Crosstie for Adjusting Bolts at Upper End of Elevator	1939	1939	
P 26107 H	Top and Bottom Plate on Lower End of Elevator (2 used) (P31541H will work)	1939	1939	P31541H
P 26110 H	Lower End Plate, R. H.	1939	1939	
P 26139 H	Slip Clutch, R. H., on Driven Sheave at Upper End of Tailings Elevator	1939	1939	
P 26191 H	Spring Plate for Slip Clutch at Upper End of Tailings Elevator	1939	1939	
P 26239 H	Clean-Out Door on Lower End of Elevator (P32375H will work)	1939	1939	P32375H
P 26363 H	Elevator Housing, Upper	1939	1939	
P 26364 H	Elevator Center Board	1939	1939	
P 26405 H	Elevator Housing, Lower	1939	1939	
P 26601 H	Hand Hole Cover on Spout to Cylinder	1939	1939	
P 26763 H	Upper Upright Angle, R. H., for Elevator	1939	1939	
P 26764 H	Upper Upright Angle, L. H., for Elevator	1939	1939	
P 26765 H	Angle Brace from L. H. Upper Upright Angle for Elevator to Support Angle	1939	1939	
P 29171 H	Drive Shaft in Upper End of Elevator	1939	1939	
P 29341 H	Shim between Elevator Body and Hood	1939	1939	
P 29458 H	Brace for Elevator Lower Support	1939	1939	
P 29772 H	Wire Loop Lock for Door on Lower End of Elevator (P32229H will work)	1939	1939	P32229H
P 30168 H	Connection from Auger Housing to Elevator	1939		
P 30173 H	Wood Spacer between Elevator Lower Support and Separator	1939	1939	
P 30174 H	Connection from Auger Housing to Elevator		1939	
P 31541 H	Top and Bottom Plate on Lower End of Elevator (2 used) (works for P26107H) (Repairs only)	1939	1939	P26107H
P 31748 H	Reinforcing Plate on Tailings Auger Housing (few used)(No Cut)	1939		
P 31750 H	Reinforcing Plate on Tailings Auger Housing (few used)(No Cut)		1939	
P 32229 H	Wire Loop Lock for Door on Lower End of Elevator (Repairs only) (works for P29772H)	1939	1939	P29772H
P 32375 H	Clean-Out Door on Lower End of Elevator (Repairs only) (works for P26239H)(No Cut)	1939	1939	P26239H
	GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER			
32W	Chain Link for Conveyor Chain	1939	1939	
32WSD	Attachment Link for Conveyor Chain Bucket	1939	1939	
AP10052 H	Clean Grain Auger, Complete, with Pipe and Spiral	1939		
AP10065 H	Bearing Box on Clean Grain Auger (2 used) (P2347H, Complete)	1939	1939	
AP10068 H	Lower End Plate, L. H.	1939	1939	
AP10082 H	Hood at Upper End of Elevator	1939	1939	
AP10086 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (P2414H, Complete)	1939	1939	
AP10087 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (P2305H, Complete)	1939	1939	
AP10588 H	Clean Grain Auger, Complete with Pipe and Spiral		1939	
AP10594 H	Spout for Grain Tank Elevator	1939	1939	
AP10595 H	Elevator Conveyor Chain, Complete with 23 Buckets (No Cut)	1939	1939	
AP11056 H	Upper Support for Elevator	1939	1939	
AP11840 H	Elevator Conveyor Chain Bucket, Complete with Link	1939	1939	
P 2262 H	Latch Bracket for Door on Lower End of Elevator	1939	1939	
P 2263 H	Bracket on Lower End of Elevator for Door Lock Lever	1939	1939	
P 2264 H	Lock Lever for Door on Lower End of Elevator	1939	1939	
P 2305 H	Conveyor Chain Tightener Bracket, L. H., at Upper End of Elevator (Order AP10087H)	1939	1939	
P 2324 H	Drive Sprocket for Auger in Lower End of Elevator (7 Teeth)	1939	1939	
P 2325 H	Conveyor Chain Sprocket in Upper End of Elevator (7 Teeth)	1939	1939	
P 2347 H	Bearing Box on Clean Grain Auger (2 used) (Order AP10065H)	1939	1939	
P 2383 H	Collar on R. H. End of Clean Grain Auger	1939	1939	
P 2414 H	Conveyor Chain Tightener Bracket, R. H., at Upper End of Elevator (Order AP10086H)	1939	1939	
P 4616 H	Hinge for Door on Lower End of Elevator	1939	1939	
P 20547 H	Extension Plate for Lower End of Center Board in Elevator	1939	1939	
P 25535 H	Lock Hook Bolt for Door on Lower End of Elevator	1939	1939	
P 26104 H	Crosstie for Adjusting Bolts at Upper End of Elevator	1939	1939	
P 26107 H	Top and Bottom Plate on Lower End of Elevator (2 used (P31541H will work)	1939	1939	P31541H
P 26110 H	Lower End Plate, R. H.	1939	1939	

For Cuts of Repair Parts, see pages 146 and 147.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER—Continued			
P 26142 H	Step on Elevator Upper Support	1939	1939	
P 26239 H	Clean-Out Door on Lower End of Elevator (P32375H will work)	1939	1939	P32375H
P 26406 H	Elevator Housing, Front (No Cut)	1939	1939	
P 26407 H	Elevator Housing, Rear (No Cut)	1939	1939	
P 26630 H	Connection from Clean Grain Auger to Elevator	1939		
P 27207 H	Connection from Clean Grain Auger to Elevator		1939	
P 27902 H	Clip for Adjusting Bolt for Lower End of Elevator	1939	1939	
P 27903 H	Lower Support Bracket on Grain Tank for Elevator	1939	1939	
P 28261 H	Trunnion on Bolt, Grain Tank to Support Angle for Tailings Elevator Upper, Upright Angles	1939	1939	
P 28509 H	Conveyor Chain Drive Shaft in Upper End of Elevator	1939	1939	
P 28512 H	Elevator Center Board (No Cut)	1939	1939	
P 29772 H	Wire Loop Lock for Door on Lower End of Elevator (P32229H will work)	1939	1939	P32229H
P 30124 H	Middle Support Bracket on Grain Tank for Elevator	1939		
P 30193 H	Middle Support Bracket on Grain Tank for Elevator (No Cut)		1939	
P 31541 H	Top and Bottom Plate on Lower End of Elevator (2 used) (works for P26107H) (Repairs only)	1939	1939	P26107H
P 31696 H	Bracket, Auger Housing to Separator Side Sheet (few used) (No Cut)	1939	1939	
P 31749 H	Reinforcing Plate on Clean Grain Auger Housing (few used) (No Cut)	1939		
P 31751 H	Reinforcing Plate on Clean Grain Auger Housing (few used) (No Cut)		1939	
P 32229 H	Wire Loop Lock for Door on Lower End of Elevator (Repairs only) (works for P29772H)	1939	1939	P29772H
P 32375 H	Clean-Out Door on Lower End of Elevator (Repairs only) (works for P26239H) (No Cut)	1939	1939	P26239H
	GRAIN TANK AND SUPPORTS			
AP10446 H	Grain Tank End, Rear	1939		
AP10866 H	Grain Tank End, Rear		1939	
AP12226 H	Stiffener, Plate, Complete, for R. H. Front Upper Corner of Tank	1939	1939	
AP12227 H	Stiffener Plate, Complete, for L. H. Front Upper Corner of Tank	1939	1939	
K 350 H	Turnbuckle for Adjustable Brace from Tank R. H. Side Front Upright Support Angle, R. H., to Tractor Hitch	1939	1939	
P 26118 H	Support Angle, L. H., on Side of Tank	1939		
P 26119 H	Upright Support Angle, R. H. Middle for R. H. Side of Tank	1939	1939	
P 26120 H	Upright Support Angle, Front, for L. H. Side of Tank	1939	1939	
P 26121 H	Upright Support Angle, R. H., Front, for R. H. Side of Tank	1939	1939	
P 26122 H	Angle Brace from Tank L. H. Side Front Upright Support Angle to Tractor Hitch	1939	1939	
P 26126 H	Upright Support Angle, Rear, for L. H. Side of Tank	1939	1939	
P 26164 H	Stiffener Plate on Inside of Tank over Rear Auger Opening	1939		
P 26172 H	Reinforcement Inside of Tank for R. H. Rear Corner	1939	1939	
P 26173 H	Reinforcement Inside of Tank for L. H. Rear Corner	1939	1939	
P 26174 H	Grain Tank Sides and Bottom (No Cut)	1939		
P 26176 H	Grain Tank End, Front (No Cut)	1939		
P 26187 H	Wood Stiffener for Top of Grain Tank Sides (2 used)	1939		
P 26190 H	Wood Stiffener for Top of Grain Tank Ends (2 used)	1939	1939	
P 26841 H	Reinforcement Inside of Tank for R. H. Front Corner	1939	1939	
P 27488 H	Support Angle on Front of Tank	1939	1939	
P 27489 H	Support Angle on Rear of Tank	1939	1939	
P 27519 H	Wood Stiffener for Top of Grain Tank Sides (2 used)		1939	
P 27533 H	Grain Tank Sides and Bottom (No Cut)		1939	
P 27540 H	Reinforcement Inside of Tank for L. H. Front Corner	1939	1939	
P 27554 H	Grank Tank End, Front (No Cut)		1939	
P 27563 H	Support Angle, L. H., on Side of Tank		1939	
P 27570 H	Stiffener Plate on Inside of Tank over Rear Auger Opening		1939	
P 27768 H	Bracket for Ends of Wood Stiffeners in Tank, R. H. Front and L. H. Rear (2 used)	1939	1939	
P 27769 H	Bracket for Wood Stiffeners in Tank, L. H. Front and R. H. Rear (2 used)	1939	1939	
P 27847 H	Support Angle, R. H., on Side of Tank		1939	
P 27906 H	Adjustable Brace, Upper, from Tank R. H. Side Front Upright Support Angle, R. H., to Tractor Hitch	1939	1939	
P 27908 H	Adjustable Brace Lower, from Tank R. H. Side Front Upright Support Angle, R. H., to Tractor Hitch	1939	1939	
P 27909 H	Upright Support Angle, L. H., Middle, for R. H. Side of Tank	1939	1939	
P 27910 H	Upright Support Angle, R. H., Rear, for R. H. Side of Tank	1939	1939	
P 27911 H	Upright Support Angle, L. H., Rear, for R. H. Side of Tank	1939	1939	
P 27912 H	Upright Support Angle, L. H., Front, for R. H. Side of Tank	1939	1939	
P 28481 H	Support Angle, R. H., on Side of Tank	1939		
P 30157 H	Seal on Bottom of Grain Tank for Elevator Boot	1939	1939	

For Cuts of Repair Parts, see page 147.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	GRAIN TANK UNLOADING AUGER			
xxAP 9969 H	Unloading Auger in Grain Tank	1939	.....	AP11385H
AP10043 H	Grain Tank Unloading Auger, Complete (few used, see AP11272H)	1939	.....	AP11272H
xxAP10081 H	Clutch Shifter Fork with Shaft	1939	.....	P27424H
AP10460 H	Bearing Bracket, Complete in Upper End of Unloading Auger (P2406H, Complete)	1939	.....	.....
AP10464 H	Bearing Bracket, Complete on Front End of Grain Tank for Auger (P2421H, Complete)	1939	1939	.....
AP10475 H	Boot on Lower End of Auger Housing (P2422H and P2423H, Complete)	1939	.....	.....
AP10616 H	Grain Tank Unloading Auger, Complete	.....	1939	.....
AP10642 H	Gear Housing on Boot at Lower End of Auger Housing (P2424H, Complete)	1939	1939	.....
AP10671 H	Shield on Front of Grain Tank over Auger Drive Shaft	1939	1939	.....
AP10763 H	Bracket on Tank for Unloading Auger Housing Latch Spring	.....	1939	.....
AP10764 H	Bracket on Tank for Unloading Auger Housing Latch Spring	1939	.....	.....
AP10875 H	Bearing Bracket, Complete in Upper End of Unloading Auger (P2467H, Complete)	.....	1939	.....
AP10991 H	Boot on Lower End of Auger Housing (P2461H and P2462H, Complete) (No Cut)	.....	1939	.....
AP11272 H	Grain Tank Unloading Auger, Complete (few used, see AP10043H) (No Cut)	1939	.....	AP10043H
xAP11385 H	Unloading Auger in Grain Tank	1939	.....	AP9969H
AP11407 H	Unloading Auger in Grain Tank	.....	1939	.....
HZ 6040 H	Lock Ball for Auger Throw-Out Fork Shaft	1939	1939	.....
xJ 10544 H	Grease Seal on Rear End of Auger Drive Shaft in Gear Housing on Tractor Hitch	1939	1939	P26500H
xxP 2380 H	Drive Knuckle, Male, on Grain Tank Auger Drive Shaft in Main Drive Gear Housing	1939	.....	P2463H
P 2381 H	Drive Knuckle, Male, on Grain Tank Auger Shaft	1939	1939	.....
P 2406 H	Bearing Bracket in Upper End of Unloading Auger (Order AP10460H)	1939	.....	.....
P 2421 H	Bearing Bracket on Front End of Grain Tank for Auger (Order AP10464H)	1939	1939	.....
P 2422 H	Boot (Front Half) on Bottom of Auger Housing (Order AP10475H)	1939	.....	.....
P 2423 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP10475H)	1939	.....	.....
P 2424 H	Gear Housing on Boot at Lower End of Auger Housing (Order AP10642H)	1939	1939	.....
P 2430 H	Miter Gear for Shaft on Bottom of Unloading Auger	1939	1939	.....
P 2431 H	Miter Gear on Unloading Auger	1939	1939	.....
P 2561 H	Boot (Front Half) on Bottom of Auger Housing (Order AP10991H) (No Cut)	.....	1939	.....
P 2462 H	Boot (Rear Half) on Bottom of Auger Housing (Order AP10991H) (No Cut)	.....	1939	.....
xP 2463 H	Drive Knuckle, Male, on Grain Tank Auger Drive Shaft in Main Drive Gear Housing	1939	1939	P2380H
P 2467 H	Bearing Bracket in Upper End of Unloading Auger (Order AP10875H)	.....	1939	.....
P 2558 H	Rear Drive Knuckle, Female, on Grain Tank Auger Drive Shaft.	1939	1939	.....
P 2559 H	Front Drive Knuckle, Female, on Grain Tank Auger Drive Shaft (few used, see P2847H)	1939	1939	P2847H
P 2560 H	Slip Clutch, Front, on Grain Tank Auger Drive Shaft	1939	1939	.....
P 2639 H	Slip Clutch, Rear, on Grain Tank Auger Drive Shaft	1939	1939	.....
P 2847 H	Front Drive Knuckle, Female, on Grain Tank Auger Drive Shaft (Repairs only, see P2559H) (No Cut)	1939	1939	P2559H
P 26101 H	Support Bracket on Bottom of Grain Tank for Boot on Lower End of Elevator	1939	.....	.....
P 26166 H	Retainer on Grain Tank for Unloading Auger Gear Housing	1939	.....	.....
P 26186 H	Cover for Auger in Grain Tank	1939	.....	.....
P 26274 H	Collar around Unloading Auger Housing for Latch Spring	1939	.....	.....
P 26332 H	Collar at End of Spring on Auger Drive Slip Clutch Shaft	1939	1939	.....
P 26416 H	Unloading Auger Housing (few used, see P28604H) (No Cut)	1939	.....	P28604H
xxP 26429 H	Spout for Grain Tank Unloading Auger	1939	.....	P28488H
xxP 26500 H	Grease Seal on Rear End of Auger Drive Shaft in Gear Housing on Tractor Hitch	1939	.....	J10544H
xxP 26501 H	Auger Drive Gear in Gear Housing on Tractor Hitch	1939	.....	P27292H
xxP 26502 H	Auger Driven Gear in Gear Housing on Tractor Hitch	1939	.....	P27300H
xxP 26503 H	Shaft in Gear Housing on Tractor Hitch for Auger Driven Gear	1939	.....	P27290H
xxP 26507 H	Shifter Lever for Auger Throw-Out Fork	1939	.....	P27425H
P 26535 H	Latch Spring for Unloading Auger Housing	1939	.....	.....
P 26788 H	Stop Clamp on Unloading Auger Housing	1939	.....	.....
P 27081 H	Stud for Grain Tank Unloading Auger Drive Chain Tightener Sprocket	1939	.....	.....

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked **x**.

For Cuts of Repair Parts, see pages 147 and 148.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	GRAIN TANK UNLOADING AUGER—Continued			
P 27148 H	Shaft in Gear Housing on Boot at Lower End of Housing	1939	1939	
P 27287 H	Latch on Unloading Auger Housing for Spout	1939	1939	
xP 27290 H	Shaft in Gear Housing on Tractor Hitch for Auger Driven Gear	1939	1939	P26503H
xP 27292 H	Auger Drive Gear in Gear Housing on Tractor Hitch	1939	1939	P26501H
P 27293 H	Spacer between Driven Gear and Housing on Shaft in Gear Housing	1939	1939	
xP 27300 H	Auger Driven Gear in Gear Housing on Tractor Hitch	1939	1939	P26502H
P 27423 H	Shaft for Clutch Shifter Fork	1939	1939	
xP 27424 H	Clutch Shifter Fork	1939	1939	AP10081H
xP 27425 H	Shifter Lever for Auger Throw-Out Fork	1939	1939	P26507H
P 27426 H	Pipe Trunnion for Auger Throw-Out Fork Shifter Lever	1939	1939	
P 27451 H	Cover for Auger in Grain Tank		1939	
P 27452 H	Retainer on Grain Tank for Unloading Auger Gear Housing		1939	
P 27581 H	Support Bracket on Bottom of Grain Tank for Boot on Lower End of Elevator		1939	
P 27588 H	Unloading Auger Housing (No Cut)		1939	
P 27594 H	Stop Clamp on Unloading Auger Housing		1939	
P 27818 H	Stud for Grain Tank Unloading Auger Drive Chain Tightener Sprocket		1939	
P 27819 H	Collar around Unloading Auger Housing for Latch Spring		1939	
xP 28488 H	Spout for Grain Tank Unloading Auger	1939		P26429H
P 28489 H	Spout for Grain Tank Unloading Auger		1939	
P 28585 H	Gasket for Clean-Out Door in Boot on Lower End of Auger Housing		1939	
P 28586 H	Clean-Out Door in Boot on Lower End of Auger Housing		1939	
P 28604 H	Unloading Auger Housing (few used, see P26416H) (No Cut)	1939		P26416H
P 28654 H	Pipe Trunnion for Grain Tank Unloading Auger Spout (2 used) (No Cut)	1939	1939	
P 28667 H	Clean-Out Door in Boot on Lower End of Auger Housing	1939		
P 28668 H	Gasket for Clean-Out Door in Boot on Lower End of Auger Housing	1939		
xP 28691 H	Grain Tank Auger Drive Slip Clutch Shaft (few used, see P31652H)	1939	1939	{P31652H– P29321H
P 28877 H	Latch Spring for Unloading Auger Housing		1939	
xxP 29321 H	Grain Tank Auger Drive Slip Clutch Shaft (No Cut)	1939		P28691H
P 30166 H	Support for Front End of Shield on Front of Grain Tank over Power Shaft	1939	1939	
P 30195 H	Brace for Support on Shield at Front of Grain Tank over Power Shaft	1939	1939	
P 31652 H	Grain Tank Auger Drive Slip Clutch Shaft (Repairs only, see P28691H)	1939	1939	P28691H
	HART SCOURKLEEN (MODEL "SJ") FOR GRAIN TANK MACHINES			
0J	Screen, Triangular Perforation, .171" Hole (Large Grain and Sunflower Seed) (No Cut)	1939	1939	
1J	Screen, Triangular Perforation, .165" Hole, Regular (Wheat, Barley, Oats, Rice, Rye, etc.) (No Cut)	1939	1939	
2J	Screen, Triangular Perforation, .140" Hole (Medium Wheat (No Cut)	1939	1939	
3J	Screen, Triangular Perforation, 1/8" Hole (Small Wheat) (No Cut)	1939	1939	
4J	Screen, Round Perforation, 4-1/2/64" Hole (Flax and Small Seed Crops) (No Cut)	1939	1939	
4-1/4J	Screen, Slotted Perforation, 5/64 x 1" Hole (Small Beans and Lettuce Seed) (No Cut)	1939	1939	
4-1/2J	Screen, Slotted Perforation, 3/32 x 3/4" (Small Beans, Pop Corn and Peas) (No Cut)	1939	1939	
5J	Screen, Slotted Perforation, 1/8 x 3/4" Hole (Soy Beans) (No Cut)	1939	1939	
6J	Screen, Slotted Perforation, 5/32 x 3/4" Hole (Large Soy Beans and Dockage) (No Cut)	1939	1939	
7J	Screen, Slotted Perforation, 11/64 x 3/4" Hole (Large Beans or Peas with Large Dockage) (No Cut)	1939	1939	
8J	Screen, Round Perforation, 5/32" Hole (Beans or Small Grain Crop) (No Cut)	1939	1939	
9J	Screen, Round Perforation, 1/20" Hole (Alfalfa, Carrot, Clover, Grass, Lespedeza, Onion and Timothy) (No Cut)	1939	1939	
10J	Screen, Round Perforation, 1/25" Hole (Very Small Seed Crops) (No Cut)	1939	1939	

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked x.

For Cuts of Repair Parts, see page 148.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	HART SCOURKLEEN (MODEL "SJ") FOR GRAIN TANK MACHINES—Continued			
9	Key, 3/16" Wide x 5/16" Deep x 3/4" Long used, 3205 Sheave to 11203 Rotor Shaft (Woodruff).....(No Cut)	1939	1939	.....
1410	Pin to Attach 3186 Collar, Rotor Blade Assembly and Discharge Fan Assembly to Rotor Shaft (4 used) (3/16 x 1-3/8") (No Cut)	1939	1939	.....
3155	Clamp Collar on Belt Tightener Arm.....(No Cut)	1939	1939	.....
3181	Frame Ring, Intake End.....(No Cut)	1939	1939	.....
3182	Frame Ring, Discharge End.....(No Cut)	1939	1939	.....
3184C	Bearing with 11087 Brass Bushing for Rotor Shaft (2 used) .....(No Cut)	1939	1939	.....
3186	Square Collar on Rotor Drive Shaft, 3/4" Bore, 3/16" Pin Hole. Two used in Rotor Assembly and Two used in Discharge Fan Assembly (4 used).....(No Cut)	1939	1939	.....
3205	Sheave on 11203 Rotor Shaft, 3-11/16" O. D., 3/4" Bore, 3/16 x 3/32" Keyway.....(No Cut)	1939	1939	.....
3208	Sheave on Elevator Head Shaft, Outside, 6" O. D., 3/4" Bore and 21/64" Pin Holes.....(No Cut)	1939	1939	.....
3214	Roller for Belt Tightener with A1107 Bushing.....(No Cut)	1939	1939	.....
9396	Hook to Hold Bags, 5/8 x 1/8 x 2-7/8". Two used on 10903C Dockage Chute Assembly.....(No Cut)	1939	1939	.....
10450	Cover Sheet at End of Discharge Drum Assembly 10484C, 9-3/16" Dia.....(No Cut)	1939	1939	.....
10451	Blade Sheet in Discharge Fan Assembly 10451C, 4-1/2 x 4-7/8" (4 used).....(No Cut)	1939	1939	.....
10451C	Fan Assembly at Discharge End of ScourKleen. (Includes 4-10451 Blades).....(No Cut)	1939	1939	.....
10467C	Elbow Assembly at Discharge End of ScourKleen, 4-9/16 x 9-1/4" Size of Cover Sheet (Includes 1-10467 Cover Sheet, 2-10471 Side Sheets and 1-10473 Throat Sheet).....(No Cut)	1939	1939	.....
10468C	Drum Assembly at Intake End of ScourKleen, 5-1/4 x 2-5/8" Size of Drum Sheet (Includes 1-10453 Spout Sheet, 1-10458 Throat Sheet and 1-10468 Drum Sheet).....(No Cut)	1939	1939	.....
10481	Blade Sheet with Notch (Retarder Type, Left Hand) in Rotor Assembly, 4-17/32 x 16-1/2".....(No Cut)	1939	1939	.....
10483	Blade Sheet (Propellor Type, Left Hand) in Rotor Assembly, 4-17/32 x 16-1/2" (2 used).....(No Cut)	1939	1939	.....
10483C	Blade Assembly, L. H., in Rotor (Includes 1-10481 Blade, 2-10483 Blades and 1-10511 Blade).....(No Cut)	1939	1939	.....
10484C	Drum Assembly at Discharge End of ScourKleen, 5-3/8 x 26-1/4" Size of Drum (Includes 1-10454 Discharge Spout Sheet, 1-10457 Discharge Throat Sheet, 1-10484 Drum Sheet, 3-10500 Long Bolt Loop, 1-10507 Short Bolt Loop and 1-12020 Band) .....(No Cut)	1939	1939	.....
10497C	Cover Sheet Assembly Main Section, 17 x 28-15/16" Size of Sheet (Includes 1-10497 Sheet and 8-10501 Bolt Loops)(No Cut)	1939	1939	.....
10511	Blade Sheet without Notch (Retarder Type, Left Hand) in Rotor Assembly, 4-17/32 x 16-1/2".....(No Cut)	1939	1939	.....
10532C	Weed Seed Box Assembly, 12-1/8 x 15-1/8" across the Bottom (Includes 1-10532 Box and 1-10880 Bracket. Note: Specify Box with 10880 Bracket.....(No Cut)	1939	1939	.....
10903C	Chute Assembly for Dockage, 22-1/2 x 24-5/8" Size of Main Sheet (Includes 2-9396 Bag Hooks, 1-10903 Main Sheet, 1-10904 Top Sheet, 1-10906 Cover Sheet, 1-10907 Clamp Piece, and 1-12220 Support).....(No Cut)	1939	1939	.....
10905	Grain Chute at Discharge End, 12-7/8 x 18-3/4".....(No Cut)	1939	1939	.....
11079	Auger Assembly, L. H., on 11203 Rotor Shaft in Intake Drum Assembly, 7" O. D. x 4-7/8" Long x 1-1/16" Hole, Size of Auger and 1-1/16" O. D. x 5" Size of Tube (Includes 1-11077 Tube and Washer and 1-11079 Auger).....(No Cut)	1939	1939	.....
11084	Ferrule for A1108A Roller Guide, 9/16" O. D. x 3/8" I. D. x 1-3/8" Long.....(No Cut)	1939	1939	.....
11087	Brass Bushing for 3184C Rotor Shaft Bearings, 1" I. D. x 3/4" I. D. x 1-1/2" Long (2 used).....(No Cut)	1939	1939	.....
11088	Pin to Attach 11079C Auger Assembly to 11203 Rotor Shaft (3/16 x 1-1/8").....(No Cut)	1939	1939	.....
11093	Clamp Bolt for 1/4" Wing Nut and 3/32 x 1/2" Cotter in Discharge Drum Assemblies, 1/4 x 6" Long (3 used)...(No Cut)	1939	1939	.....
11193	Arm for Belt Tightener Roller, 1/2" Round x 9-5/8"...(No Cut)	1939	1939	.....
11201	3/4 x 8-13/16" Headshaft for Combine Elevator, 2-3/16" Holes and 2-5/16" Holes.....(No Cut)	1939	1939	.....
11203	3/4 x 33-3/8" Shaft for Rotor, one No. 9 Woodruff Keyway, 4-3/16" Pin Holes for 1410 Pins and 1-3/16" Pin Hole for 11088 Pin.....(No Cut)	1939	1939	.....

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	HART SCOURKLEEN (MODEL "SJ") FOR GRAIN TANK MACHINES—Continued			
11219	"V" Belt for ScourKleen Drive (Lenth 35").....(No Cut)	1939	1939	.....
12190	Bag Holder Brace, R. H., 3/4 x 3/4 x 1/8 x 50-1/2".....(No Cut)	1939	1939	.....
12191	Bag Holder Brace, L. H., 3/4 x 3/4 x 1/8 x 50-1/2".....(No Cut)	1939	1939	.....
12199	Attaching Angle for ScourKleen on Grain Bin of Combine, 1-1/2 x 2 x 1/8 x 16-5/16" (2 used).....(No Cut)	1939	1939	.....
12208	Hook to Hold Bags on 12190 and 12191 Bag Holder Braces, 5/8 x 1/8" x 2-1/2".....(No Cut)	1939	1939	.....
12211	Leg Angle (Front Left and Rear Right) 1-1/4 x 1-1/4 x 1/8 x 15-1/4" (2 used).....(No Cut)	1939	1939	.....
12212	Leg Angle (Front Right and Rear Left) 1-1/4 x 1-1/4 x 1/8 x 15-1/4" (2 used).....(No Cut)	1939	1939	.....
12214	Sill Angle, R. H., 1-1/4 x 1-1/4 x 1/8 x 31-7/8".....(No Cut)	1939	1939	.....
12215	Sill Angle, L. H., 1-1/4 x 1-1/4 x 1/8 x 31-7/8".....(No Cut)	1939	1939	.....
12218C	Diagonal Brace Assembly at Intake End of ScourKleen, 3/4 x 1/8 x 15-7/8" (Includes 2-12218 Braces and 1-3/16 x 3/8" F. H. Rivet).....(No Cut)	1939	1939	.....
12220	Support for Dockage Chute 10903C, 3/4 x 1/8 x 17-1/8"..(No Cut)	1939	1939	.....
A 1107	Wood Bushing in 3214 Roller, 1" O. D. x 1-1/4" Long x 17/32" Hole.....(No Cut)	1939	1939	.....
A 1108A	Wood Roller Guide on ScourKleen Grooved for "V" Belt Drive, 3" O. D. x 9/16" Hole.....(No Cut)	1939	1939	.....
JD 7760	Grease Gun Fitting, 1/8" Pipe Thread (90° Angle) used in 3184C Rotor Shaft Bearings (2 used) (Zerk No. 1612).....(No Cut)	1939	1939	.....
Y 1111	Washer used on 11203 Rotor Shaft, 1-7/16" O. D. x 25/32" Hole (2 used).....(No Cut)	1939	1939	.....
Y 1125	Washer on 11193 Belt Tightener Arm, 1-1/16" O. D. x 41/64" Hole.....(No Cut)	1939	1939	.....
	POWER DRIVE			
xAP10453 H	Rear Power Shaft in Gear Housing (Splined).....	1939	1939	P26496H
xxAP10577 H	Telescoping Pipe for Power Drive on Tractor Hitch (Blood Bros. No. X4504A).....	1939	.....	AP11607H
AP10579 H	Universal Joint End (with Slip Clutch Jaws) (Blood Bros. No. X4505A).....	1939	1939	.....
AP10580 H	Telescoping Shaft for Power Drive on Tractor Hitch (Blood Bros. No. G3632M).....	1939	1939	.....
xxAP10596 H	Main Drive Gear Housing (P2355H Complete).....	1939	.....	AP10874H
xAP10874 H	Main Drive Gear Housing (P2451H Complete).....	1939	1939	AP10596H
AP10906 H	Shield over Front End of Power Shaft.....	1939	1939	.....
xAP11607 H	Telescoping Pipe for Power Drive on Tractor Hitch (Blood Bros. No. X4504).....	1939	1939	AP10577H
E 2627 H	Shim (Thin) for Rear Cap on Main Drive Gear Housing (.010").....	1939	1939	.....
E 2628 H	Shim for Bearing on Front End of Drive Shaft in Main Drive Gear Housing (.010").....	1939	1939	.....
E 3222 H	Universal Joint Connection (Blood Bros. No. 3D1).....	1939	1939	.....
E 3223 H	Bushing for Universal Joint Connection (Blood Bros. No. 3D4)..	1939	1939	.....
E 3224 H	Grease Washer for Universal Joints (Cork) (Blood Bros. No. 3D3)	1939	1939	.....
E 3225 H	Retainer for Universal Joint Grease Washer (Blood Bros. No. 3D2)	1939	1939	.....
E 3226 H	Splined Universal Joint End on Shaft in Gear Housing (1-1/8" Spline) (2 used) (Blood Bros. No. 3DSY-18-1).....	1939	1939	.....
E 3376 H	Shim for Bearing on Front End of Drive Shaft in Main Drive Gear Housing (.005").....	1939	1939	.....
xxP 2355 H	Main Drive Gear Housing (Order AP10596H).....	1939	.....	P2451H
xxP 2358 H	Cover for Main Drive Gear Housing.....	1939	.....	P2452H
P 2362 H	Cap Front on Main Drive Gear Housing.....	1939	1939	.....
P 2363 H	Retaining Collar on R. H. End of Driven Shaft in Main Drive Gear Housing.....	1939	1939	.....
P 2375 H	Bracket on R. H. Support for Main Drive Gear Housing.....	1939	1939	.....
xP 2451 H	Main Drive Gear Housing (Order AP10874H).....	1939	1939	P2355H
xP 2452 H	Cover for Main Drive Gear Housing.....	1939	1939	P2358H
P 2474 H	Box for Roller Bearing on Front of Power Shaft (Bearing JD7160H).....	1939	1939	.....
P 10940 H	Shim (Thin) between Bearing and Gear on Driven Shaft in Main Drive Gear Housing.....	1939	1939	.....
P 10941 H	Shim (Thick) between Bearing and Gear on Driven Shaft in Main Drive Gear Housing.....	1939	1939	.....
P 24149 H	Grease Seal on Driven Shaft in Main Drive Gear Housing.....	1939	1939	.....
P 26097 H	Snap Ring for New Departure Bearing on Front End of Power Shaft (2 used).....	1939	1939	.....
xxP 26168 H	Hinge Bracket, Upper, for Bearing on Front End of Power Shaft	1939	.....	P29270H

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked **x**.

For Cuts of Repair Parts, see pages 148 and 149.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	POWER DRIVE—Continued			
xxP 26494 H	Gasket for Main Drive Gear Housing	1939	.....	P27373H
xxP 26495 H	Main Drive Gear on Rear Power Shaft in Gear Housing	1939	.....	P27299H
xxP 26496 H	Rear Power Shaft in Gear Housing (Splined)	1939	.....	AP10453H
P 26499 H	Snap Ring on Driven Shaft in Main Drive Gear Housing	1939	1939	.....
xxP 26606 H	Support on Tractor Hitch for R. H. End of Main Drive Gear Housing	1939	.....	P27770H
P 26607 H	Clamp U-Bolt on R. H. Support for Main Drive Gear Housing	1939	1939	.....
xxP 26902 H	Brace Angle for Main Drive Gear Housing	1939	.....	P30194H
P 27105 H	Trunnion in Hinge Bracket, Upper, for Bearing on Front End of Tractor Hitch	1939	1939	.....
P 27247 H	Pivot Shaft for Power Shaft Front Bearing Box	1939	1939	.....
xxP 27248 H	Pivot Shaft for Power Shaft Front Bearing Box Lower Hinge Bracket	1939	.....	P28616H
xP 27291 H	Driven Shaft in Main Drive Gear Housing	1939	1939	P28499H
xP 27296 H	Driven Pinion on Driven Shaft in Gear Housing	1939	1939	P28498H
xP 27299 H	Main Drive Gear on Rear Power Shaft in Gear Housing	1939	1939	P26495H
xP 27373 H	Gasket for Main Drive Gear Housing	1939	1939	P26494H
P 27530 H	Support, R. H., on Tractor Hitch for Main Drive Gear Housing Brace Angle	1939	1939	.....
P 27531 H	Support, L. H., on Tractor Hitch for Main Drive Gear Housing Brace Angle	1939	1939	.....
P 27576 H	Slip Clutch on PowerShaft (Splined) Blood Bros. No. G3635M	1939	1939	.....
P 27713 H	Support Strap for Power Shaft Front Bearing Box Hinge Bracket (2 used)	1939	1939	.....
P 27714 H	Hinge Bracket, Lower, for Bearing on Front End of Power Shaft	1939	1939	.....
xP 27770 H	Support on Tractor Hitch for R. H. End of Main Drive Gear Housing	1939	1939	P26606H
P 27805 H	Adjusting Plate for Shield over Front End of Power Drive Shaft	1939	1939	.....
xxP 28498 H	Driven Pinion on Driven Shaft in Gear Housing (No Cut)	1939	.....	P27296H
xxP 28499 H	Driven Shaft in Main Drive Gear Housing (No Cut)	1939	.....	P27291H
xP 28616 H	Pivot Shaft for Power Shaft Front Bearing Box Lower Hinge Bracket	1939	1939	P27248H
xP 29270 H	Hinge Bracket, Upper, for Bearing on Front End of Power Shaft	1939	1939	P26168H
P 29353 H	Stiffener on Shield over Power Shaft at Front of Gear Housing	1939	1939	.....
P 30133 H	Shield, Front, over Telescoping Pipe for Power Drive on Tractor Hitch	1939	1939	.....
P 30134 H	Shield, Rear, over Telescoping Pipe for Power Driven on Tractor Hitch	1939	1939	.....
P 30135 H	Support Bracket on Hitch for Rear Shield over Telescoping Pipe on Tractor Hitch	1939	1939	.....
P 30136 H	Adjusting Bracket on Rear Shield over Telescoping Pipe on Tractor Hitch	1939	1939	.....
P 30137 H	Flat Support Bracket on Front Shield over Telescoping Pipe for Power Drive on Tractor Hitch (P31715H will work)	1939	1939	P31715H
P 30145 H	Shield over Power Shaft in Front of Gear Housing	1939	1939	.....
P 30146 H	Bracket, Front, for Shield over Power Shaft in Front of Gear Housing	1939	1959	.....
P 30164 H	Bracket, R. H., Rear, for Shield over Power Shaft in Front of Gear Housing	1939	1939	.....
P 30165 H	Bracket, L. H., Rear, for Shield over Power Shaft in Front of Gear Housing	1939	1939	.....
P 30172 H	Brace for Front Bracket on Shield over Power Shaft in Front of Gear Housing	1939	1939	.....
xP 30194 H	Brace Angle for Main Drive Gear Housing	1939	1939	P26902H
P 31715 H	Flat Support Bracket on Front Shield over Telescoping Pipe for Power Drive on Tractor Hitch (works for P30137H)	1939	1939	P30137H
Z 976 H	Cap, Rear, on Main Drive Gear Housing	1939	1939	.....
Z 6572 H	Grease Seal for Front End of Drive Shaft in Main Drive Gear Housing	1939	1939	.....
Z 7716 H	Shim (Thick) for Rear Cap on Main Drive Gear Housing	1939	1939	.....
	DRIVE BELTS AND DRIVE CHAINS			
32	Steel Chain Link (No Cut)	1939	1939	.....
45	Steel Chain Link (No Cut)	1939	1939	.....
AP10396 H	Reel Drive Chain, Rear (44 Links, No. 45 Steel) (No Cut)	1939	1939	.....
AP10397 H	Reel Drive Chain, Front (155 Links, No. 32 Steel) (No Cut)	1939	1939	.....
AP10447 H	Drive Chain for Grain Tank Unloading Auger (21 Links, No. 32 Steel) (No Cut)	1939	1939	.....
P 27107 H	Grain Tank Elevator Drive Belt ("V" Type) (No Cut)	1939	1939	.....
P 27108 H	Drive Belt for Conveyor under Straw Rack ("V" Type) (No Cut)	1939	1939	.....
P 27312 H	Cylinder Drive Belt ("V" Type) (No Cut)	1939	1939	.....
P 28677 H	Drive Belt for Feeder and Platform Canvas, Rear Beater and Fan (Double "V" Belt) (No Cut)	1939	1939	.....
P 28905 H	Tailings Elevator Drive Belt (No Cut)	1939	1939	.....

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked x.

For Cuts of Repair Parts, see page 149.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	DRIVE AND DRIVEN SHEAVES AND SPROCKETS			
AP10069 H	Drive Sheave on Upper End of Tailings Elevator for Grain Tank Elevator	1939	1939	
AP10173 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing	1939	1939	
AP10180 H	Driven Sheave on Upper End of Grain Tank Elevator	1939	1939	
AP10230 H	Driven Sheave on Fan Shaft (Regular) (9-5/8″ Dia.)	1939	1939	
AP10521 H	Driven Sheave on Fan Shaft (8-11/16″ Dia.)	1939	1939	
AP10524 H	Driven Sheave on Fan Shaft (10-3/4″ Dia.) (No Cut)	1939	1939	
AP10709 H	Sheave, Half, Complete with Nut for Driven Sheave on Cylinder Shaft (Nut P2349H)	1939	1939	
AP10713 H	Sheave, Half, Complete with Hub for Driven Sheave on Cylinder Shaft (Hub P2350H)	1939	1939	
AP10715 H	Sheave, Half, Complete with Nut for Cylinder Drive on Shaft in Gear Housing (Nut P2348H)	1939	1939	
AP10716 H	Sheave, Half, Complete with Hub for Cylinder Drive on Shaft in Gear Housing (Hub P2346H)	1939	1939	
AP11220 H	Driven Sheave on Fan Shaft (11-3/4″ Dia.)	1939	1939	
AP11296 H	Reel Drive Sprocket on L. H. Wheel Axle (7 Teeth) (P2556H Complete)	1939	1939	
AP11370 H	Driven Sheave on Feeder Canvas Drive Roller	1939	1939	
AP11399 H	Driven Sheave, Complete with Slip Clutch on Upper End of Tailings Elevator (AP12380H will work)	1939	1939	AP12380H
AP12102 H	Driven Sheave, Complete with Hub on Conveyor under Straw Rack for Drive Belt (P2678H Hub) (No Cut)	1939	1939	
AP12184 H	Double Drive Sheave on Beater behind the Cylinder Shaft (Adjustable)	1939	1939	
AP12247 H	Driven Sheave on Platform Canvas Drive Roller	1939	1939	AP13879H
AP12380 H	Driven Sheave, Complete with Slip Clutch on Upper End of Tailings Elevator (works for AP11399H) (Repairs only)	1939	1939	AP11399H
AP13879 H	Driven Sheave on Platform Canvas Drive Roller (Repairs only) (No Cut)	1939	1939	AP12247H
B 4325 H	Pipe Spacer for Cylinder Drive Sheave Bolts (3 used)	1939	1939	
P 2323 H	Reel Driven Sprocket on L. H. End of Shaft through Grain Tank (9 Teeth)	1939	1939	
P 2335 H	Reel Driven Slip Clutch Sprocket on Reel Pipe (18 Teeth)	1939	1939	
P 2341 H	Reel Drive Sprocket on R. H. End of Shaft through Grain Tank (18 Teeth)	1939	1939	
P 2346 H	Hub for Cylinder Drive Sheave on Shaft in Gear Housing	1939	1939	
P 2348 H	Nut for Cylinder Drive Sheave on Shaft in Gear Housing	1939	1939	
P 2349 H	Nut for Driven Sheave on Cylinder Shaft	1939	1939	
P 2350 H	Hub for Driven Sheave on Cylinder Shaft	1939	1939	
P 2427 H	Drive Sprocket for Grain Tank Unloading Auger (9 Teeth)	1939	1939	
P 2428 H	Driven Sprocket for Grain Tank Unloading Auger (6 Teeth)	1939	1939	
P 2517 H	Reel Driven Sprocket on L. H. End of Shaft through Grain Tank (12 Teeth) (Special) (PK2H will work)	1939	1939	PK2H
P 2527 H	Drive Sheave for Feeder, Platform, Rear Beater and Fan on Drive Shaft in Power Drive Gear Housing (used with I.H.C. F-20 Tractors only)	1939	1939	
P 2556 H	Reel Drive Sprocket on L. H. Wheel Axle (7 Teeth) (Order AP11296H)	1939	1939	
PK 2 H	Reel Driven Sprocket on L. H. End of Shaft through Grain Tank (12 Teeth) (Special) (works for P2517H) (No Cut)	1939	1939	P2517H
P 30317 H	Shim for Small Adjustable Sheave on Beater behind the Cylinder Shaft	1939	1939	
P 30318 H	Shim for Large Adjustable Sheave on Beater behind the Cylinder Shaft	1939	1939	
P 30319 H	Sheave, Half, for Small Adjustable Sheave on L. H. End of Beater behind the Cylinder Shaft	1939	1939	
	DRIVE CHAIN AND BELT TIGHTENERS AND IDLER BRACKETS, SPROCKETS AND SHEAVES			
AP 9951 H	Arm for Tightener Sheave on Front Reel Drive Chain	1939	1939	
AP10406 H	Hub, Complete, for Grain Tank and Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave (P2437H Complete)	1939	1939	
AP10452 H	Tightener Sprocket, Complete, for Grain Tank Unloading Auger Drive Chain (6 Teeth) (P2429H Complete)	1939	1939	
AP10662 H	Tightener Sheave, Complete, with Hub for Grain Tank Elevator Conveyor Chain Drive Belt	1939	1939	
AP10707 H	Tightener Sheave, Complete with Hub for Tailings Elevator Conveyor Chain Drive Belt	1939	1939	
AP11444 H	Upper Idler Sheave with Hub for Feeder, Platform, Rear Beater and Fan Drive Belt, also Tightener Sheave for Conveyor under Straw Rack Drive Belt	1939	1939	

For Cuts of Repair Parts, see pages 149 and 150.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	DRIVE CHAIN AND BELT TIGHTENERS AND IDLER BRACKETS, SPROCKETS AND SHEAVES—Continued			
AP12220 H	Arm for Feeder, Platform, Beater and Fan Drive Belt and Cylinder Drive Belt Tightener Sheave (2 used)	1939	1939	.....
AP12362 H	Tightener and Lower Idler Sheave, Complete with Hub for Feeder, Platform, Beater and Fan Drive Belt (2 used)	1939	1939	.....
J 295 H	Tightener Pulley for Reel Drive Chain, Front	1939	1939	.....
P 2429 H	Tightener Sprocket for Grain Tank Unloading Auger Drive Chain (6 Teeth) (Order AP10452H) (No Cut)	1939	1939	.....
P 2437 H	Hub for Grain Tank and Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave (Order AP10406H) (2 used)	1939	1939	.....
P 2476 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm	1939	1939	.....
P 2490 H	Tightener Sheave for Cylinder Drive Belt	1939	1939	.....
P 2531 H	Hub for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler Sheave and Conveyor under Straw Rack Drive Belt Tightener Sheave (2 used) (Bearing JD7923H) (Sleeve JD8300H)	1939	1939	.....
P 2680 H	Hub for Tightener and Lower Idler Sheave on Feeder, Platform, Beater and Fan Drive Belt (2 used) (Bearing JD7161H)	1939	1939	.....
P 2696 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm	1939	1939	.....
P 27081 H	Stud for Tailings Elevator Conveyor Chain Drive Belt Tightener Sheave (2 used)	1939	1939	.....
P 27082 H	Chain Tightener Bracket for Unloading Auger Drive Chain	1939	.....	.....
P 27231 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave (P31716H will work)	1939	1939	P31716H
P 27270 H	Bracket for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave	1939	1939	.....
P 27518 H	Chain Tightener Bracket for Unloading Auger Drive Chain (No Cut)	.....	1939	.....
P 27615 H	Snap Ring for New Departure Bearing in Tightener Pulley for Cylinder Drive Belt (2 used)	1939	1939	.....
P 27687 H	Bracket for Cylinder Drive Belt Tightener Sheave Arm Adjusting Rods	1939	1939	.....
P 27849 H	Adjusting Rod for Cylinder Drive Belt Tightener Arm	1939	1939	.....
P 27924 H	Stud for Cylinder Drive Belt Tightener Sheave	1939	1939	.....
P 27925 H	Retaining Collar for Bearing in Cylinder Drive Belt Tightener Sheave	1939	1939	.....
P 28067 H	Bracket for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave	1939	1939	.....
P 28070 H	Stud for Grain Tank Elevator Conveyor Chain Drive Belt Tightener Sheave	1939	1939	.....
P 28539 H	Stud for Upper Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt and Tightener Sheave for Conveyor under Straw Rack Drive Belt (2 used)	1939	1939	.....
P 28542 H	Bearing Retainer Washer in Hub for Upper Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt and Tightener Sheave for Conveyor under Straw Rack Drive Belt (2 used)	1939	1939	.....
P 28658 H	Spacing Washer on Studs for Upper Idler Sheave for Feeder, Platform, Beater and Fan Drive Belt and Tightener Sheave for Conveyor under Straw Rack Drive Belt (2 used)	1939	1939	.....
P 28718 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Upper Idler Sheave	1939	1939	.....
P 30059 H	Tightener Rod for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave	1939	1939	.....
P 30081 H	Bracket for Feeder, Platform, Beater and Fan Drive Belt Tightener Sheave Arm	1939	1939	.....
P 30121 H	Stiffener Plate on Separator Side Sheet for Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave Stud	1939	1939	.....
P 30122 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave	1939	1939	.....
P 30127 H	Spacer on Feeder, Platform, Beater and Fan Drive Belt Lower Idler Sheave Stud	1939	1939	.....
P 30128 H	Snap Ring for Bearing in Tightener and Lower Idler Sheave on Feeder, Platform, Beater and Fan Drive Belt (2 used)	1939	1939	.....
P 30245 H	Stud for Feeder, Platform, Beater and Fan Drive Belt Tightener and Lower Idler Sheave (2 used)	1939	1939	.....
P 31716 H	Bracket for Conveyor Chain Drive Belt Tightener Sheave (works for P27231H) (Repairs only)	1939	1939	P27231H
	ROLLER BEARINGS AND BRONZE BEARINGS			
E 124 H	Bronze Bearing in Bracket on Front End of Grain Tank for Auger	1939	1939	.....
E 150 H	Bronze Bearing for Front Rocker Arm Shaft Bracket (2 used)	1939	1939	.....
J 1063 H	Bronze Bearing in Box at Front End of Pitman Drive Pipe	1939	1939	.....
JD 7158 H	New Departure Ball Bearing in Tightener Sheave for Cylinder Drive Belt (New Departure No. 88505)	1939	1939	.....

For Cuts of Repair Parts, see page 15.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	ROLLER BEARINGS AND BRONZE BEARINGS —Continued			
JD 7160 H	New Departure Ball Bearing (New Departure No. 88506) (2 used) (few used, see JD7452H and JD7922H), L. H. End of Fan Shaft (Order AP10179H listed under Fan), Front End of Power Drive Shaft	1939	1939	JD7452H–JD7922H
JD 7161 H	New Departure Ball Bearing (New Departure No. 88503) (4 used), Connecting Bracket to Straw Rack Pitman Crank, Feeder, Platform, Beater and Fan Drive Belt Tightener and Lower Idler Sheave Hub	1939	1939	.....
JD 7162 H	New Departure Ball Bearing on R. H. End of Fan Shaft (Order AP10256H listed under Fan) (New Departure No. 88016) (few used, see JD7452H and JD7922H)	1939	1939	JD7452H–JD7922H
JD 7163 H	Bearing for Sickle Pitman Drive Eccentric (New Departure No. 88508)	1939	1939	.....
JD 7165 H	New Departure Ball Bearing on Cylinder Shaft (2 used) (New Departure 88A for 1-3/16″ Shaft)	1939	1939	.....
JD 7168 H	New Departure Bearing on Beater Shaft (2 used) (Order AP11205H for L. H. End of Beater listed under Beater behind the Cylinder) (New Departure No. 88123) (few used, see JD7451H and JD7921H)	1939	1939	JD7451H–JD7921H
JD 7257 H	Cup for JD7358R Timken Roller Bearing (Timken No. 09196)	1939	1939	.....
JD 7259 H	Cup for JD7388H and JD8104H Timken Roller Bearings (Timken No. 15250) (3 used)	1939	1939	.....
JD 7358 R	Timken Roller Bearing on Rear End of Drive Shaft in Main Drive Gear Housing (Cup JD7257H) (Timken No. 09078)	1939	1939	.....
JD 7388 H	Timken Roller Bearing, Complete on Front End of Drive Shaft in Main Drive Gear Housing and L. H. End of Driven Shaft (2 used) (Cup JD7259H) (Timken No. 15113)	1939	1939	.....
JD 7451 H	Outer Sleeve for JD7921H Hyatt Roller Bearing (Hyatt No. 4811) (2 used) (few used, see JD7168H)	1939	1939	JD7168H
JD 7452 H	Outer Sleeve for JD7922H Hyatt Roller Bearing (Hyatt No. 4548) (2 used) (few used, see JD7160H and JD7162H)	1939	1939	JD7160H–JD7162H
JD 7921 H	Hyatt Roller Bearing, Complete on Beater Shaft (less Sleeve) (Sleeve JD7451H) (Hyatt No. 94524) (2 used) (few used, see JD7168H)	1939	1939	JD7168H
JD 7922 H	Hyatt Roller Bearing, Complete on Fan Shaft (less Sleeve) (Sleeve JD7452H) (Hyatt No. 94628) (2 used) (few used, see JD7160H and JD7162H)	1939	1939	JD7160H–JD7162H
JD 7923 H	Hyatt Roller Bearing, Complete in Hub for Feeder, Platform, Rear Beater and Fan Drive Belt Upper Idler Sheave and Conveyor under Straw Rack Drive Belt Tightener Sheave (less Sleeve) (Sleeve JD8300H) (Hyatt No. 93224) (2 used)	1939	1939	.....
JD 7924 H	Hyatt Roller Bearing, Complete (less Sleeve) (Sleeve JD8301H) Hyatt No. 93320) (3 used), Platform Canvas Drive Roller Bearing Box, R. H., Boxes on Feeder Canvas Drive Roller	.....	.....	.....
JD 7925 H	Hyatt Roller Bearing, Complete in Platform Canvas Drive Roller Bearing Box, L. H. (less Sleeve) (Sleeve JD8302H) (Hyatt No. 95724)	1939	1939	.....
JD 8104 H	Timken Roller Bearing, Complete on R. H. End of Driven Shaft in Main Drive Gear Housing (Cup JD7259H) (Timken No. 15116)	1939	1939	.....
JD 8300 H	Outer Sleeve for JD7923H Hyatt Roller Bearing (Hyatt No. 4814) (2 used)	1939	1939	.....
JD 8301 H	Outer Sleeve for JD7924H Hyatt Roller Bearing (Hyatt No. 4820) (3 used)	1939	1939	.....
JD 8302 H	Outer Sleeve for JD7925H Hyatt Roller Bearing (Hyatt No. 4829)	1939	1939	.....
P 21490 H	Bronze Bearing in Boot on Lower End of Grain Tank Auger Housing, also in Boot Gear Housing on Auger Shaft and in Bearing Bracket in Upper End of Unloading Auger (3 used)	1939	1939	.....
P 22953 H	Bronze Bearing (12 used), Feeder Canvas Idler Roller Boxes (2 used), Straw Rack Front Rocker Arms (4 used) (few used, see P26512H), Conveyor Chain Idler Sprocket (2 used), Tightener Brackets at Upper End of Tailings Elevator (2 used), Tightener Brackets at Upper End of Grain Tank Elevator (2 used)	1939	1939	.....
P 26089 H	Bronze Bearing in Tightener Slide Bracket for Platform Canvas Idler Roller (2 used)	1939	1939	.....
P 26460 H	Bronze Bearing in Reel Drive Sprocket on L. H. Wheel Axle	1939	1939	.....
xxP 26504 H	Bronze Bushing in Main Drive Gear Housing (2 used)	1939	.....	P27298H–P27411H
P 26512 H	Bronze Bearing (9 used), Straw Rack Rocker Arms, Rear (6 used) (few used Front, see P22953H), Drive Shaft in Gear Housing on Lower End of Unloading Auger and Tightener Sprocket for Unloading Auger Drive Chain (3 used)	1939	1939	.....

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on the Machines, order parts marked x.

For Cuts of Repair Parts, see page 150.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	ROLLER BEARINGS AND BRONZE BEARINGS —Continued			
P 26682 H	Bronze Bearing in Roller Bearing Brackets on Conveyor Chain Drive Shaft (2 used)	1939	1939	.....
P 26837 H	Bronze Bearing (4 used), Box on Tailings Auger (2 used), Box on Clean Grain Auger (2 used)	1939	1939	.....
P 26895 H	Bronze Bushing for Main Wheel (4 used)	1939	1939	.....
xP 27298 H	Bronze Bushing, Rear, in Main Drive Gear Housing	1939	1939	P26504H
xP 27411 H	Bronze Bushing, Front, in Main Drive Gear Housing	1939	1939	P26504H
P 28452 H	Bronze Bearing for Straw Rack Conveyor Chain Drive Shaft (2 used)	1939	1939	.....
	WASHERS			
				Size
J 3531 H	Washer at Front End of Slip Clutch Spring on Power Shaft (1/16″ Thick)	1939	1939	1-5/32 x 2-1/2
P 18467 H	Thrust Washer between Collar on Lower End of Unloading Auger and Housing	1939	1939	29/32 x 1-1/2
P 26878 H	Washer on Axle for Bolt through Stub Axle, R. H.	1939	1939	1-5/8 x 2-7/8
P 27465 H	Washer at Front End of Slip Clutch Spring on Power Shaft (1/8″ Thick)	1939	1939	1-5/32 x 2-1/2
P 27573 H	Washer at Front End of Slip Clutch Spring on Power Shaft (Blood Bros. No. 504264) (3/16″ Thick)	1939	1939	1-5/32 x 2-1/2
P 27575 H	Washer on Rear End of Slip Clutch Shaft on Power Shaft (Blood Bros. No. 504266)	1939	1939	41/64 x 1-1/2
P 27577 H	Washer on Capscrew for Universal Joint on Front End of Tubular Drive Shaft on Tractor Hitch (Blood Bros. No. G3497M)	1939	1939	15/32 x 1-1/2
P 28311 H	Lock Washer for Bolts on Canvas Lock Strip (Ever-Lock) ..... (No Cut)	1939	1939	.....
P 28440 H	L. H. Lock Washer for 3/8″ Bolt (No Cut)	1939	1939	.....
P 28441 H	L. H. Lock Washer for 7/16″ Capscrew (No Cut)	1939	1939	.....
P 28692 H	Thrust Washer on Grain Tank Auger Drive Shaft	1939	1939	17/32 x 1
P 28814 H	Thrust Washer on L. H. End of Platform Canvas Drive Roller	1939	1939	13/16 x 1-21/32
P 28815 H	Thrust Washer on R. H. End of Platform Canvas Drive Roller	1939	1939	13/32 x 1-1/2
P 29028 H	Bearing Retainer Washer for Boxes on Feeder Drive Roller (2 used)	1939	1939	25/32 x 1-11/64
P 30007 H	Retaining Washer for Beater Clean-Out Door on Separator Side (2 used)	1939	1939	11/32 x 1-1/2
P 30096 H	Washer under Cover on Removable Side Plate over Stripper Angle Bolts	1939	1939	7/16 x 3/4
P 30140 H	Cup Washer on Feeder Drive Roller Gudgeon (2 used)	1939	1939	7/8 x 1-21/32
P 30160 H	Cup Washer on Front End of Grain Tank Unloading Auger Drive Sprocket	1939	1939	29/32 x 1-21/32
P 31621 H	Lock Washer for Concave Rasp Bar Bolts (No Cut)	1939	1939	3/8
P 31760 H	Flat Washer on Feeder Canvas Drive Roller (Hardened) (No Cut)	1939	1939	13/16 x 2
P 32186 H	Washer on Bolt for Concave Insert Angles (No Cut)	1939	1939	7/16 x 13/16
	PINS AND KEYS			
B 5755 H	Key, Front Drive Knuckle on Grain Tank Auger Shaft to Shaft (No Cut)	1939	1939	1/4 x 1/4 x 2-1/4
E 2835 H	Key for Universal Joint on Front End of Tubular Drive Shaft on Tractor Hitch (No Cut)	1939	1939	3/8 x 5/16 x 1-3/8
xxE 3229 H	Pin for Universal Joint Connection Bushing (Blood Bros. No. 3D5)	1939	1939	1/4 x 1-3/4
J 5166 H	Pin, Front Drive Knuckle on Grain Tank Auger Shaft to Shaft (Drilled)	1939	1939	5/16 x 1-3/4
J 8030 H	Pin in Drive Sheave on Upper End of Tailings Elevator for Grain Tank Elevator	1939	1939	5/16 x 1-7/8
P 26319 H	Gib Key for Cylinder Head (2 used)	1939	1939	1/4 x 1/4 x 2-1/2
P 27230 H	Pin in Retaining Collar on Stub Axles (2 used)	1939	1939	3/8 x 2-1/2
P 27262 H	Key in Auger Drive Shaft in Main Drive Gear Housing on Tractor Hitch (Woodruff No. 91) (No Cut)	1939	1939	1/4 x 3/4
P 27284 H	Key, Cylinder Drive Sheave to Driven Shaft in Gear Housing on Tractor Hitch (No Cut)	1939	1939	1/4 x 1/4 x 5
P 27297 H	Pin, Driven Gear to Shaft in Grain Tank Unloading Auger Gear Housing (2 used)	1939	1939	1/4 x 1-7/8
P 27895 H	Key for Sprockets and Gears on Grain Tank Unloading Auger Shafts (No Cut)	1939	1939	3/16 x 3/16 x 1
P 28663 H	Pin in Fork on Pitman Drive for Bearing Cup (No Cut)	1939	1939	1/4 x 1-5/8
xP 30237 H	Pin for Universal Joint Connection Bushing (No Cut)	1939	1939	1/4 x 1-3/4

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked **x**.

For Cuts of Repair Parts, see pages 150 and 151.

Cat. No.	Description	USED ON 11	USED ON 12	Size
	BOLTS, CAPSCREWS AND NUTS			
AP12922 H	Bolt, Complete for Concave Rasp Bars (Special for Flax) (No Cut)	1939	1939	3/8 x 1-1/4
P 4081 H	Hitch Bolt on Front End of Tractor Hitch	1939	1939	3/4 x 3-3/4
P 25894 H	Adjusting Bolt for Rear End of Platform Lifting Spring	1939	1939	1/2 x 9-1/2
P 26049 H	Pivot Bolt for Platform Lifting Lever	1939	1939	3/4 x 1-13/16
P 26258 H	Pressure Screw for Lock Ball Spring on Grain Tank Auger Throw-Out Fork Shaft	1939	1939	5/8
P 26511 H	Tightener Screw for Straw Rack Tie Rod (8 used)	1939	1939	3/8 x 1-1/8
P 27239 H	End Screw for Feeder Frame Tie Rod (2 used)	1939	1939	1/2 x 3/8
P 27347 H	Capscrew on Nut for Cylinder Drive and Driven Sheaves (6 used)	1939	1939	7/16 x 3
P 27348 H	Chain Tightener Bolt for Tailings Elevator and Clean Grain Elevator	1939	1939	5/16 x 3
P 27365 H	Capscrew, R. H. End of Feeder Canvas Drive Roller Shaft R. H. End of Beater Shaft (L. H. Thread)	1939	1939	7/16 x 1
P 27366 H	Capscrew, L. H. End of Platform Canvas Drive Roller Gudgeon, L. H. End of Beater Shaft (R. H. Thread)	1939	1939	3/8 x 1-1/4
xxP 27574 H	Horned Nut on Rear End of Slip Clutch Shaft on Power Shaft (Blood Bros. No. 912737)	1939	1939	5/8
P 27712 H	Set Screw (3 used), Platform Canvas Fastening Slide Bar, Feeder Canvas Fastening Slide Bar (2 used)	1939	1939	3/16 x 19/32
P 27901 H	Adjusting Bolt for Lower End of Grain Tank Elevator	1939	1939	3/8 x 12
P 28462 H	Capscrew for Universal Joint on Front End of Power Shaft on Tractor Hitch (No Cut)	1939	1939	7/16 x 3/4
P 29172 H	Capscrew for R. H. End of Platform Canvas Drive Roller (L. H. Thread)	1939	1939	3/8 x 1
P 29174 H	Adjusting Bolt for Cylinder (2 used)	1939	1939	3/8 x 3-3/4
P 30251 H	Horned Nut on Rear End of Slip Clutch Shaft on Power Shaft (Blood Bros. No. G4059)	1939	1939	5/8
xP 31846 H	Tightener Screw for Straw Rack Tie Rod (8 used) (Repairs only) (Used on AP13660H and AP13677H Straw Racks) (No Cut)	1939	1939	7/16 x 1-1/8
P 32188 H	Hex. Nut for Concave Rasp Bar Bolt (No Cut)	1939	1939	3/8
P 32359 H	Hex. Nut on L. H. End of Feeder Canvas Drive Roller (L. H. Thread) (Repairs only) (No Cut)	1939	1939	7/16
P 32949 H	Capscrew in L. H. End of Platform Canvas Drive Roller Gudgeon (Repairs only) (Order when original Platform Canvas Drive Roller has been replaced by AP13839H) (No Cut)	1939	1939	1/2 x 3-1/4
P 33305 H	Bolt for Channel Cylinder Bars (32 used No. 11, 40 used No. 12) (Special) (Repairs only) (No Cut)	1939	1939	3/8 x 7/8
Z 7168 H	Nut on Grain Tank Auger Clutch Shifter Fork Shaft	1939	1939	7/16
Z 7756 H	Adjusting Bolt for Platform Lifting Spring	1939	1939	1/2 x 5

Cat. No.	Description	USED ON 11	USED ON 12	Size	Coils
	SPRINGS				
77S	Compression Spring for Feeder Canvas (Long) (2 used)	1939	1939	5/8 x 4-1/16	19
1B 261 H	Spring for Tailings Auger Housing Tailboard Clip (2 used)	1939	1939	9/32 x 15/32	5-1/4
B 4620 H	Slip Clutch Spring on Drive Shaft in Upper End of Tailings Elevator	1939	1939	1-13/16 x 1-15/16	4
B 5665 H	Tightener Spring for Platform Canvas (2 used)	1939	1939	1-3/64x6-5/8	19
B 5996 H	Spring for Lifting Guard (Special)	1939	1939	3/8 x 2-5/8	12
H 1154 H	Spring under Pressure Screw for Lock Ball on Grain Tank Auger Throw-Out Fork Shaft	1939	1939	1/2 x 1-1/8	5-1/2
HZ 5198 H	Latch Spring for Fan Side Shutter Adjusting Lever	1939	1939	5/8 x 1-7/8	8
HZ 7008 H	Spring on Cylinder Top Cover Hinged Extension Latch Bolt (2 used)	1939	1939	19/32 x 2	11
P 26286 H	Spring for Front Reel Drive Chain Tightener Arm	1939	1939	3/4 x 8	86
P 26323 H	Spring for Reel Drive Sprocket on Main Wheel Axle	1939	1939	1-1/16x1-1/8	5
P 27527 H	Spring for Slip Clutch on Reel Pipe	1939	1939	2-1/4 x 4	6
P 27572 H	Slip Clutch Spring on Power Shaft (Blood Bros. No. 504265)	1939	1939	2-1/2 x 3-5/8	6
P 27808 H	Slip Clutch Spring on Grain Tank Auger Drive Shaft	1939	1939		
P 28102 H	Compression Spring for Feeder Canvas (Short) (2 used)	1939	1939	5/8 x 2-1/32	10-1/2
P 28584 H	Tightener Spring for Feeder Canvas (2 used)	1939	1939	11/16 x 3-1/4	16-1/2
S 6179 H	Tightener Spring for Conveyor under Straw Rack Conveyor Chain (2 used)	1939	1939	4-7/8 x 21/32	45
Y 3082B	Platform Lifting Lever Detent Spring (2 used) (No Cut)	1939	1939		
Z 6413 H	Platform Lifting Spring (2 used)	1939	1939	1-7/8x14-1/4	41-1/2

xxFew used on Combines Serial No. 11–100 to 11–150. If Main Drive Gear Case on Tractor Hitch has been replaced on these Machines, order parts marked x.

For Cuts of Repair Parts, see pages 150 and 151.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	ZERK FITTINGS			
JD 7759	Zerk Fitting, 1/8" Pipe Thread, Straight (Zerk No. 1610)	1939	1939	
JD 7760	Zerk Fitting, 1/8" Pipe Thread, Elbow 67-1/2° (Zerk No. 1612)	1939	1939	
JD 7771	Zerk Fitting, 1/8" Pipe Thread, Straight (1-1/4" Long) (Zerk No. 1607)	1939	1939	
JD 7778	Zerk Fitting, 1/8" Pipe Thread, Elbow 30° (1-3/32" Long) (Zerk No. 1611)	1939	1939	
JD 7779	Zerk Fitting, 1/8" Pipe Thread, Straight (2-5/8" Long) (Zerk No. 1684)	1939	1939	
JD 7781	Zerk Fitting, 1/8" Pipe Thread, Elbow 90° (Zerk No. 1613)	1939	1939	
JD 7783	Zerk Fitting, 1/8" Pipe Thread, Elbow 30° (2-1/8" Long) (Zerk No. 1638)	1939	1939	
JD 7788	Zerk Fitting, 1/4" Pipe Thread, Elbow 45° (Zerk No. 1637) (No Cut)	1939	1939	
JD 7797	Zerk Fitting, 1/4" Pipe Thread, Straight (Zerk No. 1641) (No Cut)	1939	1939	
	KAFFIR CORN HEADING ATTACHMENT			
AP10565 H	Guard, Pointed Lip (P2342H Complete)	1939		
AP11506 H	Shield, Complete over Guards on Platform (No Cut)	1939		
AP11534 H	Support Bracket, Middle, for Cutter Bar Angle (No Cut)	1939		
AP11535 H	Grain Shield between Cutter Bars (No Cut)	1939		
AP11578 H	Sickle, Complete with Drive Plates (No Cut)	1939		
P 2342 H	Guard, Pointed Lip (Order AP10565H)	1939		
P 2577 H	Sickle Holder (3 used)	1939		
P 26610 H	Ledger Plate	1939		
P 27038 H	Wearing Plate for Sickle (4 used)	1939		
P 28864 H	Sickle Drive Plates (2 used) (No Cut)	1939		
P 28865 H	Cutter Bar Angle (No Cut)	1939		
P 28866 H	Shim under Sickle Holder (3 used)	1939		
P 28868 H	Support Bracket, R. H., for Cutter Bar Angle (No Cut)	1939		
P 28869 H	Support Bracket, L. H., for Cutter Bar Angle (No Cut)	1939		
Z 5654 H	Serrated Section	1939		
	SLOW SPEED ATTACHMENT (TO PROVIDE CYLINDER SPEEDS OF 175, 250 AND 350 R. P. M.)			
AP12432 H	Tightener Arm for Cylinder Drive Chain (No Cut)	1939	1939	
AP12574 H	Drive Chain for Cylinder (118 Links, 5/8" Pitch Roller Chain (Order 2 AP6093H, 1 AP6095H, 4 P20351H and 4 P20352H) (350 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
AP12575 H	Drive Chain for Cylinder (135 Links, 5/8" Pitch Roller Chain) (Order 2 AP6093H, 1 AP6094H and 1 AP6095H) (175 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
AP12576 H	Drive Chain for Cylinder (125 Links, 5/8" Pitch Roller Chain) (Order 2 AP6093H and 1 AP6094H) (250 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
B 4835 H	Key for Cylinder Drive Sprocket on Driven Shaft in Power Drive Gear Housing, 5/16 x 5/16 x 2"	1939	1939	
E 2784 H	Washer on Cylinder Drive Chain Tightener Stud (1-1/32 x 1-7/8")	1939	1939	
JD 7455 H	Outer Sleeve for JD7911 Hyatt Roller Bearing (Hyatt No. 4837)	1939	1939	
JD 7911 H	Hyatt Roller Bearing, Complete in Cylinder Drive Chain Tightener Sprocket (less Sleeve) (Sleeve JD7455) (Hyatt No. 94540)	1939	1939	
P 1870 H	Stud for Cylinder Drive Chain Tightener Sprocket	1939	1939	
P 2001 H	Tightener Sprocket for Cylinder Drive Chain	1939	1939	
P 2893 H	Hub for Driven Sprocket on Cylinder Shaft (No Cut)	1939	1939	
P 30306 H	Driven Sprocket on Cylinder Shaft (66 Teeth) (175 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
P 30307 H	Driven Sprocket on Cylinder Shaft (33 Teeth) (350 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
P 30308 H	Driven Sprocket on Cylinder Shaft (46 Teeth) (250 R. P. M. Cylinder Speed) (No Cut)	1939	1939	
P 30347 H	Gib Key for Cylinder Drive and Driven Sprocket (2 used) (5/16 x 5/16 x 2-1/2") (No Cut)	1939	1939	
P 30360 H	Sand Collar for Cylinder Drive Chain Tightener Sprocket (No Cut)	1939	1939	
P 32055 H	Drive Sprocket for Cylinder on Driven Shaft in Power Drive Gear Housing (14 Teeth) (No Cut)	1939	1939	

For Cuts of Repair Parts, see page 151.

HOOK-UP EQUIPMENT FOR JOHN DEERE TRACTOR

Cat. No.	Description	A and B	G	D and Styled D	G. P. Std.	G. P. Wide Tread	AR BR BO and AO121	AO128	Similar No.
AB 3030 H	Support for Shield on Tractor		1939						
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1939	1939	1939	1939	1939	1939	1939	
B 471 H	Roller Bearing Box for Take-Off Shaft Extension				1939	1939			
B 478 H	Box Ends for Take-Off Bearing Box (2 used)				1939	1939			
B 4300 H	Lock Washer for 5/8" Bolt	1939	1939	1939	1939	1939	1939	1939	
B 5479 H	Retainer for Take-Off Shaft Extension Roller Bearing Box				1939	1939			
B 5838 H	Lock Washer for 3/4" Bolt	1939	1939	1939	1939	1939	1939	1939	
B 6990 H	Universal Joint Shield on Tractor	1939	1939						
B 7805 H	Support for Shield on Tractor	1939							
B 7806 H	Bracket on Support for Shield on Tractor	1939							
B 8742 H	Felt Washer for Take-Off Shaft Extension Roller Bearing Box Ends (2 used)				1939	1939			
E 3222 H	Universal Joint Connection (2 used)	1939	1939	1939	1939	1939	1939	1939	
E 3223 H	Bushing for Universal Joint Connection (8 used)	1939	1939	1939	1939	1939	1939	1939	
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1939	1939	1939	1939	1939	1939	1939	
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1939	1939	1939	1939	1939	1939	1939	
E 3226 H	Universal Joint End (1-1/8" Splined)	1939			1939	1939	1939	1939	
E 3227 H	Universal Joint End (1-3/8" Splined)			1939					
E 3228 H	Universal Joint End (1-3/4" Splined)		1939						
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1939	1939	1939	1939	1939	1939	1939	
HZ 6363 H	Lock Washer for 3/8" Bolt	1939	1939	1939	1939	1939	1939	1939	
JD 7462 R	Outer Sleeve for JD7512 Bearing (Hyatt No. 4450)				1939	1939			
JD 7512 R	Hyatt Bearing, Complete for Power Shaft Extension (less Sleeve) (Sleeve JD7462R) (Hyatt No. 16845)				1939	1939			
P 24203 H	Clamp for Extension Drawbar	1939	1939						
P 24517 H	Extension Drawbar (Model "A" 410,000 to 459,999) (Model "B" 1000 to 42,200)	1939							
P 24590 H	Extension Drawbar (Model "D" only)			1939					
P 24591 H	Plate, R. H., for Extension Drawbar			1939					
P 24592 H	Plate, L. H., for Extension Drawbar			1939					
P 24651 H	Support, Rear, for Shield on Tractor					1939			
P 24653 H	Shield on Tractor					1939			
P 24664 H	Extension Drawbar (Channel)						1939		
P 24665 H	Bracket for Front End of Extension Drawbar						1939		
P 24666 H	Plate on Rear End of Extension Drawbar						1939		
P 24667 H	Bracket for Front End of Extension Drawbar							1939	
P 24668 H	Extension Drawbar							1939	
P 24673 H	Extension Drawbar (2 used)				1939				
P 24676 H	Shield on Tractor				1939				
P 24678 H	Bearing Box Support Bracket				1939				
P 24679 H	Extension Drawbar					1939			
P 24680 H	Bearing Box Support Bracket					1939			
P 24681 H	Plate for Drawbar on Tractor (2 used)				1939				
P 24682 H	Support, Front, for Shield on Tractor (No Cut)					1939			
P 26659 H	Extension Drawbar (Styled D only)			1939					
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1939	1939	1939	1939	1939	1939	1939	

For Cuts of Repair Parts, see pages 151 and 152.

HOOK-UP EQUIPMENT FOR JOHN DEERE TRACTOR—Continued

Cat. No.	Description	A and B	G	D and Styled D	G. P. Std.	G. P. Wide Tread	AR BR BO and AO121	AO128	Similar No.
P 27816 H	Adjusting Plate for Platform Lifting Lever	.....	.....	.....	.....	.....	1939	1939	.....
P 28118 H	Extension for Take-Off Shaft on Tractor	.....	.....	.....	1939	.....	.....	.....	.....
P 28119 H	Extension for Take-Off Shaft on Tractor	.....	.....	.....	.....	1939	.....	.....	.....
Z 5314 H	Lock Washer for 1/2" Bolt	1939	1939	1939	1939	1939	1939	1939	.....
Z 5578 H	Lock Washer for 7/16" Bolt	1939	1939	1939	1939	1939	1939	1939	.....

HOOK-UP EQUIPMENT FOR I. H. C. TRACTORS

Cat. No.	Description	F20 and F30	W30, 10-20 and 15-30	F12 and F14	Similar No.
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1939	1939	1939	.....
AZ 2189 H	Shield, Complete, on Tractor	.....	.....	1939	.....
B 471 H	Roller Bearing Box for Take-Off Shaft Extension	1939	.....	.....	B488H
B 478 H	Box Ends for Take-Off Shaft Bearing Box (2 used)	1939	.....	.....	.....
B 488 H	Roller Bearing Box for Take-Off Shaft Extension (few used, see B471H)	1939	.....	.....	B471H
B 4300 H	Lock Washer for 5/8" Bolt	1939	1939	1939	.....
B 5479 H	Retainer for Take-Off Shaft Bearing Box	1939	.....	.....	.....
B 5838 H	Lock Washer for 3/4" Bolt	1939	1939	1939	.....
B 8742 H	Felt Washer for Take-Off Shaft Extension Box Ends (2 used)	1939	.....	.....	.....
E 3222 H	Universal Joint Connection (2 used)	1939	1939	1939	.....
E 3223 H	Bushing for Universal Joint Connection (8 used)	1939	1939	1939	.....
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1939	1939	1939	.....
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1939	1939	1939	.....
E 3226 H	Universal Joint End (1-1/8" Splined) (2 used on F20 only)	1939	.....	1939	.....
E 3227 H	Universal Joint End (1-3/8" Splined) (not used on F20)	1939	1939	.....	.....
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1939	1939	1939	.....
HZ 6363 H	Lock Washer for 3/8" Bolt	1939	1939	1939	.....
J 290 H	Drive Sleeve on Tractor Take-Off Shaft	.....	.....	1939	.....
JD 7462	Outer Sleeve for JD7512 Bearing (Hyatt No. 4450)	1939	.....	.....	.....
JD 7512	Hyatt Bearing, Complete for Power Shaft Extension (less Sleeve) (Sleeve JD7462) (Hyatt No. 16845)	1939	.....	.....	.....
P 2527 H	Drive Pulley for Feeder, Platform, Rear Beater and Fan on Driven Shaft in Power Drive Gear Housing (not used on F30)	1939	.....	.....	.....
P 15579 H	Extension for Take-Off Shaft on Tractor	.....	1939	.....	.....
P 22530 H	Shield on Tractor	.....	1939	.....	.....
P 22531 H	Support, Front, for Shield on Tractor (2 used)	.....	1939	.....	.....
P 22532 H	Support, Rear, for Shield on Tractor	.....	1939	.....	.....
P 24403 H	Bearing Box Support Bracket on Tractor Drawbar	1939	.....	.....	P29555H
P 24650 H	Support, Front, for Shield on Tractor (2 used)	1939	.....	.....	.....
P 24651 H	Support, Rear, for Shield on Tractor	1939	.....	.....	P29553H

For Cuts of Repair Parts, see pages 151 and 152.

HOOK-UP EQUIPMENT FOR I. H. C. TRACTORS—Continued

Cat. No.	Description	F20 and F30	W30, 10-20 and 15-30	F12 and F14	Similar No.
P 24652 H	Round Brace for Take-Off Shaft Extension Bearing Box Bracket	1939			
P 24653 H	Shield on Tractor	1939			
P 24655 H	Extension Drawbar (Special on F12 and F14)	1939	1939	1939	
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1939	1939	1939	
P 27869 H	Extension for Take-Off Shaft on Tractor	1939			
P 27956 H	Extension for Take-Off Shaft on Tractor			1939	
P 28501 H	Flat Bracket on Bearing Box Support Bracket for Round Braces (few used, see P29552H)	1939			P29552H
P 28502 H	Round Brace, R. H., from Bearing Box Bracket to Tractor Axle Housing	1939			
P 28503 H	Round Brace, L. H., from Bearing Box Bracket to Tractor Axle Housing	1939			
P 29552 H	Flat Bracket on Bearing Box Support Bracket for Round Braces (few used, see P28501H)	1939			P28501H
P 29553 H	Support, Rear, for Shield on Tractor (few used, see P24651H)	1939			P24651H
P 29554 H	Support Strap for Bearing Box (2 used)	1939			
P 29555 H	Bearing Box Support Bracket on Tractor Drawbar (few used, see P24403H) (No Cut)	1939			P24403H
Z 5314 H	Lock Washer for 1/2" Bolt	1939	1939	1939	
Z 5578 H	Lock Washer for 7/16" Bolt	1939	1939	1939	
Z 7254 H	Stiffener Angle for Shield on Tractor			1939	
Z 7414 H	Support Angle for Shield on Tractor			1939	

HOOK-UP EQUIPMENT FOR HART-PARR, ALLIS-CHALMERS AND CASE

Cat. No.	Description	HART-PARR		Allis-Chalmers	CASE		Similar No.
		Oliver 70	Oliver Row Crop	WC	RC	C and CC	
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1939	1939	1939	1939	1939	
B 4300 H	Lock Washer for 5/8" Bolt	1939	1939	1939	1939	1939	
B 5838 H	Lock Washer for 3/4" Bolt	1939	1939	1939	1939	1939	
B 6338 H	Clamp for Extension Drawbar				1939	1939	
E 196 H	Drive Sleeve on Power Take-Off Shaft (Case C and CC without Power Lift)	1939	1939			1939	
E 3222 H	Universal Joint Connection (2 used)	1939	1939	1939	1939	1939	
E 3223 H	Bushing for Universal Joint Connection (8 used)	1939	1939	1939	1939	1939	
E 3224 H	Grease Washer for Universal Joints (8 used) (Cork)	1939	1939	1939	1939	1939	
E 3225 H	Retainer for Universal Joint Grease Washer (8 used)	1939	1939	1939	1939	1939	
E 3226 H	Universal Joint End (1-1/8" Splined) (Case C and CC without Power Lift)	1939	1939		1939	1939	
E 3227 H	Universal Joint End (1-3/8" Splined) (Case C and CC with Power Lift)			1939		1939	
E 3229 H	Pin for Universal Joint Connection Bushings (8 used)	1939	1939	1939	1939	1939	
HZ 6363 H	Lock Washer for 3/8" Bolt	1939	1939	1939	1939	1939	
J 290 H	Drive Sleeve on Power Take-Off Shaft (Case Tractors without Power Lift)				1939	1939	
P 24672 H	Extension Drawbar				1939	1939	
P 24725 H	Extension Drawbar	1939					
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	1939	1939	1939	1939	1939	

For Cuts of Repair Parts, see pages 151 and 152.

HOOK-UP EQUIPMENT FOR HART-PARR, ALLIS-CHALMERS AND CASE—Continued

Cat. No.	Description	HART-PARR		Allis-Chalmers	CASE		Similar No.
		Oliver 70	Oliver Row Crop	WC	RC	C and CC	
P 27956 H	Extension for Take-Off Shaft on Tractor (Case Tractors without Power Lift)	1939	1939	.....	1939	1939	.....
P 28137 H	Extension Drawbar	.....	1939	.....	.....	.....	.....
P 28138 H	Power Shaft Front Bearing Box Support Straps (2 used)	.....	1939	.....	.....	.....	.....
P 28139 H	Diagonal Brace for Bearing Box Support Straps (2 used)	.....	1939	.....	.....	.....	.....
P 31544 H	Flat Extension on Adjusting Bracket for Rear Shield over Telescoping Pipe on Tractor Hitch	.....	1939	.....	.....	.....	.....
Z 5314 H	Lock Washer for 1/2" Bolt	1939	1939	1939	1939	1939	.....
Z 5578 H	Lock Washer for 7/16" Bolt	1939	1939	1939	1939	1939	.....

HOOK-UP EQUIPMENT FOR "CATERPILLAR" TRACTORS

Cat. No.	Description	22	D2 or R2	23	Similar No.
AP10578 H	Tubular Shaft, Tractor to Tractor Hitch	1939	1939	1939	.....
E 3222 H	Universal Joint Connection	1939	1939	1939	.....
E 3223 H	Bushing for Universal Joint Connection	1939	1939	1939	.....
E 3224 H	Grease Washer for Universal Joint (Cork)	1939	1939	1939	.....
E 3225 H	Retainer for Universal Joint Grease Washer	1939	1939	1939	.....
E 3227 H	Universal Joint End (1-3/8" Splined)	1939	1939	1939	.....
E 3229 H	Pin for Universal Joint Connection Bushings	1939	1939	1939	.....
P 6118 H	Lock Washer for 1" Bolt	1939	1939	1939	.....
P 27579 H	Universal Joint on Front End of Shaft on Tractor Hitch	.....	1939	.....	.....
P 28413 H	Extension Drawbar	.....	1939	.....	.....
P 28414 H	Clamp for Extension Drawbar	.....	.....	1939	.....
P 28436 H	Extension Drawbar				

For Cuts of Repair Parts, see pages 151 and 152.

Cat. No.	Description	USED ON 11	USED ON 12	Similar No.
	PICK-UP			
AP11067 H	Tightener Bracket on Rear End of Platform Lifting Springs	1939	1939	
P 25894 H	Adjusting Bolt on Rear End of Platform Lifting Spring (1/2 x 9-1/2″)	1939	1939	
P 26661 H	Stiffener for Platform Side Sheet	1939	1939	
P 28293 H	Link for Front End of Platform Lifting Spring (No Cut)	1939	1939	
P 28500 H	Key for Pick-Up Drive Chain Drive and Driven Sprockets (3/16 x 3/16 x 1″) (2 used) (No Cut)	1939	1939	
P 28528 H	Flat Link from Platform Lifting Arm to Front Bracket on Lifting Springs (2 used)	1939	1939	
P 28529 H	Tie Bracket for Front End of Platform Lifting Springs	1939	1939	
P 28534 H	Roller Chain Link, 1/2″ Pitch (No Cut)	1939	1939	
P 28535 H	Roller Chain Connecting Link, 1/2″ Pitch (No Cut)	1939	1939	
P 28536 H	Roller Chain End Link, 1/2″ Pitch (No Cut)	1939	1939	
P 28537 H	Snap Spring Washer for 1/2″ Pitch Steel Roller Connecting Link (No Cut)	1939	1939	
P 30336 H	Adjusting Shoe (2 used)	1939	1939	
P 30358 H	Bracket for Adjusting Shoe (2 used)	1939	1939	
P 16NE	Box, Complete on Grain Slinger Shaft (2 used)	1939	1939	
P 1010NE	Bronze Bearing for Box on Grain Slinger Shaft (2 used)	1939	1939	
W 3	Pick-Up Housing End, L. H.	1939	1939	
W 5	Hollow Drive Shaft on L. H. End of Housing	1939	1939	
W 8	Pick-Up Finger only	1939	1939	
W 14	Box for Drive Shaft on L. H. End of Pick-Up Housing	1939	1939	
W 29	Anchor Pin for Finger Stub Shaft (2 used)	1939	1939	
W 30	Drive Sprocket for Pick-Up Housing (15 Teeth)	1939	1939	
W 31	Driven Sprocket for Pick-Up Housing (32 Teeth)	1939	1939	
W 32	Bronze Bearing in Hollow Drive Shaft for Pick-Up Housing (2 used)	1939	1939	
W 36	Key for Sheave on L. H. End of Grain Slinger (3/16 x 3/16 x 1-1/4″) (No Cut)	1939	1939	W352
W 70	Pick-Up Drive Chain (58 Links, 1/2″ Pitch Steel Roller Chain) (No Cut)	1939	1939	
W 114	Key for Drive Pulley on L. H. End of Platform Canvas Drive Roller (1/4″ x 1/4 x 1-1/4) (No Cut)	1939	1939	
W 140	Bracket for Pick-Up Finger	1939	1939	
W 158	Stud for Pick-Up Drive Chain Tightener Sprocket (W392 will work)	1939	1939	W392
W 160	Tightener Sprocket for Pick-Up Drive Chain (12 Teeth)	1939	1939	
W 161	Finger Stub Shaft, L. H.	1939	1939	
W 162	Finger Stub Shaft, R. H.	1939	1939	
W 165	Main Drive Sheave Half, on L. H. End of Platform Canvas Drive Roller (2 used) (6″)	1939	1939	
W 169	Pick-Up Housing End, R. H.	1939	1939	
W 170	Hub on Pick-Up Housing End, R. H.	1939	1939	
W 188	Pick-Up Finger, Complete	1939	1939	
W 189	Drive Sprocket for Pick-Up Housing (10 Teeth) (Special)	1939	1939	
W 190	Drive Sprocket for Pick-Up Housing (12 Teeth) (Special)	1939	1939	
W 193	Threaded Hub for L. H. Slip Clutch on Drive Sheave on Grain Slinger Shaft	1939	1939	
W 194	Slip Clutch, L. H., for Main Driven Sheave on Grain Slinger Shaft	1939	1939	
W 195	Slip Clutch, R. H., for Main Driven Sheave on Grain Slinger Shaft	1939	1939	
W 251	Sheave, Half, for Driven Sheave on Grain Slinger Shaft (2 used)	1939	1939	
W 252	Driven Sheave, Complete on Grain Slinger Shaft (Sheave Half W251) (Hub W277)	1939	1939	W900
W 277	Hub for Driven Sheave on Grain Slinger Shaft	1939	1939	W193
W 342	Pick-Up Housing Half (not Marked) (First Finger Hole 2-5/8″ from L. H. End) (No Cut)	1939	.....	.....
W 343	Pick-Up Housing Half (Marked No. 2) (First Finger Hole 3-3/4″ from L. H. End) (No Cut)	1939	.....	.....
W 345	Support Clip, Short, for Cutter Bar Shield (2 used)	1939	1939	.....
W 346	Support Clip, Long, for Cutter Bar Shield (No Cut)	1939	1939	.....
W 347	Shaft for Grain Slinger	1939	.....	W750
W 348	Support Plate, R. H., for Pick-Up (No Cut)	1939	1939	.....
W 349	Bracket on Cutter Bar for Pick-Up Support Plate, R. H.	1939	1939	.....
W 351	Support Plate, L. H., for Pick-Up	1939	1939	.....
W 352	Outer Support and Bearing for Finger Stub Shaft, L. H.	1939	1939	.....
W 354	Tightener Bracket for Pick-Up Drive Chain	1939	1939	.....
W 355	Shield over L. H. End of Pick-Up Housing	1939	1939	.....
W 356	Shield over R. H. End of Pick-Up Housing	1939	1939	.....
W 357	Shaft for Fingers	1939	.....	.....
W 361	Tightener Sheave for Main Drive Belt	1939	1939	.....
W 363	Grain Slinger Housing	1939	.....	.....
W 367	Hub for Grain Slinger (2 used)	1939	1939	.....
W 368	Main Drive Belt (No Cut)	1939	1939	.....
W 369	Tightener Bracket for Main Drive Belt	1939	1939	.....

For Cuts of Repair Parts, see pages 152 and 153.

Cat. No.	Description	USED ON		Similar No.
		11	12	
	PICK-UP—Continued			
W 371	Shield for Cutter Bar	1939	.....	.....
W 374	Shaft for Fingers (No Cut)	.....	1939	.....
W 375	Shaft for Grain Slinger (No Cut)	.....	1939	W751
W 379	Pick-Up Housing, Half (not Marked) (First Finger Hole 2-5/8" from L. H. End) (No Cut)	.....	1939	.....
W 380	Pick-Up Housing, Half (Marked No. 2) (First Finger Hole 3-3/4" from L. H. End) (No Cut)	.....	1939	.....
W 381	Grain Slinger Housing (No Cut)	.....	1939	.....
W 389	Shield for Cutter Bar (No Cut)	.....	1939	.....
W 392	Stud for Pick-Up Drive Chain Tightener Sprocket (works for W158)	1939	1939	W158–W579
W 428	Slip Clutch Spring for Driven Sheave on Grain Slinger Shaft	1939	1939	.....
W 530	Slip Clutch Nut for Driven Sheave on Grain Slinger Shaft (No Cut)	1939	1939	.....
W 531	Washer for Slip Clutch Nut on Grain Slinger Shaft (No Cut)	1939	1939	.....
W 532	Key, R. H. Slip Clutch to Grain Slinger Shaft (3/16 x 3/16 x 5/8") (No Cut)	1939	1939	W36
W 540	Drive Hub for Sheave on Platform Canvas Drive Roller	1939	1939	.....
W 541	Hub for Drive Sheave on L. H. End of Platform Canvas Drive Roller	1939	1939	.....
W 579	Stud for Pick-Up Drive Chain Tightener Sprocket	1939	1939	W392
W 750	Shaft for Grain Slinger (No Cut)	1939	.....	W347
W 751	Shaft for Grain Slinger (No Cut)	.....	1939	W375
W 893	Drive Sheave on L. H. End of Platform Canvas Drive Roller (6") (Sheave Half W165) (Hub W541) (No Cut)	1939	1939	.....
W 900	Driven Sheave, Complete on Grain Slinger Shaft (Sheave Half W251) (Hub W193) (No Cut)	1939	1939	W252
Z 652 H	Nut for Platform Lifting Spring	1939	1939	.....
Z 6413 H	Platform Lifting Spring	1939	1939	.....

For Cuts of Repair Parts, see page 153.

WHEELS, AXLES AND HITCH

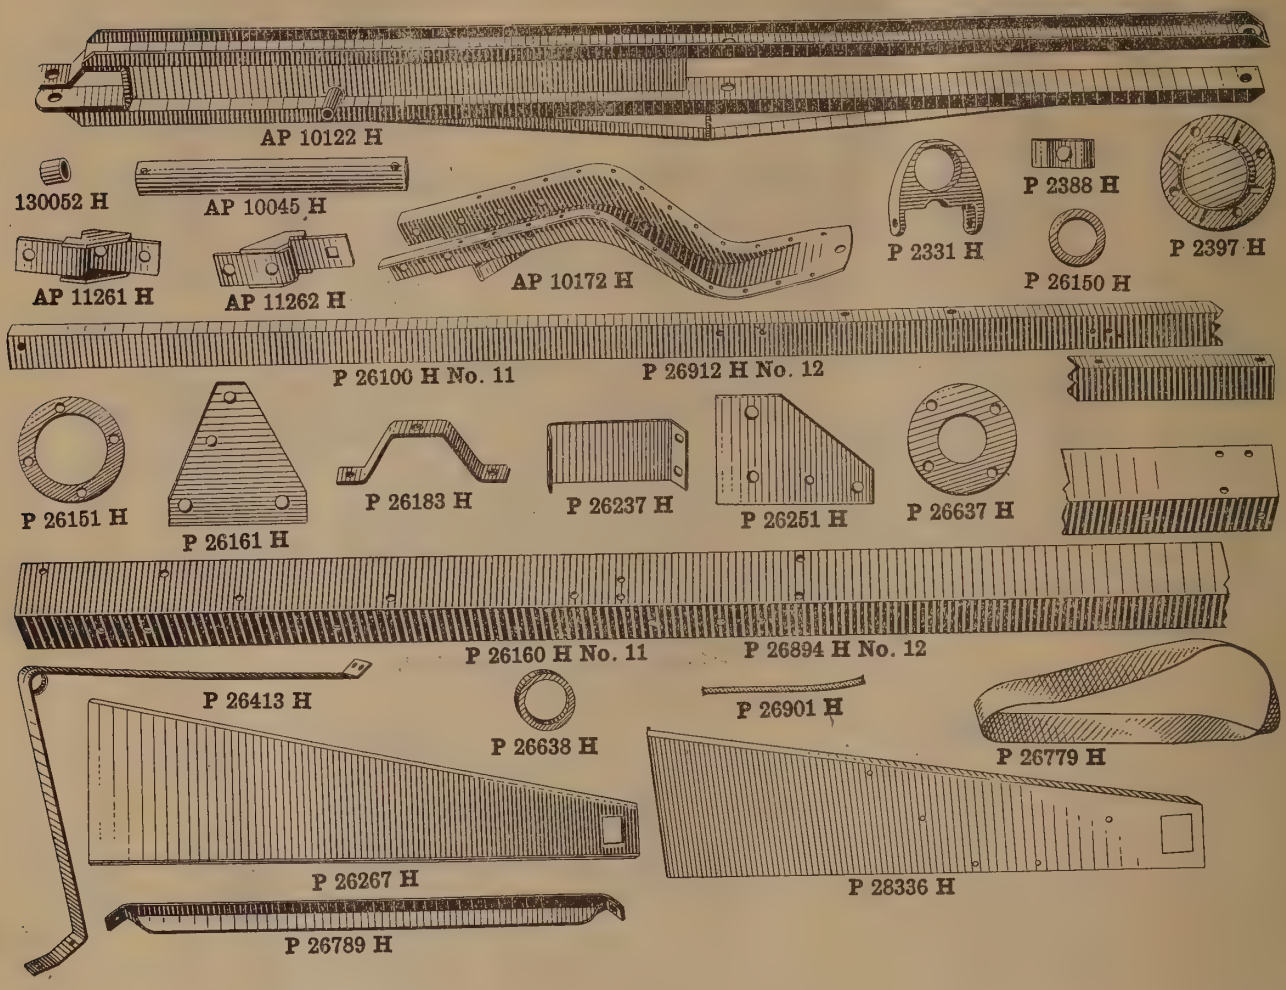

REEL

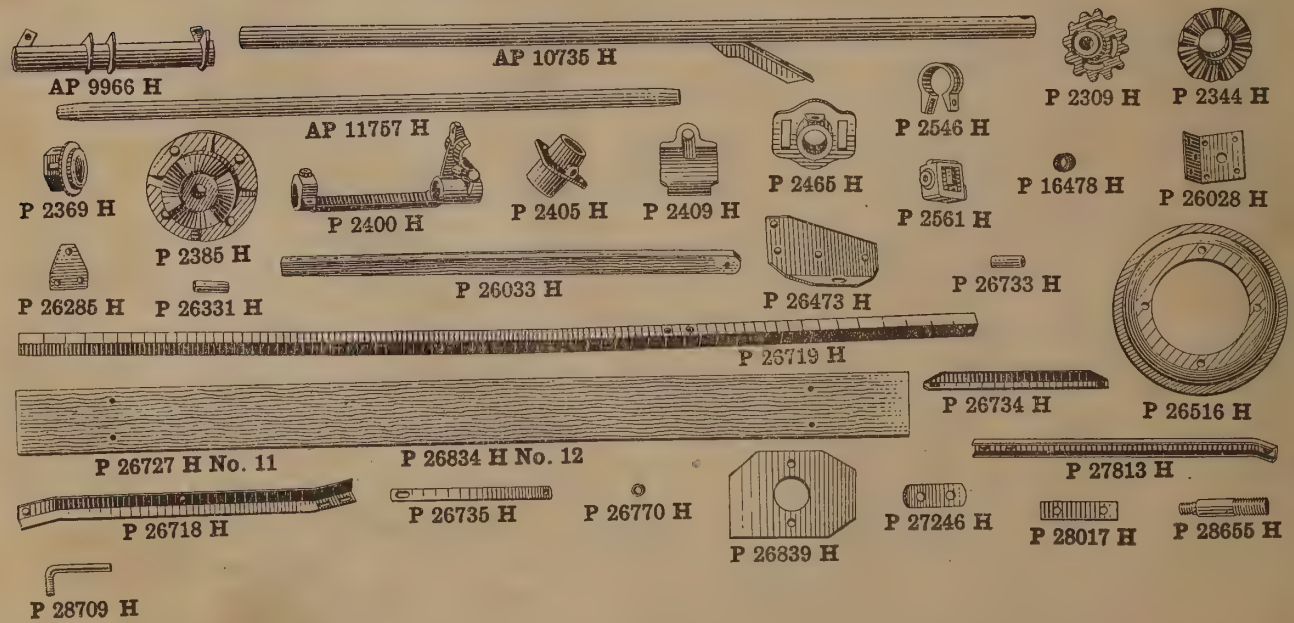

PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN

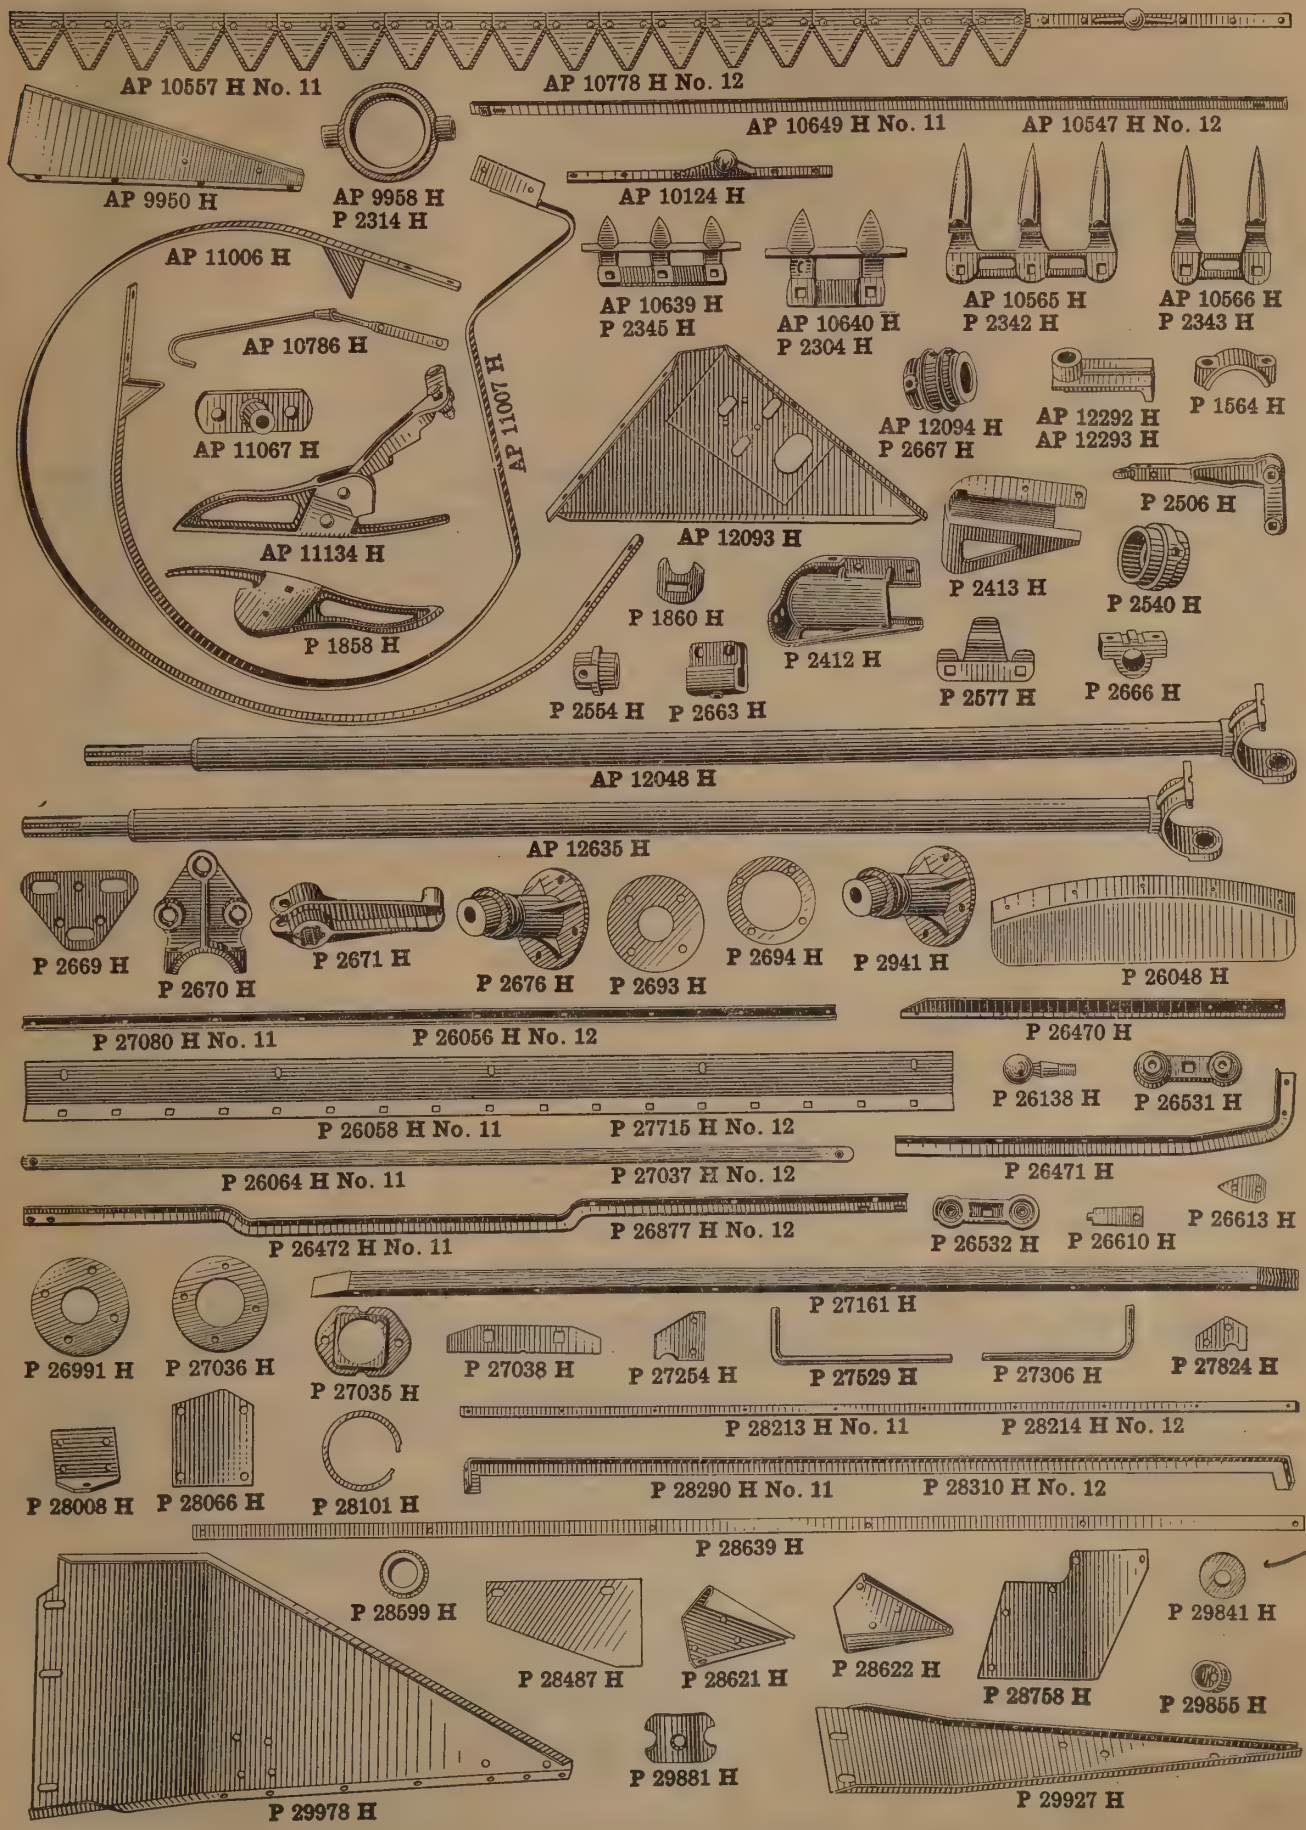

PLATFORM, PLATFORM DRIVE PARTS, SICKLE AND PITMAN—Continued

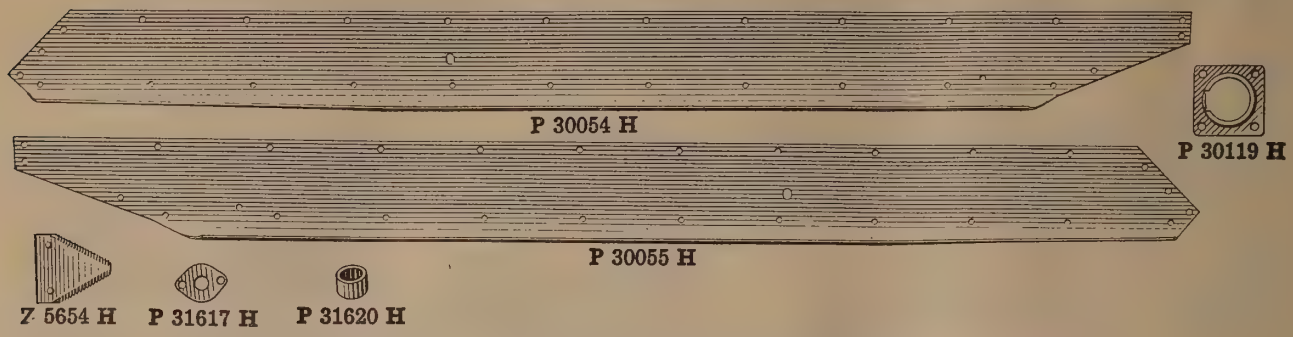

PLATFORM LIFTING LEVER AND LIFTING SPRINGS

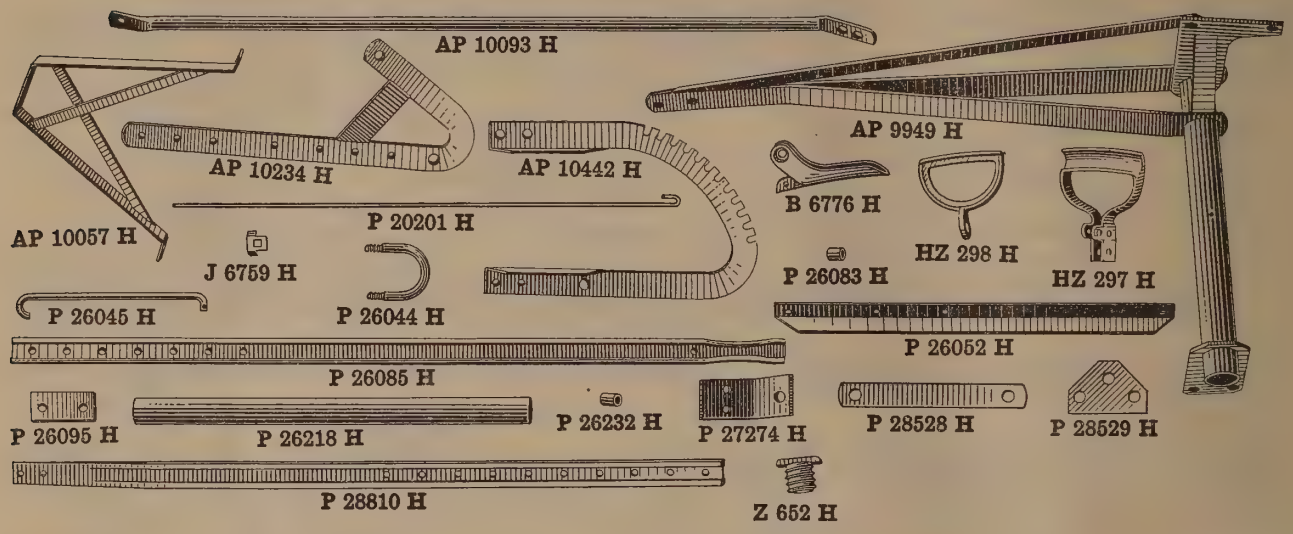

FEEDER CANVAS FRAME AND ROLLERS

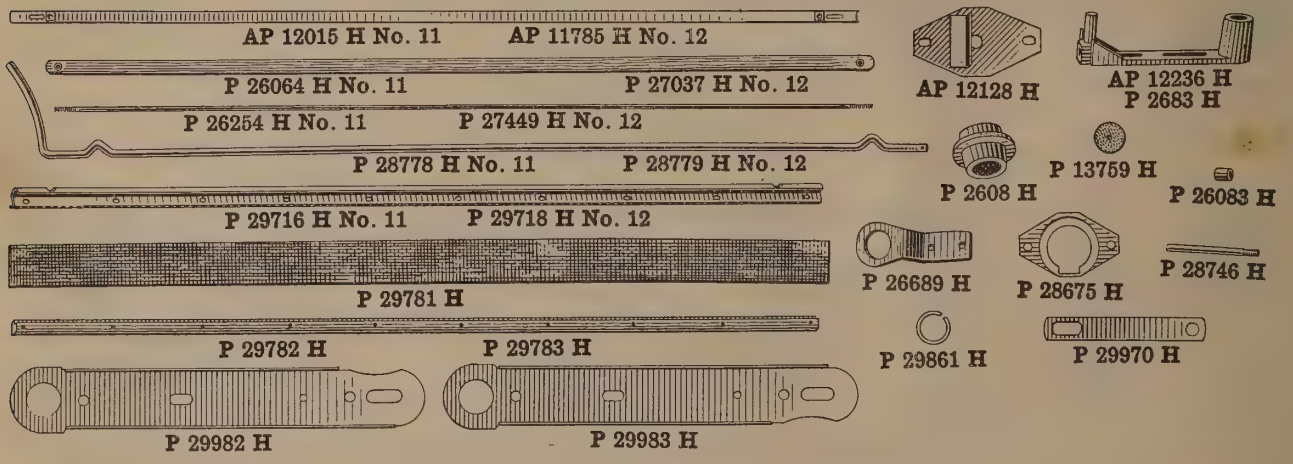

CYLINDER AND CONCAVES

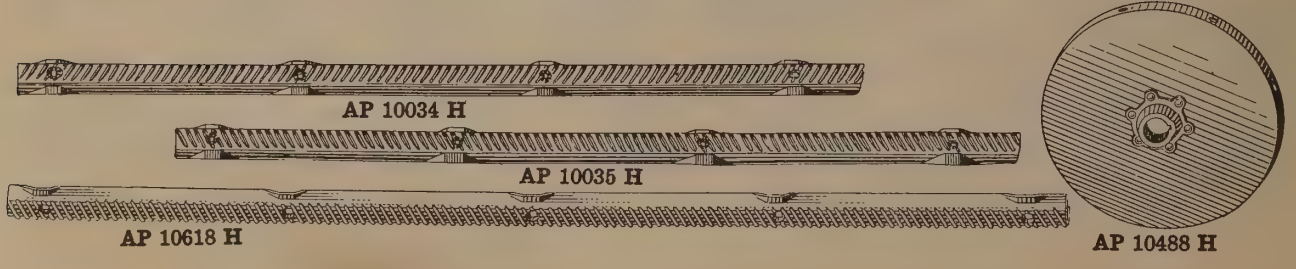

CYLINDER AND CONCAVES—Continued

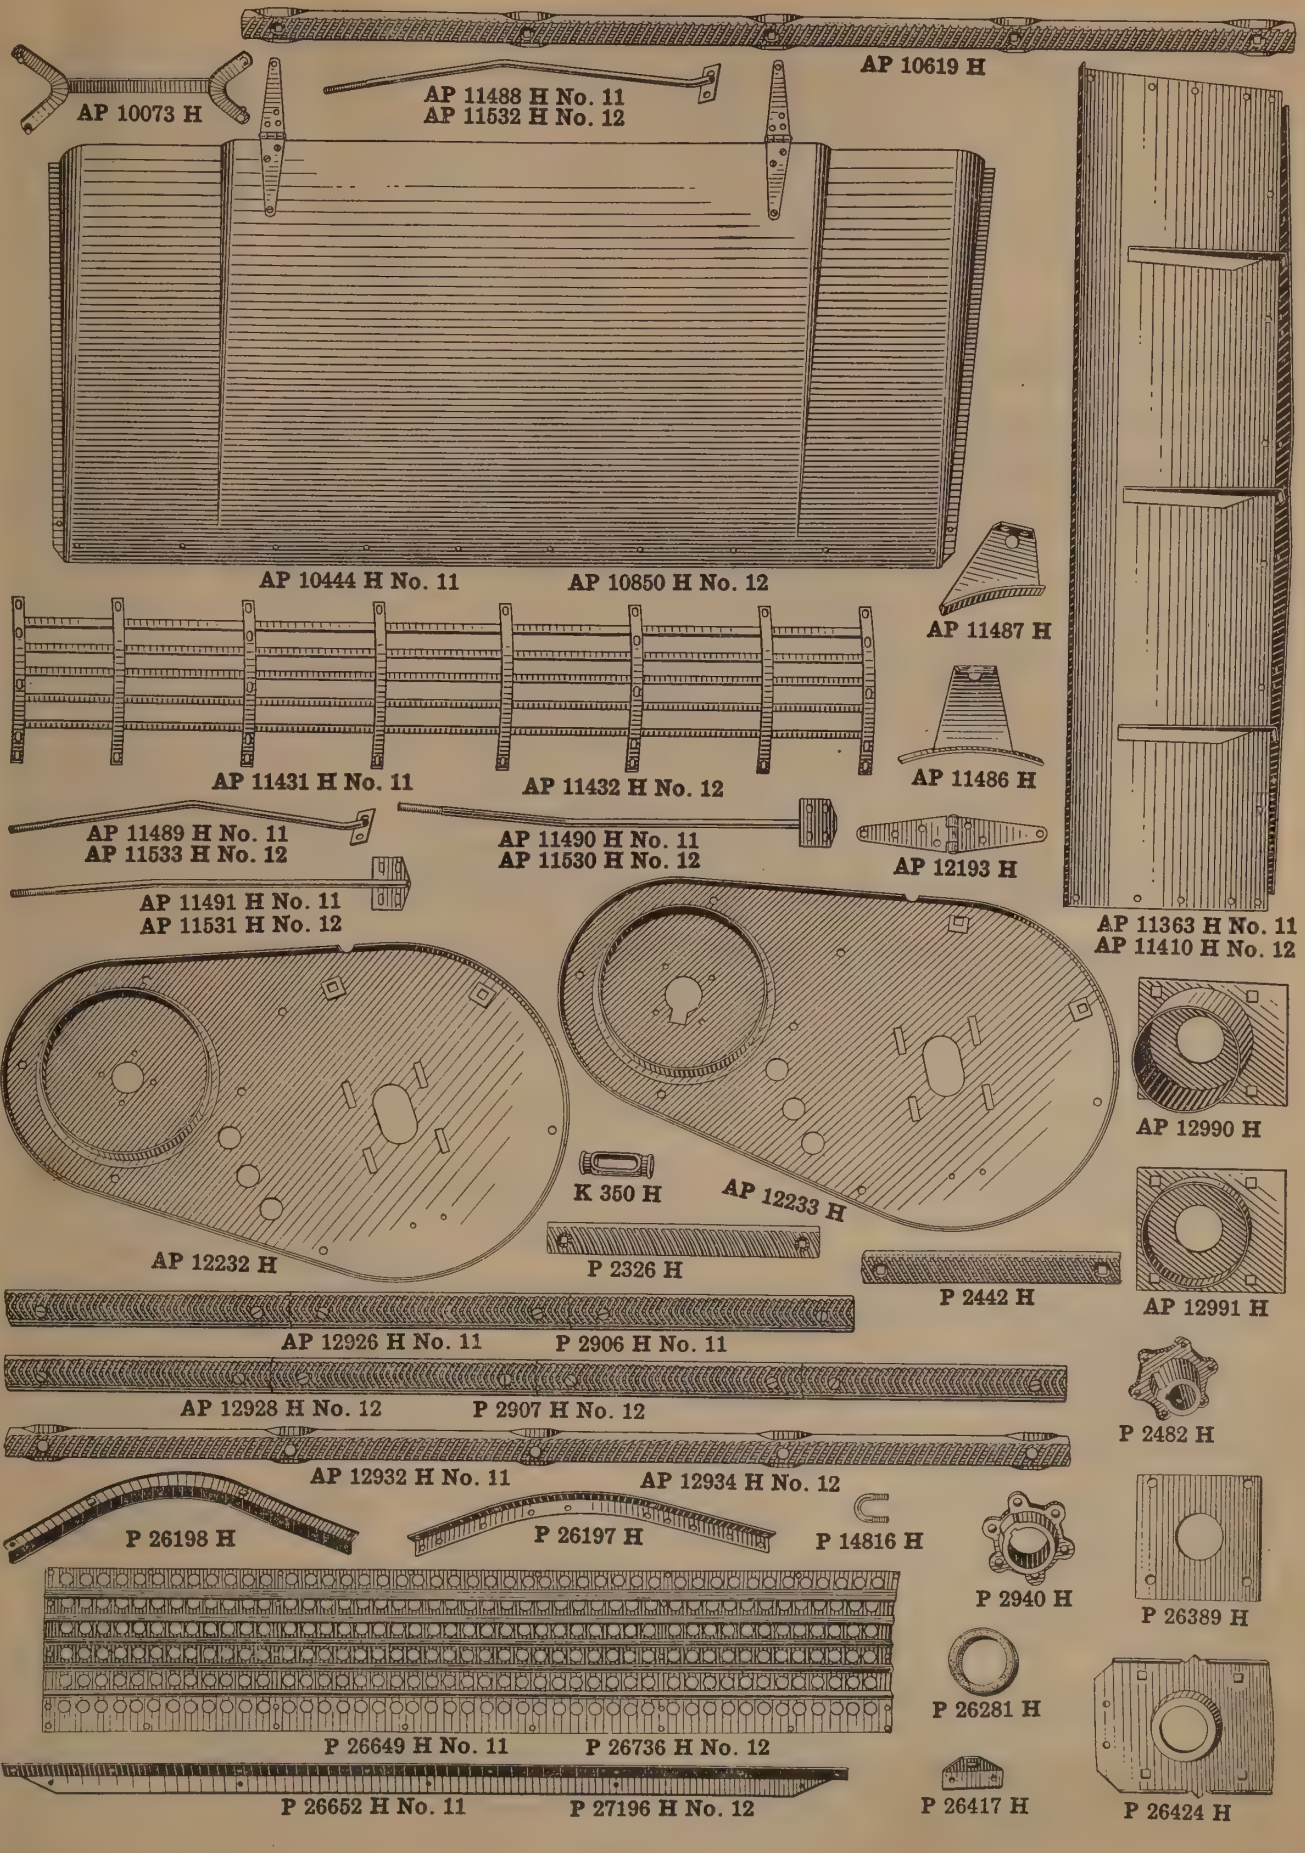

CYLINDER AND CONCAVES—Continued

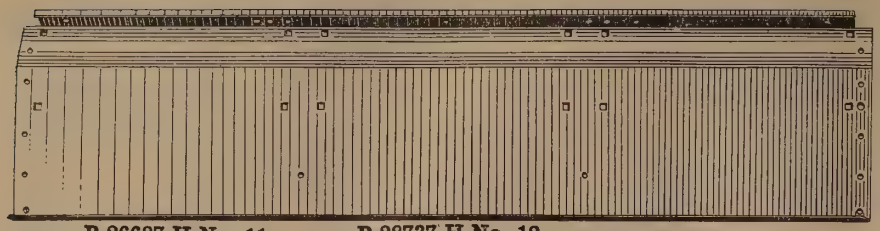
P 26687 H No. 11 P 28737 H No. 12

P 26690 H

P 28484 H

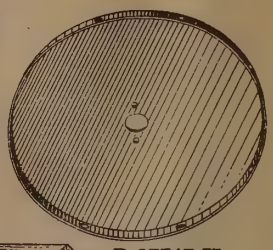
P 27747 H


P 27226 H


P 27227 H


P 27800 H No. 11 P 27798 H No. 12

P 27765 H No. 11 P 27703 H No. 12


P 28306 H No. 11 P 28307 H No. 12

P 28485 H


P 28693 H


P 28337 H No. 11 P 28334 H No. 12

P 28510 H No. 11 P 28745 H No. 12

P 28743 H

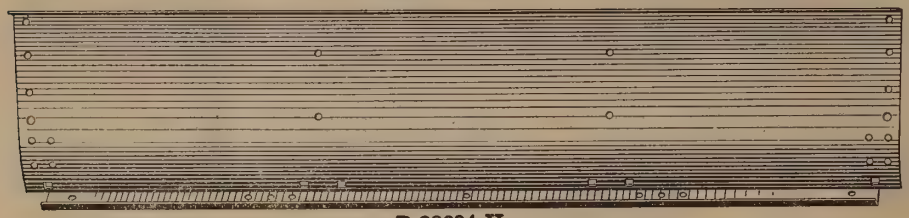
P 28694 H

P 28744 H

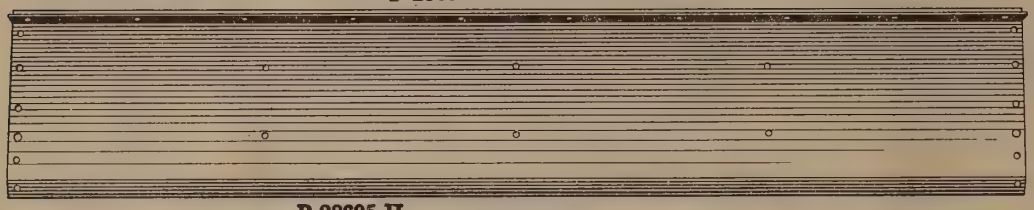
P 28695 H

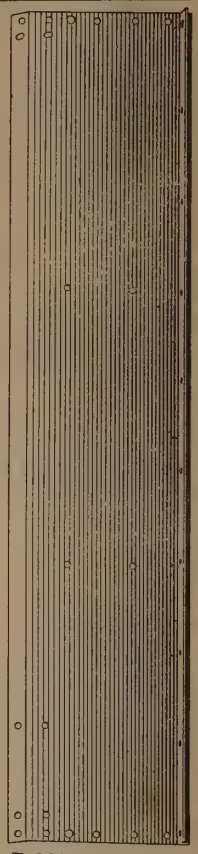
P 28697 H No. 11
P 28739 H No. 12

P 28847 H No. 11 P 27799 H No. 12

P 28851 H

P 29437 H

P 29649 H No. 11 P 29650 H No. 12

P 29925 H

P 30171 H

P 30219 H

P 29892 H No. 11 P 29974 H No. 12


P 30216 H

P 30221 H
P 30263 H


P 29906 H No. 11 P 29930 H No. 12

P 30220 H

P 30261 H

P 29907 H No. 11 P 29932 H No. 12

P 30262 H


P 30264 H

P 30008 H No. 11 P 30009 H No. 12

P 30273 H P 30278 H

P 30320 H

P 30321 H

P 30277 H No. 11 P 30279 H No. 12

CYLINDER AND CONCAVES—Continued

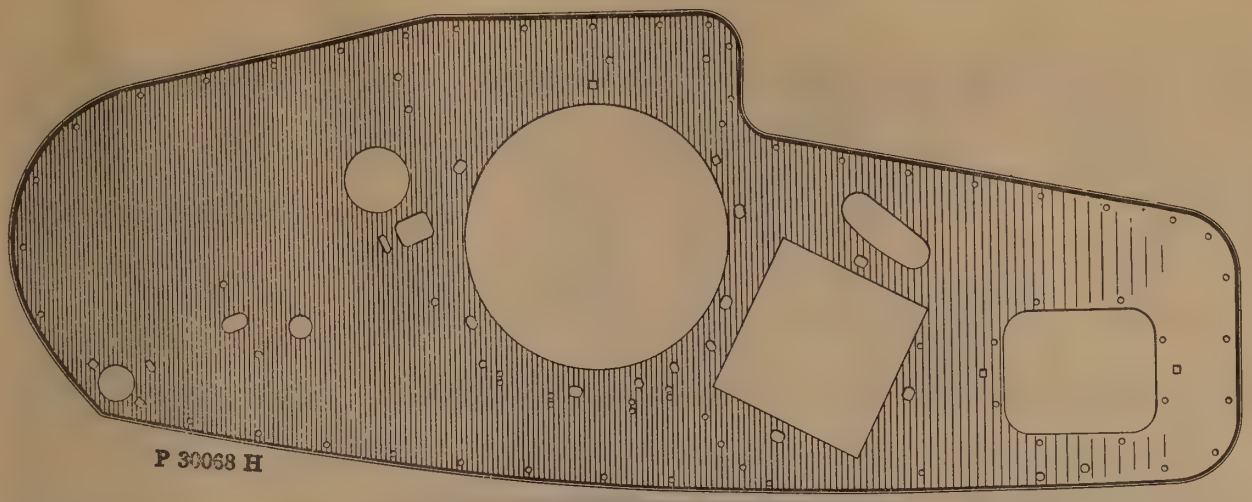
P 30068 H

P 30069 H

BEATER BEHIND THE CYLINDER

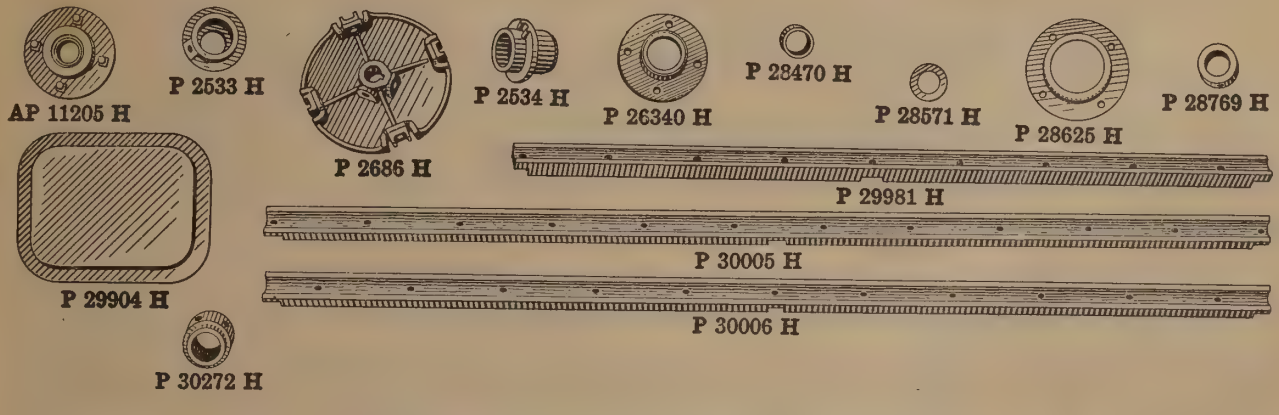

STRAW RACK AND REAR HOOD

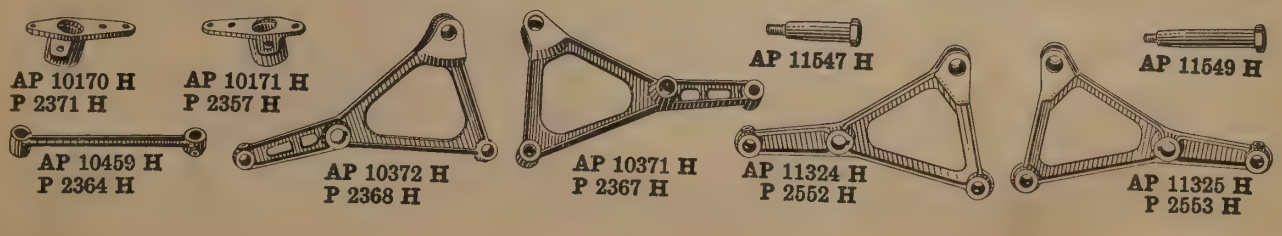

STRAW RACK AND REAR HOOD—Continued

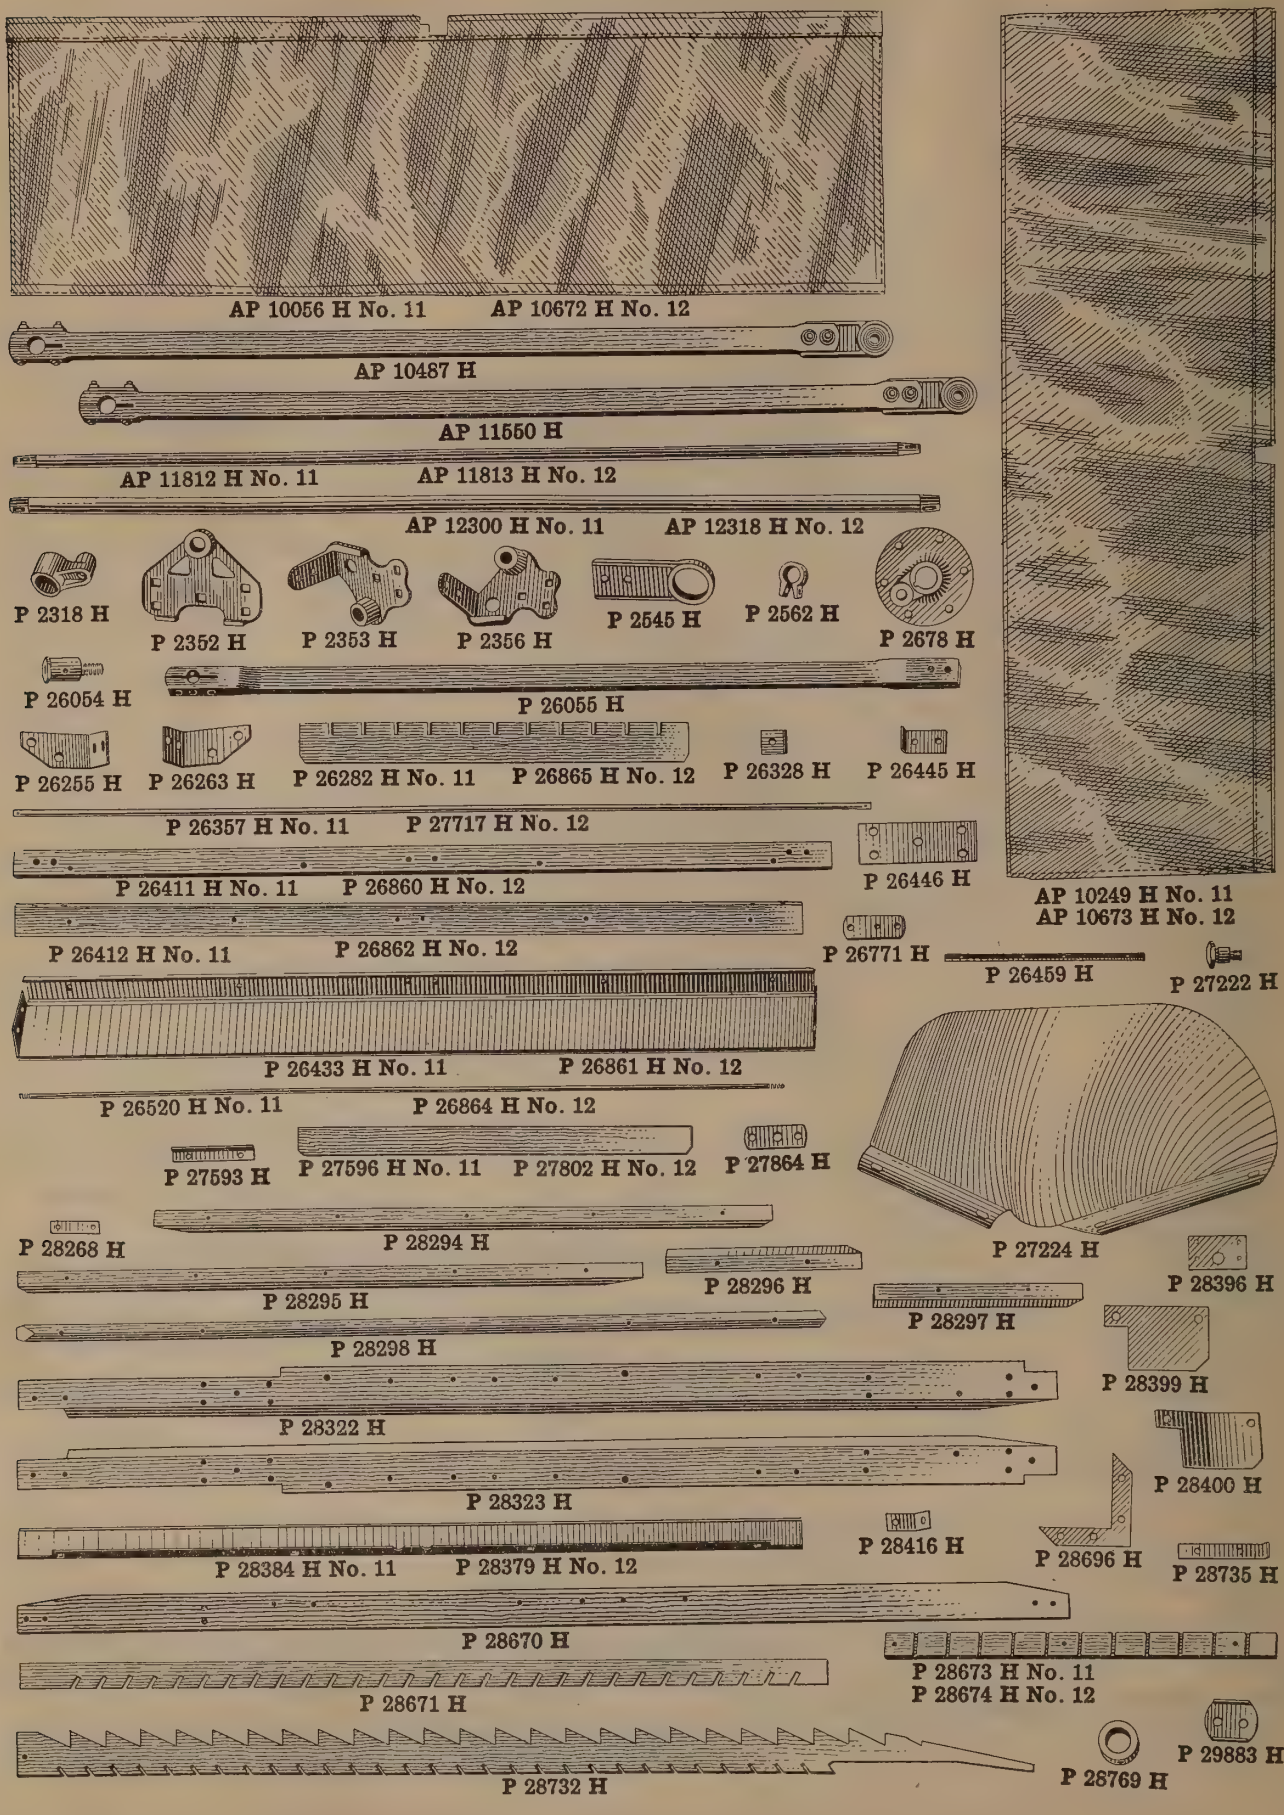

STRAW RACK AND REAR HOOD—Continued

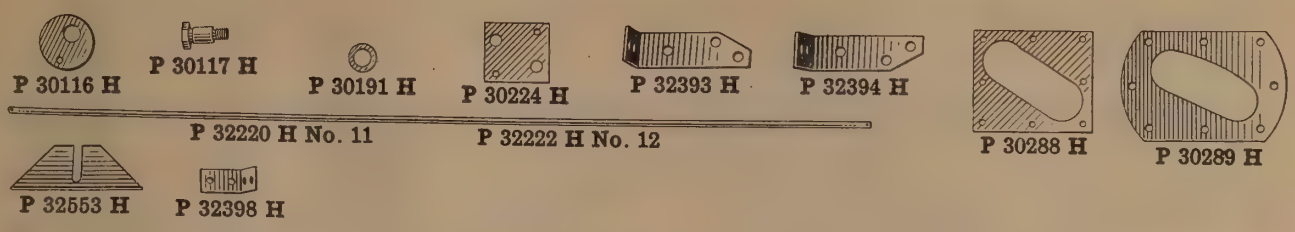

CONVEYOR UNDER STRAW RACK

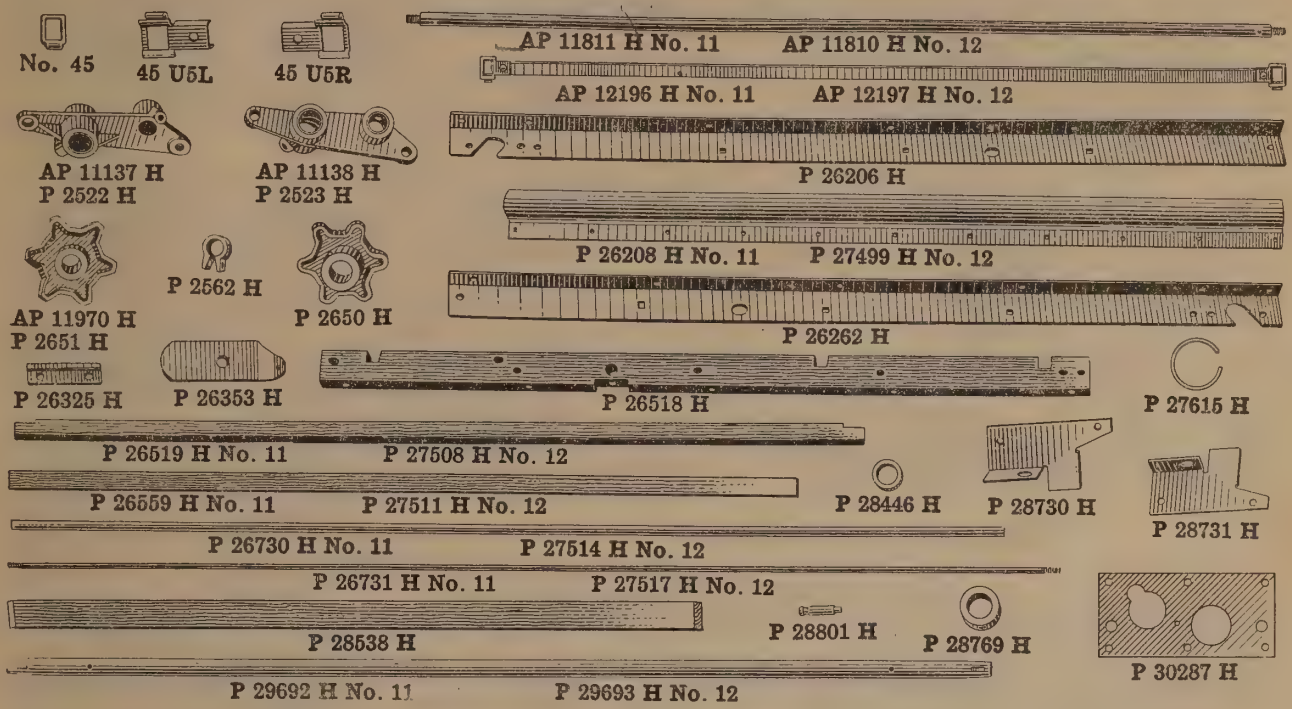

SHOE

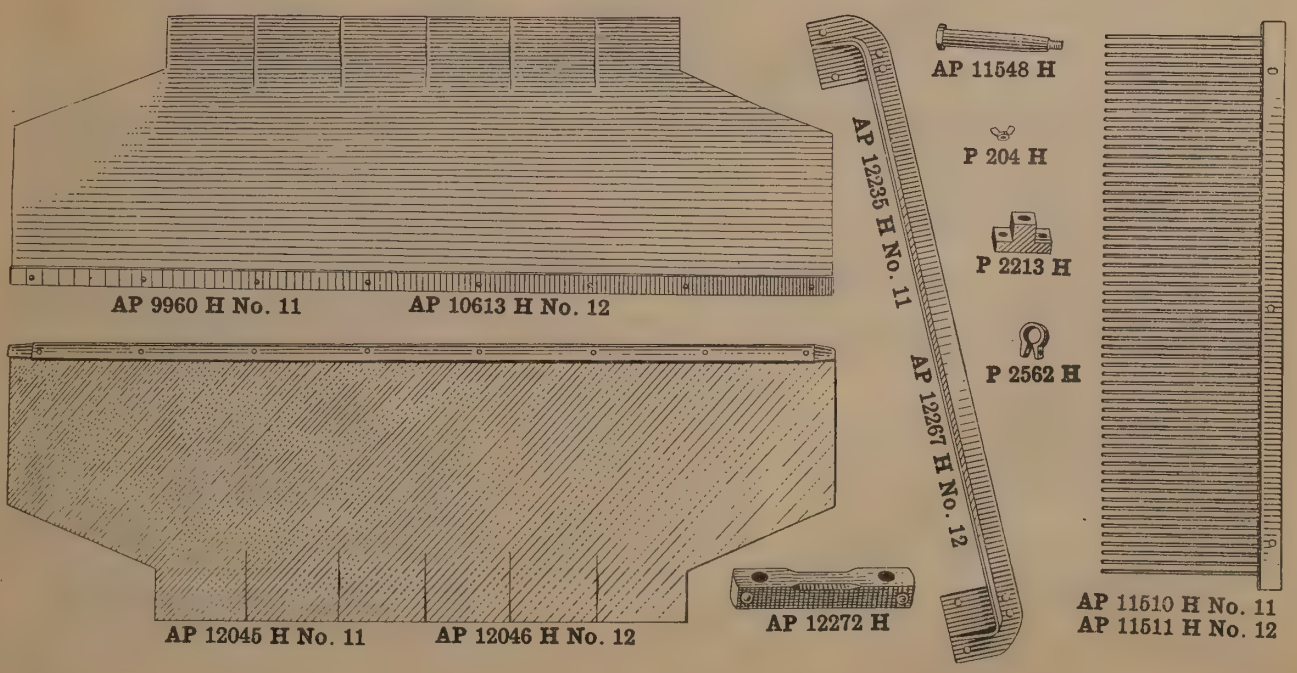

SHOE—Continued

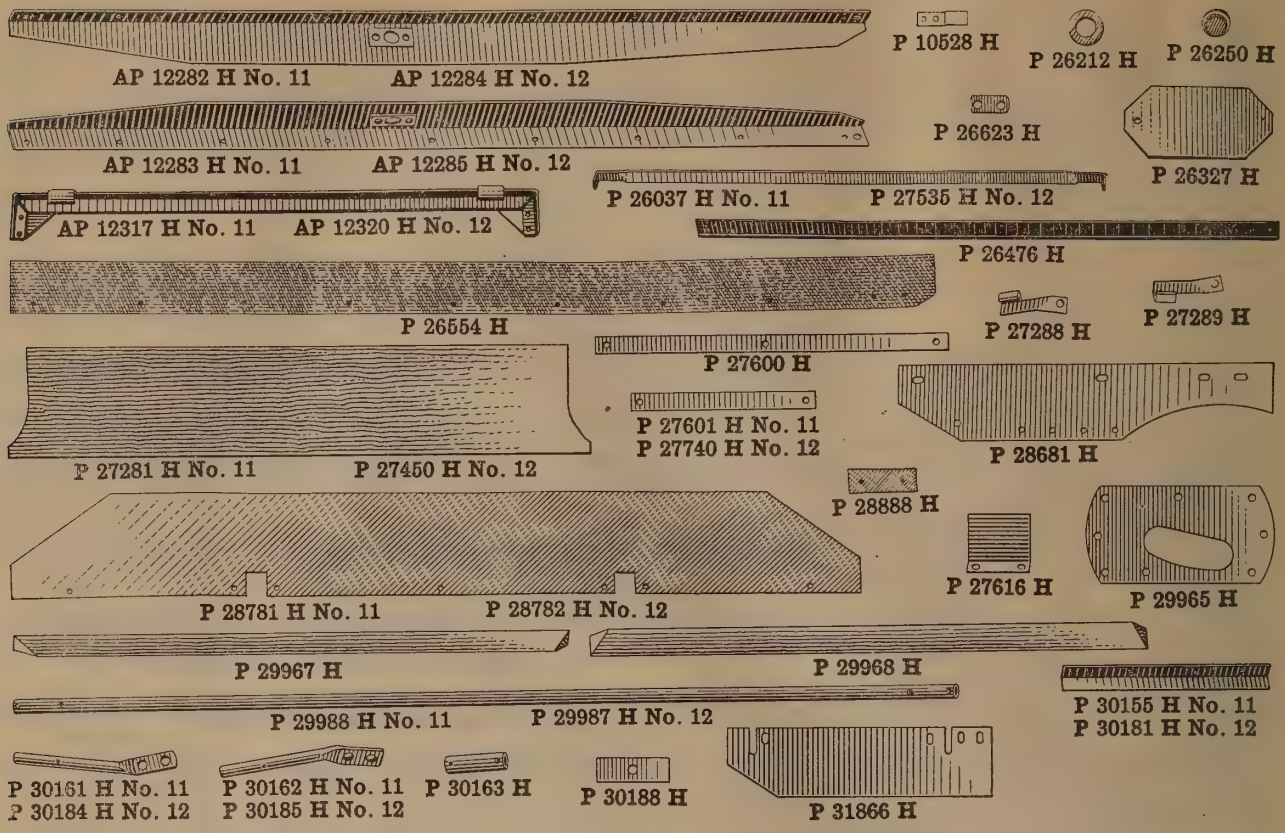

FAN

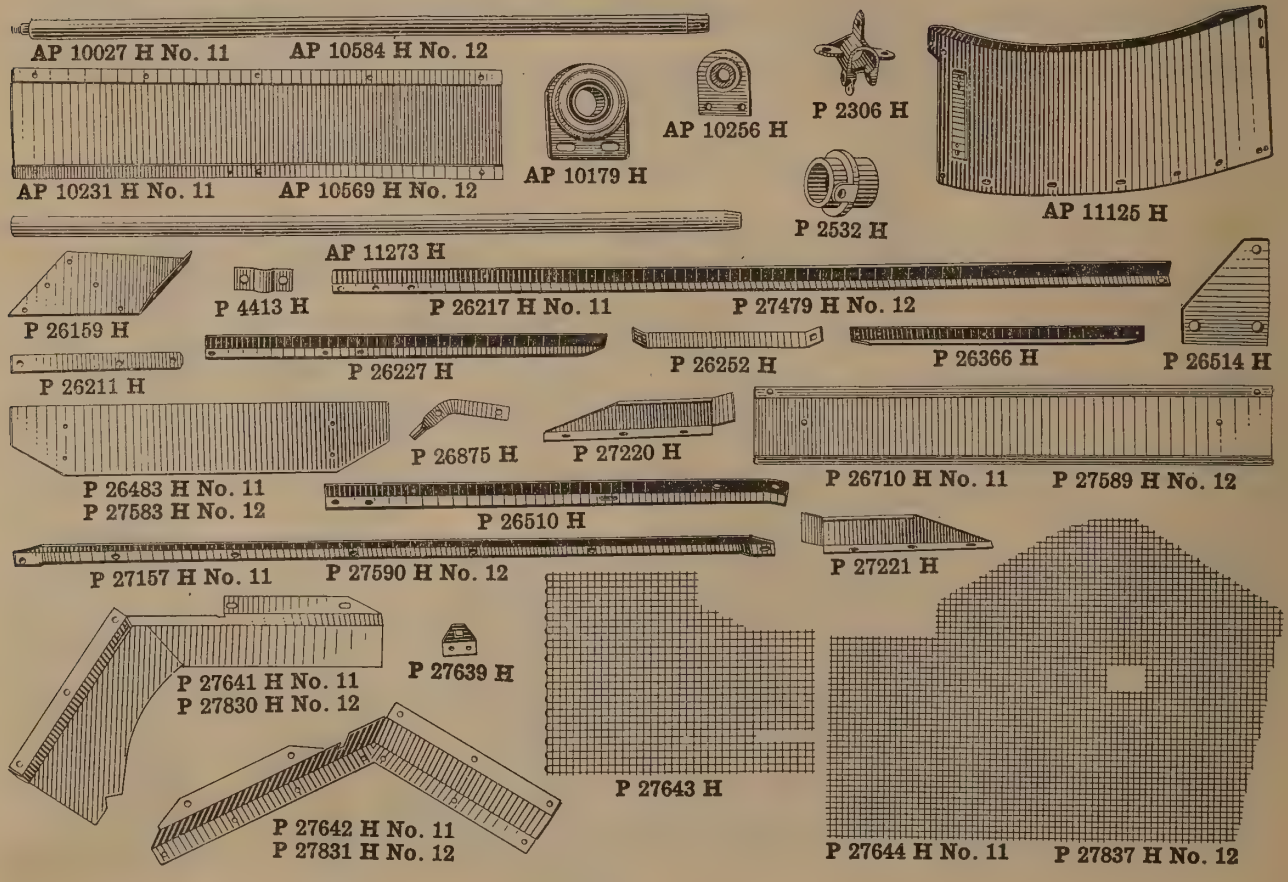

FAN—Continued

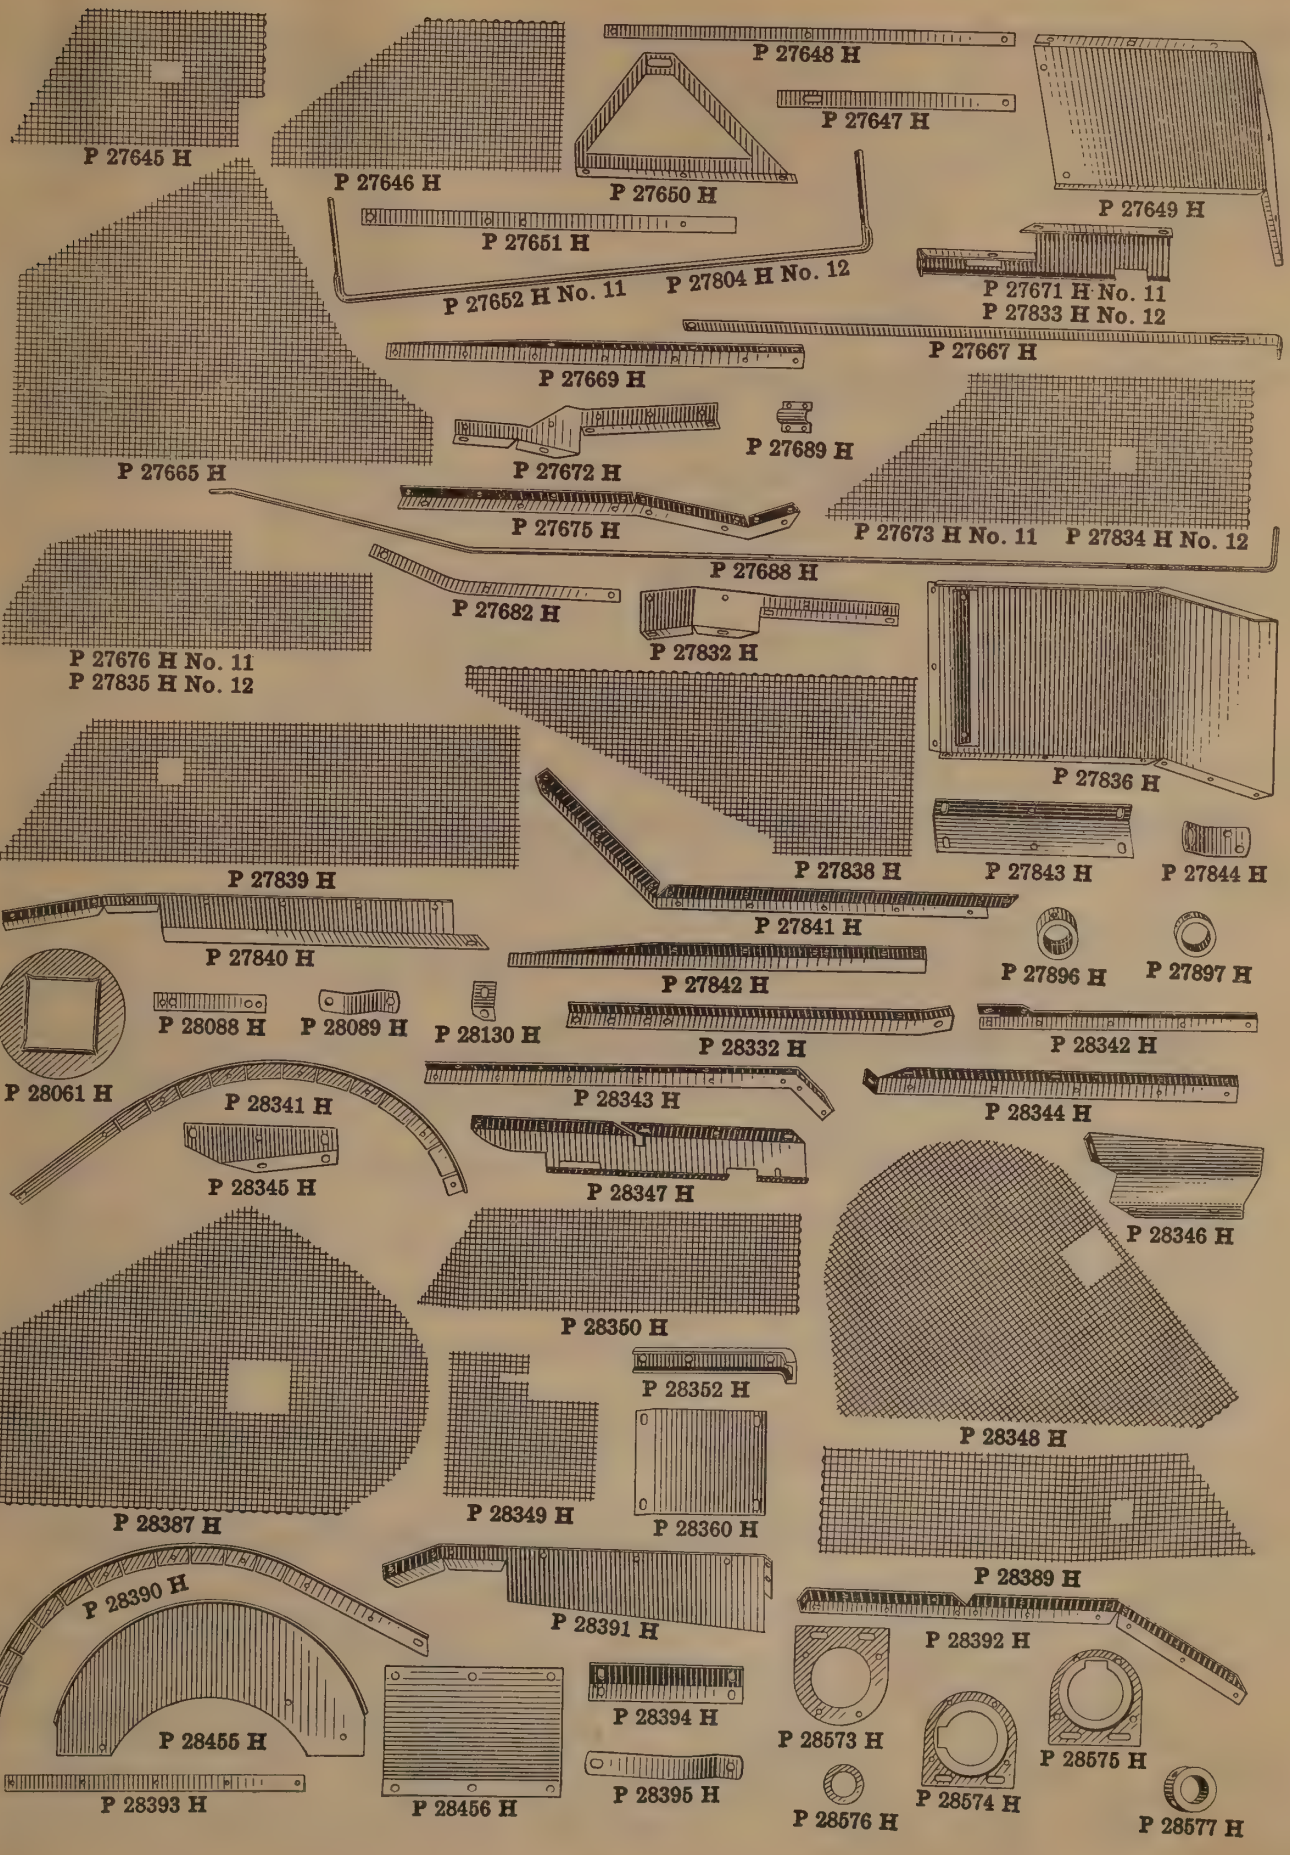

FAN—Continued

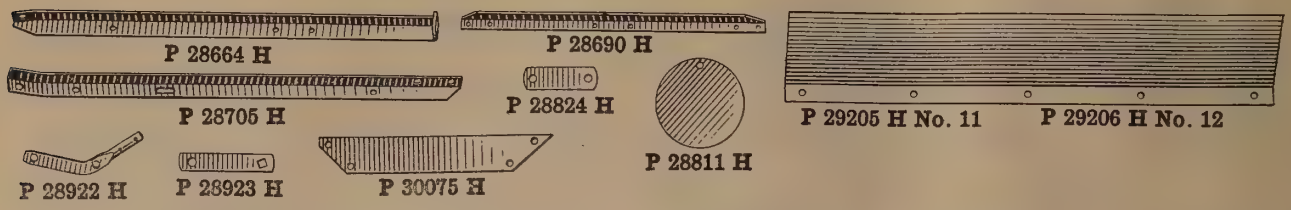

TAILINGS ELEVATOR AND TAILINGS AUGER

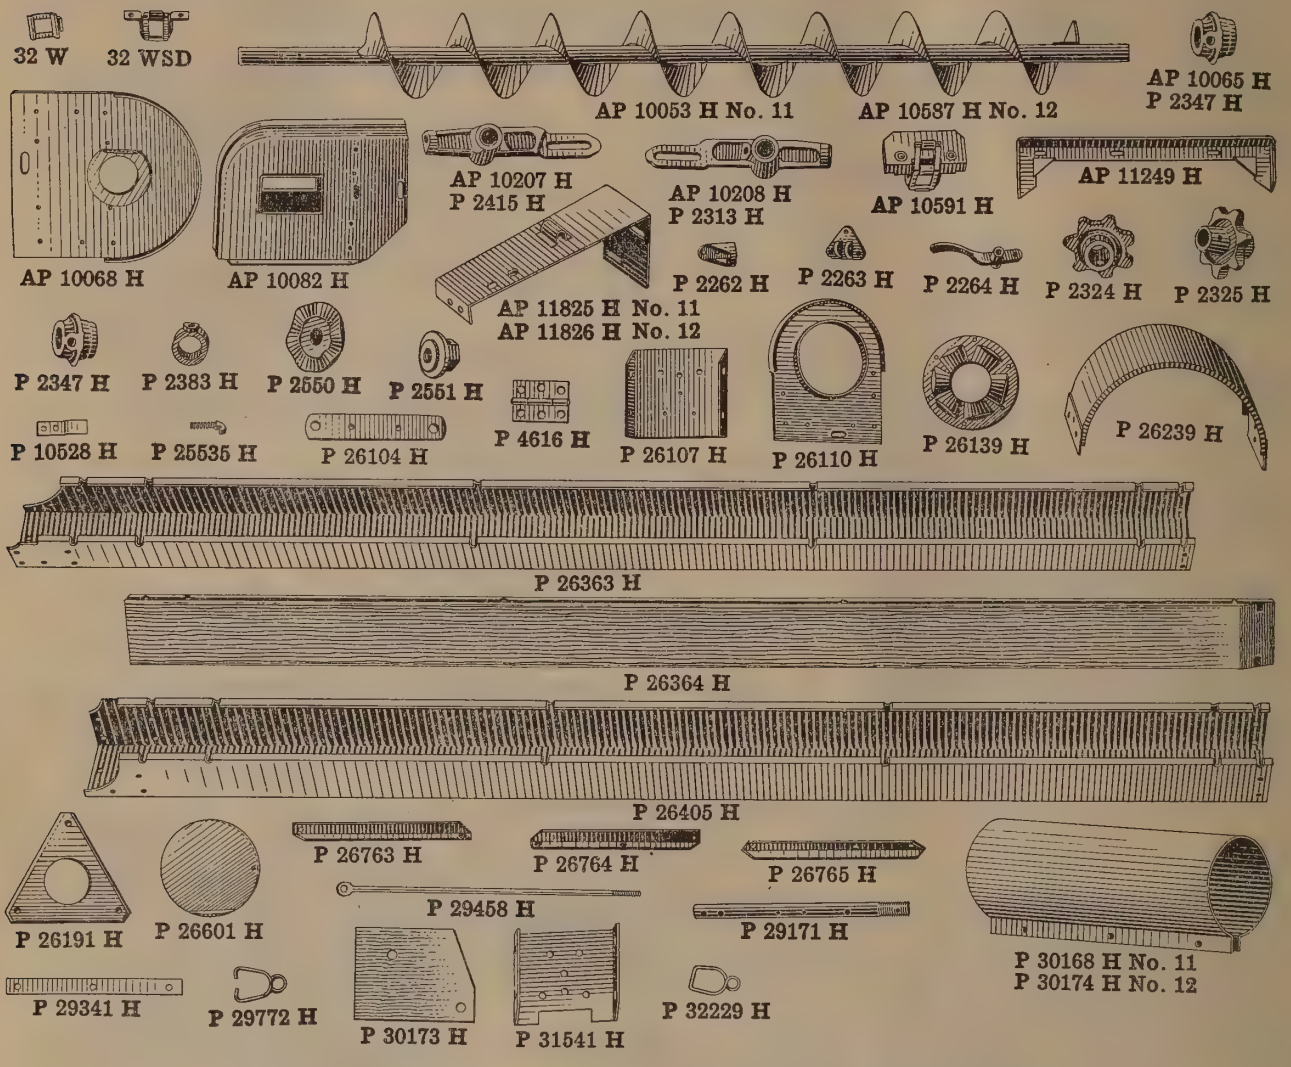

GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER

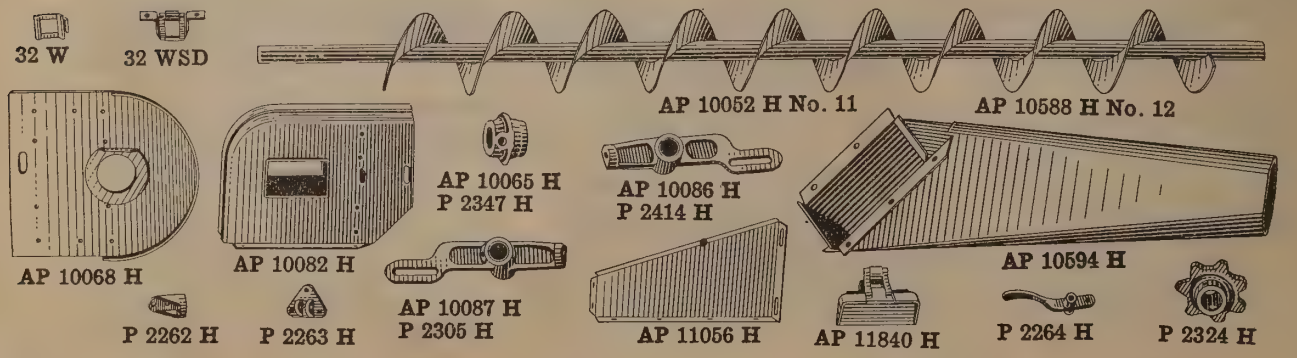

GRAIN TANK ELEVATOR AND CLEAN GRAIN AUGER—Continued

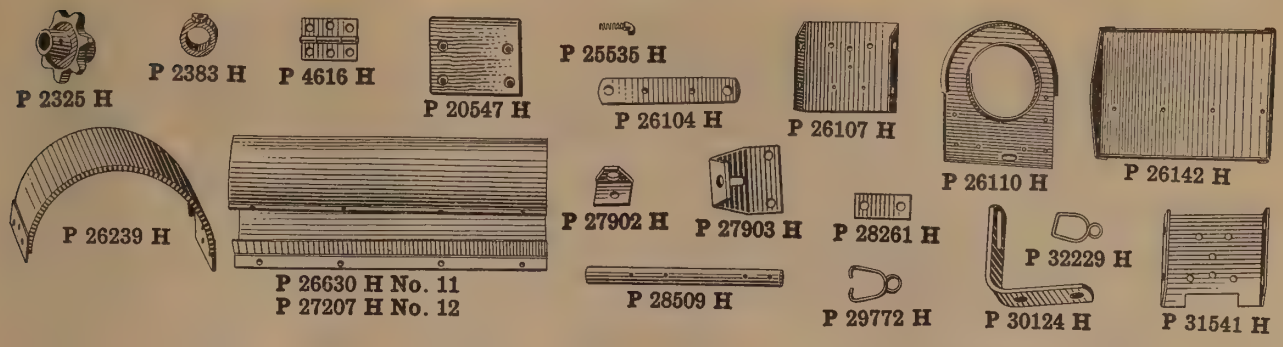

GRAIN TANK AND SUPPORTS

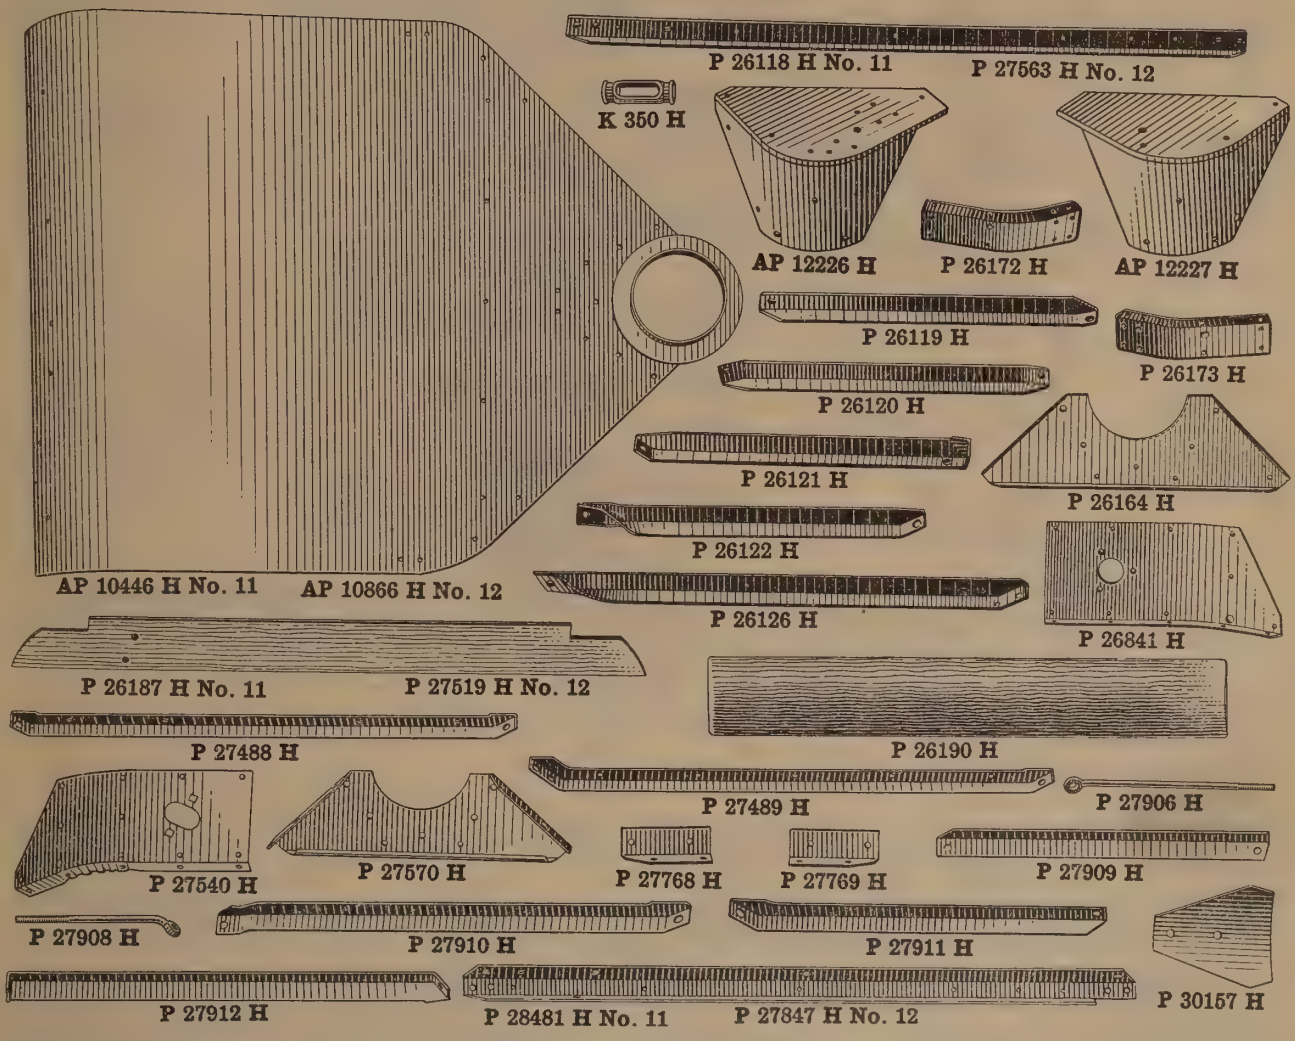

GRAIN TANK UNLOADING AUGER

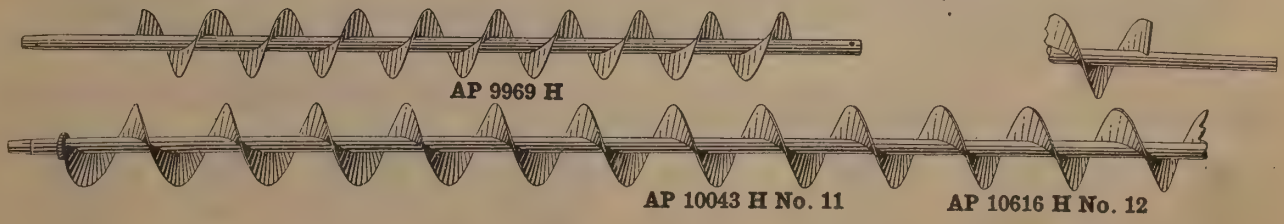

GRAIN TANK UNLOADING AUGER—Continued

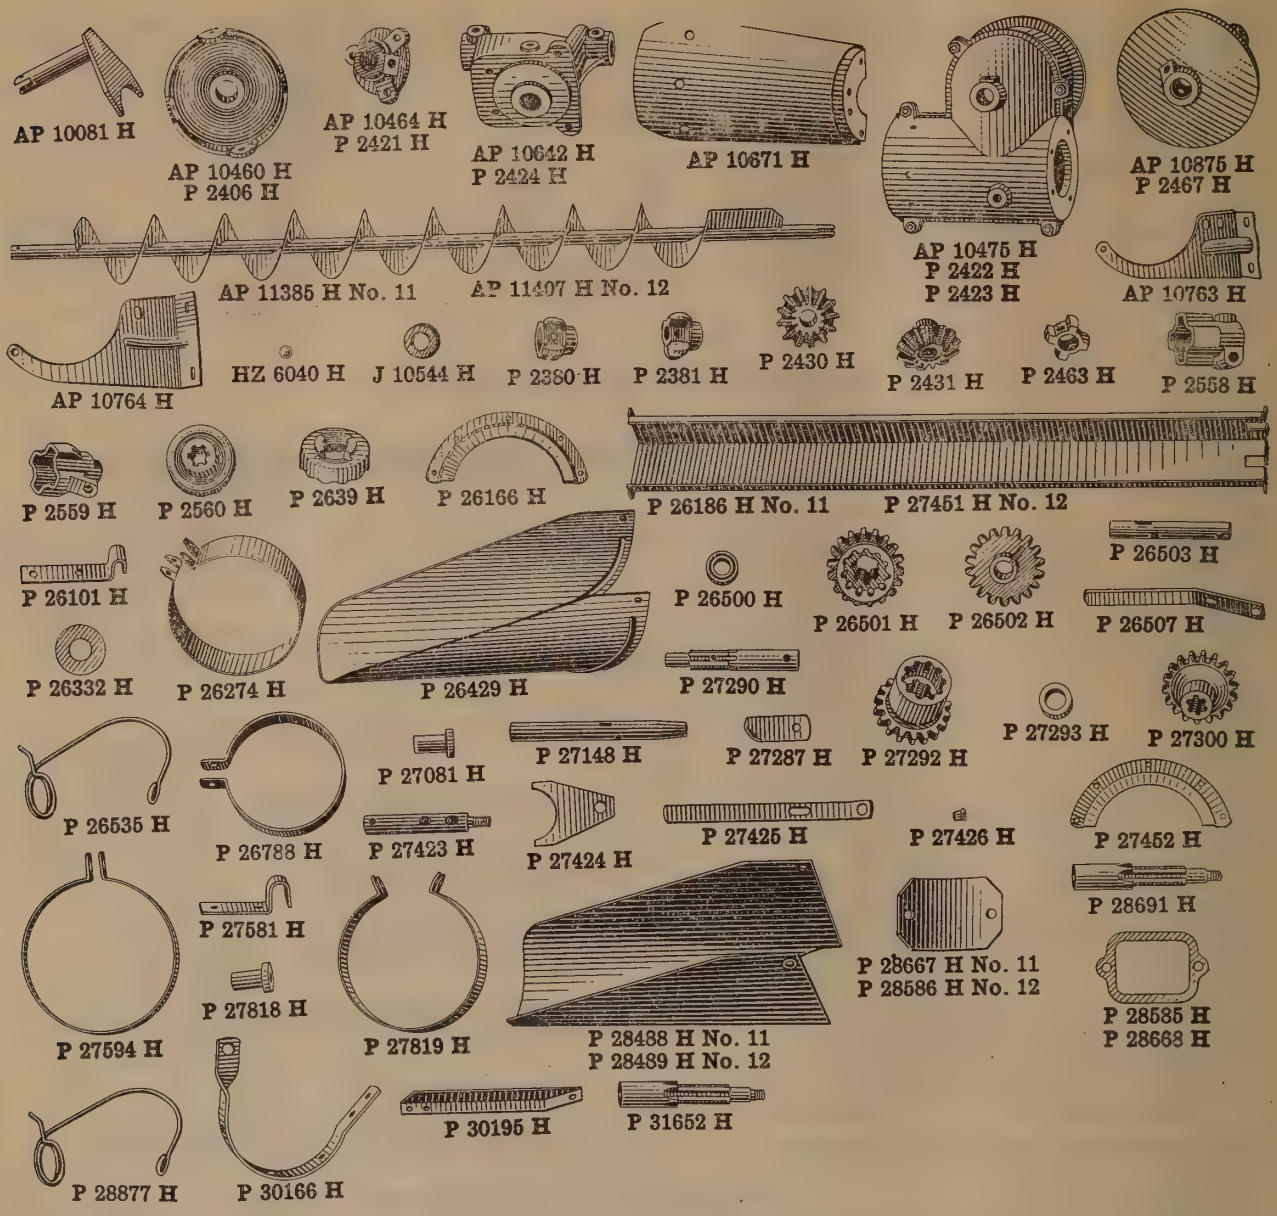

POWER DRIVE

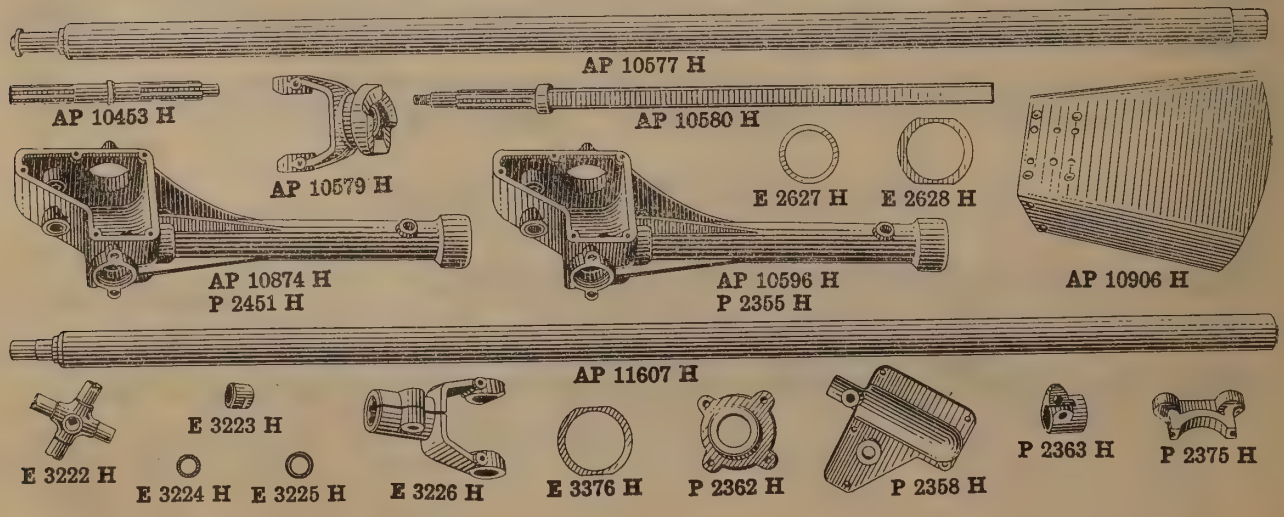

POWER DRIVE—Continued

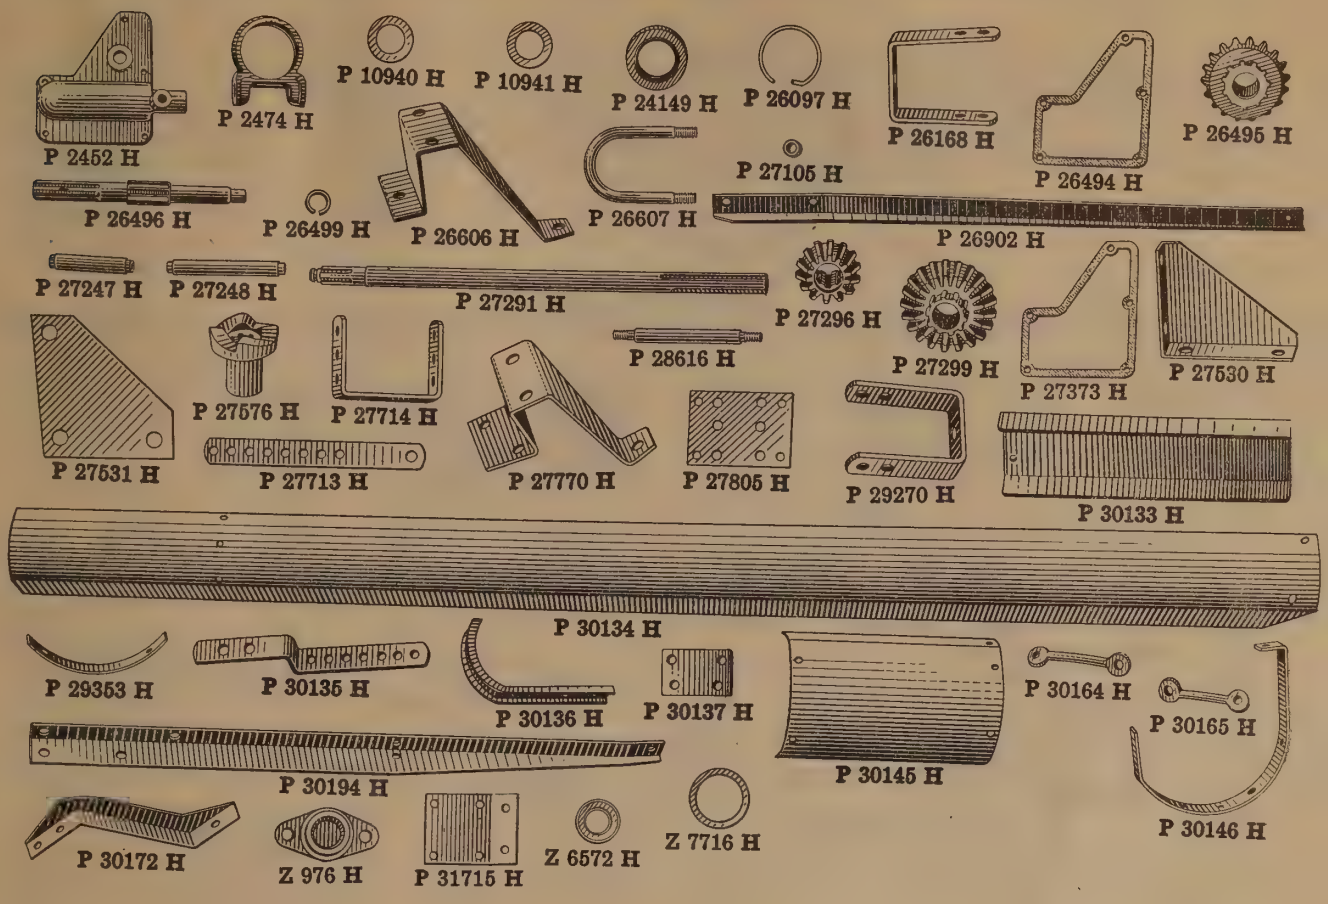

DRIVE AND DRIVEN SHEAVES AND SPROCKETS

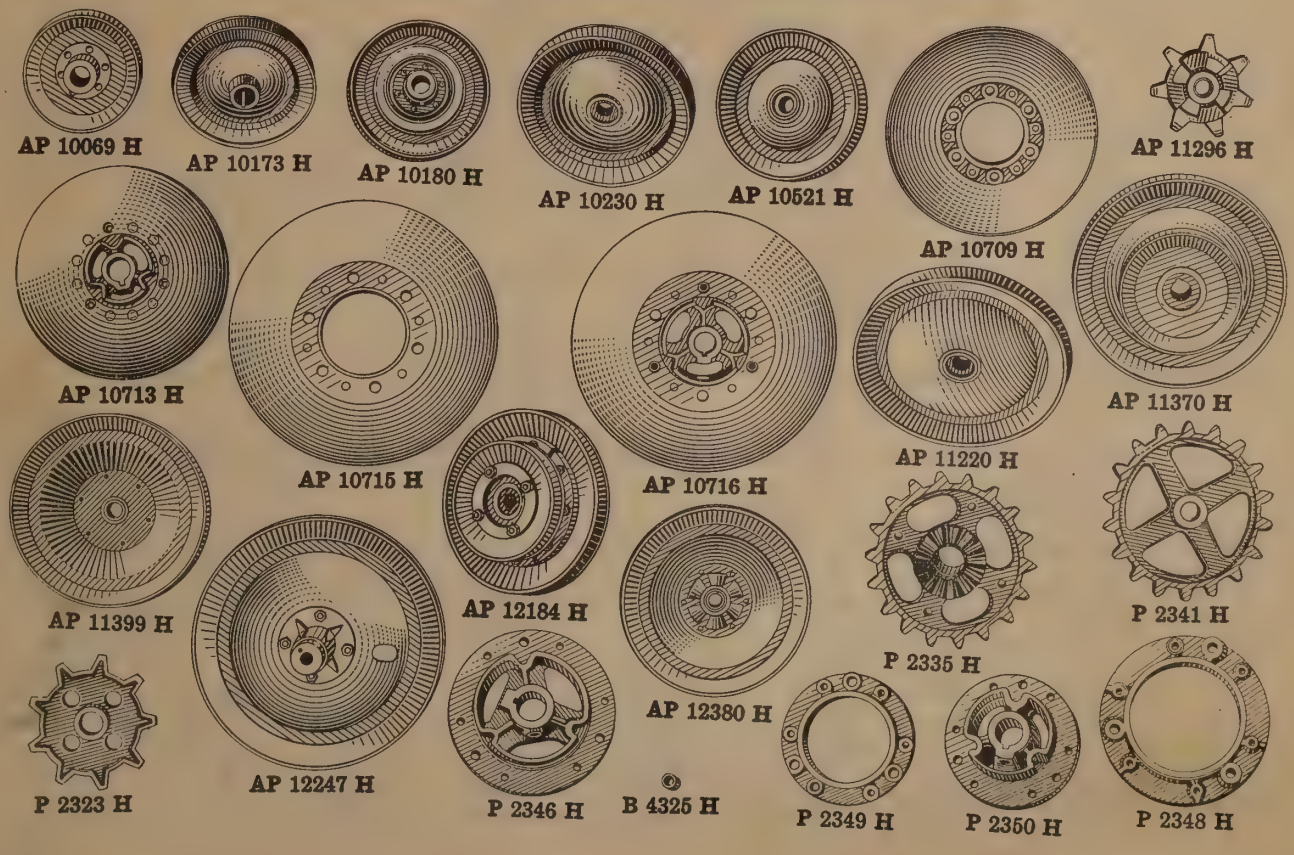

DRIVE AND DRIVEN SHEAVES AND SPROCKETS—Continued

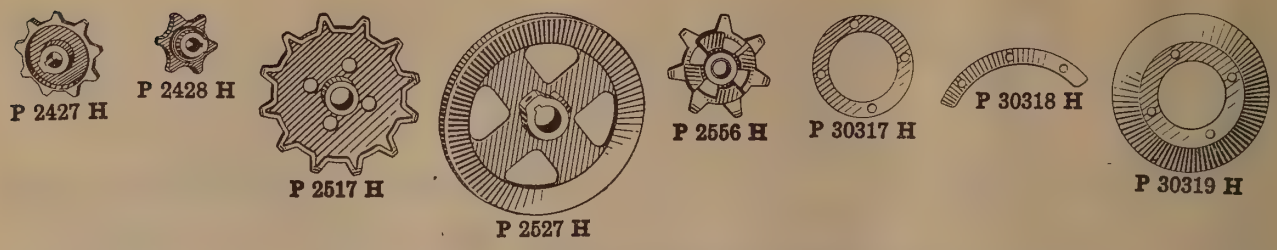

DRIVE CHAIN AND BELT TIGHTENERS AND BRACKETS, SPROCKETS AND SHEAVES

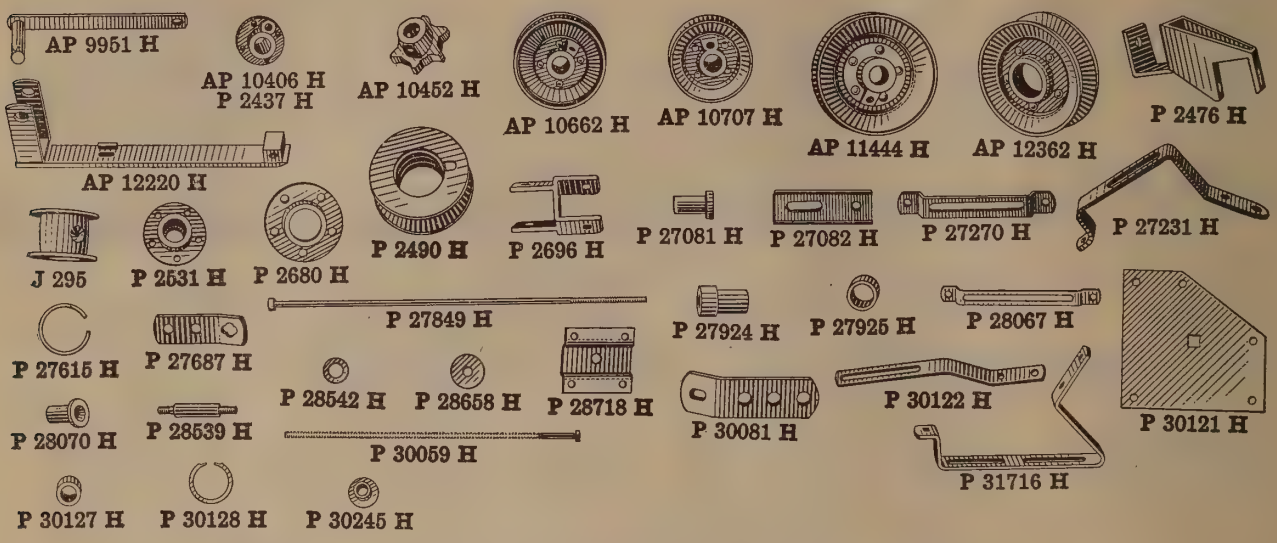

ROLLER BEARINGS AND BRONZE BEARINGS

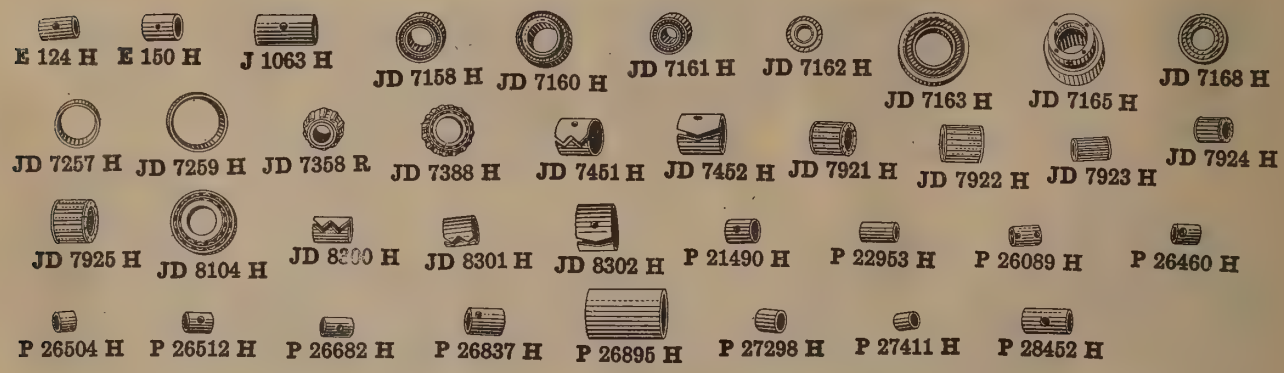

WASHERS, PINS, KEYS, BOLTS, CAPSCREWS, NUTS AND SPRINGS

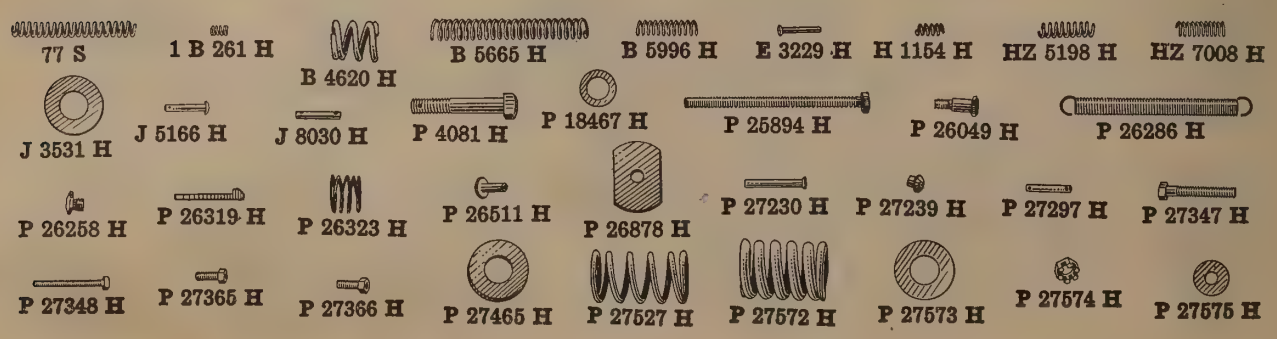

WASHERS, PINS, KEYS, BOLTS, CAPSCREWS, NUTS AND SPRINGS—Continued

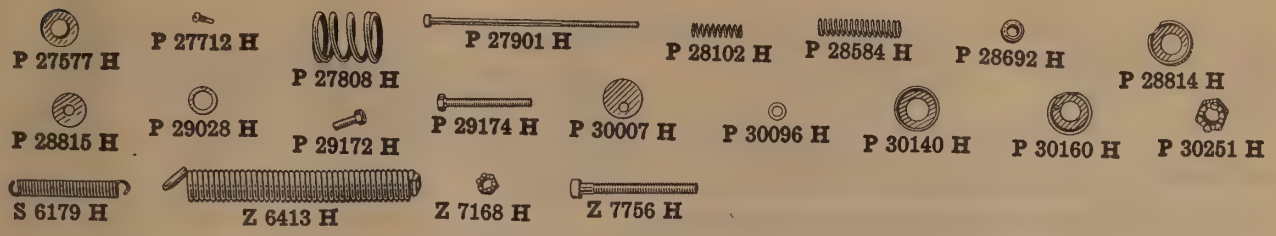

ZERK FITTINGS

KAFFIR CORN HEADING ATTACHMENT

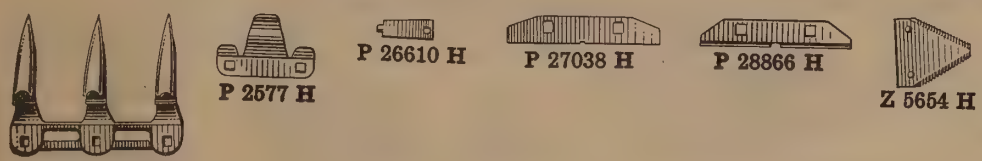

SLOW SPEED ATTACHMENT (TO PROVIDE CYLINDER SPEED OF 175, 250 AND 350 R. P. M.)

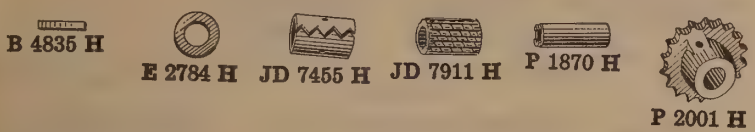

HOOK-UP EQUIPMENT

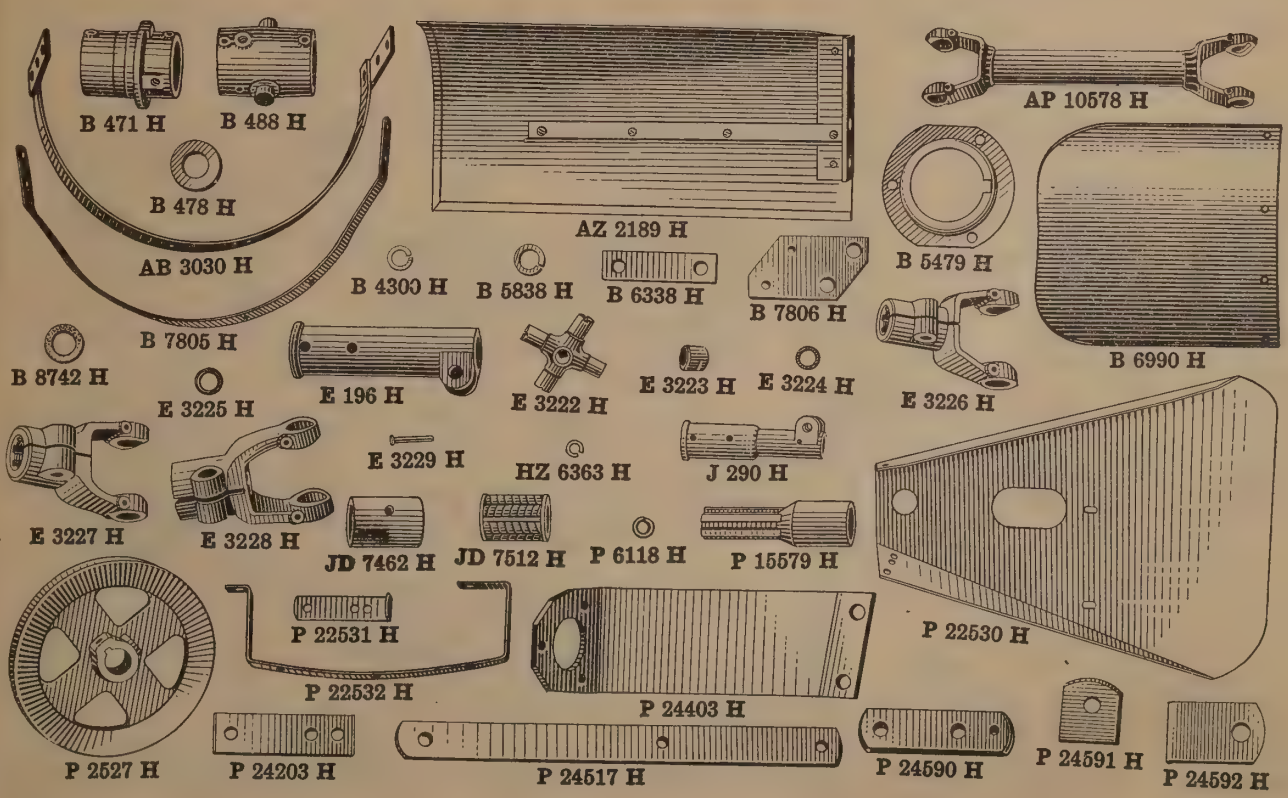

HOOK-UP EQUIPMENT—Continued

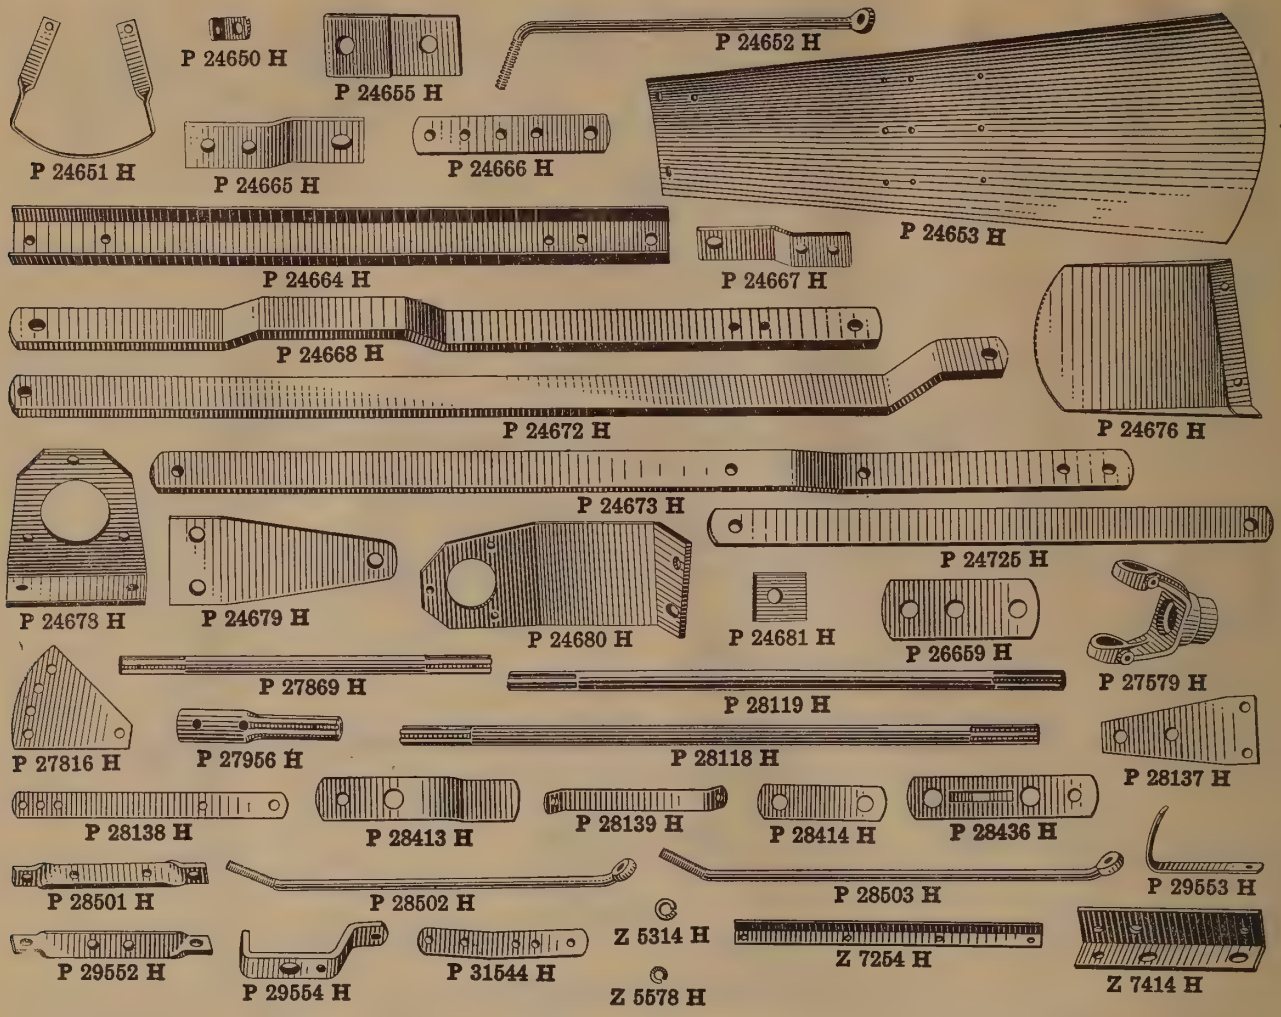

PICK-UP

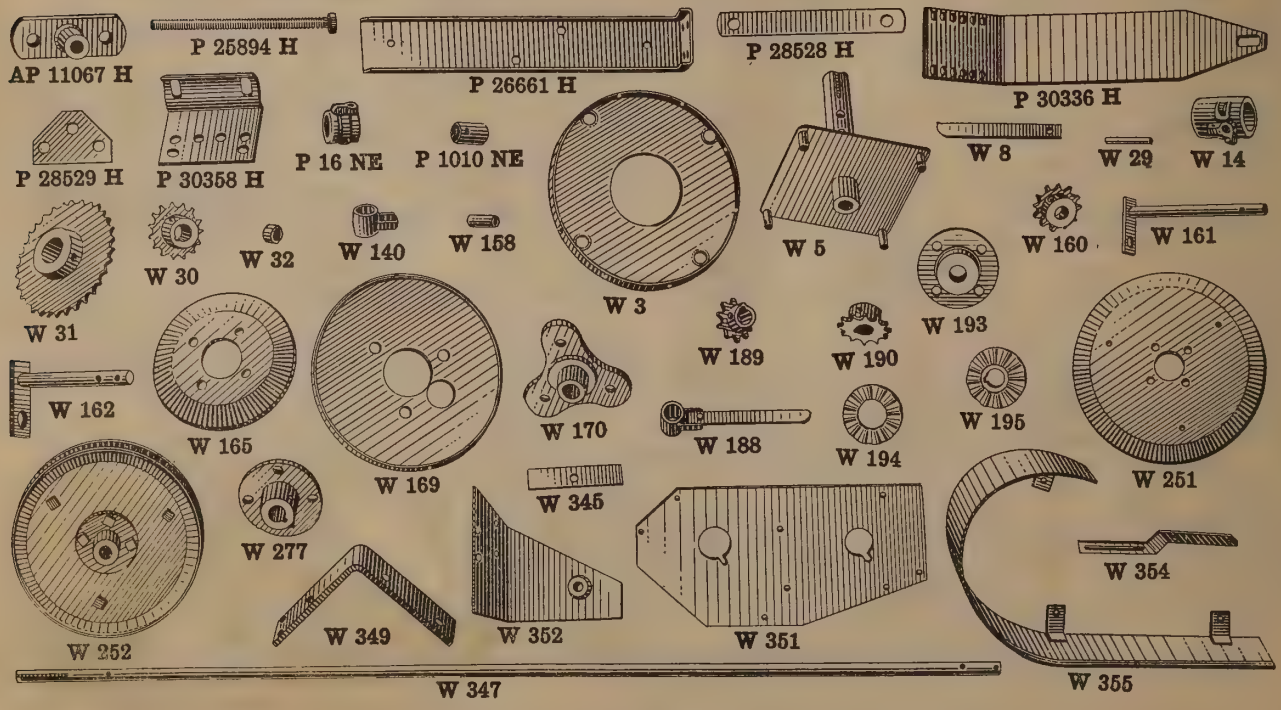

PICK-UP—Continued

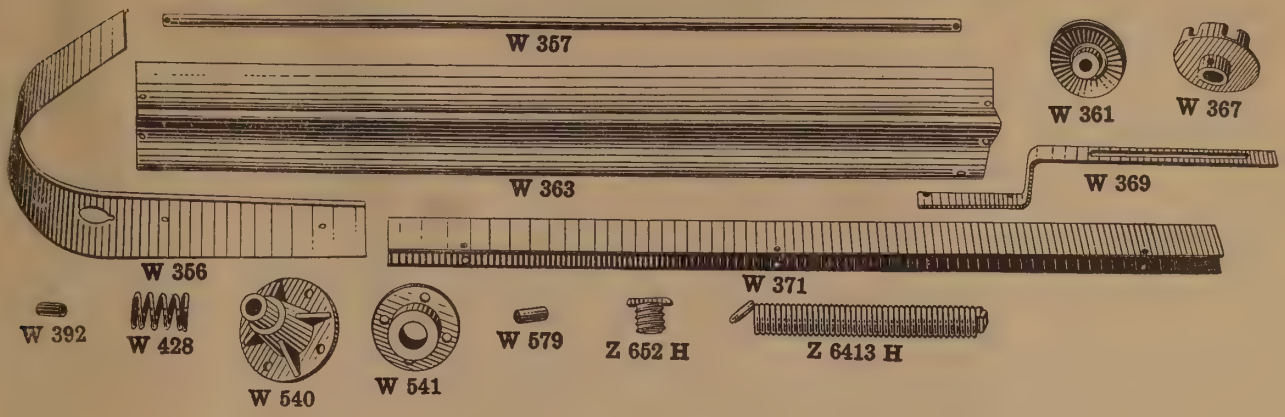

MEMORANDUM

NUMERICAL INDEX

Cat. No.	Page No.
OJ	31
	120
1J	31
	120
2J	31
	120
3J	31
	120
4J	31
	120
4-1/4J	31
	120
4-1/2J	31
	120
5J	31
	120
5-1/2J	31
6J	31
	120
9	32
	121
9J	32
	120
10J	32
	120
10-2182	62
11J	32
12J	32
13J	32
13-719	62
14-175	62
15-8	62
15-42	62
15-186	61
	68
15-223	62
15-397	62
15-443	62
16-80	62
16-369	68
16-449	62
	68
16-X477B	61
16-X477BR	68
16-491 C	68
16-539	68
16-583	61
	68
16-738	61
	68
24-262	62
24-340	62
24-425	62
24-480	63
26-657	63
27-144	63
27-154	63
27-539	63
30-600	63
32	36
	123
32 W	23
	24
	116
	117
32 WSD	23
	24
	116
	117
32-27	63
43-94	63
44-38	63
44-39	63
45	28
	36
	111
	123
45-U5L	19
	111
45-U5R	19
	111
46-457	63
47-608	63
49-101 L	63
49-196	63
55 S	8
55-231	63
59 A	64
60 A	64
62-167	63
67-523	63
77 S	128
78-154	63
78-184	63
78-322	63
99-7	63
105	67
110D3	67
112C6-1/2	67
116C6-1/2	67
117C8	67
117C8S	67
118	67
120	67
227-738	63
233-536	63
267 A	64
0267 D	68
301 A	64
303 A	64
312 A	64
315 A	64
342 A	64
	68
615 A	64
620 A	64
665 A	64
752 A	64
	68
848 A	64
1037	67
1075 A	64
1107	122
1118	61
	68
1152	61
	68
1153	61
	68
1172	68
1194	61
1196	68
1197	61
	68
1197 T	61
1207	61
	68
1221 D	68
1248	68
1328	68
1379	61
	68
1382	67
1383	61
	68
1397	61
	68
1404	61
	68
1410	32
	121
1418	61
	68
1428 D	68
1429 D	68
1435 A	64
1491 D	68
1533	61
	68
1561	67
1707 A	64
1729 A	64
1760	61
	68
1779 A	64
1806 B	68
1840 D	68
1865 A	64
1871 A	67
1900	67
1989	68
2040	61
2042	67
2076	61
2099	67
2100 A	75
2121	61
2122	61
	68
2131 A	67
2169 A	64
2264 B	68
2288	61
	68
2342 D	68
2343 D	68
2411	67
2495	61
	68
2496	61
	68
2497	62
	68
2503	62
	68
2504	62
	68
2505	62
	68
2506	68
2537	62
	68
2538	62
	68
2573	68
2635	68
2641	62
	68
2749	68
2968	67
2969	67
3147 D	68
3153 D	68
3155	32
	121
3181	32
	121
3182	32
	121
3184 C	32
	121
3186	32
	121
3205	32
	121
3206	67
3208	32
	121
3214	32
	121
3263	32
3264	32
3277 A	64
3278 A	64
3307 D	68
3332 A	64
3497 A	62
3592 A	64
3673 A	64
3689 A	64
3791 A	71
3803 A	64
3903 A	64
3949	67
3951	67
4140	62
4142 LD	68
4143 D	68
4144 D	68
4172 A	64
4185 A	64
4318 A	64
4412 A	64
4413 A	64
4423 A	64
4431 A	64
4433 A	64
4448 A	64
4461	67
4853 A	64
4859 A	64
4877 A	64
4895 A	68
4931 A	64
5813 A	64
6677	64
	70
6726	70
7548	70
7610	70
7958 E	67
8572 A	64
8573 A	64
8574 A	64
8575 A	64
9368	70
9396	32
	121
9858	64
10449	32
10450	32
	121
10451	32
	121
10451 C	32
	121
10466 C	32
10467 C	121
10468 C	121
10480	32
10481	121
10482	32
10482 C	32
10483	121
10483 C	121
10484 C	121
10485 C	32
10490	32
10497 C	32
	121
10510	32
10511	121
10532 C	32
	121
10893 C	32
10895 C	32
10903 C	121
10905	121
10917 C	33
10933	33
10937	33
10986 C	33
10992	33
10993 C	33
10997	33
11022 A	64
11078 C	33
11079	121
11084	33
	121
11087	33
	121
11088	33
	121
11093	33
	121
11107 A	68
11119 A	64
11193	33
	121
11201	121
11203	33
	121
11219	33
	122
11275	33
11762	70
12127	33
12190	122
12191	122
12199	122
12208	33
	122
12211	122
12212	122
12214	122
12215	122
12218 C	122
12220	122
12227 C	33
12228	33
12229	33
12242 C	33
12246	33
12247	33
12248	33
12249	33
12250	33
12266	33
12267	33
12268	33
12270	33
12271	33
12462	33
12463	33
12465	33
12466	34
12467	34
12468	34
12469	34
12470 C	34
12471	34
14099 A	64
14224 A	64
14411 A	71
14589 A	64
14591 A	64
14592 AS	65
14756 A	64
14858 A	64
14974 A	64
15243 A	64
15305 C	34
15307	34
15309 C	34
15314 C	34
15319	34
21182	64
22071 A	64
22110	70
22270	70
22275-3	70
22282 A	64
22967	70
23223	70
23498	70
24475	70
24510	71
24630	71
24653	71
24654	71
24726	71
25854	69
25857	69
25858	69
25904	69
26950 A	68
27003 A	65
27006 B	65
27008 A	65
27013 A	65
27018 A	65
27021 A	65
27029 B	65
27039 B	65
27040 B	65
27042 B	65
27048 B	65
27050 B	65
27051 B	65
27053 A	65
27054 A	65
27056 A	65
27061 A	65
27064 B	65
27067 A	65
27093 B	65
27094 B	65
27111 A	65
27127 A	65
27140 A	65
27197 B	65
27208	69
27209	69
27214 C	65
27233 C	65
27271 B	65
27306 B	65
27317 A	65
27320 A	65
27417 A	65
27652 A	65
27698 C	65
27799 B	65
28009 B	65
28038 AS	65
28080 CS	65
28094 BSY	65
28096 A	65
28103 A	65
28104 AS	65
28105 D	65
28106 AS	65
28107 B	65
28123 D	65
28202 D	65

Cat. No.	Page No.
28212 A	65
28214 A	65
28261 C	65
28262 A	65
28263 A	65
28264 A	65
28265 A	65
28339 ESY	65
28371 A	65
28375 CS	65
28494 C	65
28536 A	65
28552 A	71
28571 D	65
28780 A	65
28789 A	65
28827 D	65
28924 B	65
28953 A	65
28954 A	65
28969 A	71
28973 DS	65
28995 CS	71
28997 AS	71
29670 A	65
29711 BS	65
29853 A	71
40068 A	65
41244-1	69
46019 A	65
109715 H	67
125814 H	66
130052 H	6
	102
130429 H	8
.....	.....

1B

1B261 H	128
.....	.....
.....	.....
.....	.....
.....	.....

1C

1C295 H	66
1C2686 H	12
1C2691 H	7
.....	.....
.....	.....

A

A138 XA	69
A139 X	69
A140	62
	68
A142 XA	69
A170 X	69
A179 X	69
A234 X	69
A705 R	62
A1002	67
A1107	34
A1108 A	34
	122
A1663 A	67
.....	.....
.....	.....
.....	.....

AB

AB3030 H	130
.....	.....
.....	.....
.....	.....
.....	.....

AL

AL2083 T	63
AL2087 T	62
AL2090 T	57
	63
AL2094 T	60
AL2096 T	63
AL2116 T	60
AL2137 T	57

Cat. No.	Page No.
AL2268 T	63
AL2272 T	63
AL2275 T	63
AL2349 T	57
AL2421 T	57
AL2428 T	57
AL2442 T	57
AL2443 T	57
AL2444 T	57
AL2446 T	57
AL2652 T	57
AL2653 T	57
AL2654 T	57
AL2657 T	57
AL2660 T	57
AL2663 T	57
AL2666 T	57
AL2667 T	63
AL2668 T	57
AL2669 T	57
AL2675 T	57
AL2677 T	57
AL2686 T	63
AL2688 T	61
AL2691 T	63
AL2692 T	63
AL2693 T	57
AL2699 T	57
AL2718 T	63
AL2720 T	63
AL2722 T	57
AL2728 T	57
AL2729 T	57
AL2730 T	62
AL2735 T	57
AL2736 T	57
AL2743 T	57
AL2750 T	57
AL2752 T	57
AL2753 T	63
AL2756 T	57
AL2757 T	63
AL2759 T	57
AL2760 T	57
AL2764 T	63
AL2768 T	63
AL2785 T	62
AL2811 T	57
AL2812 T	57
AL2826 T	57
AL2827 T	57
AL2834 T	60
AL2835 T	60
AL2836 T	60
AL2841 T	57
AL2848 T	63
AL2861 T	61
AL2862 T	61
AL2864 T	61
AL2869 T	57
AL2870 T	57
AL2876 T	61
AL2881 T	57
AL2882 T	57
AL2883 T	57
AL2884 T	57
AL2885 T	57
AL2886 T	57
AL2892 T	58
AL2893 T	58
AL2908 T	62
AL2917 T	60
AL2923 T	62
AL2932 T	60
AL2934 T	60
AL2937 T	58
AL2938 T	58
AL2939 T	58
AL2941 T	58
AL2951 T	58
AL2952 T	58
.....	.....
.....	.....

AP

AP3938 H	69
AP7779 H	66
AP8068 H	69
AP8582 H	66
AP9454 H	66
AP9580 H	69
AP9587 H	69
AP9949 H	105
AP9950 H	103
AP9951 H	124
AP9956 H	103
AP9958 H	9
	103
AP9960 H	112
AP9966 H	102
AP9969 H	119
AP10027 H	113
AP10034 H	106
AP10035 H	106
AP10036 H	106
AP10043 H	119
AP10045 H	102
AP10052 H	117
AP10053 H	116
AP10056 H	16
	109
AP10057 H	105
AP10065 H	23
	24
	28
	116
	117
AP10068 H	116
	117
AP10069 H	36
	124
AP10070 H	102
AP10071 H	102
AP10073 H	106
AP10081 H	119
AP10082 H	24
	116
	117
AP10086 H	24
	117
AP10087 H	24
	117
AP10093 H	11
	105
AP10122 H	102
AP10123 H	109
AP10124 H	103
AP10170 H	109
AP10171 H	109
AP10172 H	102
AP10173 H	124
AP10179 H	113
AP10180 H	28
	124
AP10207 H	116
AP10208 H	23
	116
AP10230 H	124
AP10231 H	22
	114
AP10234 H	105
AP10249 H	16
	109
AP10253 H	112
AP10255 H	109
AP10256 H	114
AP10257 H	103
AP10314 H	20
	112
AP10315 H	20
	112
AP10316 H	20
	112
AP10317 H	20
	112
AP10319 H	103
AP10336 H	102
AP10339 H	103
AP10371 H	109
AP10372 H	109
AP10375 H	103
AP10396 H	36
	123
AP10397 H	36
	123
AP10406 H	28
	38
	124
AP10442 H	105
AP10444 H	13
	106
AP10446 H	118
AP10447 H	36
	123
AP10452 H	38
	124
AP10453 H	122
AP10459 H	16
	109
AP10460 H	27
	119
AP10464 H	27
	119
AP10475 H	119
AP10487 H	16
	109
AP10488 H	13
	106
AP10504 H	103
AP10521 H	124
AP10524 H	124
AP10547 H	103
AP10557 H	103
AP10565 H	9
	51
	103
	129
AP10566 H	9
	51
	103
AP10569 H	22
	114
AP10577 H	122
AP10578 H	45
	47
	49
	50
	130
	131
	132
	133
AP10579 H	34
	122
AP10580 H	34
	122
AP10584 H	114
AP10587 H	116
AP10588 H	117
AP10590 H	114
AP10591 H	23
	116
AP10592 H	23
	116
AP10594 H	117
AP10595 H	117
AP10596 H	122
AP10613 H	112
AP10616 H	119
AP10617 H	106
AP10618 H	106
AP10619 H	106
AP10636 H	112
AP10639 H	9
	103
AP10640 H	9
	103
AP10642 H	27
	119
AP10649 H	103
AP10662 H	28
	38
	124
AP10671 H	119
AP10672 H	17
	109
AP10673 H	17
	109
AP10707 H	28
	38
	124
AP10709 H	36
	124
AP10713 H	124
AP10715 H	36
	124
AP10716 H	124
AP10735 H	7
	102
AP10738 H	66
AP10763 H	119
AP10764 H	119
AP10778 H	103
AP10786 H	103
AP10810 H	20
	112
AP10850 H	106
AP10866 H	118
AP10874 H	122
AP10875 H	27
	119
AP10906 H	45
	47
	49
	50
	122
AP10988 H	20
	112
AP10989 H	20
	112
AP10991 H	119
AP11006 H	103
AP11007 H	103
AP11009 H	114
AP11018 H	109
AP11035 H	20
	112
AP11056 H	117
AP11067 H	52
	54
	103
	134
AP11077 H	114
AP11091 H	20
	112
AP11092 H	20
	112
AP11093 H	20
	112
AP11094 H	20
	112
AP11095 H	20
	112
AP11096 H	20
	112
AP11097 H	20
	112
AP11098 H	20
	112
AP11099 H	20
	112
AP11100 H	20
	112
AP11101 H	20
	112
AP11102 H	20
	112
AP11125 H	114
AP11134 H	9
	103
AP11137 H	19
	111
AP11138 H	19
	111
AP11205 H	109
AP11220 H	124
AP11232 H	109
AP11249 H	116
AP11261 H	6
	102
AP11262 H	6
	102
AP11272 H	119
AP11273 H	114
AP11281 H	36
AP11283 H	17
AP11284 H	17
AP11293 H	20
	112
AP11294 H	20
	112
AP11296 H	124
AP11315 H	27
AP11316 H	27
AP11324 H	109
AP11325 H	109
AP11329 H	103
AP11336 H	103
AP11363 H	106
AP11370 H	124
AP11374 H	102
AP11385 H	119
AP11396 H	11
AP11399 H	36
	124
AP11407 H	119
AP11410 H	106
AP11415 H	109
AP11431 H	13

Cat. No.	Page No.
AP11432 H	106
AP11444 H	38
	124
AP11472 H	102
AP11486 H	106
AP11487 H	106
AP11488 H	106
AP11489 H	106
AP11490 H	106
AP11491 H	107
AP11506 H	51
	129
AP11510 H	20
	113
AP11511 H	20
	113
AP11514 H	9
AP11530 H	107
AP11531 H	107
AP11532 H	107
AP11533 H	107
AP11534 H	51
	129
AP11535 H	129
AP11540 H	13
AP11543 H	9
AP11547 H	17
	109
AP11548 H	113
AP11549 H	17
	109
AP11550 H	17
	109
AP11552 H	6
AP11563 H	11
AP11566 H	6
AP11570 H	34
AP11571 H	13
AP11572 H	13
AP11573 H	13
AP11578 H	51
	129
AP11583 H	6
AP11584 H	11
AP11588 H	6
AP11591 H	13
AP11592 H	13
AP11596 H	9
AP11598 H	9
AP11604 H	27
AP11606 H	27
AP11607 H	34
	122
AP11609 H	36
AP11610 H	34
AP11612 H	17
AP11615 H	36
AP11619 H	22
AP11623 H	9
AP11624 H	23
	24
AP11636 H	11
AP11643 H	26
AP11665 H	24
AP11671 H	38
AP11675 H	9
AP11678 H	22
AP11682 H	17
AP11683 H	17
AP11695 H	13
AP11696 H	6
AP11697 H	26
AP11701 H	24
AP11709 H	36
AP11710 H	36
AP11711 H	36
AP11712 H	20
AP11715 H	13
AP11717 H	38
AP11725 H	51
AP11728 H	23
AP11734 H	36
AP11738 H	9
	103
AP11739 H	9
	103
AP11744 H	28
	36
AP11745 H	37
AP11749 H	16
	109
AP11750 H	51
AP11751 H	51
AP11752 H	12
	105
AP11757 H	7
	102
AP11763 H	22
AP11764 H	22
AP11771 H	13
AP11784 H	13
AP11785 H	9
	12
	105
AP11792 H	23
AP11793 H	23
AP11794 H	24
AP11795 H	25
AP11797 H	27
AP11804 H	16
AP11805 H	16
AP11808 H	27
AP11809 H	27
AP11810 H	19
	111
AP11811 H	19
	111
AP11812 H	17
	109
AP11813 H	17
	109
AP11814 H	17
AP11815 H	17
AP11825 H	116
AP11826 H	23
	116
AP11835 H	20
AP11836 H	20
AP11839 H	25
AP11840 H	25
	117
AP11843 H	8
AP11847 H	37
AP11857 H	27
AP11861 H	13
AP11862 H	13
AP11868 H	37
AP11870 H	37
AP11872 H	13
AP11873 H	14
AP11888 H	14
AP11892 H	17
AP11893 H	17
AP11910 H	23
AP11911 H	23
AP11913 H	9
AP11914 H	9
AP11939 H	23
AP11940 H	23
AP11949 H	22
AP11952 H	22
AP11964 H	22
AP11967 H	22
AP11970 H	19
	111
AP11971 H	23
AP11990 H	23
AP11991 H	23
AP12015 H	9
	12
	106
AP12018 H	45
	47
	49
AP12033 H	8
AP12040 H	9
AP12041 H	9
AP12042 H	12
	106
AP12043 H	12
	106
AP12045 H	20
	113
AP12046 H	20
	113
AP12048 H	9
	103
AP12049 H	9
AP12075 H	9
AP12077 H	9
AP12089 H	7
AP12090 H	7
AP12091 H	7
AP12092 H	14
AP12093 H	103
AP12094 H	9
	103
AP12102 H	124
AP12107 H	9
AP12108 H	9
AP12111 H	9
AP12114 H	12
	106
AP12115 H	14
AP12127 H	45
	47
	49
AP12128 H	12
	106
AP12131 H	12
	106
AP12133 H	12
AP12138 H	16
	109
AP12148 H	14
	107
AP12149 H	14
	107
AP12154 H	12
AP12155 H	12
	106
AP12168 H	9
AP12180 H	9
AP12181 H	9
AP12184 H	37
	124
AP12185 H	103
AP12186 H	103
AP12193 H	14
	107
AP12194 H	19
	111
AP12195 H	19
	111
AP12196 H	19
	111
AP12197 H	19
	111
AP12198 H	103
AP12212 H	106
AP12220 H	125
AP12221 H	107
AP12226 H	118
AP12227 H	118
AP12228 H	20
AP12232 H	107
AP12233 H	107
AP12235 H	113
AP12236 H	12
	106
AP12247 H	37
	124
AP12253 H	20
AP12256 H	103
AP12257 H	107
AP12258 H	106
AP12267 H	113
AP12272 H	20
	113
AP12273 H	23
AP12274 H	23
AP12282 H	20
	113
AP12283 H	20
	113
AP12284 H	113
AP12285 H	113
AP12292 H	103
AP12293 H	103
AP12296 H	107
AP12298 H	107
AP12300 H	109
AP12305 H	11
AP12312 H	38
AP12313 H	38
AP12317 H	113
AP12318 H	109
AP12320 H	113
AP12322 H	107
AP12324 H	107
AP12362 H	38
	125
AP12369 H	38
AP12374 H	37
AP12376 H	37
AP12380 H	37
	124
AP12407 H	116
AP12417 H	37
AP12418 H	11
AP12420 H	20
AP12421 H	20
AP12432 H	51
	129
AP12433 H	11
AP12434 H	23
AP12436 H	11
AP12437 H	23
AP12438 H	23
AP12454 H	69
AP12470 H	14
AP12471 H	14
AP12479 H	12
AP12480 H	12
AP12490 H	103
AP12491 H	103
AP12492 H	103
AP12493 H	103
AP12496 H	109
AP12553 H	29
AP12554 H	29
AP12555 H	29
AP12567 H	29
AP12568 H	29
AP12570 H	29
AP12572 H	29
AP12574 H	51
	129
AP12575 H	51
	129
AP12576 H	51
	129
AP12577 H	29
AP12578 H	29
AP12579 H	29
AP12581 H	29
AP12585 H	34
AP12588 H	29
	38
AP12594 H	68
AP12595 H	71
	109
AP12596 H	34
AP12597 H	34
AP12600 H	36
AP12608 H	29
AP12613 H	69
AP12614 H	66
AP12615 H	29
AP12620 H	23
AP12621 H	66
AP12624 H	45
	47
	49
	50
AP12629 H	71
AP12632 H	69
AP12633 H	71
AP12635 H	9
	103
AP12636 H	23
AP12658 H	66
AP12675 H	66
AP12676 H	66
AP12679 H	66
AP12680 H	66
AP12682 H	66
AP12683 H	66
AP12693 H	67
AP12694 H	67
AP12705 H	66
AP12706 H	20
AP12707 H	20
AP12708 H	69
AP12709 H	7
AP12713 H	22
AP12717 H	47
AP12728 H	51
AP12753 H	25
AP12754 H	66
AP12762 H	37
AP12763 H	69
AP12782 H	29
AP12785 H	9
AP12786 H	9
AP12795 H	8
AP12803 H	20
AP12804 H	20
AP12808 H	37
AP12809 H	7
AP12810 H	12
AP12811 H	12
AP12821 H	66
AP12884 H	29
AP12887 H	66
AP12922 H	42
	128
AP12923 H	42
AP12924 H	14
AP12925 H	14
AP12926 H	14
	107
AP12927 H	14
AP12928 H	14
	107
AP12929 H	14
AP12930 H	42
AP12931 H	14
	107
AP12932 H	14
	107
AP12933 H	14
	107
AP12934 H	14
	107
AP12938 H	107
AP12939 H	107
AP12948 H	113
AP12949 H	113
AP12953 H	29
AP12966 H	9
AP12967 H	9
AP12983 H	14
AP12984 H	14
AP12985 H	11
AP12990 H	14
	107
AP12991 H	14
	107
AP12992 H	52
	54
AP12999 H	27
AP13505 H	8
AP13506 H	8
AP13511 H	14
AP13512 H	7
AP13528 H	14
	107
AP13533 H	17
	109
AP13534 H	109
AP13536 H	29
AP13537 H	21
AP13541 H	21
AP13552 H	21
	113
AP13553 H	21
	113
AP13561 H	44
	52
	59
AP13574 H	37
AP13575 H	37
AP13576 H	37
AP13582 H	25
AP13583 H	25
AP13586 H	23
AP13587 H	23
AP13590 H	23
AP13591 H	23
AP13592 H	22
AP13593 H	22
AP13594 H	17
AP13595 H	17
AP13597 H	27
AP13598 H	27
AP13601 H	27
AP13602 H	27
AP13606 H	16
AP13607 H	6
AP13608 H	51
AP13609 H	51
AP13610 H	37
AP13611 H	107
AP13624 H	107
AP13625 H	17
	109

Cat. No.	Page No.
AP13626 H	17
	109
AP13632 H	25
AP13633 H	23
AP13634 H	25
AP13635 H	23
AP13641 H	9
AP13645 H	9
AP13652 H	37
AP13655 H	37
AP13660 H	17
	109
AP13670 H	17
	109
AP13671 H	17
	109
AP13675 H	17
	109
AP13676 H	17
	109
AP13677 H	17
	109
AP13678 H	37
AP13679 H	37
AP13680 H	12
	106
AP13681 H	12
	106
AP13682 H	9
	103
AP13683 H	9
	103
AP13684 H	6
AP13685 H	7
AP13688 H	25
AP13689 H	6
AP13690 H	6
AP13705 H	22
AP13708 H	22
AP13709 H	22
AP13714 H	7
AP13715 H	37
AP13716 H	37
AP13718 H	107
AP13733 H	11
AP13734 H	11
AP13737 H	16
AP13738 H	16
AP13741 H	34
AP13744 H	14
AP13745 H	16
AP13750 H	17
AP13751 H	17
AP13762 H	17
AP13763 H	17
AP13764 H	7
AP13765 H	7
AP13776 H	42
AP13777 H	42
AP13815 H	38
AP13838 H	9
	104
AP13839 H	9
	104
AP13849 H	6
AP13859 H	14
AP13860 H	14
AP13863 H	27
AP13864 H	26
AP13865 H	26
AP13866 H	26
AP13867 H	26
AP13868 H	12
AP13869 H	12
AP13874 H	12
AP13875 H	13
AP13879 H	124
AP13880 H	14
AP13881 H	14
AP13882 H	14
AP13883 H	14
AP13884 H	14
AP13885 H	14
AP13886 H	14
AP13887 H	14
AP13890 H	14
AP13891 H	14
AP13897 H	44
AP13898 H	52
	54
AP13899 H	11
AP13904 H	27
AP13910 H	27
AP13923 H	29
AP13925 H	29
AP13926 H	29
AP13954 H	11
AP13962 H	29
AP13963 H	13
	106
AP13964 H	13
	106
AP13974 H	27
AP13981 H	14
AP13983 H	14
AP14014 H	37
AP14015 H	37
AP14017 H	58
AP14018 H	38
AP14021 H	29
AP14024 H	38
AP14032 H	63
AP14033 H	58
AP14034 H	58
AP14035 H	58
AP14036 H	58
AP14037 H	58
AP14038 H	6
AP14039 H	60
AP14057 H	23
	25
AP14070 H	29
AP14071 H	29
AP14073 H	58
AP14077 H	29
AP14079 H	29
AP14081 H	29
AP14120 H	29
AP14123 H	21
AP14124 H	21
AP14140 H	17
AP14143 H	8
AP14144 H	8
AP14146 H	9
AP14147 H	37
AP14148 H	8
AP14160 H	58
AP14199 H	29
AP14233 H	9
AP14234 H	9
AP14283 H	9
AP14284 H	9
B2-84K-1	69
B3-39P	69
B471 H	45
	130
	131
B478 H	45
	47
	130
	131
B488 H	47
	131
B4300 H	45
	47
	49
	130
	131
	132
B4325 H	37
	124
B4535 H	8
B4620 H	44
	128
B4835 H	42
	51
	129
B5352 H	67
B5459 H	45
	130
B5665 H	44
	128
B5755 H	42
	127
B5838 H	45
	47
	49
	130
	131
	132
B5843 H	41
B5874 H	22
B5996 H	44
	128
B6338 H	49
	132
B6776 H	105
B6990 H	130
B7805 H	130
B7806 H	130
B8046 H	45
	47
	49
B8050 H	45
	47
	49
B8054 H	45
	47
	49
B8069 H	45
B8070 H	45
B8742 H	45
	47
	130
	131
C21-47	70
C24-10x9	70
C24-23x2	70
C29-211	70
C38-21	70
C46-25	70
C52-6-1	70
C55-6	70
C66-26-3	70
C77-18	70
C81-17	70
C85-28	70
C101-17	70
C108-64	70
C111-9	70
C117-13	70
C117-27	70
C120-4	70
C131-4x2	70
C138-23	70
C142-16	70
C1350 R	62
CR26-61	70
CR88-8	70
CR115-10	70
CR121-26	70
CR134-5	70
CT52-7	70
CT57-4	70
CT63-2	70
D2003R	62
E124 H	40
	125
E150 H	29
	40
	125
E196 H	49
	132
E2627 H	34
	122
E2628 H	34
	122
E2666 H	45
	47
	49
E2835 H	42
	127
E2784 H	51
	129
E3222 H	34
	45
	47
	49
	50
	122
	130
	131
	132
	133
E3223 H	34
	45
	47
	49
	50
	122
	130
	131
	132
	133
E3224 H	34
	45
	47
	49
	50
	122
	130
	131
	132
	133
E3225 H	34
	45
	47
	49
	50
	121
	130
	131
	132
	133
E3226 H	34
	45
	47
	49
	122
	130
	131
	132
	133
E3227 H	45
	47
	49
	50
	130
	131
	132
	133
E3228 H	45
	130
E3229 H	34
	45
	47
	49
	50
	127
	130
	131
	132
	133
E3371 H	34
E3376 H	34
	122
H51 H	34
H99 H	34
H665 R	62
H666 R	62
H1154 H	44
	128
H1350 H	42
H1745 H	42
H1748 H	29
H4211 H	42
HZ297 H	105
HZ298 H	12
	105
HZ5198 H	44
	128
HZ5222 H	29
HZ5446 H	42
HZ6040 H	27
	119
HZ6363 H	45
	47
	49
	130
	131
	132
HZ6549 H	42
HZ7008 H	44
	128
IVA583	62
	69
IXA256	62
	69
IXA345	62
IXA862	69
J290 H	47
	49
	131
	132
J295 H	6
	38
	125
J1063 H	40
	125
J3419 H	8
J3531 H	41
	127
J5166 H	8
	127
J6759 H	12
	105
J7645 H	29
J8030 H	29
	42
	127
J9052 H	42
J10396 H	29
J10544 H	27
	119
JD14 A	8
	60
JD1938 H	102
JD1943 H	6
JD7158 H	40
	125
JD7160 H	40
	126
JD7161 H	40
	126

Cat. No.	Page No.
JD7162 H	126
JD7163 H	40
	126
JD7165 H	40
	55
	126
JD7168 H	126
JD7203 R	60
JD7207 H	40
	60
JD7250 R	60
JD7257 H	126
JD7259 H	40
	126
JD7262 H	40
	60
JD7358 H	126
JD7388 H	40
	126
JD7428 H	40
JD7451 H	40
	126
JD7452 H	40
	126
JD7455 H	51
	129
JD7462 R	45
	47
	130
	131
JD7512 R	45
	47
	130
	131
JD7661 R	67
JD7675 R	67
JD7759 H	44
	129
JD7760 H	34
	44
	122
	129
JD7771 H	44
	129
JD7778 H	44
	129
JD7779 H	44
	129
JD7781 H	44
	129
JD7783 H	44
	129
JD7788 H	44
	129
JD7797 H	44
	129
JD7911 H	51
	129
JD7921 H	40
	126
JD7922 H	40
	126
JD7923 H	40
	126
JD7924 H	40
	126
JD7925 H	40
	126
JD7929 H	51
JD8104 H	40
	126
JD8106 H	40
JD8114 T	60
JD8300 H	40
	126
JD8301 H	40
	126
JD8302 H	40
	126
JD8305 H	51

K

K350 H	26
	107
	118

L

L105 T	6
L106 T	6
L333 T	58
	63
L338 T	63
L344 T	58
L348 T	62
L365 T	63
L372 T	60
L373 T	66
L374 T	66
L542 T	60
L543 T	60
L544 T	60
L611 T	60
L681 T	63
L689 T	58
L752 T	58
L754 T	58
L766 T	58
L768 T	58
L779 T	58
L780 T	58
L787 T	58
L789 T	58
L803 T	58
L820 T	58
L821 T	58
L822 T	58
L823 T	58
L824 T	58
L825 T	58
L826 T	58
L830 T	58
L831 T	58
L836 T	58
L837 T	58
L851 T	58
L852 T	58
L853 T	58
L872 T	62
L876 T	58
L884 T	62
L885 T	62
L886 T	62
L908 T	61
L995 T	58
L997 T	58
L1001 T	62
L1066 T	58
L1128 T	58
L1129 T	58
L1134 T	61
L1136 T	63
L1147 T	61
L1148 T	62
L1151 T	60
L1153 T	60
L1155 T	58
L1156 T	58
L1158 T	58
L1159 T	58
	60
L1160 T	60
L1165 T	61
L1166 T	61
L1169 T	63
L1172 T	62
L1189 T	58
L1190 T	58
L1197 T	63
L1200 T	58
L1202 T	60
L1204 T	58
	60
L1207 T	58
L1210 T	58
L4030 T	60
L4115 T	58
L4116 T	58
L4117 T	58
L4121 T	58
L4122 T	58
L4126 T	58
	60
L4127 T	58
L4128 T	58
L4129 T	58
	63
L4132 T	58
L4133 T	58
L4134 T	59
L4135 T	59
L4136 T	59
L4139 T	59
L4140 T	59
L4145 T	60
L4150 T	60
L4151 T	59
L4152 T	59
L4158 T	63
L4161 T	59
L4173 T	59
L4176 T	63
L4177 T	63
L4179 T	59
L4181 T	63
L4182 T	60
L4183 T	63
L4186 T	60
L4187 T	59
L4188 T	63
L4197 T	63
L4208 T	59
L4212 T	59
L4214 T	59
L4215 T	59
L4225 T	59
L4230 T	60
L4231 T	63
L4232 T	59
L4233 T	59
L4234 T	59
L4238 T	63
L4241 T	59
L4244 T	63
L4256 T	59
L4257 T	59
L4258 T	59
L4263 T	59
L4264 T	61
L4265 T	63
L4266 T	63
L4277 T	59
L4278 T	59
L4289 T	59
L4290 T	62
L4291 T	59
L4299 T	63
L4367 T	61
L4368 T	61
L4374 T	60
L4377 T	60
L4379 T	61
L4380 T	62
L4381 T	61
L4382 T	61
L4383 T	61
L4386 T	61
L4387 T	61
L4388 T	61
L4390 T	61
L4391 T	61
L4392 T	61
L4395 T	61
L4396 T	61
L4399 T	61
L4400 T	59
L4401 T	61
L4404 T	63
L4405 T	61
L4406 T	61
L4407 T	61
L4408 T	59
L4409 T	63
L4411 T	61
L4415 T	59
L4416 T	59
L4417 T	59
L4427 T	59

M

M31 X	69
M33 X	69
M34 X	69
M35 X	69
M39 XA	69
	69
M42 XA	62
	69
M54 X	69
M55 XA	69
	69
M56 X	69
M72 X	69
M90 X	69
M126 XB	62
	69
M236	67
M309	67
M642	67

P

P16 NE	52
	55
	134
P117 NE	52
	55
P204 H	42
	113
P205 H	42
P680 H	12
	52
	54
P1010 NE	134
P1221 H	29
P1564 H	9
	104
P1857 H	66
P1858 H	10
	104
P1860 H	10
	104
P1870 H	51
	129
P2001 H	51
	129
P2003 H	66
P2213 H	21
	113
P2262 H	23
	25
	116
	117
P2263 H	23
	25
	116
	117
P2264 H	23
	25
	116
	117
P2304 H	10
	104
P2305 H	25
	117
P2306 H	114
P2309 H	7
	102
P2313 H	23
	116
P2314 H	10
	104
P2318 H	109
P2323 H	37
	124
P2324 H	23
	25
	116
	117
P2325 H	23
	25
	116
	117
P2326 H	107
P2331 H	102
P2335 H	37
	124
P2341 H	37
	124
P2342 H	10
	51
	104
	129
P2343 H	10
	51
	104
P2344 H	7
	102
P2345 H	10
	104
P2346 H	124
P2347 H	24
	25
	29
	116
	117
P2348 H	37
	124
P2349 H	37
	124
P2350 H	124
P2352 H	17
	109
P2353 H	17
	109
P2355 H	122
P2356 H	17
	109
P2357 H	110
P2358 H	122
P2362 H	122
P2363 H	35
	122
P2364 H	17
	110
P2367 H	110
P2368 H	110
P2369 H	7
	102
P2371 H	110
P2375 H	122
P2380 H	119
P2381 H	27
	119
P2383 H	24
	25
	29
	116
	117
P2385 H	102
P2388 H	102
P2397 H	102
P2400 H	7
	102
P2405 H	7
	102
P2406 H	27
	119
P2409 H	7
	102
P2412 H	104
P2413 H	104
P2414 H	25
	117
P2415 H	116
P2421 H	27
	119
P2423 H	119
P2424 H	27
	119
P2427 H	124
P2428 H	124
P2429 H	38
	125
P2430 H	27
	119
P2431 H	27
	119
P2437 H	29
	38
	125
P2442 H	107
P2451 H	122
P2452 H	122
P2462 H	119
P2463 H	27
	119
P2465 H	7
	102
P2467 H	27
	119
P2474 H	35
	122
P2476 H	125
P2482 H	15
	107
P2490 H	38
	125
P2506 H	10
	104
P2517 H	37
	124
P2522 H	19
	111
P2523 H	19
	112

Cat. No.	Page No.
P2527 H	124
	131
P2531 H	38
	125
P2532 H	114
P2533 H	109
P2534 H	109
P2539 H	10
P2540 H	10
	104
P2541 H	17
P2542 H	17
P2545 H	17
	110
P2546 H	7
	102
P2550 H	24
	116
P2551 H	24
	117
P2552 H	110
P2553 H	110
P2554 H	10
	104
P2555 H	10
P2556 H	124
P2558 H	27
	119
P2559 H	27
	119
P2560 H	27
	119
P2561 H	7
	8
	102
	119
P2562 H	17
	19
	21
	110
	113
P2577 H	10
	51
	104
	129
P2582 H	10
P2584 H	17
P2591 H	27
P2592 H	27
P2593 H	6
P2595 H	17
P2597 H	35
P2598 H	7
P2600 H	37
P2601 H	37
P2602 H	37
P2603 H	35
P2604 H	35
P2605 H	27
P2606 H	28
P2607 H	22
P2608 H	13
	106
P2610 H	16
P2611 H	16
P2613 H	38
P2615 H	8
P2619 H	22
P2620 H	15
P2621 H	16
P2624 H	8
P2629 H	8
P2630 H	8
P2631 H	37
	47
P2639 H	28
	119
P2640 H	17
	18
P2650 H	19
	112
P2651 H	19
	112
P2657 H	22
P2659 H	37
P2660 H	37
P2663 H	10
	104
P2666 H	10
	104
P2667 H	10
	104
P2669 H	10
	104
P2670 H	10
	104
P2671 H	10
	104
P2674 H	8
P2676 H	10
	104
P2677 H	8
P2678 H	110
P2680 H	38
	125
P2683 H	13
	106
P2686 H	16
	109
P2687 H	10
P2688 H	10
P2689 H	10
P2693 H	104
P2694 H	104
P2696 H	125
P2697 H	24
P2805 H	38
P2807 H	37
P2808 H	37
P2809 H	51
P2810 H	12
P2821 H	68
P2830 H	66
P2847 H	119
P2848 H	21
P2849 H	21
P2850 H	21
P2854 H	37
P2855 H	7
P2867 H	37
	47
P2868 H	66
P2892 H	66
P2893 H	51
	129
P2897 H	8
P2898 H	8
P2905 H	38
P2906 H	15
	107
P2907 H	15
	107
P2908 H	15
P2909 H	15
P2912 H	38
P2913 H	38
P2918 H	38
P2922 H	39
P2924 H	8
P2925 H	28
P2926 H	28
P2936 H	12
	52
	54
P2938 H	17
	110
P2939 H	17
	110
P2940 H	15
	107
P2941 H	10
	104
P2943 H	38
P2945 H	38
P2954 H	66
P2960 H	35
P2961 H	24
P2965 H	52
	54
P2966 H	12
P2977 H	39
P2978 H	10
	104
P2982 H	7
P2983 H	7
P2987 H	16
P2992 H	35
P2994 H	39
P2995 H	28
P2996 H	28
P2998 H	51
PK1 H	6
PK2 H	38
	124
PK3 H	39
PK8 H	6
PK14 H	6
PK16 H	61
PK19 H	59
	66
PK24 H	10
PK25 H	21
PK26 H	21
PK27 H	8
PK28 H	8
.....	.....
.....	.....
.....	.....
P3922 H	70
P4080 H	67
P4081 H	42
	128
P4240 H	66
P4413 H	22
	114
P4616 H	24
	25
	117
P5297 H	69
P5304 H	69
	70
P5305 H	69
P5645 H	10
	104
P5652 H	71
P5698 H	41
P6118 H	50
	133
P6767 H	29
P7180 H	69
P7402 H	42
P7877 H	28
P8337 H	44
P8685 H	67
P8686 H	67
P9538 H	69
P9767 H	70
P9848 H	66
P9886 H	44
	52
	54
P10528 H	21
	66
	113
	117
P10940 H	35
	122
P10941 H	35
	122
P11131 H	29
P12845 H	66
P13083 H	29
P13084 H	29
P13635 H	29
P13651 H	29
P13759 H	13
	106
P14761 H	71
P14816 H	107
P14866 H	70
P14871 H	66
P15579 H	47
	131
P15801 H	66
P16478 H	7
	102
P16486 H	42
P17241 H	29
P17531 H	70
P18467 H	41
	127
P19987 H	70
P19989 H	66
P20073 H	39
P20201 H	12
	105
P20410 H	66
P20436 H	59
P20547 H	117
P20824 H	66
P21247 H	42
P21376 H	7
P21490 H	40
	126
P21976 H	51
P22418 H	71
P22530 H	47
	131
P22531 H	47
	131
P22532 H	47
	131
P22585 H	66
P22953 H	40
	66
	126
P23462 H	70
P24149 H	35
	122
.....	.....
.....	.....
P24203 H	45
	130
P24403 H	131
P24517 H	45
	130
P24590 H	45
	130
P24591 H	45
	130
P24592 H	45
	130
P24650 H	47
	131
P24651 H	45
	130
	131
P24652 H	132
P24653 H	47
	130
	132
P24655 H	47
	132
P24664 H	45
	130
P24665 H	45
	130
P24666 H	45
	130
P24667 H	45
	130
P24668 H	45
	130
P24672 H	49
	132
P24673 H	45
	130
P24676 H	45
	130
P24678 H	46
	130
P24679 H	46
	130
P24680 H	46
	130
P24681 H	46
	130
P24682 H	46
	130
P24725 H	49
	132
P24818 H	70
P25110 H	66
P25232 H	66
P25535 H	24
	25
	117
P25894 H	128
	134
P26028 H	102
P26033 H	102
P26037 H	21
	113
P26044 H	105
P26045 H	105
P26048 H	104
P26049 H	43
	128
P26052 H	105
P26054 H	17
	110
P26055 H	17
	110
P26056 H	104
P26058 H	104
P26064 H	10
	13
	104
	106
P26083 H	12
	105
	106
P26085 H	105
P26089 H	126
P26095 H	12
	105
P26097 H	35
	122
P26100 H	102
P26101 H	119
P26104 H	25
	117
P26107 H	24
	25
	117
P26110 H	117
P26118 H	118
P26119 H	118
P26120 H	118
P26121 H	118
P26122 H	118
P26126 H	118
P26138 H	10
	104
P26139 H	38
	117
P26150 H	102
P26151 H	102
P26159 H	114
P26160 H	102
P26161 H	6
	102
P26164 H	118
P26166 H	28
	119
P26168 H	122
P26172 H	118
P26173 H	118
P26174 H	118
P26176 H	118
P26183 H	6
	102
P26186 H	119
P26187 H	118
P26190 H	118
P26191 H	117
P26197 H	106
P26198 H	106
P26206 H	19
	112
P26208 H	19
	112
P26211 H	114
P26212 H	41
	113
P26217 H	114
P26218 H	12
	105
P26227 H	114
P26232 H	12
	105
P26237 H	6
	102
P26239 H	24
	25
	117
	118
P26244 H	19
	112
P26250 H	21
	113
P26251 H	6
	102
P26252 H	114
P26254 H	106
P26255 H	17
	110
P26258 H	128
P26262 H	19
	112
P26263 H	17
	110
P26267 H	102
P26274 H	119
P26281 H	15
	66
	107
P26282 H	17
	110
P26285 H	102
P26286 H	44
	128
P26319 H	42
	127
P26323 H	44
	128
P26325 H	19
	112

Cat. No.	Page No.
P26327 H	21
	113
P26328 H	17
	110
P26331 H	7
	102
P26332 H	41
	119
P26340 H	109
P26353 H	19
	112
P26357 H	17
	110
P26363 H	117
P26364 H	24
	117
P26366 H	114
P26389 H	15
	107
P26400 H	110
P26405 H	117
P26406 H	118
P26407 H	118
P26411 H	17
	110
P26412 H	17
	110
P26413 H	6
	102
P26413 H	102
P26416 H	119
P26417 H	107
P26424 H	15
	107
P26429 H	119
P26433 H	17
	110
P26445 H	17
	110
P26446 H	17
	110
P26459 H	17
	110
P26460 H	41
	126
P26470 H	104
P26471 H	104
P26472 H	104
P26473 H	7
	102
P26476 H	113
P26483 H	22
	114
P26494 H	123
P26495 H	123
P26496 H	123
P26499 H	35
	123
P26500 H	119
P26501 H	119
P26502 H	119
P26503 H	119
P26504 H	126
P26507 H	119
P26510 H	114
P26511 H	43
	128
P26512 H	29
	41
	126
P26514 H	114
P26516 H	7
	102
P26518 H	19
	112
P26519 H	19
	112
P26520 H	17
	110
P26531 H	10
	104
P26532 H	10
	104
P26535 H	119
P26554 H	113
P26559 H	19
	112
P26601 H	117
P26606 H	123
P26607 H	123
P26610 H	10
	51
	104
	129
P26613 H	10
	104
P26623 H	21
	113
P26630 H	25
	118
P26637 H	102
P26638 H	102
P26649 H	107
P26652 H	107
P26659 H	46
	130
P26661 H	134
P26682 H	41
	127
P26687 H	107
P26690 H	107
P26710 H	22
	114
P26718 H	102
P26719 H	7
	102
P26727 H	7
	102
P26730 H	112
P26731 H	19
	112
P26733 H	7
	102
P26734 H	7
	102
P26735 H	7
	103
P26736 H	107
P26744 H	43
P26763 H	117
P26764 H	117
P26765 H	117
P26770 H	7
	103
P26771 H	17
	110
P26774 H	7
P26779 H	102
P26788 H	28
	119
P26789 H	6
	102
P26834 H	7
	103
P26837 H	127
P26839 H	103
P26841 H	118
P26860 H	17
	110
P26861 H	110
P26862 H	110
P26864 H	17
	110
P26865 H	17
	110
P26875 H	22
	114
P26877 H	104
P26878 H	41
	127
P26894 H	102
P26895 H	127
P26901 H	102
P26902 H	123
P26912 H	102
P26969 H	6
	104
P27035 H	104
P27036 H	104
P27037 H	10
	13
	104
	106
P27038 H	10
	51
	104
	129
P27080 H	104
P27081 H	29
	39
	119
	125
P27082 H	125
P27105 H	123
P27107 H	123
P27108 H	36
	123
P27148 H	28
	120
P27157 H	114
P27161 H	10
	104
P27178 H	114
P27196 H	107
P27207 H	25
	118
P27220 H	114
P27221 H	114
P27222 H	110
P27223 H	17
P27224 H	110
P27230 H	127
P27231 H	39
	125
P27239 H	128
P27246 H	7
	103
P27247 H	35
	123
P27248 H	123
P27254 H	10
	104
P27262 H	42
	127
P27270 H	125
P27274 H	105
P27281 H	113
P27284 H	127
P27287 H	120
P27288 H	113
P27289 H	113
P27290 H	120
P27291 H	123
P27292 H	23
	120
P27293 H	120
P27296 H	35
	123
P27297 H	42
	127
P27298 H	41
	127
P27299 H	35
	123
P27300 H	120
P27306 H	104
P27312 H	36
	123
P27347 H	43
	128
P27348 H	43
	128
P27365 H	128
P27366 H	128
P27373 H	123
P27411 H	41
	127
P27423 H	28
	120
P27424 H	28
	120
P27425 H	120
P27426 H	120
P27449 H	106
P27450 H	113
P27451 H	120
P27452 H	28
	120
P27465 H	41
	127
P27479 H	114
P27488 H	26
	118
P27489 H	118
P27499 H	19
	112
P27505 H	19
	112
P27508 H	19
	112
P27511 H	19
	112
P27514 H	112
P27517 H	19
	112
P27518 H	125
P27519 H	118
P27527 H	44
	128
P27529 H	104
P27530 H	35
	123
P27531 H	35
	123
P27533 H	118
P27535 H	21
	113
P27540 H	118
P27554 H	118
P27563 H	118
P27572 H	44
	59
	128
P27573 H	41
	127
P27574 H	128
P27575 H	41
	127
P27576 H	35
	59
	123
P27577 H	41
	127
P27579 H	46
	47
	49
	50
	130
	132
	133
P27581 H	120
P27583 H	22
	114
P27588 H	120
P27589 H	22
	114
P27590 H	114
P27593 H	17
	110
P27594 H	28
	120
P27596 H	17
	110
P27600 H	113
P27601 H	113
P27615 H	39
	112
	125
P27616 H	113
P27639 H	114
P27641 H	114
P27642 H	114
P27643 H	114
P27644 H	114
P27645 H	114
P27646 H	114
P27647 H	114
P27648 H	114
P27649 H	114
P27650 H	114
P27651 H	114
P27652 H	22
	114
P27659 H	114
P27665 H	114
P27667 H	114
P27669 H	114
P27671 H	115
P27672 H	115
P27673 H	115
P27675 H	115
P27676 H	115
P27682 H	115
P27687 H	125
P27688 H	115
P27689 H	115
P27691 H	115
P27703 H	107
P27712 H	43
	128
P27713 H	35
	123
P27714 H	35
	123
P27715 H	104
P27717 H	17
	110
P27740 H	113
P27744 H	22
	115
P27747 H	15
	107
P27765 H	107
P27768 H	118
P27769 H	118
P27770 H	123
P27798 H	107
P27799 H	107
P27800 H	108
P27802 H	18
	110
P27804 H	22
	115
P27805 H	46
	47
	49
	50
	123
P27808 H	44
	128
P27813 H	7
	103
P27816 H	46
	131
P27818 H	39
	120
P27819 H	120
P27824 H	10
	104
P27830 H	115
P27831 H	115
P27832 H	115
P27833 H	115
P27834 H	115
P27835 H	115
P27836 H	115
P27837 H	115
P27838 H	115
P27839 H	115
P27840 H	115
P27841 H	115
P27842 H	115
P27843 H	115
P27844 H	115
P27847 H	118
P27849 H	39
	125
P27864 H	18
	110
P27869 H	47
	132
P27895 H	127
P27896 H	115
P27897 H	115
P27901 H	43
	128
P27902 H	25
	118
P27903 H	25
	118
P27906 H	118
P27908 H	26
	118
P27909 H	118
P27910 H	118
P27911 H	118
P27912 H	118
P27924 H	39
	125
P27925 H	39
	125
P27956 H	47
	49
	132
	133
P28008 H	10
	104
P28017 H	7
	103
P28061 H	115
P28066 H	104
P28067 H	125
P28070 H	39
	125
P28088 H	115
P28089 H	115
P28101 H	10
	104
P28102 H	128
P28118 H	46
	131
P28119 H	46
	131
P28130 H	115
P28137 H	49
	133

Cat. No.	Page No.
P28138 H.	49
	133
P28139 H.	49
	133
P28154 H.	8
	42
P28213 H.	10
P28214 H.	10
	104
P28246 H.	110
P28261 H.	118
P28268 H.	18
	110
P28290 H.	10
	104
P28293 H.	134
P28294 H.	18
	110
P28295 H.	18
	110
P28296 H.	18
	110
P28297 H.	18
	110
P28298 H.	18
	110
P28306 H.	108
P28307 H.	108
P28310 H.	10
	104
P28311 H.	41
	127
P28314 H.	19
	112
P28322 H.	18
	110
P28323 H.	18
	110
P28332 H.	115
P28334 H.	108
P28336 H.	102
P28337 H.	108
P28338 H.	6
	102
P28341 H.	115
P28342 H.	115
P28343 H.	115
P28344 H.	115
P28345 H.	115
P28346 H.	115
P28347 H.	115
P28348 H.	115
P28349 H.	115
P28350 H.	115
P28352 H.	115
P28360 H.	115
P28379 H.	18
	110
P28384 H.	18
	110
P28387 H.	115
P28388 H.	115
P28389 H.	115
P28390 H.	115
P28391 H.	116
P28392 H.	116
P28393 H.	116
P28394 H.	116
P28395 H.	116
P28396 H.	110
P28399 H.	18
	110
P28400 H.	18
	110
P28413 H.	50
	133
P28414 H.	50
	133
P28416 H.	110
P28418 H.	6
P28436 H.	50
	133
P28439 H.	41
P28440 H.	41
	127
P28441 H.	127
P28446 H.	112
P28452 H.	41
	127
P28454 H.	116
P28455 H.	116
P28456 H.	116
P28462 H.	43
	128
P28463 H.	41
P28470 H.	109
P28481 H.	118
P28484 H.	15
	108
P28485 H.	15
	108
P28487 H.	104
P28488 H.	28
	120
P28489 H.	28
	120
P28498 H.	123
P28499 H.	123
P28500 H.	42
	52
	54
	56
	134
P28501 H.	132
P28502 H.	47
	132
P28503 H.	48
	132
P28509 H.	25
	118
P28510 H.	108
P28512 H.	118
P28528 H.	105
	134
P28529 H.	105
	134
P28534 H.	52
	54
	134
P28535 H.	52
	54
	134
P28536 H.	52
	54
	134
P28537 H.	52
	54
	134
P28538 H.	19
	112
P28539 H.	39
	125
P28542 H.	39
	125
P28570 H.	16
	118
P28571 H.	109
P28573 H.	22
	116
P28574 H.	116
P28575 H.	116
P28576 H.	116
P28577 H.	22
	116
P28580 H.	28
P28584 H.	44
	128
P28585 H.	28
	120
P28586 H.	28
	120
P28599 H.	10
	105
P28604 H.	28
	120
P28616 H.	35
	123
P28621 H.	105
P28622 H.	105
P28623 H.	41
P28625 H.	16
	109
P28639 H.	10
	105
P28654 H.	120
P28655 H.	103
P28658 H.	125
P28663 H.	42
	127
P28664 H.	116
P28667 H.	28
	120
P28668 H.	28
	120
P28669 H.	10
	105
P28670 H.	18
	110
P28671 H.	18
	110
P28673 H.	18
	110
P28674 H.	110
P28675 H.	13
	106
P28677 H.	123
P28681 H.	113
P28690 H.	116
P28691 H.	28
	120
P28692 H.	41
	127
P28693 H.	108
P28694 H.	108
P28695 H.	108
P28696 H.	18
	110
P28697 H.	108
P28699 H.	21
P28705 H.	116
P28707 H.	21
P28709 H.	8
	43
	103
P28718 H.	39
	125
P28730 H.	112
P28731 H.	112
P28732 H.	110
P28735 H.	110
P28737 H.	108
P28739 H.	108
P28743 H.	108
P28744 H.	108
P28745 H.	108
P28746 H.	13
	106
P28758 H.	105
P28759 H.	105
P28769 H.	18
	19
	109
	110
	112
P28778 H.	13
	106
P28779 H.	13
	106
P28781 H.	113
P28782 H.	113
P28801 H.	19
	112
P28810 H.	12
	105
P28811 H.	116
P28814 H.	41
	127
P28815 H.	41
	127
P28824 H.	116
P28829 H.	108
P28847 H.	108
P28851 H.	108
P28864 H.	51
	129
P28865 H.	129
P28866 H.	51
	129
P28868 H.	129
P28869 H.	128
P28877 H.	120
P28879 H.	12
P28884 H.	22
P28888 H.	113
P28906 H.	15
P28907 H.	15
P28908 H.	15
P28909 H.	15
P28922 H.	22
	116
P28923 H.	22
	116
P28929 H.	6
P28932 H.	10
P28933 H.	22
P28938 H.	18
P28950 H.	10
P28953 H.	41
P28954 H.	28
P28962 H.	28
P28964 H.	22
P28965 H.	22
P28981 H.	6
P28982 H.	10
P28983 H.	10
P28984 H.	6
P28985 H.	35
P28986 H.	22
P28987 H.	25
P28990 H.	24
	25
P28992 H.	18
P28993 H.	18
P28996 H.	7
P28997 H.	15
P28998 H.	15
P29002 H.	6
P29007 H.	6
P29012 H.	6
P29013 H.	6
P29016 H.	10
P29019 H.	10
P29020 H.	10
P29024 H.	35
P29026 H.	22
P29028 H.	41
	127
P29029 H.	25
P29030 H.	28
P29046 H.	25
P29050 H.	41
P29061 H.	24
P29063 H.	16
P29064 H.	28
P29065 H.	108
P29074 H.	22
P29080 H.	21
P29081 H.	21
P29102 H.	26
P29103 H.	26
P29104 H.	26
P29107 H.	21
P29108 H.	21
P29111 H.	26
P29112 H.	26
P29114 H.	10
P29119 H.	21
P29120 H.	21
P29125 H.	25
P29126 H.	25
P29132 H.	22
P29133 H.	28
P29135 H.	21
P29136 H.	21
P29137 H.	26
P29138 H.	26
P29139 H.	26
P29140 H.	26
P29141 H.	26
P29142 H.	26
P29143 H.	26
P29144 H.	26
P29145 H.	26
P29160 H.	22
P29161 H.	35
P29165 H.	35
P29171 H.	117
P29172 H.	43
	128
P29174 H.	43
	128
P29175 H.	51
P29186 H.	28
P29189 H.	10
P29190 H.	10
P29200 H.	26
P29201 H.	26
P29203 H.	42
P29205 H.	116
P29206 H.	116
P29208 H.	39
P29211 H.	15
P29222 H.	18
P29223 H.	18
P29224 H.	18
P29231 H.	22
P29232 H.	22
P29240 H.	24
P29241 H.	24
P29246 H.	24
P29253 H.	39
P29266 H.	22
P29267 H.	39
P29270 H.	35
	123
P29277 H.	28
P29286 H.	36
P29287 H.	36
P29291 H.	23
P29302 H.	6
P29303 H.	41
P29304 H.	28
P29305 H.	28
P29312 H.	24
P29314 H.	24
P29316 H.	35
P29317 H.	35
	59
P29319 H.	35
	59
P29320 H.	35
	59
P29321 H.	120
P29324 H.	7
P29325 H.	51
P29331 H.	26
P29341 H.	117
P29342 H.	28
P29353 H.	35
	59
	123
P29362 H.	52
	54
P29367 H.	41
P29386 H.	18
P29387 H.	18
P29404 H.	39
P29405 H.	39
P29410 H.	21
P29411 H.	8
P29413 H.	8
P29420 H.	8
	61
P29437 H.	15
	108
P29453 H.	28
P29458 H.	24
	117
P29461 H.	15
P29464 H.	35
	59
P29465 H.	15
P29466 H.	15
P29482 H.	15
P29491 H.	18
P29509 H.	21
P29510 H.	21
P29511 H.	21
P29512 H.	21
P29532 H.	15
P29533 H.	15
P29534 H.	15
P29544 H.	43
P29552 H.	48
	132
P29553 H.	48
	132
P29554 H.	48
	132
P29555 H.	132
P29580 H.	23
P29587 H.	23
P29588 H.	23
P29629 H.	15
P29630 H.	15
P29634 H.	10
P29645 H.	15
P29646 H.	15
P29649 H.	15
	108
P29650 H.	15
	108
P29683 H.	23
P29689 H.	39
P29692 H.	20
	112
P29693 H.	20
	112
P29711 H.	46
	48
	49
P29716 H.	10
	13
	106
P29718 H.	11
	13

Cat. No.	Page No.
P29735 H	48
P29747 H	46
P29752 H	11
P29758 H	23
P29759 H	23
P29772 H	24
	25
	117
	118
P29781 H	13
	106
P29782 H	13
	106
P29783 H	13
	106
P29841 H	11
	105
P29855 H	11
	105
P29856 H	8
P29860 H	24
P29861 H	13
	106
P29877 H	7
P29878 H	7
P29881 H	11
	105
P29882 H	7
P29883 H	18
	110
P29892 H	15
	108
P29896 H	25
P29897 H	25
P29904 H	16
	109
P29906 H	15
	108
P29907 H	15
	108
P29909 H	15
P29913 H	11
P29916 H	23
P29917 H	23
P29918 H	18
P29921 H	20
P29922 H	20
P29923 H	20
P29924 H	20
P29925 H	43
	108
P29927 H	105
P29929 H	23
P29930 H	15
	108
P29932 H	15
	108
P29948 H	21
P29965 H	113
P29967 H	113
P29968 H	113
P29970 H	13
	106
P29974 H	15
	108
P29975 H	18
P29978 H	105
P29980 H	18
P29981 H	16
	109
P29982 H	13
	106
P29983 H	13
	106
P29987 H	21
	113
P29988 H	21
	113
P29991 H	16
	109
P29998 H	12
P30005 H	16
	109
P30006 H	16
	109
P30007 H	41
	127
P30008 H	15
	108
P30009 H	15
	108
P30014 H	24
P30015 H	15
P30018 H	15
P30022 H	109
P30045 H	13
P30049 H	24
P30054 H	105
P30055 H	105
P30059 H	8
	39
	125
P30064 H	15
	108
P30068 H	108
P30069 H	108
P30070 H	108
P30072 H	35
P30075 H	116
P30081 H	39
	125
P30086 H	108
P30087 H	20
P30088 H	20
P30096 H	15
	127
P30113 H	11
P30116 H	18
	110
P30117 H	110
P30119 H	105
P30120 H	36
P30121 H	125
P30122 H	39
	125
P30123 H	21
P30124 H	118
P30127 H	125
P30128 H	39
	125
P30133 H	35
	123
P30134 H	123
P30135 H	123
P30136 H	35
	123
P30137 H	35
	123
P30139 H	35
P30140 H	42
	127
P30144 H	109
P30145 H	123
P30146 H	123
P30154 H	105
P30155 H	113
P30157 H	118
P30160 H	126
P30161 H	113
P30162 H	113
P30163 H	113
P30164 H	123
P30165 H	123
P30166 H	120
P30168 H	24
	117
P30171 H	15
	108
P30172 H	123
P30173 H	24
	117
P30174 H	24
	117
P30180 H	24
P30181 H	113
P30182 H	111
P30183 H	111
P30184 H	113
P30185 H	113
P30186 H	24
P30187 H	18
P30188 H	21
	113
P30190 H	39
P30191 H	18
	111
P30193 H	118
P30194 H	123
P30195 H	120
P30197 H	113
P30200 H	28
P30201 H	28
P30202 H	28
P30203 H	28
P30213 H	39
P30216 H	15
	108
P30219 H	108
P30220 H	108
P30221 H	108
P30223 H	39
P30224 H	111
P30225 H	23
P30232 H	48
P30237 H	127
P30242 H	12
P30243 H	43
	52
	54
P30244 H	12
P30245 H	39
	125
P30246 H	12
P30247 H	39
P30248 H	12
P30251 H	43
	128
P30257 H	11
P30258 H	11
P30259 H	11
P30261 H	108
P30262 H	108
P30263 H	108
P30264 H	108
P30272 H	109
P30273 H	108
P30275 H	108
P30276 H	108
P30277 H	108
P30278 H	108
P30279 H	108
P30287 H	112
P30288 H	111
P30289 H	111
P30295 H	43
P30298 H	23
P30299 H	16
P30300 H	51
P30306 H	51
	129
P30307 H	51
	129
P30308 H	51
	129
P30309 H	42
P30310 H	24
P30311 H	24
P30312 H	24
P30313 H	24
P30314 H	24
P30315 H	24
P30317 H	38
	124
P30318 H	38
	124
P30319 H	38
	124
P30320 H	108
P30321 H	108
P30322 H	15
P30323 H	15
P30324 H	35
P30332 H	116
P30336 H	52
	54
	134
P30339 H	25
P30340 H	25
P30341 H	25
P30342 H	25
P30343 H	25
P30344 H	25
P30345 H	25
P30346 H	25
P30347 H	42
	51
	129
P30348 H	43
P30358 H	52
	54
	134
P30360 H	51
	129
P30362 H	18
	111
P30369 H	109
P30434 H	25
	116
P30435 H	25
	116
P30436 H	13
P30437 H	13
P30438 H	13
P30470 H	48
P30474 H	29
P30475 H	29
P30476 H	29
P30477 H	29
P30478 H	29
P30479 H	29
P30480 H	29
P30481 H	29
P31298 H	52
P31299 H	52
P31300 H	52
P31301 H	52
P31302 H	51
	52
P31303 H	51
	52
P31349 H	11
P31350 H	11
P31351 H	11
P31352 H	11
P31382 H	29
P31383 H	29
P31384 H	29
P31385 H	29
P31387 H	29
P31388 H	29
P31389 H	30
P31391 H	30
P31392 H	30
P31393 H	30
P31394 H	30
P31395 H	30
P31396 H	30
P31400 H	30
P31401 H	30
P31402 H	30
P31403 H	30
P31404 H	30
P31405 H	30
P31406 H	30
P31407 H	30
P31408 H	30
P31409 H	30
P31410 H	30
P31411 H	30
P31439 H	30
P31444 H	66
P31461 H	116
P31474 H	18
P31478 H	23
P31492 H	30
P31503 H	30
P31508 H	30
P31509 H	30
P31510 H	30
P31511 H	30
P31518 H	30
P31519 H	30
P31520 H	30
P31521 H	30
P31522 H	30
P31523 H	30
P31524 H	30
P31526 H	30
P31527 H	30
P31529 H	44
P31532 H	30
P31533 H	30
P31534 H	11
P31541 H	24
	25
	117
	118
P31543 H	35
P31544 H	49
	133
P31545 H	113
P31562 H	43
	59
P31565 H	69
P31566 H	69
P31567 H	69
P31568 H	35
	46
	48
	49
	50
	59
P31569 H	43
	46
	48
	49
	50
	59
P31570 H	35
	46
	48
	49
	50
	59
P31571 H	35
	46
	48
	49
	50
	59
P31572 H	35
	46
	48
	49
	50
	59
P31573 H	35
	46
	48
	49
	50
	59
P31574 H	35
	46
	48
	49
	50
	59
P31575 H	46
	48
	49
	50
P31576 H	46
	48
	49
	50
P31577 H	35
	46
	48
	49
P31578 H	46
P31579 H	36
P31580 H	15
P31584 H	66
P31585 H	68
P31586 H	43
P31587 H	30
P31592 H	66
P31593 H	70
P31594 H	66
P31599 H	51
P31610 H	71
P31611 H	66
P31612 H	66
P31616 H	11
P31617 H	11
	105
P31618 H	105
P31620 H	11
	105
P31621 H	42
	127
P31634 H	26
P31643 H	48
P31647 H	66
P31648 H	66
P31651 H	66
P31652 H	120
P31657 H	66
P31658 H	66
P31665 H	20
P31682 H	66
P31683 H	66
P31684 H	66
P31685 H	66
P31686 H	66
P31691 H	71
P31692 H	71
P31696 H	118
P31699 H	70
P31701 H	66
P31702 H	66
P31703 H	70
P31706 H	69
P31711 H	67
P31712 H	67
P31713 H	67
P31714 H	67

Cat. No.	Page No.
P31715 H	36
	123
P31716 H	39
	125
P31717 H	26
P31727 H	67
P31728 H	67
P31729 H	26
P31731 H	67
P31732 H	67
P31733 H	67
P31743 H	67
P31744 H	71
P31747 H	23
P31748 H	117
P31749 H	118
P31750 H	117
P31751 H	118
P31752 H	18
P31753 H	67
P31756 H	67
P31757 H	67
P31759 H	67
P31760 H	127
P31761 H	67
P31765 H	18
P31766 H	43
P31767 H	42
P31788 H	12
	52
	54
P31814 H	67
P31815 H	67
P31816 H	7
P31827 H	44
P31836 H	26
P31839 H	26
P31843 H	26
P31846 H	43
	128
P31861 H	67
P31866 H	21
	113
P31871 H	26
P31925 H	7
P31986 H	30
P31988 H	16
P31996 H	30
P31999 H	43
P32000 H	43
P32005 H	52
P32019 H	6
P32020 H	7
P32055 H	51
	129
P32059 H	67
P32068 H	24
P32070 H	42
P32071 H	28
P32072 H	28
P32073 H	28
P32074 H	28
P32075 H	28
P32077 H	67
P32098 H	39
P32140 H	43
P32142 H	67
P32143 H	67
P32146 H	15
P32157 H	8
P32158 H	8
P32159 H	8
	61
P32160 H	8
P32161 H	8
P32162 H	8
P32163 H	8
P32165 H	8
P32166 H	8
P32173 H	42
P32175 H	36
P32186 H	42
	127
P32188 H	43
	128
P32194 H	12
P32196 H	68
P32197 H	68

Cat. No.	Page No.
P32220 H	18
	111
P32222 H	18
	111
P32228 H	26
P32229 H	24
	26
	117
	118
P32230 H	42
P32232 H	11
P32233 H	8
P32234 H	8
P32253 H	11
	105
P32270 H	68
P32271 H	68
P32273 H	24
P32279 H	8
P32280 H	8
P32281 H	102
P32282 H	43
P32283 H	43
P32284 H	43
P32285 H	6
P32286 H	36
P32289 H	39
P32293 H	39
P32296 H	28
P32297 H	28
P32298 H	67
P32299 H	39
P32308 H	39
P32339 H	12
	52
	54
P32340 H	43
	52
	54
P32350 H	12
P32353 H	67
P32356 H	20
P32357 H	20
P32358 H	18
	111
P32359 H	128
P32360 H	12
P32361 H	52
	54
P32368 H	21
P32369 H	21
P32375 H	24
	26
	117
	118
P32376 H	16
P32377 H	16
P32378 H	28
P32379 H	42
P32380 H	36
P32382 H	26
P32384 H	7
P32385 H	7
P32386 H	43
P32391 H	18
	111
P32393 H	18
	111
P32394 H	18
	111
P32395 H	36
P32396 H	18
	111
P32397 H	18
	111
P32398 H	18
	111
P32399 H	18
	111
P32400 H	18
	111
P32401 H	18
	111
P32408 H	18
	111
P32409 H	16
P32410 H	16
P32412 H	18
	111
P32413 H	18
	111

Cat. No.	Page No.
P32414 H	18
P32415 H	18
P32418 H	13
P32444 H	21
P32449 H	21
P32450 H	21
P32456 H	16
P32457 H	16
P32465 H	16
P32472 H	18
	111
P32473 H	18
	111
P32474 H	18
	111
P32484 H	11
P32485 H	21
P32486 H	21
P32488 H	51
P32489 H	52
P32492 H	52
P32493 H	52
P32494 H	52
P32496 H	52
P32497 H	52
P32498 H	52
P32499 H	52
P32530 H	8
P32531 H	8
	30
P32538 H	18
	111
P32539 H	18
	111
P32542 H	18
	111
P32543 H	19
	111
P32544 H	19
	111
P32545 H	19
	111
P32546 H	19
	111
P32547 H	19
	111
P32553 H	19
	111
P32554 H	19
	111
P32555 H	19
	111
P32556 H	19
	111
P32559 H	11
P32578 H	11
P32579 H	28
P32601 H	11
P32609 H	67
P32611 H	16
P32612 H	8
P32616 H	7
P32617 H	7
P32618 H	7
P32621 H	7
P32622 H	7
P32623 H	7
P32624 H	7
P32631 H	12
P32632 H	21
P32633 H	21
P32636 H	7
P32639 H	26
P32640 H	6
P32641 H	23
P32642 H	23
P32644 H	23
P32653 H	6
P32657 H	8
P32660 H	108
P32670 H	20
P32671 H	20
P32681 H	16
P32682 H	43
P32684 H	8
P32693 H	19
P32695 H	19
P32696 H	19
P32698 H	19

Cat. No.	Page No.
P32700 H	24
P32704 H	16
P32705 H	16
P32714 H	16
P32715 H	16
P32717 H	21
P32718 H	22
P32719 H	19
P32733 H	36
P32734 H	36
P32737 H	13
P32742 H	19
P32758 H	12
P32773 H	43
	52
	54
P32778 H	42
	52
	55
P32779 H	16
P32780 H	22
P32829 H	36
P32840 H	43
P32876 H	46
	48
	49
	50
P32880 H	43
	105
P32882 H	11
	105
P32892 H	20
P32893 H	20
P32896 H	26
P32902 H	26
P32903 H	26
P32904 H	26
P32905 H	26
P32906 H	26
P32907 H	26
P32908 H	26
P32909 H	26
P32911 H	26
P32912 H	12
P32913 H	26
P32914 H	26
P32915 H	27
P32916 H	27
P32917 H	27
P32918 H	27
P32919 H	27
P32920 H	6
P32925 H	40
P32926 H	40
P32929 H	27
P32935 H	13
P32936 H	13
P32937 H	36
P32938 H	36
P32945 H	11
P32948 H	27
P32949 H	43
	128
P32953 H	59
P32956 H	59
P32957 H	59
P32961 H	59
P32962 H	59
P32966 H	59
P32967 H	59
P32970 H	59
P32971 H	59
P32972 H	6
	60
P32973 H	63
P32974 H	60
P32975 H	60
P32979 H	51
P32980 H	13
	106
P32981 H	13
	106
P32982 H	11
	13
	105
	106
P32983 H	11
	13
	105
	106
P32984 H	30

Cat. No.	Page No.
P32987 H	43
P32991 H	27
P32992 H	27
P32993 H	27
P32994 H	30
P32995 H	30
P32996 H	30
P32999 H	30
P33001 H	30
P33002 H	30
P33003 H	30
P33005 H	30
P33006 H	30
P33007 H	30
P33008 H	30
P33013 H	30
P33015 H	30
P33016 H	30
P33017 H	30
P33018 H	30
P33019 H	30
P33020 H	30
P33021 H	31
P33022 H	31
P33023 H	31
P33024 H	31
P33025 H	31
P33026 H	31
P33027 H	31
P33029 H	31
P33030 H	31
P33031 H	31
P33033 H	28
P33036 H	31
P33039 H	31
P33040 H	31
P33042 H	60
P33045 H	60
P33046 H	64
P33047 H	64
P33049 H	60
P33051 H	60
P33052 H	60
P33053 H	31
P33065 H	27
P33073 H	28
P33074 H	28
P33075 H	28
P33095 H	28
P33096 H	16
P33097 H	31
P33228 H	31
P33239 H	31
P33242 H	60
P33243 H	60
P33249 H	61
P33258 H	31
P33259 H	6
P33260 H	6
P33263 H	16
P33264 H	16
P33266 H	8
P33274 H	42
P33275 H	6
P33291 H	31
P33295 H	31
P33297 H	51
P33299 H	31
P33303 H	16
	108
P33304 H	16
	108
P33305 H	43
	128
P33315 H	31
P33317 H	31
P33320 H	64
P33326 H	61
P33330 H	31
P33352 H	60
P33377 H	16
	108
P33387 H	6
P33389 H	31
P33396 H	19
P33397 H	19
P33406 H	31

Cat. No.	Page No.
P33412 H	31
P33422 H	61
P33423 H	6
P33427 H	6
P33432 H	52
P33458 H	44
P33462 H	16
P33474 H	52
P33478 H	31
P33490 H	22
P33491 H	22
P33498 H	8
P33502 H	8
P33506 H	31
P33513 H	60
P33514 H	60
P33515 H	60
P33516 H	60
P33517 H	60
P33535 H	8
P33536 H	8
P33537 H	8
P33538 H	8
P33539 H	8
P33540 H	55
P33541 H	55
P33542 H	55
P33543 H	55
P33544 H	55
P33552 H	8
P33554 H	8
P33566 H	61
P33568 H	8
P33588 H	22
P33589 H	22
P33590 H	22
P33591 H	22
P33592 H	22
P33593 H	61
P33599 H	36
P33746 H	23
P33760 H	11
P33785 H	60
P33788 H	6
.....	.....

S

S533 H	67
S5571 H	42
S6179 H	44
	128
S7163 H	42
S7805 H	31
S8104 H	31
S8107 H	31
S9245 H	31
	36
.....	.....
.....	.....

SP

SP42	55
SP44	55
SP45	55
SP46	55
SP51	55
SP52	55
SP54	55
SP55	55
SP57	55
SP60	55
SP70	55
SP71	55
SP72	55
SP73	55
SP74	55
SP75	55
SP76	55
SP77	55
SP78	55
SP79	55

T

T1S10-10	70
T8S8-6	70
T8S10-9	70
T15B5-3	70
T41-5	70
T41-10	70
T56-20	70
T56-23	70
T56-24	70
T56-60	70
T61-4	70
T73-9	70
.....	.....
.....	.....
.....	.....

W

W3	134
W5	134
W8	52
	134
W14	52
	55
	56
	134
W29	52
	55
	56
	134
W30	52
	55
	134
W31	53
	55
	134
W32	53
	55
	56
	134
W36	134
W70	134
W114	134
W130	53
W131	53
W140	53
	134
W158	134
W160	53
	55
	134
W161	134
W162	134
W165	53
	55
	56
	134
W169	53
	55
	134
W170	53
	55
	134
W188	53
	134
W189	53
	55
	134
W190	53
	55
	134
W193	53
	55
	134
W194	53
	55
	56
	134
W195	53
	55
	134
W251	53
	55
	56
	134
W252	134
W277	134
W281	53
	55
W342	134
W343	134
W345	134
W346	134
W347	134
W348	134
W349	134
W351	134
W352	134
W354	134
W355	134
W356	134
W357	134
W361	53
	55
	134
W363	134
W367	53
	55
	134
W368	134
W369	134
W371	135
W374	135
W375	135
W379	135
W380	135
W381	135
W389	135
W392	135
W428	53
	55
	135
W429	56
W430	53
	55
W433	53
	55
W434	53
	55
W435	53
W436	53
W437	53
W438	56
W439	56
W440	56
W441	53
	55
W442	56
W443	56
W444	56
W445	56
W447	56
W448	56
W449	56
W450	56
W452	56
W453	56
W454	53
	55
W457	53
W458	53
W461	53
W462	53
W463	53
W464	53
W466	53
	55
W467	55
W468	53
	55
W469	53
	55
W471	53
	55
W472	53
	55
W473	53
	56
W474	53
	56
W476	53
W477	56
W478	56
W479	56
W480	56
W481	56
W483	56
W485	56
W486	53
	56
W489	53
	56
W490	53
	56
W491	53
	56
W492	53
	56
W493	53
	56
W524	53
	56
W527	53
	56
W528	56
W529	57
W530	135
W531	135
W532	53
	56
	57
	135
W540	135
W541	135
W579	135
W572	57
W573	57
W574	57
W575	57
W578	53
	56
W579	53
	56
W581	53
	56
W584	53
	56
W585	53
	56
W586	54
	56
W587	54
	56
W589	54
	56
W591	54
	56
W592	54
	56
W620	54
	56
W624	54
	56
	57
W625	54
	56
W627	57
W676	54
	56
W677	54
	56
W678	57
W679	54
	56
W750	135
W751	135
W891	57
W892	57
W893	135
W900	54
	56
	135
W901	57
W915	54
W920	54
W921	54
W922	54
W923	54
W924	54
W925	54
W927	54
W928	54
W930	54
W931	54
W934	54
W935	54
W936	54
W937	54
.....	.....
.....	.....
.....	.....

X

X1408	69
X1413	62
	69
X1503	69
X2286	69
X2704	69
X2706	62
	69
X2716	69
X2719	62
	69
X2721 A	62
	69
X2723	62
X2729	69
X2747	62
	69
X2766	62
	69
X2775	69
X2784	69
X2785	62
X2798	69
X2875	69
X2919	62
X3168	62
X3192	62
X3343	62
X3872	62
.....	.....
.....	.....

Y

Y1111	34
	122
Y1125	34
	122
Y3082 B	44
	128
Y4619	12
Y4619 B	105
Y4620	12
Y4620 B	105
.....	.....
.....	.....
.....	.....

Z

Z652 H	105
	135
Z976 H	36
	123
Z5086 H	11
	105
Z5314 H	46
	48
	49
	131
	132
	133
Z5578 H	46
	48
	49
	131
	132
	133
Z5654 H	11
	52
	105
	129
Z5874 H	11
	105
Z6413 H	128
	135
Z6572 H	36
	123
Z7168 H	43
	128
Z7254 H	48
	132
Z7414 H	48
	132
Z7716 H	36
	123
Z7756 H	128
Z8349 H	36

MEMORANDUM

MEMORANDUM

MEMORANDUM

JOHN DEERE HARVESTER WORKS

REPAIR CATALOG No. 45-H

FOR

JOHN DEERE COMBINES

No. 11, No.11A, No. 12 and No. 12A

AND ATTACHMENTS

EFFECTIVE FEBRUARY 15, 1941

JOHN DEERE HARVESTER WORKS
OF DEERE & COMPANY
EAST MOLINE, ILLINOIS, U. S. A.